


Pressure Regulator Reducing Sleeve

92835-07

1 Pressure Regulator Sleeve

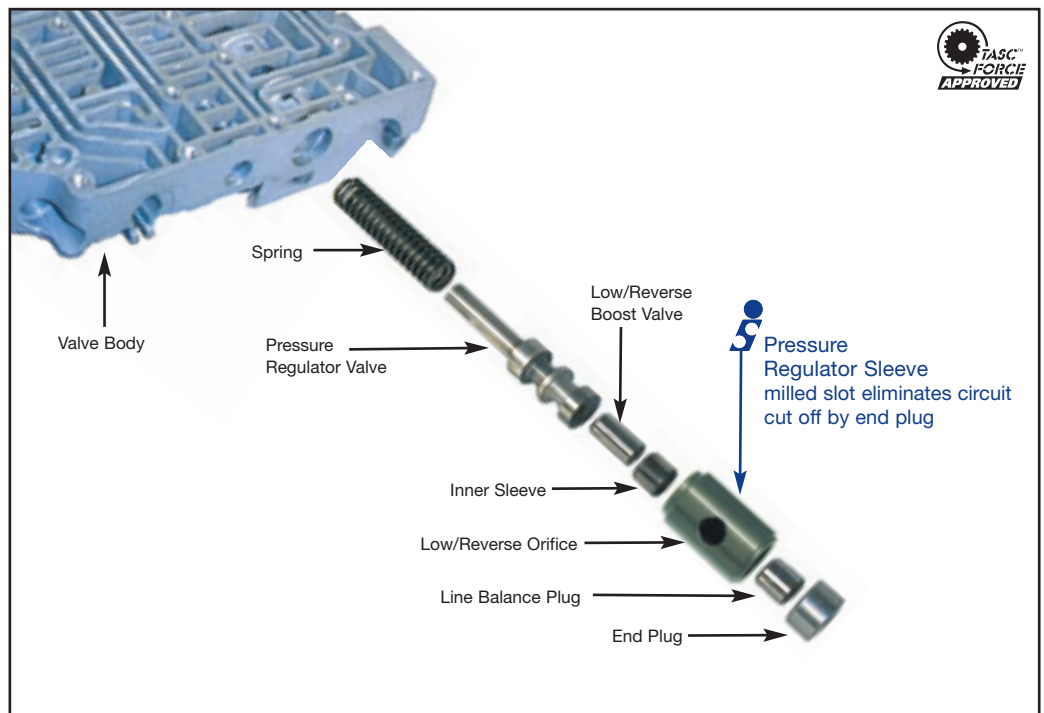

Instructions

1. Remove the retainer, end plug and regulator sleeve assembly from the valve body bore.
2. Discard the worn regulator sleeve.
3. Insert the replacement sleeve, ensuring that the parts are in the correct orientation.

Wet Air Test

To Wet Air Test the sleeve for wear, place a small amount of oil into the low/reverse orifice in the sleeve. Follow with low air pressure. There should be minimal or no air/oil leakage from either end of the sleeve.

Note: Some early valve bodies are experiencing high line pressure even with new regulator sleeves. This condition is created by pressure regulator bore wear, warped castings and loose end plugs.

