


BASIC GUIDELINES FOR REMOTE CONNECTION WITH EUREXMA

Before remote connection, make sure you have carried out the following steps:

- Connected your PC to the Internet (WiFi is preferred)
- Connected PC-panel with an Ethernet cable
- Installed Software VNC on your PC - <https://www.realvnc.com/en/>
- Installed Software TeamViewer on your PC - <https://www.teamviewer.com/it/>


After connecting your PC to the machine panel with an Ethernet cable, access the NETWORK SETTINGS of your PC → ETHERNET → CHANGE ADAPTER OPTIONS

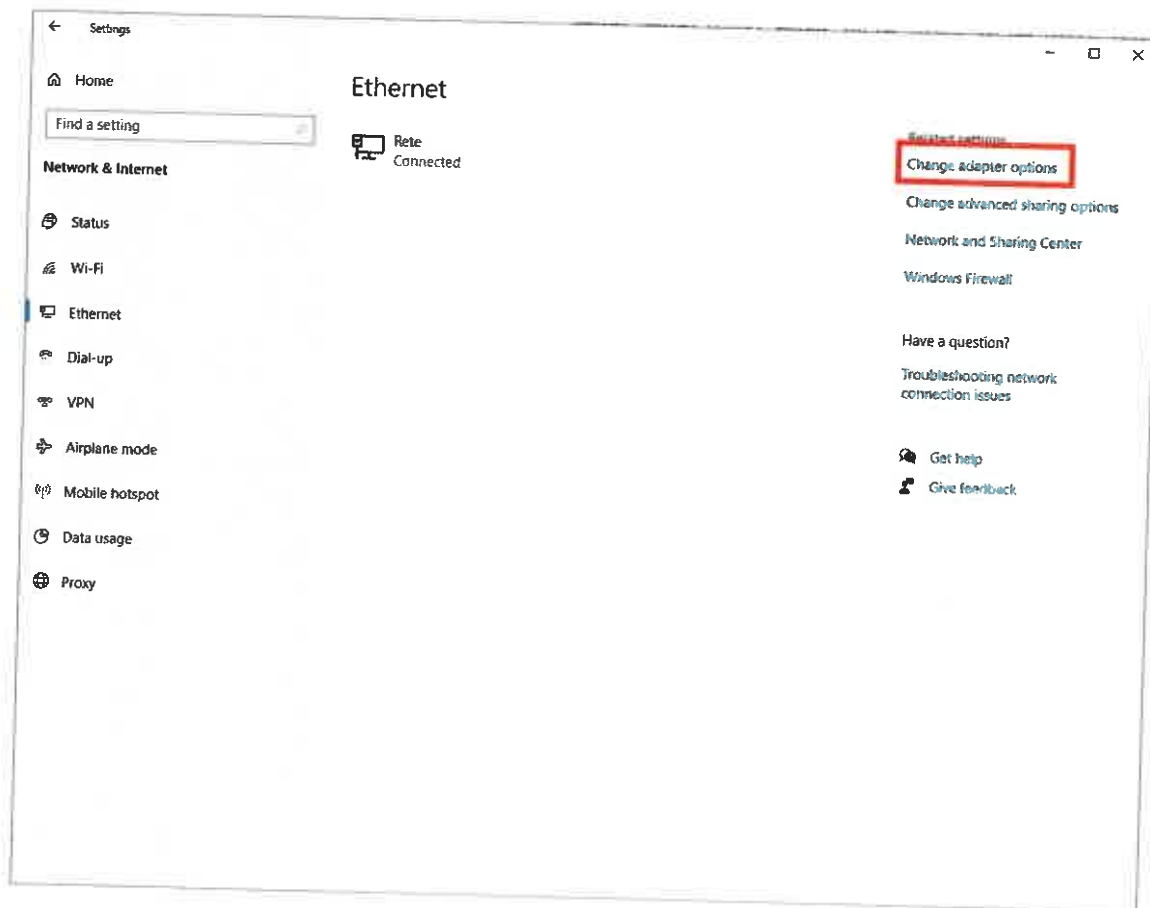

Access ETHERNET PROPERTIES (double click or right click)




Ethernet
Rete
Realtek PCIe GBE Family Controller

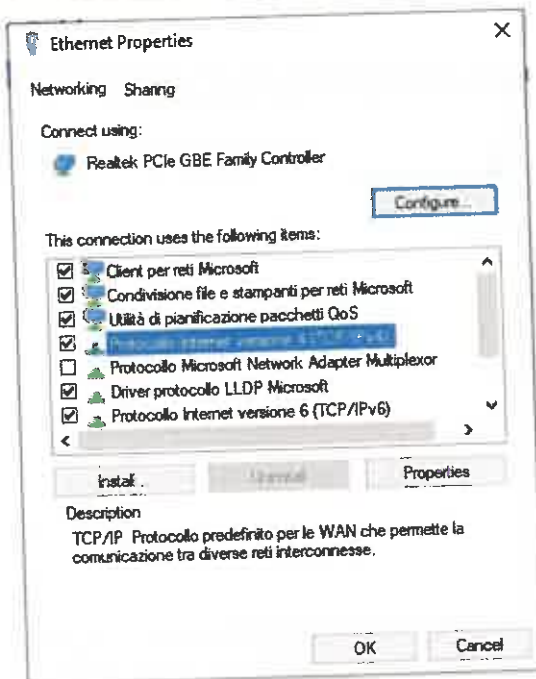

Select PROTOCOLLO INTERNET VERSIONE 4 (TCP/IPv4)

Use the following IP ADDRESS and SUBNET MASK
Tick the box VALIDATE SETTINGS UPON EXIT

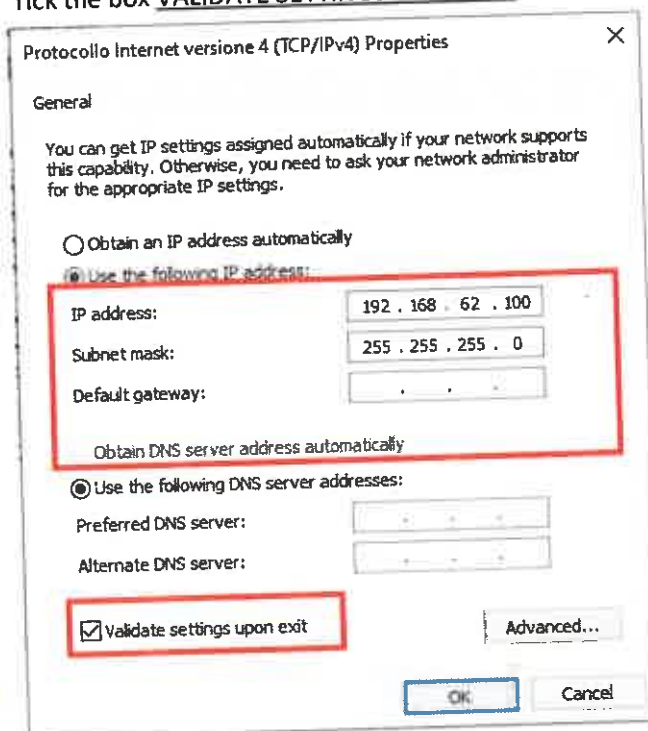

IP ADDRESS: 192 168 62 100
SUBNET MASK: 255 255 255 0

Share your **TeamViewer USER ID and PASSWORD** with EurExMa to allow remote control:

