



AsteraTouch™

Quick Start Guide

Welcome to AsteraTouch™.

This Quick Start Guide tells you how to set up your AsteraTouch™ and use its key features. To start, turn on your controller by pressing and holding the On/Off button for a few seconds. The control software will start up automatically.

NOTE: Fully charge your device before use.



On/Off
Sleep/Wake


The Basics.

In the top left is the AsteraTouch button. Press this at any time to quickly return to the previous screen. The status bar consists of a signal indicator, a current target and brightness, dropdown, a BPM tap screen, and on the far right is the More Options menu which contains the Settings page for changing the RF region, Radio PIN and other advanced settings.



Choosing a Program.

There are 24 predefined programs on your AsteraTouch™. Press any program to display effects on the targeted lights. Flip through the pages to see all programs. These programs are completely customizable; simply press and hold a program for over 1 second to enter the Content Editor screen. To remove a program, press and drag the program to the Recycle Bin in bottom left corner.

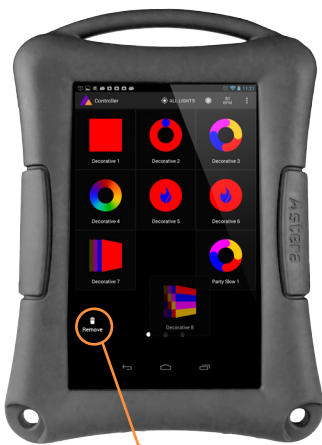

Recycle Bin

Customizing a Program.

While in the Content Editor, you will be able to browse the effect categories, change which effects and colors are being displayed, adjust the speed, the fade, the brightness and the direction of the light flow, and choose to activate the Strobe option.

It is possible to rename your created program by tapping the default name and editing. When you've finished editing, press Save.

Categories

Effects



Color Tab

Color Picker.

By pressing one of the Color Tabs, the Color Picker will reveal itself, and you will be able to choose any color from the index. Drag the cursor to your desired color.

You can choose exact colors by inputting the RGB values just below the Color Picker, as well as choosing popular white color temperatures. When you've finished editing, press Save.



Creating Your Own Program.

Navigate to the last available page and press the + icon. The Content Editor will appear and you can create a program from scratch.

When you've finished creating your own program, press Save. When back on the main screen, you will see your new program. You can move the programs around, from page to page, by pressing and dragging a program to the side of the screen to scroll to the desired page.



Press here to create a program.

Targeting a Light.

On the main screen, press the targeting icon (set to ALL LIGHTS). From the dropdown menu, press 'Add new target...' to be taken to the targeting page. From here, you can target all of a particular light model (i.e. AL3-M), make groups and sets or target individual lights.

Basic Targets.

These options are to be used when you wish to make a set. Choose either Sync Set or Flow Set. When on the Sync Set screen, you will notice that all in-range, same-PIN lights start to flash. Simply tap the lights you wish to assign to this set. The same applies to the Flow Set, but you will need to confirm each position on the AsteraTouch™ before you can tap the next.



Settings.

Pressing the More Options dropdown and choosing Settings will take you to the Settings page. Here you can change the connection settings, pair the AsteraTouch™ with lights representing a different Radio PIN, and test the active range for all lights.

Updates.

There are two types of update for the AsteraTouch™; firmware and application. To update the application with new features and settings, press the 'Check Update via Internet' option, switch on the Wi-Fi, and if there is a new update available, the update will automatically start. For firmware updates, an icon will appear in the status bar. Press this and follow the on-screen instructions to install the update.



NOTE: This section is for advanced users only.

Contents.

- AsteraTouch™
- Quick Start Guide
- Charger
- Shoulder Strap.

Charging Guidelines.

Always fully charge prior to an event. Do not leave the AsteraTouch™ on standby unless you intend to use it within a few hours. Switch off when not in use to conserve the battery.

Support.

For general support and advice, contact support@astera-led.com. For faulty and/or damaged products, please register on the Astera Portal at the following address: www.sys.astera-led.com

