


X axis not moving properly

Check the set screw on the pulley of X axis motor whether tight or not. Please tight them.

The belt is tight or not

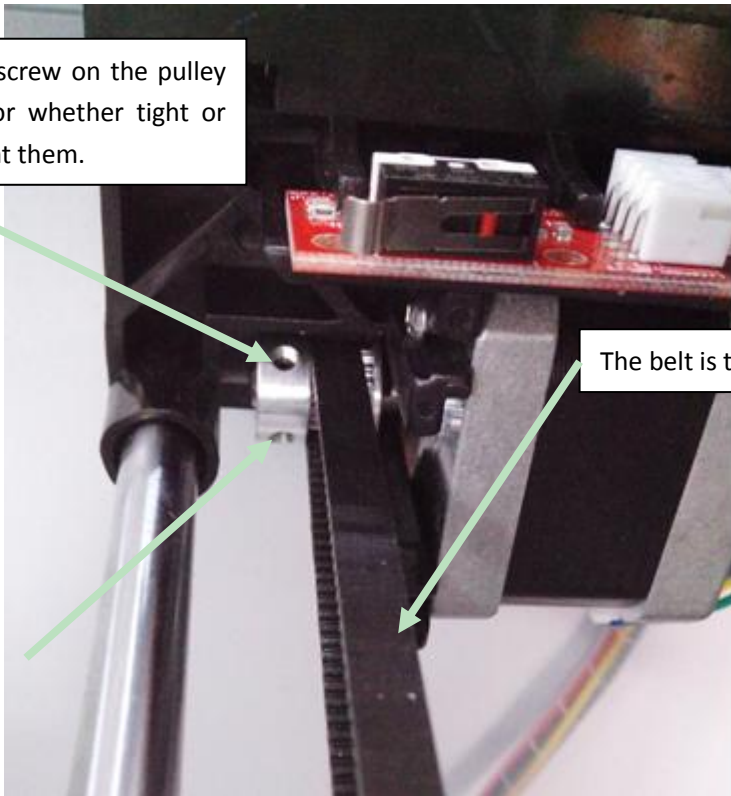

Power off the printer first, then check X axis motor wire connector whether loose or broken.

