



### How to tighten the belt in Y axis

1. Loose two set screws in arrow (top left back corner)



2. Tighten the belt. For example, left carriage belt tighten. Pull it out first then tighten the belt and push it in.

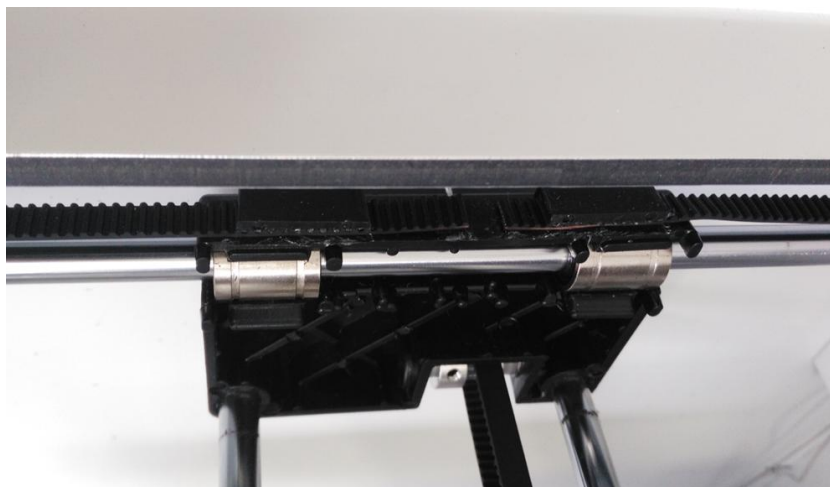

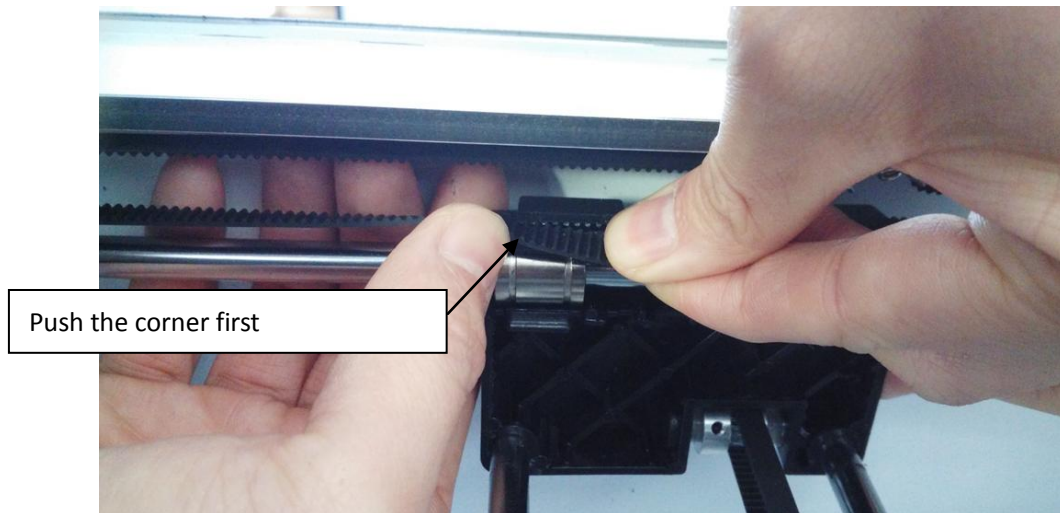

3. Tighten two set screws mentioned in the first step.