


Power switch not function

Sometimes the power button on the back of the printer will be not functional after violent transportation or get loose. We can push the button in and it will function well and you can turn on the printer.



If the problem still not solved after several tries, please position the printer on the side as below:

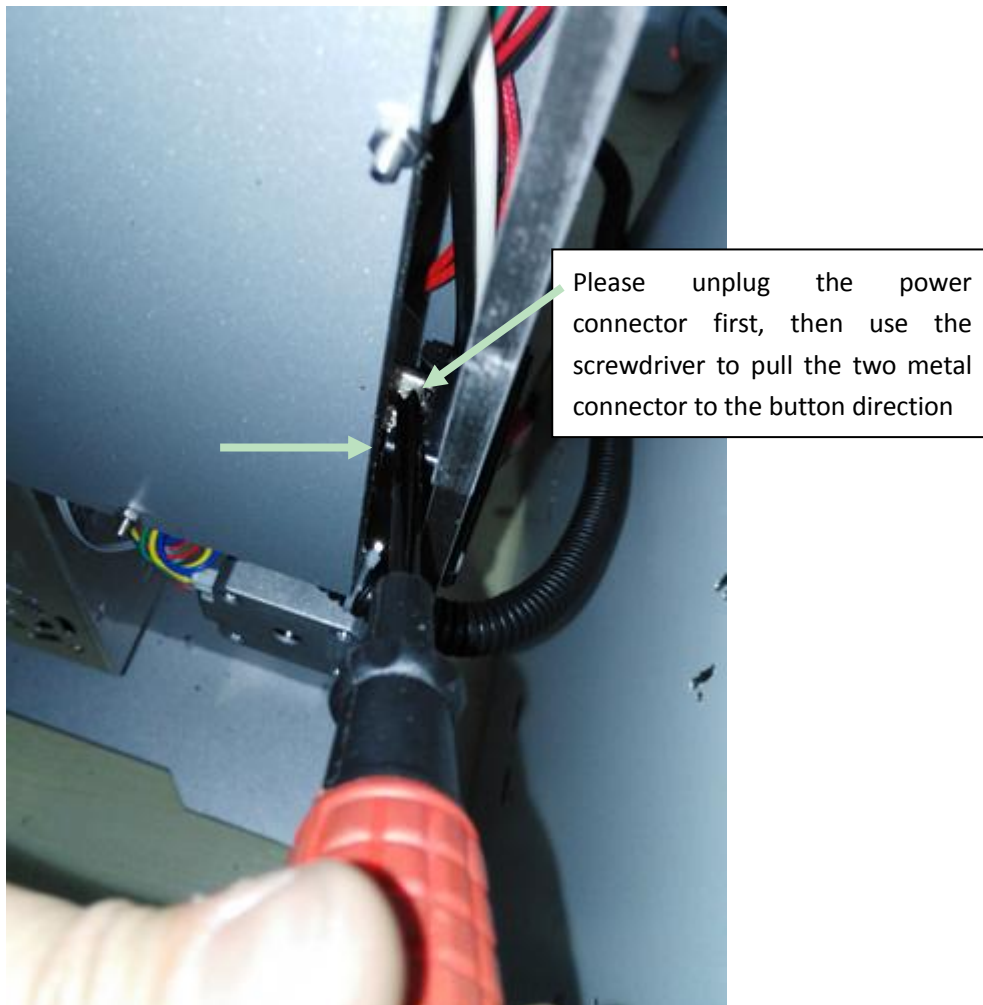

You can also use both ways together to solve this problem.