


Motor will not stop when hit the end stop

It is usually caused by connection problem. Please kindly check the end stop wire connection by arrow.

Please don't do any operation on limit switch connection when the printer is power on

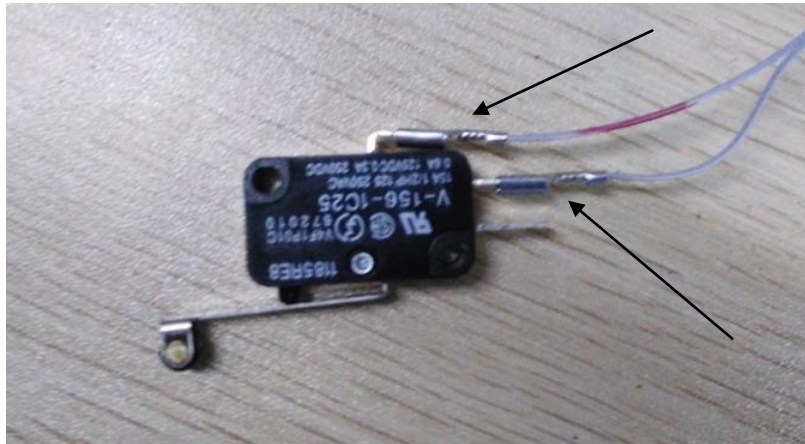

Usually caused by the connection above.