




BOLT

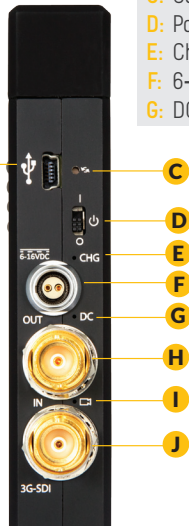

Bolt Transmitter

- | | |
|-------------------------|-------------------------|
| A: Battery Level | H: SD/HD/3G-SDI Output |
| B: USB Port | I: Video LED |
| C: Configuration Button | J: SD/HD/3G-SDI Input |
| D: Power Switch | K: Video LED |
| E: Charge LED | L: Link LED |
| F: 6-16VDC Input | M: SD/HD/3G-SDI Outputs |
| G: DC LED | N: 6-28VDC Input |



Bolt Receiver

DEVICE OPERATION



- 1 Connect the Bolt Transmitter to your camera's SDI output. Connect the Bolt Receiver to your monitor's SDI input.



SDI

- 2 Connect power to your Bolt Transmitter using the P-Tap to Lemo cable and Bolt Receiver using the included AC adapter. The transmitter contains an internal battery that lasts for up to 60 minutes.



P-Tap to Lemo



AC adapter

- 3 Move the Bolt Transmitter power switch (D) to the **ON** position. Video appears within a few seconds.

Notes:

- 1 Keep the transmitter mounted vertically to ensure optimal signal transmission.
- 2 Do not bundle Bolt receivers or transmitters together. For optimal performance, place multiple transmitters or receivers a few feet away from one another.

ALWAYS MOUNT BOLT TRANSMITTER VERTICALLY