
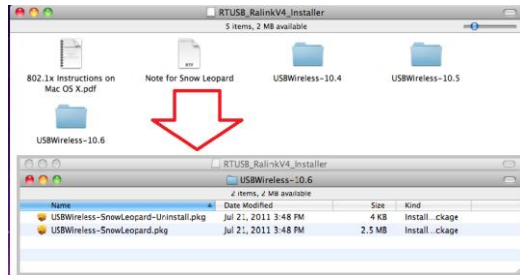
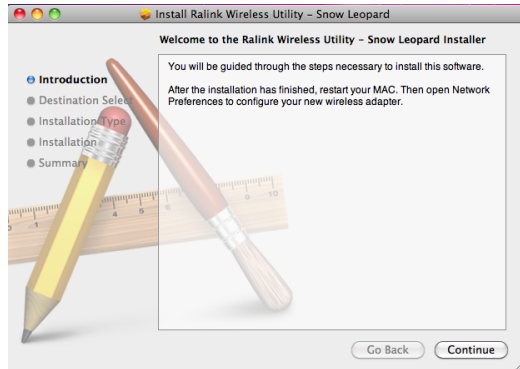
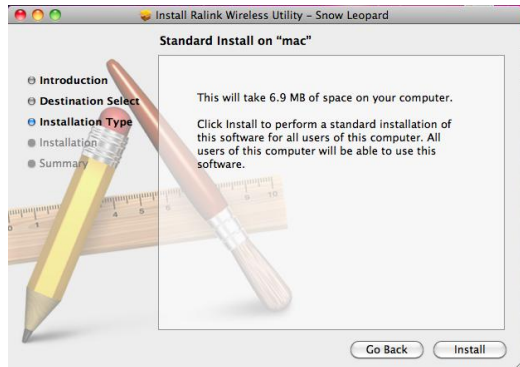
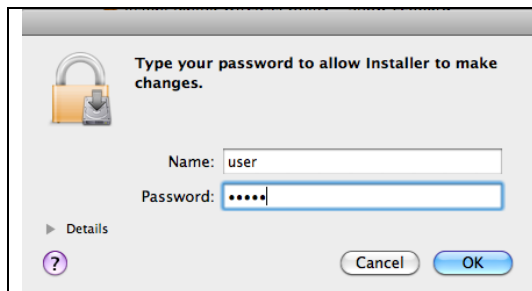
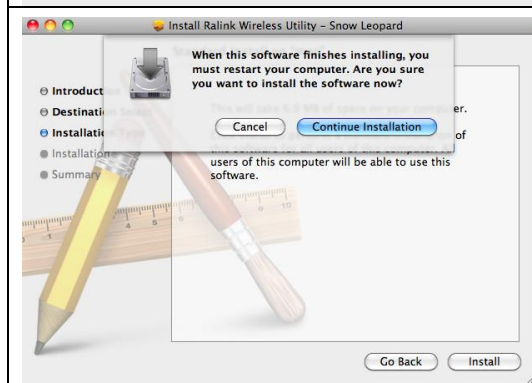


Ralink QIG for Mac OS


<table><tr><td>AWUS036E</td><td>Normal</td><td>Normal</td><td>Normal</td><td>Linux(2009)</td><td>MacOS 10.4</td></tr><tr><td></td><td>Power Control Driver</td><td>Power Control Driver</td><td>Power Control Driver</td><td>Linux (2010.1.29)</td><td>MacOS 10.5</td></tr><tr><td></td><td></td><td></td><td></td><td>Linux Kernel (2.6.x)</td><td>MacOS 10.6</td></tr><tr><td>AWUS050NH</td><td>Download</td><td>Download</td><td>Download</td><td>Driver Only</td><td>Download</td></tr><tr><td>AWUS051NH</td><td>Download</td><td>Download</td><td>Download</td><td>Web Utility</td><td>Download</td></tr><tr><td>AWUS036NH</td><td>Download</td><td>Download</td><td>Download</td><td>Driver Only</td><td>Mac OS 10.4/10.5/10.6</td></tr><tr><td>AWUS036NEH</td><td>Download</td><td>Download</td><td>Download</td><td>Web Utility</td><td>Mac OS 10.4/10.5/10.6</td></tr><tr><td>AWUS048NH</td><td>Download</td><td>Download</td><td>Download</td><td>Download</td><td>Mac OS 10.4/10.5/10.6</td></tr></table>				AWUS036E	Normal	Normal	Normal	Linux(2009)	MacOS 10.4		Power Control Driver	Power Control Driver	Power Control Driver	Linux (2010.1.29)	MacOS 10.5					Linux Kernel (2.6.x)	MacOS 10.6	AWUS050NH	Download	Download	Download	Driver Only	Download	AWUS051NH	Download	Download	Download	Web Utility	Download	AWUS036NH	Download	Download	Download	Driver Only	Mac OS 10.4/10.5/10.6	AWUS036NEH	Download	Download	Download	Web Utility	Mac OS 10.4/10.5/10.6	AWUS048NH	Download	Download	Download	Download	Mac OS 10.4/10.5/10.6	<p>Go to our web download section for most recent driver for your Mac OS.</p> <p>From the main page -> click on “Support”</p> <p>-> click “Download Drier”</p>
AWUS036E	Normal	Normal	Normal	Linux(2009)	MacOS 10.4																																															
	Power Control Driver	Power Control Driver	Power Control Driver	Linux (2010.1.29)	MacOS 10.5																																															
				Linux Kernel (2.6.x)	MacOS 10.6																																															
AWUS050NH	Download	Download	Download	Driver Only	Download																																															
AWUS051NH	Download	Download	Download	Web Utility	Download																																															
AWUS036NH	Download	Download	Download	Driver Only	Mac OS 10.4/10.5/10.6																																															
AWUS036NEH	Download	Download	Download	Web Utility	Mac OS 10.4/10.5/10.6																																															
AWUS048NH	Download	Download	Download	Download	Mac OS 10.4/10.5/10.6																																															
	<p>Click on .DMG file that you have downloaded and open up the installation driver.</p>																																																			
	<p>Click on the installation driver and select desire OS. We’re select Mac OS 10.6 in this example.</p>																																																			
	<p>Read the introduction and choose “Continue” and start installation wizard.</p>																																																			
	<p>Click “Install” to continue installation process.</p>																																																			




Authentication window pops up and enter the administrator's password for verification.



Click **"Continue Installation"** to continue.

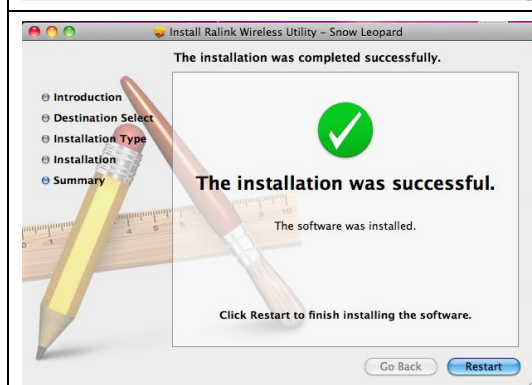

Installation is completed; click **"Restart"** to reboot your Mac system.

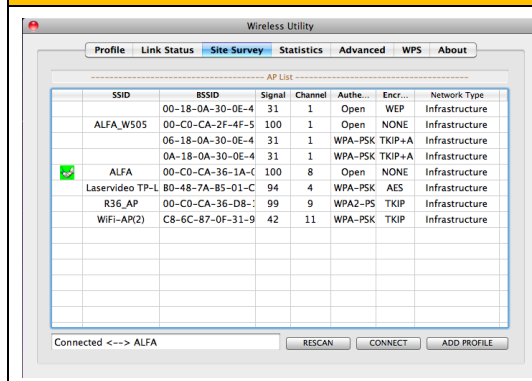

Plug in your AWUS036NH or AWUS051NH to your Mac system's USB port directly.

Ralink Wireless Utility pops up and select desire SSID and click **"Connect"** to establish connection.