

AWUS036H Long-Range
Indoor IEEE 802.11g USB Adapter

User's Guide



Table of Content

Overview	3
Unpacking information	3
Introduction to the AWUS036H Indoor USB Adapter	4
Installation Guide	5
Software Installation	5
Management Guide	10
Making a Basic Network Connection	10
Ad-Hoc Mode	10
Infrastructure mode	12
Introduction to the Wireless LAN Utility	14
Starting the Wireless LAN Utility	14
General	15
Profile	16
Available Network	17
Advanced	18
Status	19
Statistics	19
Appendix	20
RT-Set Setup Wizard	20
Connect to a wireless network in ad hoc mode	23
Use this adapter as an AP	25
AP mode management guide	27
General	27
Advanced	27
Statistics	28
ICS (Internet Connection Sharing)	29
Product Specification	30

Overview

Thank you for purchasing this product. Please read this chapter to better understand your AWUS036H Long Range indoor USB Adapter


Unpacking information

Before getting started, please verify that your package includes the following items:

1. AWUS036H Long-Range 802.11g Indoor USB Adapter
2. One Utility/ Manual CD
3. USB Cable

Introduction to the AWUS036H Indoor USB Adapter

The AWUS036H IEEE 802.11g indoor USB adapter provides users to launch IEEE 802.11g wireless network at 54 Mbps in the 2.4GHz frequency, which is also compatible with IEEE 802.11b wireless devices at 11Mbps. You can configure this adapter with AP mode to connect/share to other 2.4GHz wireless computers or with Infrastructure mode to connect to a wireless AP or router for accessing to Internet. This adapter includes a convenient Utility for scanning available networks and saving preferred networks that users are usually connected with. Security encryption can also be configured by this utility.

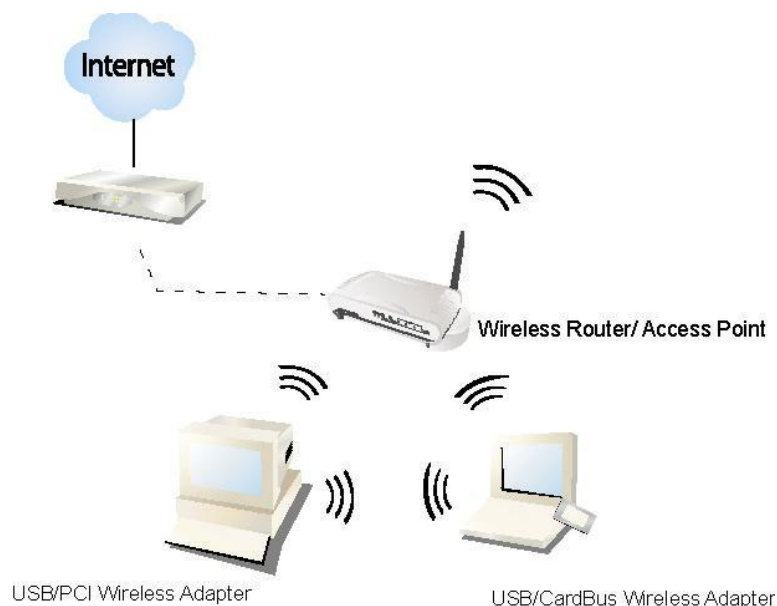

Key Features

- Complies with IEEE 802.11b/g wireless standard
- Support driver for Windows 98se, Me, 2000, XP, Vista, and Windows 7.
- Complies with Universal Serial Bus Rev. 1.0, 1.1 and 2.0 specifications.
- Supports auto-installation and diagnostic utilities.
- High Speed transfer data rate up to 54Mbps
- Support turbo mode for 72 Mbps data rate
- Support wireless data encryption with 64/128-bit WEP, WPA (TKIP with IEEE 802.1x), and AES functions.

Installation Guide


Software Installation

Note: The following driver installation guide uses Windows 7 as the presumed operation system. The procedures and screens in Windows 98se, 2000, XP are similar with Windows 7.


Insert the installation CD that came with this product to your CD-ROM drive. Please click the **"Windows 7/Vista/XP"** button from the popup menu for this product.

Note: If the CD-ROM fails to auto-run, please click on **"My Computer" → your CD-ROM Drive** will then double-click the **"AutoRun.exe"** to start this menu.


1. Select the language for the installation.

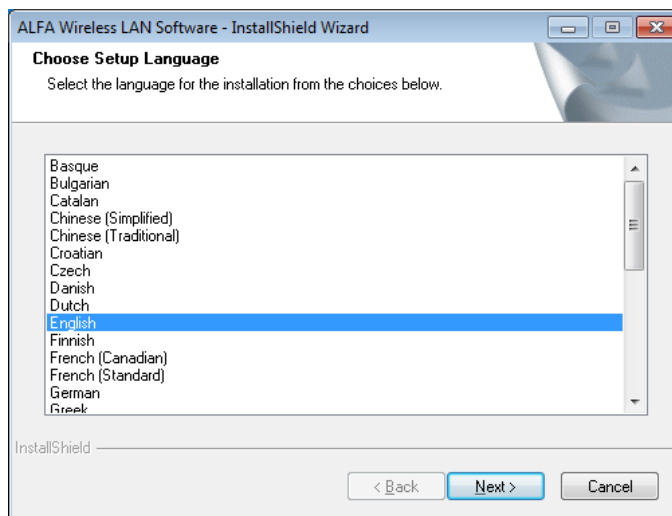


2. The welcome window will pop up. Click the **"Next"** button to proceed.

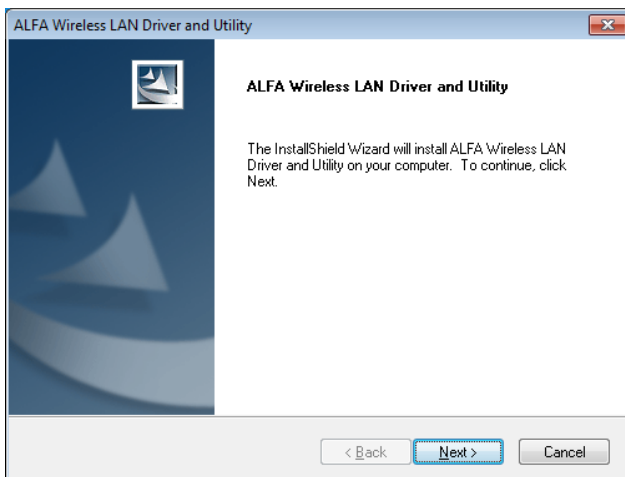


3. Click **"Install"** button to continue the installation.

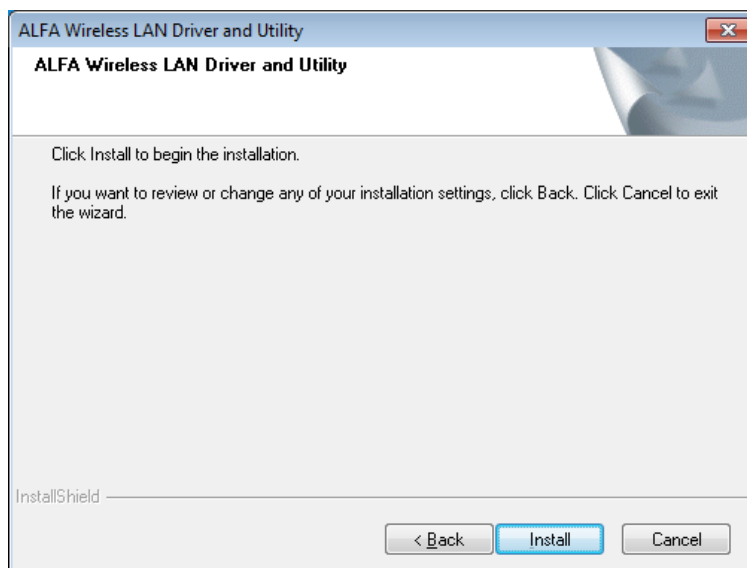


4. Installation is in progress, please wait.

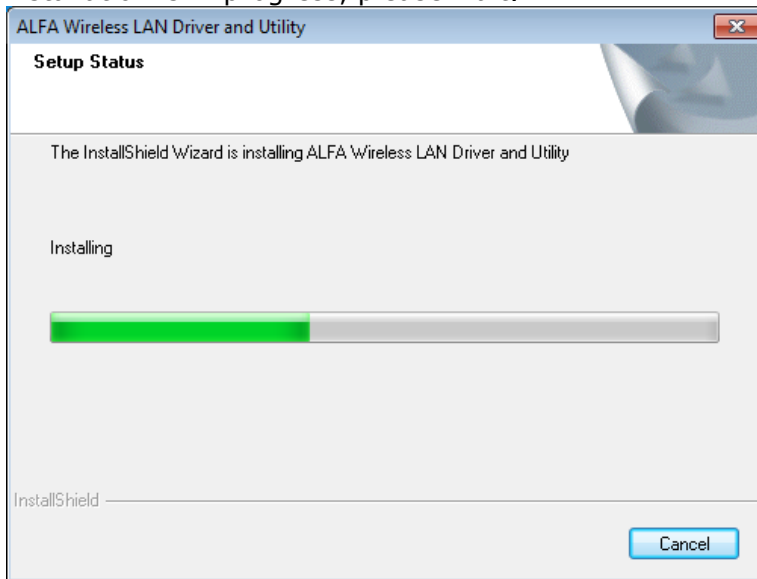

5. Click the **"Finish"** button to complete driver and utility installation.
Note, please insert this USB wireless adapter to your computer if you're using Windows 7, Vista, XP, or Windows 2000. If you are using Windows 98se or ME, please restart the system first before connect this wireless adapter to your computer.

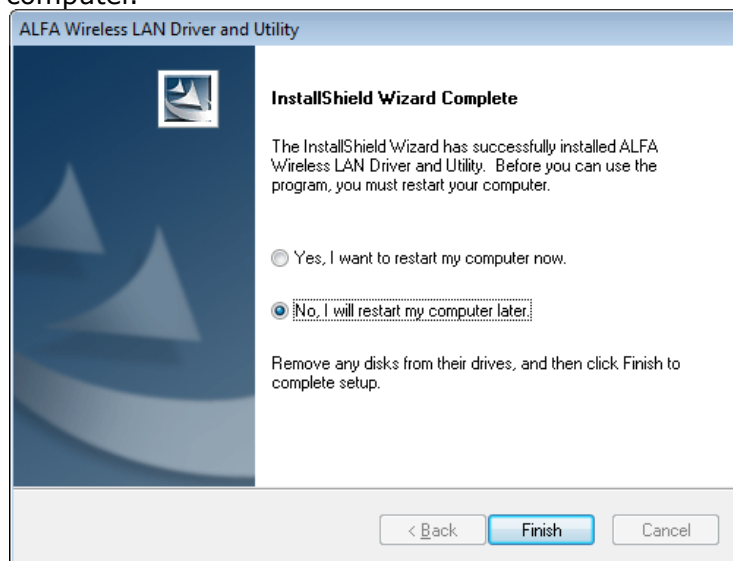

6. Windows 7 detects new hardware has been inserted and driver is installed.

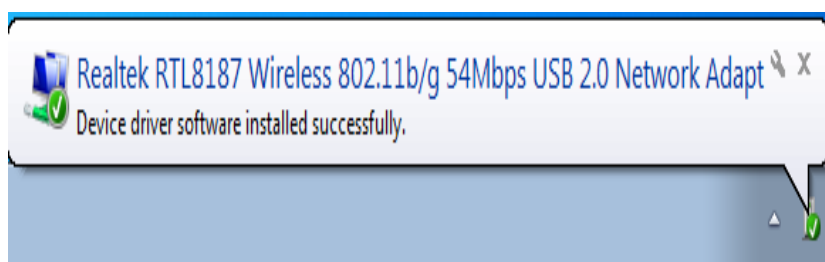


Found New Hardware Wizard in Windows XP, 2000, and Vista.

1. The "**Found New Hardware Wizard**" will pop up. (**Note:** This wizard won't pop up in Windows 98 and ME. The system finds the new hardware and installs the hardware automatically. Please skip the following steps)
2. Select "**No, not this time**" and click the "**Next**" button.




3. Select "**Install the software automatically**" and then click the "**Next**" button.

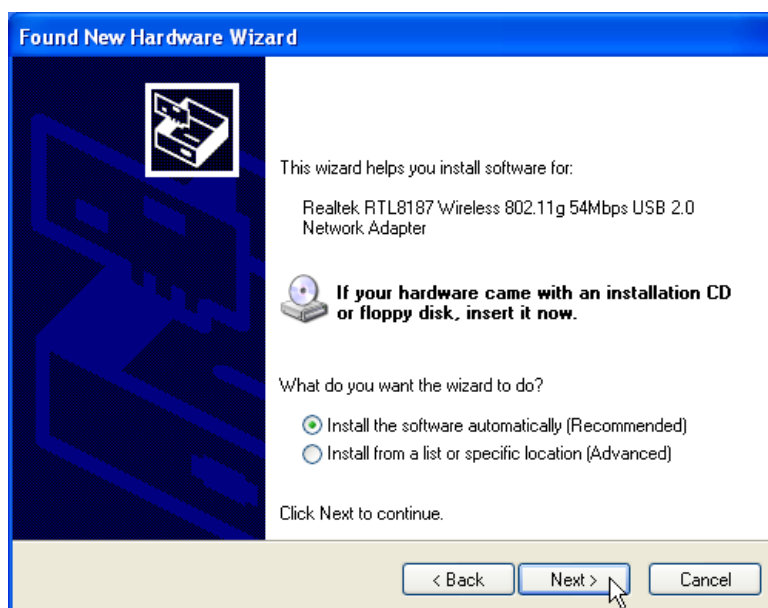

4. Please wait while installing the driver. The Windows logo testing warning message may pops up. Please click the "**Continue Anyway**" button to continue.



5. Click the **"Finish"** button to complete installation.

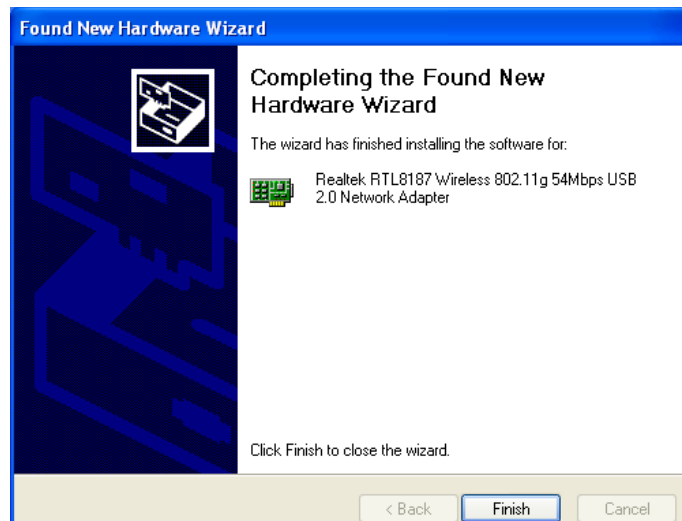

Management Guide


Please read this chapter to better understand the management interface of your AWUS036H Long Range Indoor USB Adapter


Making a Basic Network Connection

Before You Start

In the following instructions for making a network connection, we use the utility we provided to configure your wireless network settings.


Note: For Windows XP users that want to configure your wireless network using this Utility, please perform the following procedures to disable your native Windows XP wireless support (Wireless Zero Configuration Service)

1. Double click the  icon on your desktop to start the utility.
2. Make sure that the **"Windows Zero Config"** checkbox is unchecked.

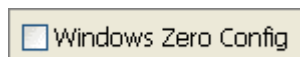

Ad-Hoc Mode

An Ad-Hoc mode wireless network connects two computers directly without the use of a router or AP. It is also known as a peer-to-peer network. For example, we can install this wireless adapter to two computers respectively. The communication between the two computers is an Ad-Hoc mode network.

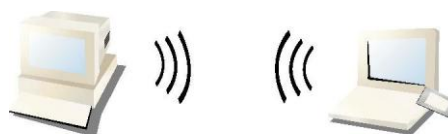

Ad-Hoc Mode


To use this adapter in Ad-Hoc Mode



1. Double click the icon on your desktop.
2. Click the **"Available Network"** button to scan available wireless network adapters. Double click on the network adapter that you are going to connect to.


General	Profile	Available Network	Advanced	Status	Statistics	Wi-Fi Protect Setup
Available Network(s)						
SSID	Channel	Encryption	Network Authentication	Signal		
MANUAL	1	None	Unknown	100%		
will	1	TKIP/AES	WPA Pre-Shared Key/...	96%		
zz	1	None	Unknown	86%		
Cwell	6	TKIP/AES	WPA Pre-Shared Key/...	78%		
LASER	6	WEP	Unknown	80%		
AWAP411	6	None	Unknown	100%		
RTL8186-GW	11	None	Unknown	56%		

3. Click the OK button to confirm that you are connecting to an open wireless network.

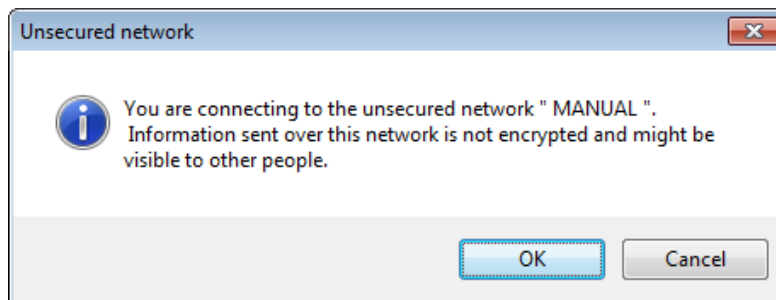


4. Click OK to add this network into the profile list.

Note: This example is an open wireless network. If you are going to connect to a Wireless adapter with security protection, you will have to configure the encryption settings in this profile to be corresponding to the other wireless adapter. Please click on the **"Network Authentication"** drop list to select an authentication method, and then select a **"Data encryption"** type. Fill in each required blanks and click **"OK"**.

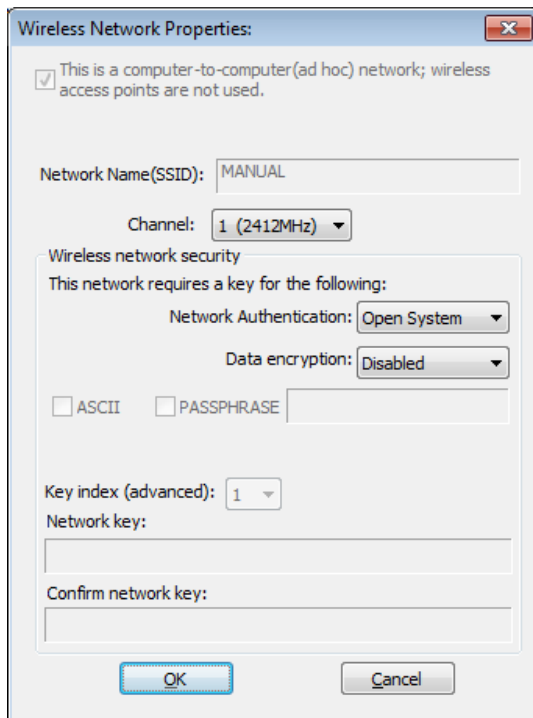

Infrastructure mode

An Infrastructure Mode network contains at least one wireless client and one wireless AP or router. This client connects to Internet or intranet by communicating with this wireless AP.

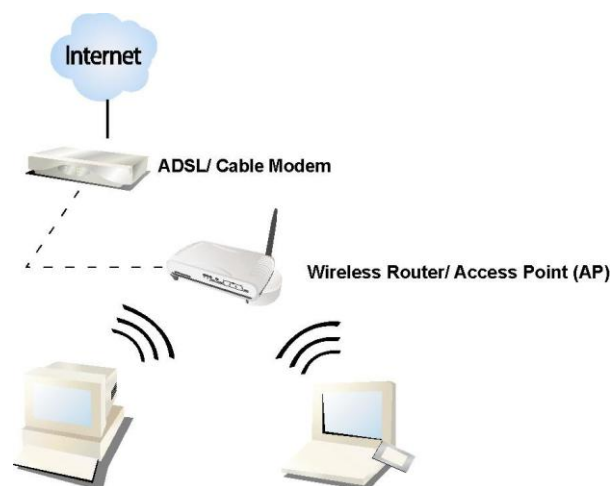


Infrastructure Mode


To use this adapter in Infrastructure Mode:




1. Double click the icon on your desktop.
2. Click the **"Available Network"** button to scan available access points. Double click on the AP that you are going to connect to.

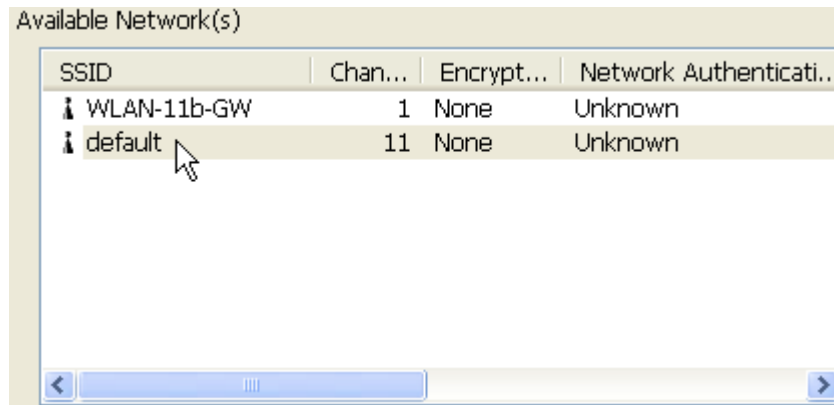

3. Click the OK button to confirm that you are connecting to an open wireless network.

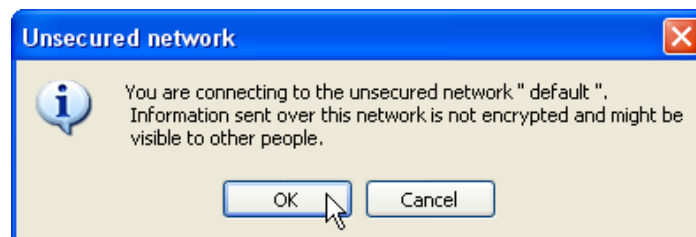

4. Click **OK** to add this network into the profile list.

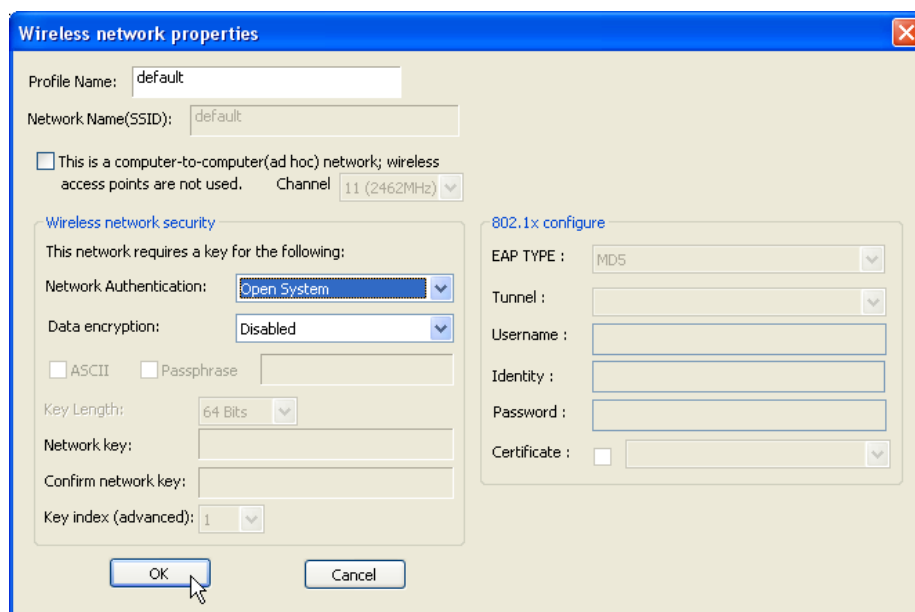

Note:


This example is an open wireless network. If you are going to connect to an AP with security protection, you will have to configure the encryption settings in this profile to be corresponding to your AP. Please click on the **"Network Authentication"** drop list to select an authentication method, and then select a **"Data encryption"** type. Fill in each required blanks and click **"OK"**.

Introduction to the Wireless LAN Utility

Note: This management instruction uses Windows 7 as the presumed operation system. Some functions are not supported in Windows 98se or Windows ME.

Starting the Wireless LAN Utility




Double click the  shortcut on your desktop. The Wireless LAN Utility will pop up. You may click on the tabs above to configure this adapter. The checkboxes below provide the following functions:

Show Tray Icon	Check this checkbox to show the utility icon on your system tray, which is in the notification area at the lower-right corner of the windows desktop. You may also uncheck it to remove the utility icon from system tray.
Windows Zero Config (on Windows XP)	Uncheck this checkbox to use native Windows XP wireless support (Wireless Zero Configuration Service) instead of using this utility to configure your wireless network.
Radio Off	Check this checkbox to prevent this adapter from transmitting or receiving signals. Uncheck it to communicate.
Disable Adapter	Check this checkbox to disable this wireless adapter.
Virtual Wifi Disallowed (on Windows 7)	Check this checkbox to disable the Virtual Wifi Adapter on Windows 7

General

After starting the utility, the general page pops up. This **General** tab provides the information of your current wireless network connection. You may click the **Renew** button to refresh those listed information.

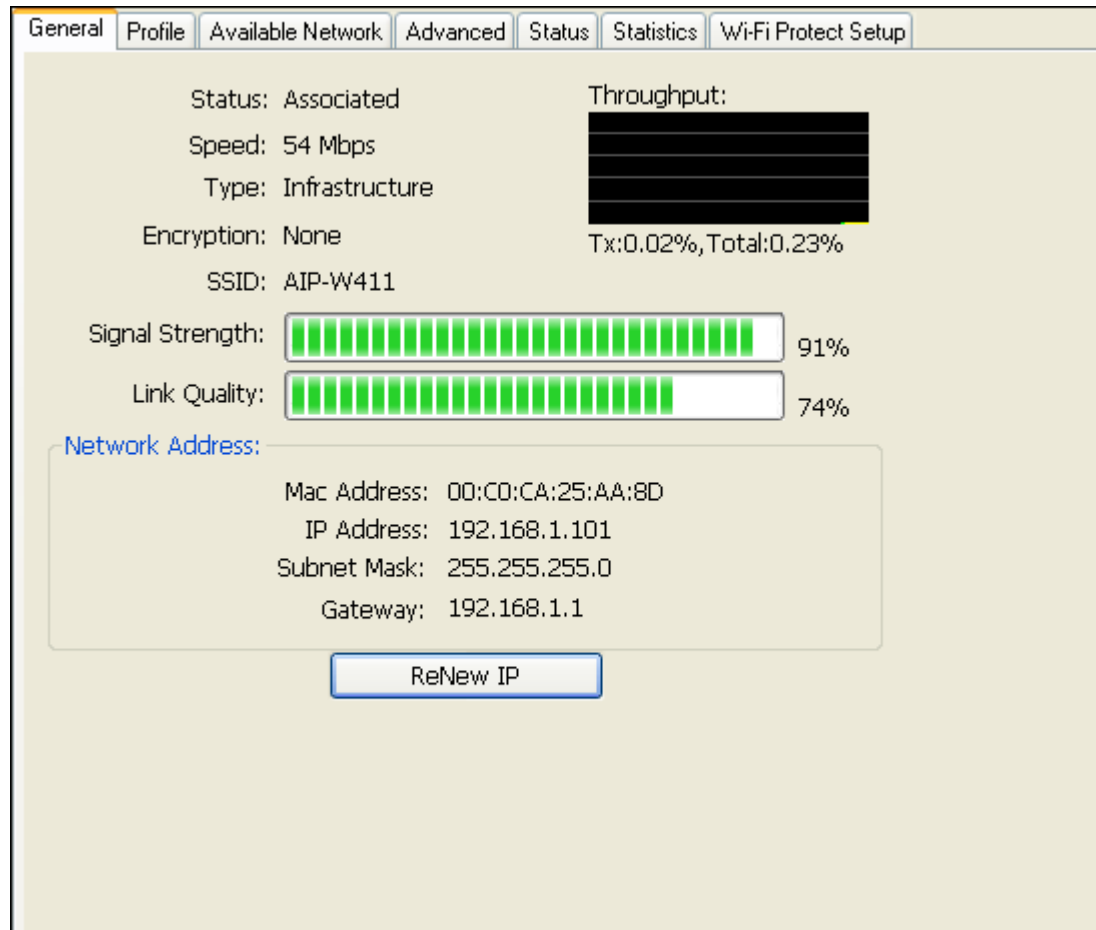

Status:	Check if the device associated to target network.
Speed:	The current connection speed
Type:	Infrastructure mode or Ad-Hoc mode.
Encryption:	The performing encryption mode for connecting to current network profile.
SSID:	The SSID (network name) of the connected wireless network.
Signal Strength:	Indicates the signal strength detected by this adapter.
Network Address:	Shows the current IP addresses settings for this adapter.

Profile

The **Profile** tab lists the preferred connections. You can click the buttons on the right-hand side to configure each connection.

General Profile Available Network Advanced Status Statistics Wi-Fi Protect Setup

Available Profile(s)

Profile Name	SSID
--------------	------

Add

Remove

Edit

Duplicate

Set Default

Add Click this button to add a connection profile for this adapter.

Remove To remove a connection profile, click this profile on the profile list and click this button to delete it.

Edit To modify the configurations for a profile, click this profile on the profile list and click this button to edit.

Duplicate To make a copy of a profile, click the profile that you would like to have copied, and click this button to copy it.

Set Default To select a profile as your default wireless connection, select the profile on the list and click the Set Default button. You may also double click on each profile to select it as your default wireless connection.

Available Network

The available tab lists the reachable wireless network for the adapter.

Available Network(s)

SSID	Channel	Encryption	Network Authentication	Signal
R36_ONYX3GU	1	TKIP/AES	WPA Pre-Shared Key/...	84%
Laservideo	4	AES	WPA Pre-Shared Key/...	78%
Cwell	6	TKIP/AES	WPA Pre-Shared Key/...	66%
Laservideo confer...	6	TKIP	WPA Pre-Shared Key	68%
AIP-W411	7	None	Unknown	88%

Refresh Add to Profile

Note
Double click on item to join/create profile.

Refresh

Click this button to rescan available networks around the adapter.

Add to Profile

To add an available Network to your profile list, select an available network and click this button to add.

Advanced


This Advanced tab provides advanced configurations to this adapter. Every modification in this tab will be performed after clicking the **Apply** button. To restore the default settings of the advanced tab, click the **Set defaults** button to perform restoring.

The screenshot shows the 'Advanced' configuration tab. It features several settings: 'Power Save' with radio buttons for 'None' (selected), 'Min', and 'Max'; 'Wireless Mode' with a dropdown menu showing '802.11b/g'; and 'Channel Plan' with a dropdown menu showing 'FCC'. There are two sliders: 'Fragment Threshold' and 'RTS Threshold', both with values set to 2432. At the bottom of the configuration area are two buttons: 'Set Defaults' and 'Apply'.

Power Save	
None	Disable Power saving function.
Min	Minimum power consumption
Max	Maximum power consumption
Turbo Mode	
OFF	Disable turbo mode
ON	Enable turbo mode
AUTO	Enable or disable turbo automatically according to the detected environment
Fragment Threshold	
The maximum size of a packet that is going to be segmented and transmitted. Select the size from 256 to 2432(default) bytes.	
RTS Threshold	
Select the RTS Threshold form 0 to 2432(default)	
Wireless Mode	
802.11g/b	Connect to a 802.11g/b network (2.4GHz/54Mbps)
802.11b	Connect to a 802.11b network (2.4GHz/11Mbps)
Channel Plan	
ETSI	For European counties (CH1 ~ CH13)
MKK	For Japan (CH1 ~ CH 14)
FCC	(default value) CH1 ~ CH11

Status


This tab shows the current connection status of this adapter.

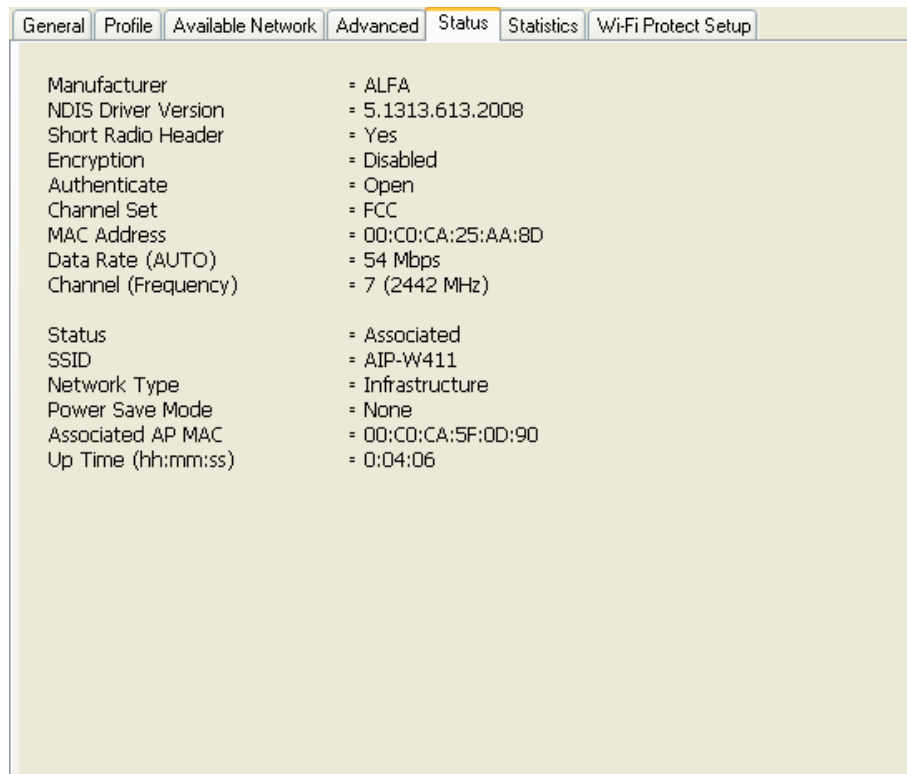

General	Profile	Available Network	Advanced	Status	Statistics	Wi-Fi Protect Setup
<div>Manufacturer = ALFA</div> <div>NDIS Driver Version = 5.1313.613.2008</div> <div>Short Radio Header = Yes</div> <div>Encryption = Disabled</div> <div>Authenticate = Open</div> <div>Channel Set = FCC</div> <div>MAC Address = 00:C0:CA:25:AA:8D</div> <div>Data Rate (AUTO) = 54 Mbps</div> <div>Channel (Frequency) = 7 (2442 MHz)</div> <div>Status = Associated</div> <div>SSID = AIP-W411</div> <div>Network Type = Infrastructure</div> <div>Power Save Mode = None</div> <div>Associated AP MAC = 00:C0:CA:5F:0D:90</div> <div>Up Time (hh:mm:ss) = 0:04:06</div>						

Statistics

See Statistics tab to show the transmission activity record. Clicking the **“Reset”** button recounts the values from zero.

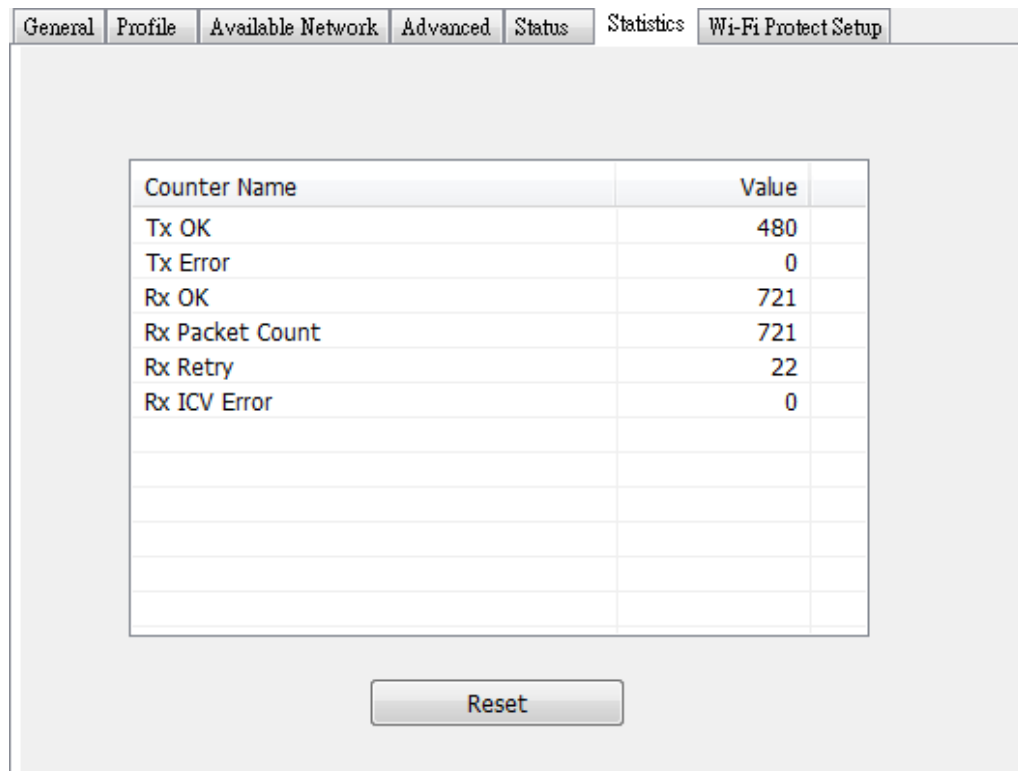

General	Profile	Available Network	Advanced	Status	Statistics	Wi-Fi Protect Setup																								
<table><thead><tr><th>Counter Name</th><th>Value</th></tr></thead><tbody><tr><td>Tx OK</td><td>480</td></tr><tr><td>Tx Error</td><td>0</td></tr><tr><td>Rx OK</td><td>721</td></tr><tr><td>Rx Packet Count</td><td>721</td></tr><tr><td>Rx Retry</td><td>22</td></tr><tr><td>Rx ICV Error</td><td>0</td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr><tr><td> </td><td> </td></tr></tbody></table> <div>Reset</div>							Counter Name	Value	Tx OK	480	Tx Error	0	Rx OK	721	Rx Packet Count	721	Rx Retry	22	Rx ICV Error	0										
Counter Name	Value																													
Tx OK	480																													
Tx Error	0																													
Rx OK	721																													
Rx Packet Count	721																													
Rx Retry	22																													
Rx ICV Error	0																													

Appendix

RT-Set Setup Wizard

For Windows 2000, XP, Vista users to connect to a wireless network easily, we also provide the RT-Set setup wizard to help users set their preferred wireless network step by step. You can configure your wireless network via this RT-Set setup wizard in the following three modes:

Station mode (infrastructure): Select this mode to connect to the AP (access point) in your LAN.

Station mode (ad hoc): Select this mode to connect to another wireless network adapter in your LAN.

AP mode: Select this mode to perform this adapter as an AP (access point).

To start the RT-Set Wizard, please click the **"RT-Set"** tab on the up-left corner of the window

Connect to a wireless network in infrastructure mode


1. To connect this adapter to an AP, select the **"Station (infrastructure)"** mode and click the "Next" button to proceed.




- The RT-Set scans the available AP within your LAN. Those AP are listed with their SSID. Click the wireless AP that you are going to connect with and then click the **"Next"** button. You may also click the "Refresh" button to scan wireless AP again.



- The "unsecured network" window may pop up if the AP you select doesn't use security encryption settings. Click the "OK" button after your confirmation.

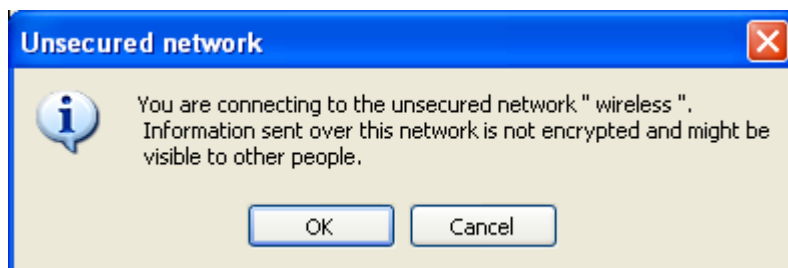

- Click "OK" after configuring the profile content to be corresponding to the AP that you are going to connect with. If you are connecting to an AP without security encryption, please click "OK" button without configuration.

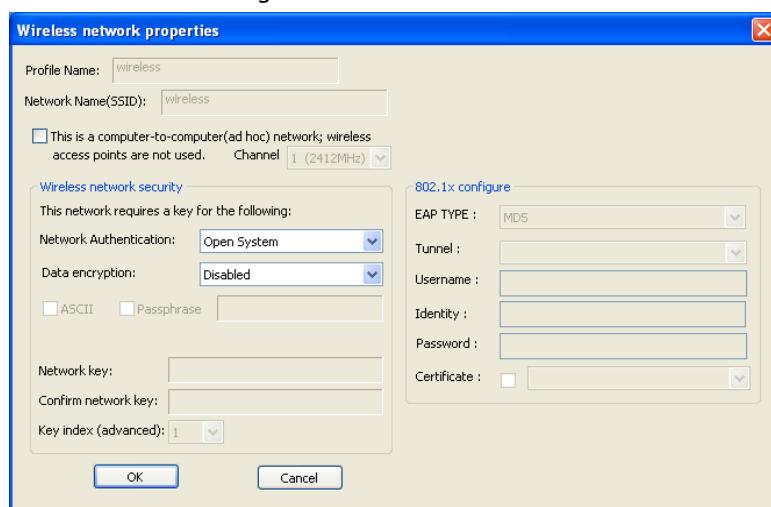

5. Configure the IP address for the incoming connection. You may choose "Use the following IP address" to fill in IP addresses manually or choose "Obtain an IP address automatically (recommended)".

RT-Set

Setup TCP/IP
Chooses automatic or manual obtains IP.

TCP/IP

☒ Obtain an IP address automatically

☐ Use the following IP address:

IP: [. .]

MASK: [255 . 255 . 255 . 0]

GATEWAY: [. .]

DNS

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Primary: [. .]

Sec: [. .]

< Back Finish


6. After configuring the IP addresses, click the "Finish" button to complete.

Connect to a wireless network in ad hoc mode


1. To connect this adapter to another computer, select the "Station (ad hoc)" mode and click the "Next" button to proceed.




2. The RT-Set scans the available wireless adapters within your LAN. Those adapters are listed with their SSID. Click the one that you are going to connect with and then click the "Next" button. You may also click the "Refresh" button to scan the wireless adapter again.

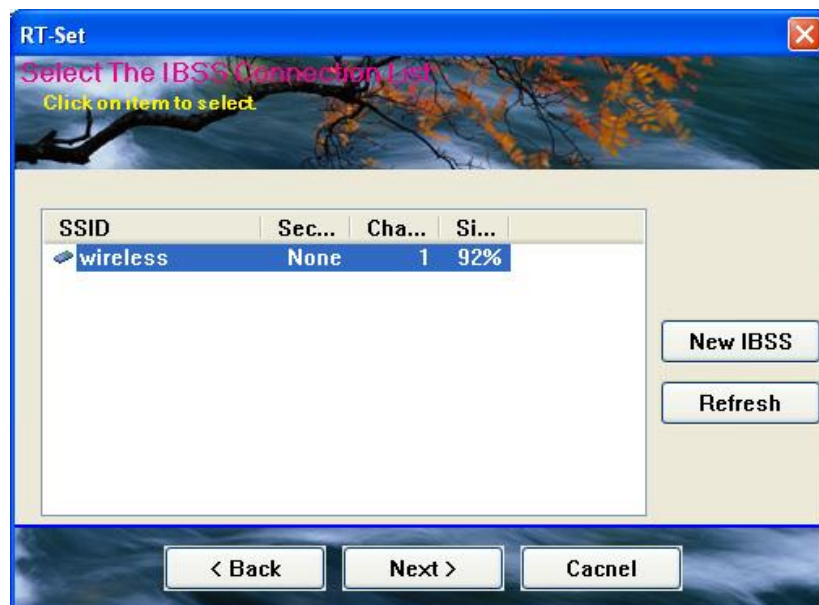


3. The "unsecured network" window may pop up if the adapter you select doesn't use security encryption settings. Click the "OK" button after your confirmation.

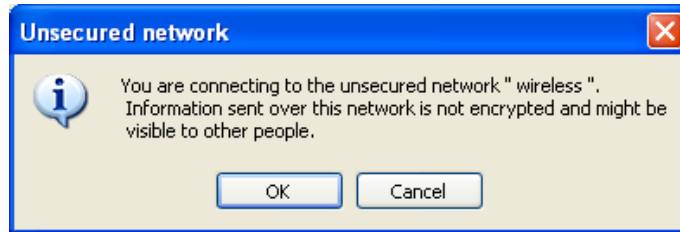

4. Click "OK" after configuring the profile content to be corresponding to the wireless adapter that you are going to connect with. If you are connecting to a wireless adapter without security encryption, please click "OK" button without configuration.

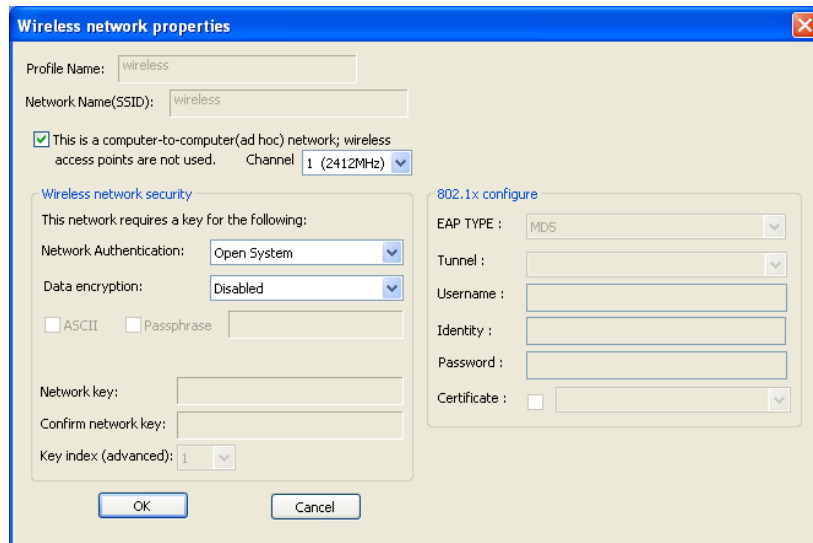

5. Configure the IP address for connecting to the wireless adapter. You may choose "Use the following IP address" to fill in IP addresses manually or choose "Obtain an IP address automatically".

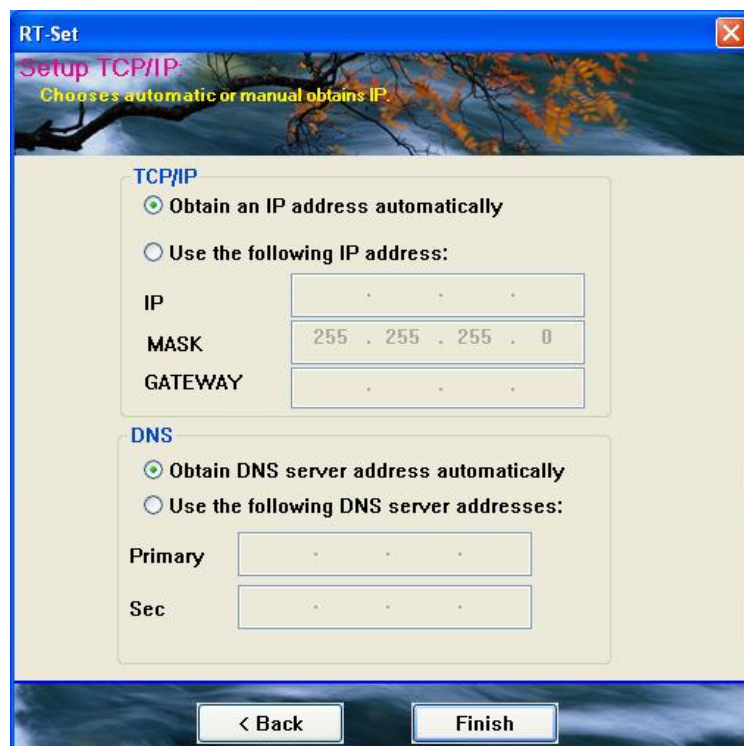

Use this adapter as an AP


1. To use this adapter as an AP (access point), select the "AP" mode and click the "Next" button to proceed.



2. Select "Normal User" (recommended) to make a step-by-step configuration. You may also select "Advanced Users" to configure this AP with more detail.




3. Assign an SSID for this AP, the name will be identified as your network while other wireless devices scan for available network. Choose to use WEP encryption or from the drop list and click "Next" to proceed.

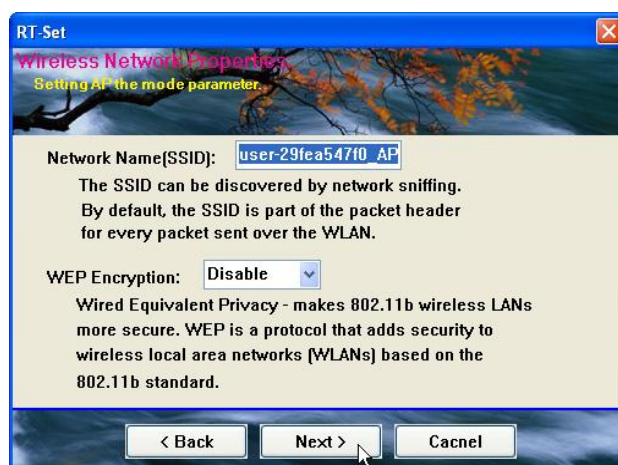

- Click the "Next" button after confirming the settings above.



- Click "Finish" to complete setup.

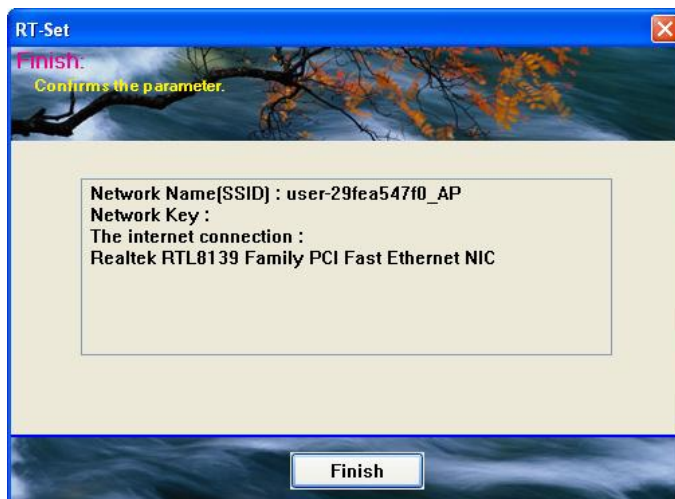

AP mode management guide

General


After configuring the adapter in AP mode, this "**General**" page shows up, which shows the general information of this AP.

SSID: The SSID (network name) of the wireless network constructed by this AP.

BSSID: The MAC address of this AP

Config: Click this button to change configurations to this AP

Association Table: Shows the information of the devices that connects to the AP including their MAC addresses and the time that they connected with this device.

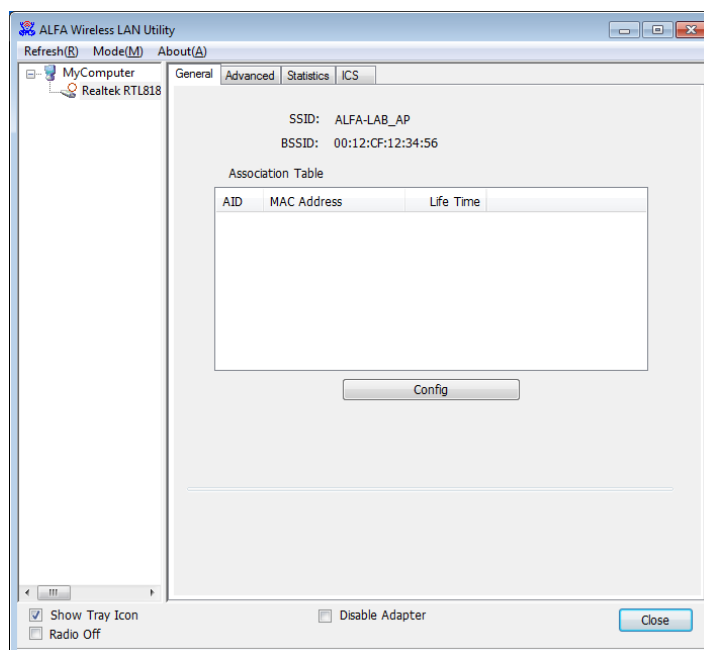

Advanced


Beacon Interval: Define the interval between beacons from 20~1000

DTIM Period: Set the DTIM period between 1~255

Preamble Mode: Click the drop list to select the preamble to be long, short or auto


Set Defaults: Click this button to restore the settings above to default

Apply: Click this button to execute changes.

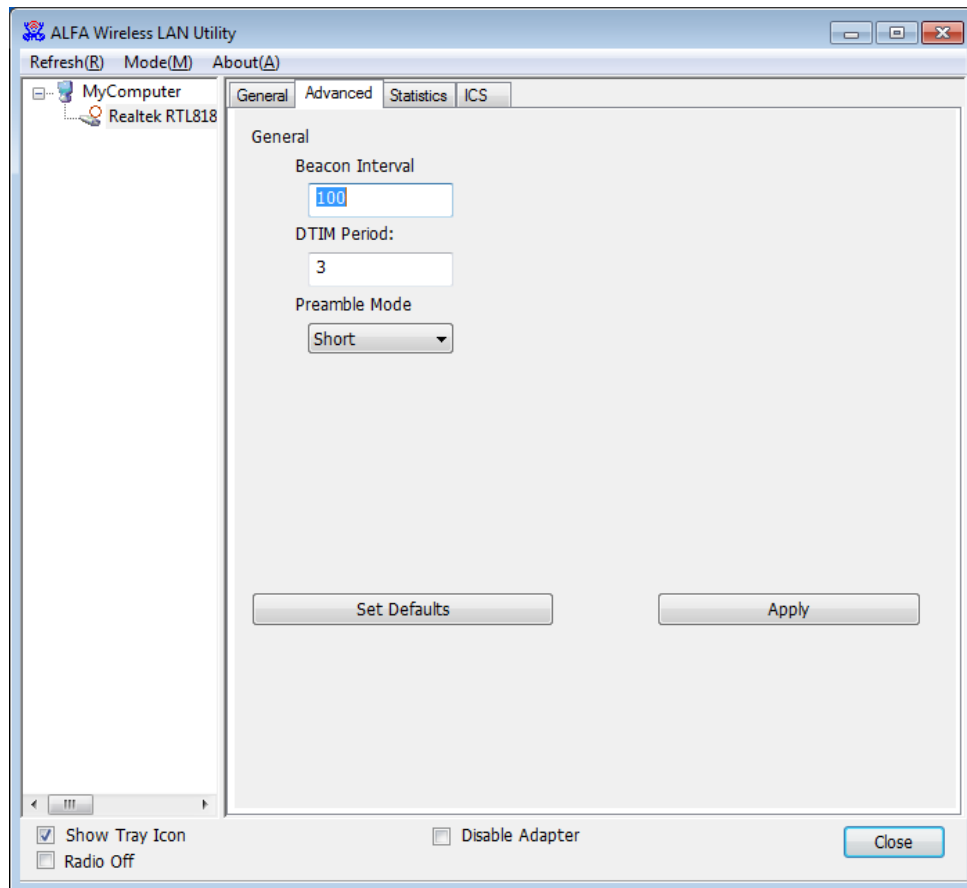


Statistics

The **"Statistics"** tab shows the transmission activity record. Clicking the **"Reset"** button and recounts the values from zero.

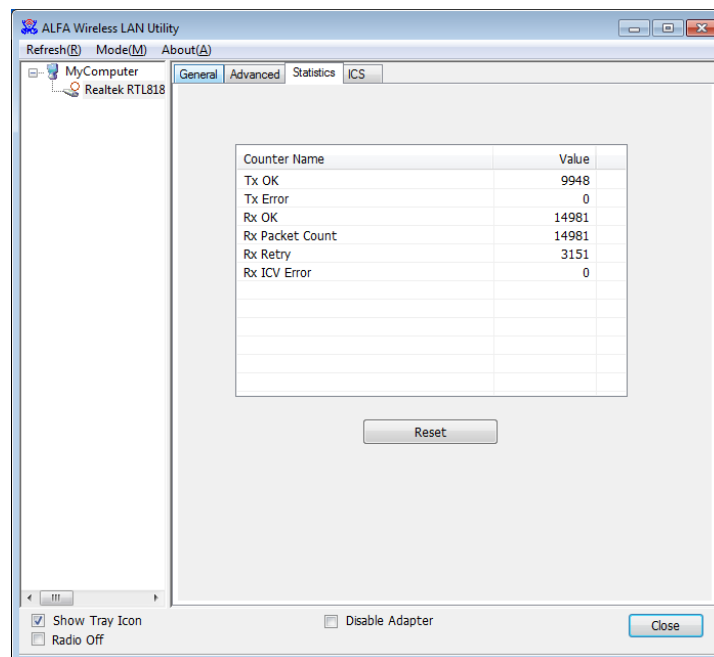

ICS (Internet Connection Sharing)

This page allows users to select the adapter to connect to the public network. Please click on the device that are used for connecting to the public network and click the "Select" button, and then click the "Apply" button to execute.

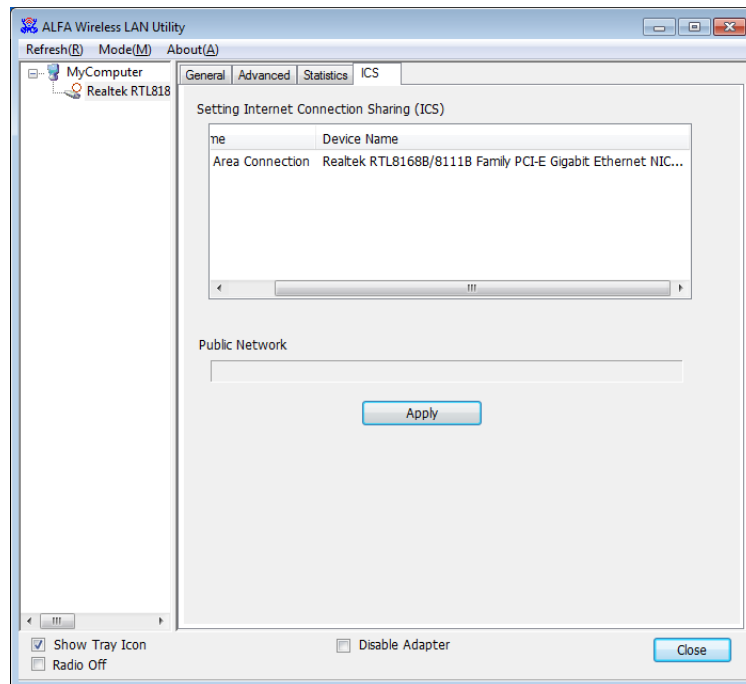

Product Specification

Standard

IEEE 802.11b, IEEE 802.11g

Interface

USB rev1.0/1.1/2.0

Security

64/128-bit WEP, WPA (TKIP with IEEE 802.1x), AES

Receiver Sensitivity

54Mbps OFDM, 10%PER, -68dBm

11Mbps CCK, 8%PER, -86dBm

1Mbps BPSK, 8%PER, -92dBm

Channel

USA 11, Europe 13

Data Rate

802.11b: 1, 2, 5.5 and 11Mbps

802.11g: 6, 9, 12, 18, 24, 36, 48, and 54Mbps

Transmit Power

Europe ETSI 20dBm, USA FCC 30dBm

Range Coverage

Indoor 100~200 meters

Outdoor 300~500meters

LED indicator

Link/ACT(Green)

Operating Temperature

0- 40 °C (32 – 104 °C)

Operating Humidity

10% ~ 90% (non-condensing)

Emission

FCC Class B, CE