
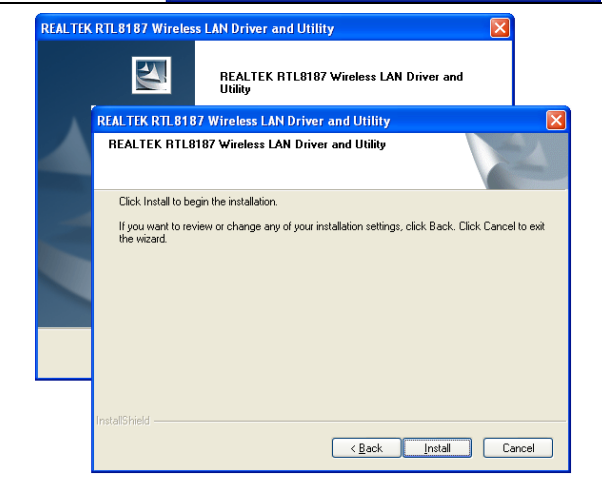



Quick Installation Guide for AWUS036H

	<p>Insert the supplied CD into your computer's disk drive. The setup program should start automatically after a few seconds. If instruction does not appear, locate and double-click the setup.exe file on the CD.</p> <p>On the 1st title screen appears, click "Windows Driver" then on the following screen select the operating system your computer is operating on.</p>
	<p>Select your setup language and click "Next" to start installation wizard.</p>
	<p>On the "Wireless LAN Driver and Utility" click "Install" to continue.</p>


	<p>Click “Finish” and the Utility will pop up for Windows XP. (Choose “No, I will restart my computer later” and click “Finish” for Windows Vista)</p>
	<p>Attach the antenna to the wireless adapter and plug in the USB cable to AWUS036H. Insert the USB connector into an available USB port, your computer will then detect and activate the adapter automatically. Do Not remove the CD from the computer</p>
	<p>Found New Hardware pops up from the utility bar</p>
	<p>Double click on the “Alfa Wireless LAN Utility” icon placed on your desktop from the installation program. The “Alfa Wireless LAN Utility” pops then click “Setup Wizard(s)” from the menu bar</p>

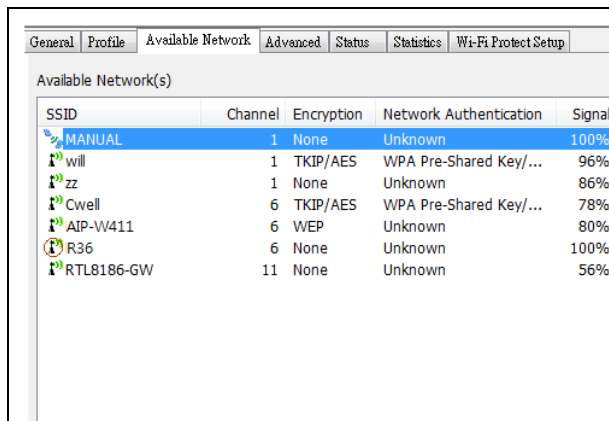

Select “**Available Network**” and double click on your target network

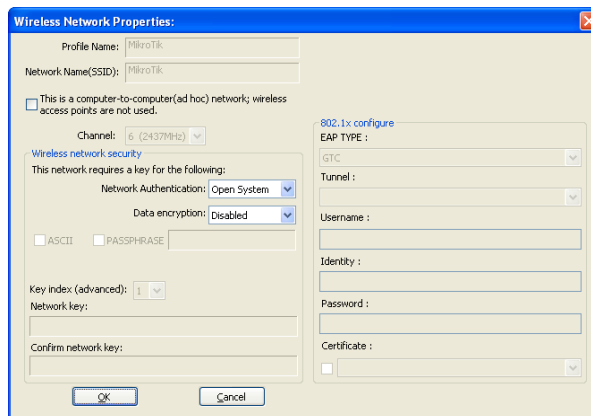

Input the network security key and click “OK” if the network has security key protected.

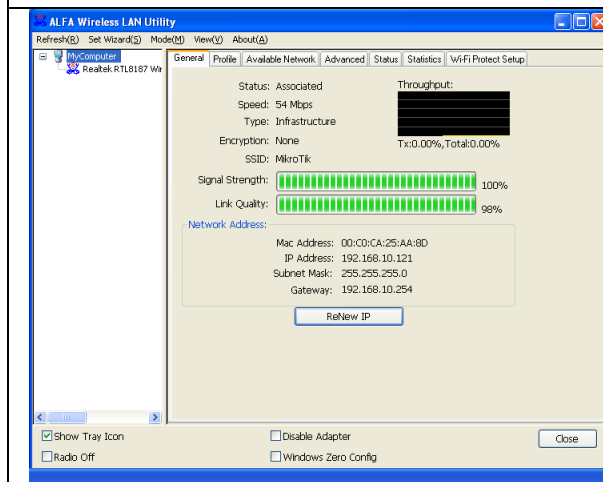

Now, it should bring you back to General page where you can see “Signal strength” and “Link Quality” of your wireless connection. Click “**Close**” to hide the utility.