
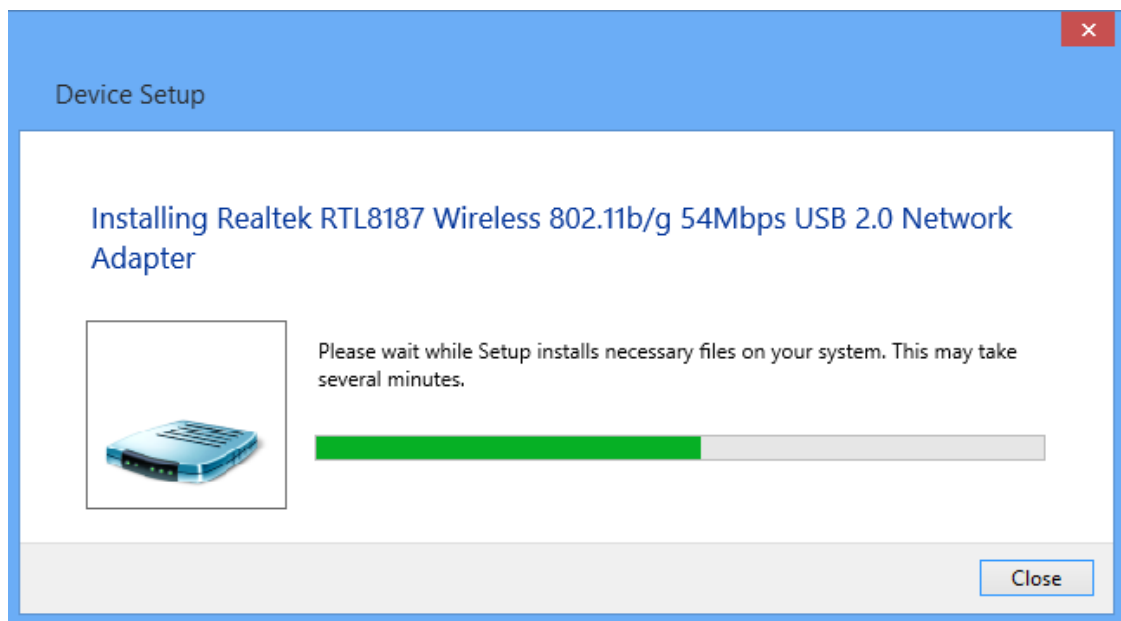


## AUTO INSTALLATION


1. Make sure you PC is connecting to Internet
2. Plug Alfa USB adapter into USB port directly
3. **Add Hardware Wizard** will search & install driver for you automatically

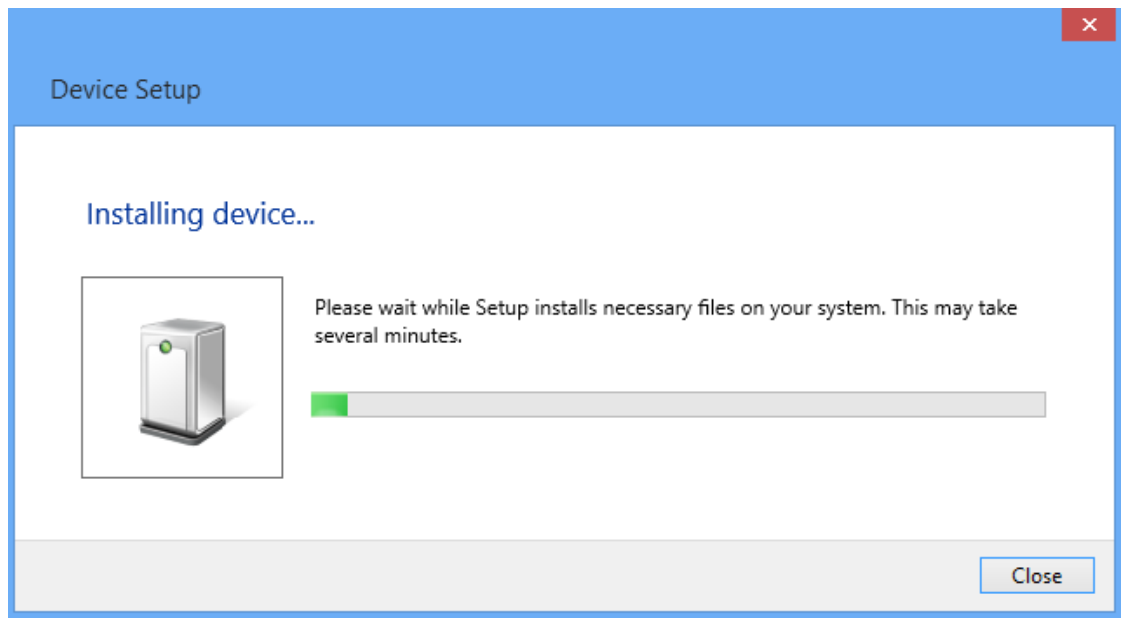


## INSTALL DRIVER MANUALLY

(That's t take AWUS036H as example)


1. Plug in AWUS036H into Windows 8 and launch *Device Manager*
2. Expend your *Network adapters* section in *Device Manager*, click on *Settings -> PC Info -> Device Manager*

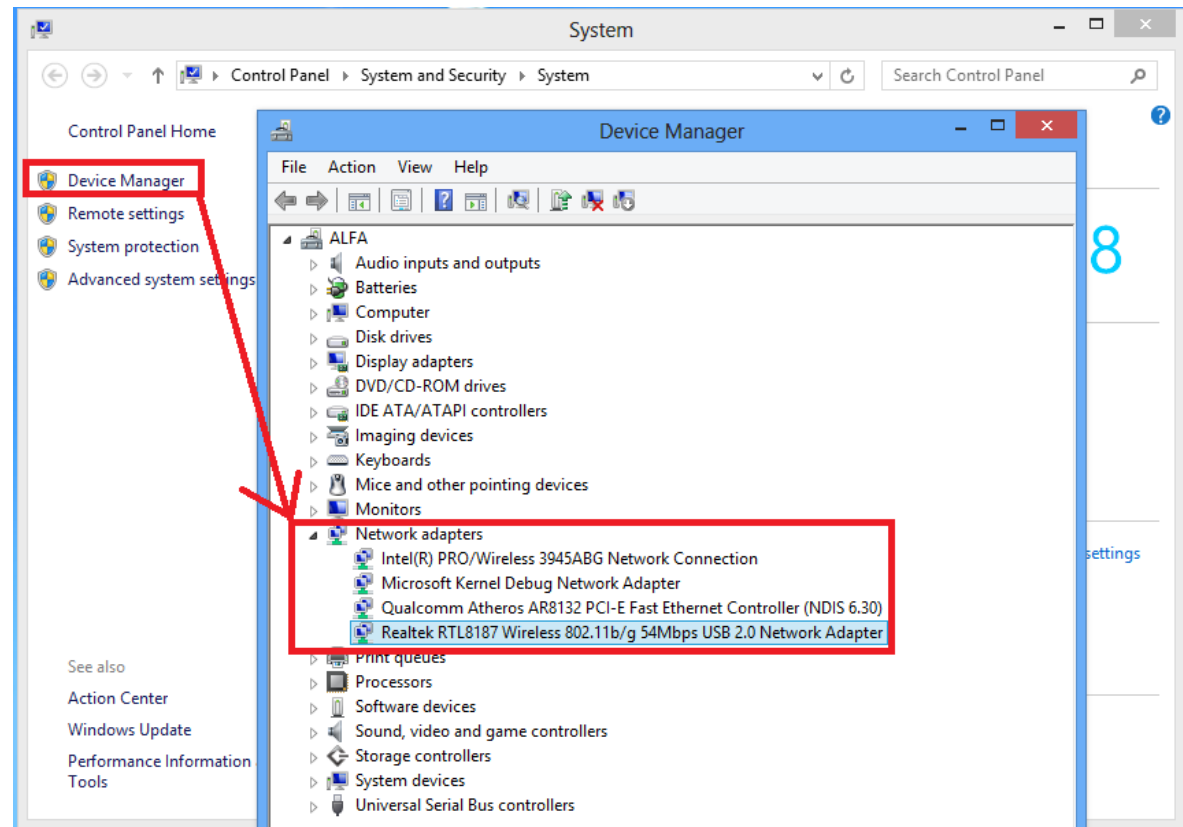

3. Right click on AWUS036H (Realtek RTL8187 Wireless .... ) and select *Update Driver Software ..*

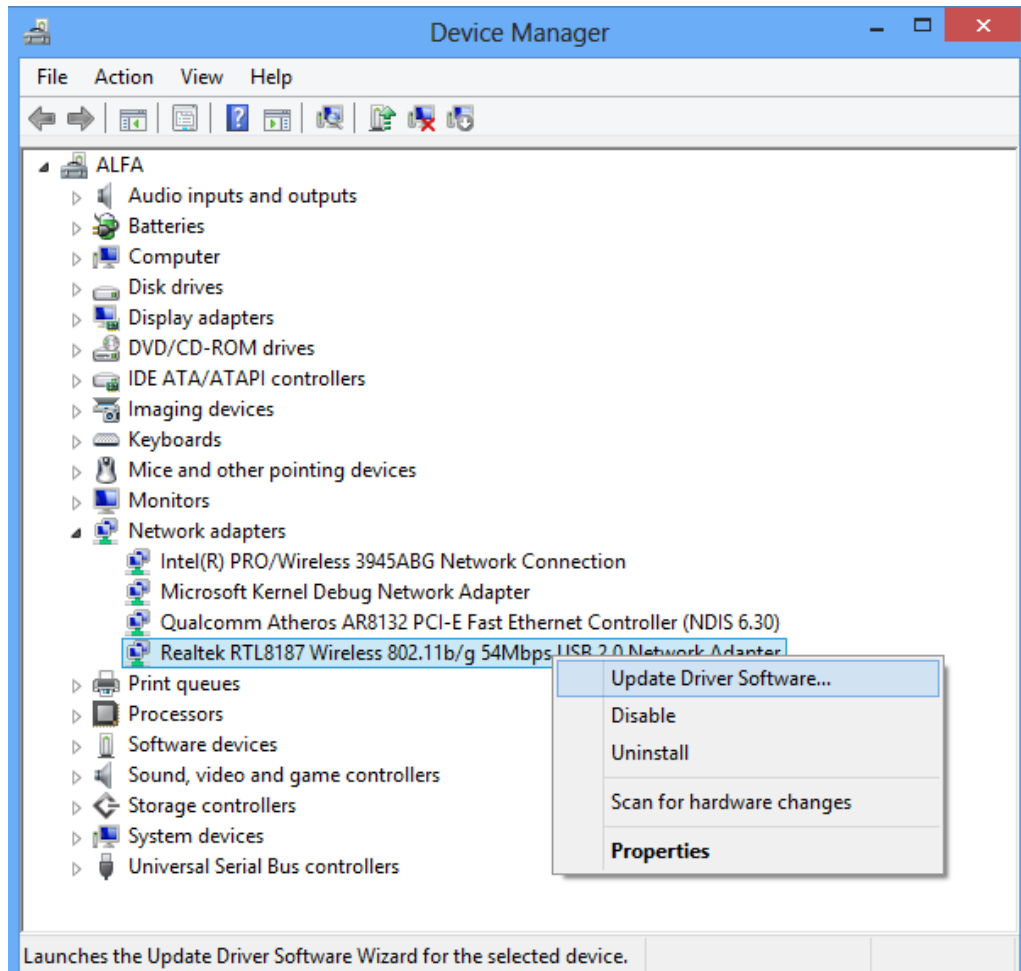

4. Press **Browse** button to locate driver for AWUS036H for Windows 7 where is located in CD as shown in following picture.

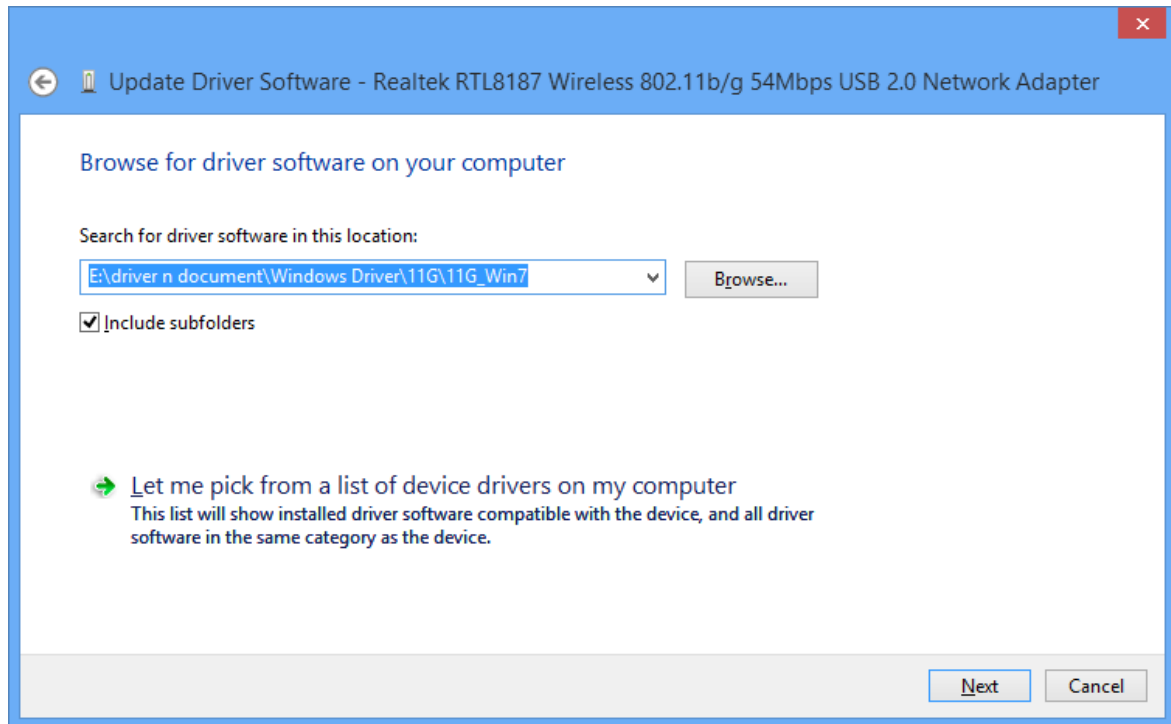

## 5. Driver is installed as shown in following picture

