







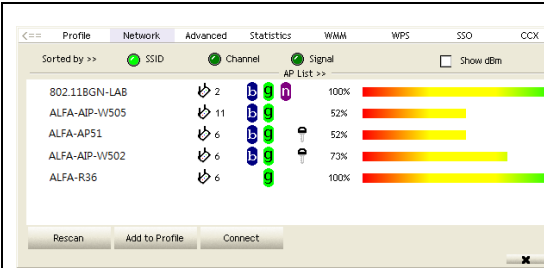



036NH QIG

	<p>Insert the supplied CD into your computer's disk drive. The setup program should start automatically after a few seconds. If instruction does not appear, locate and double-click the setup.exe file on the CD.</p>
	<p>When the 1st title screen appears, click "AWUS036NH" then on the following screen select the operating system your computer is operating on.</p>
	<p>Read the license agreement and choose "I accept the terms of the license agreement" and click Next</p>
	<p>Choose "Install driver and Ralink WLAN Utility" and click "Next"</p>


	<p>Choose “Ralink Configuration Tool” and click “Next”</p>
	<p>Click “Install” to continue.</p>
	<p>Click “Finish” and the Utility will pop up for Windows XP. (Choose “No, I will restart my computer later” and click “Finish” for Windows Vista)</p>
	<p>Attach the antenna to the wireless adapter and plug in the USB cable to AWUS036NH. Insert the USB connector into an available USB port, your computer will then detect and activate the adapter automatically. Do Not remove the CD from the computer</p>
	<p>Found New Hardware pops up from the utility bar</p>

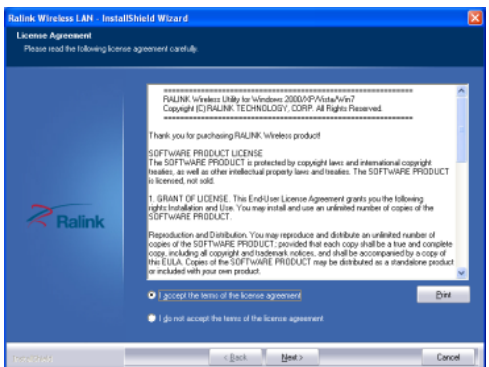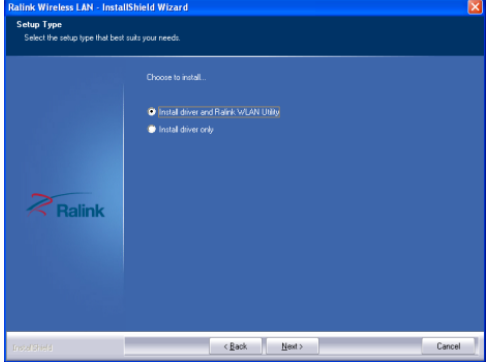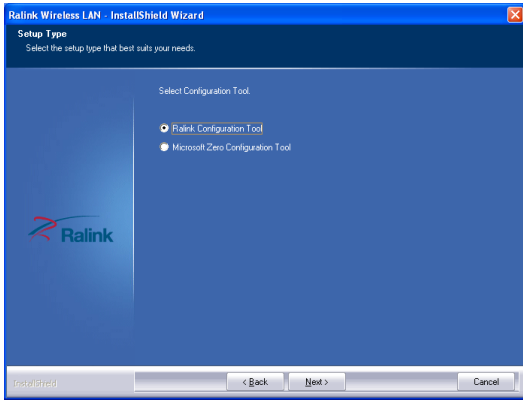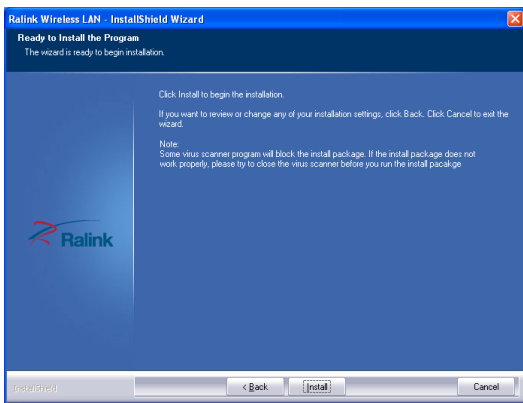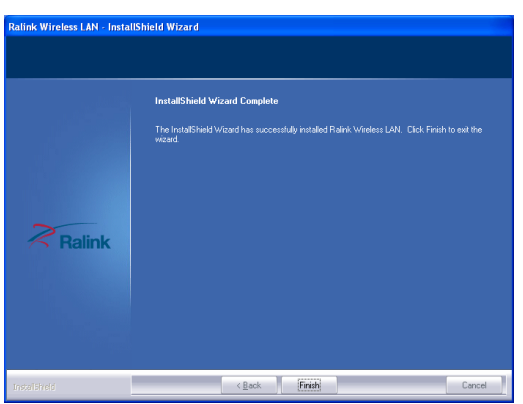

Select your target network and click
“Connect”

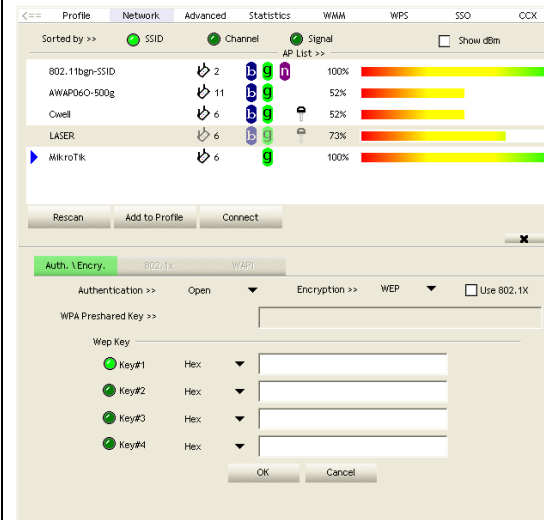

Insert the network security key and click
“OK”

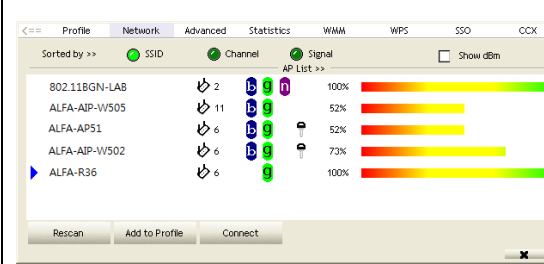

You will see symbol in front of the name
of the network, it means you have
successfully connected to your wireless
network.