



DLINK Router configuration for InstaController




From LAN Port using LAN cable to the LAPTOP or PC, login to the DLINK router, 192.168.0.1

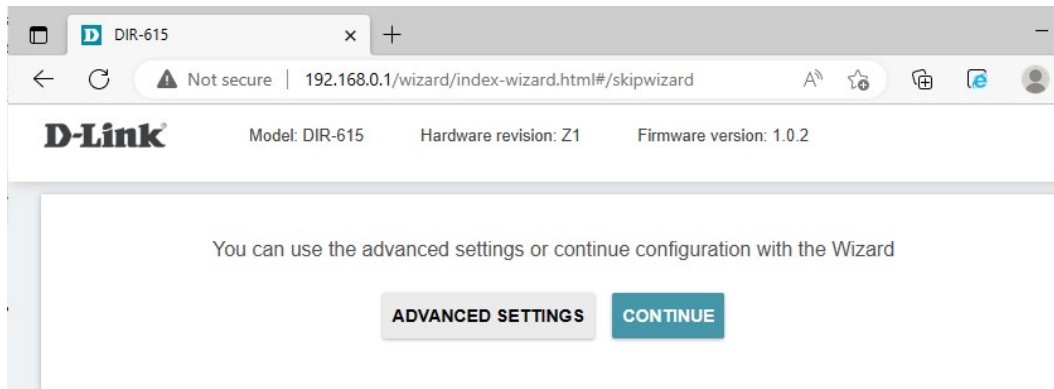

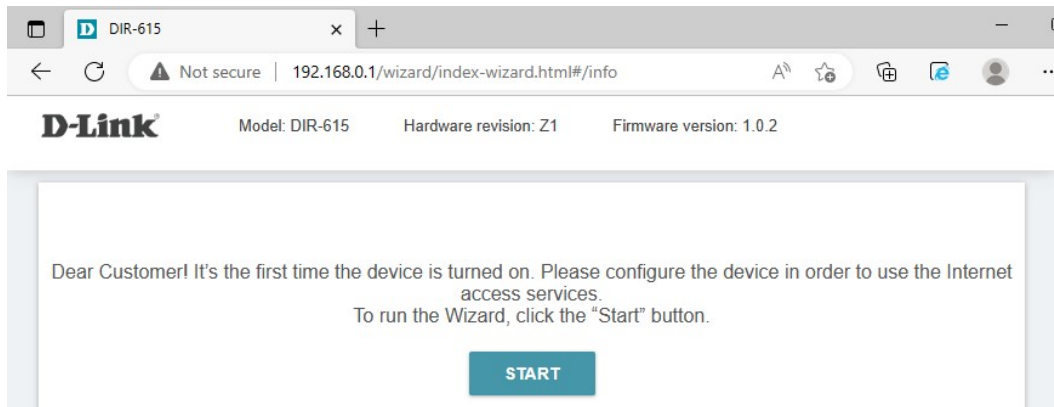

go to the advanced settings.
admin password set to peoplelink

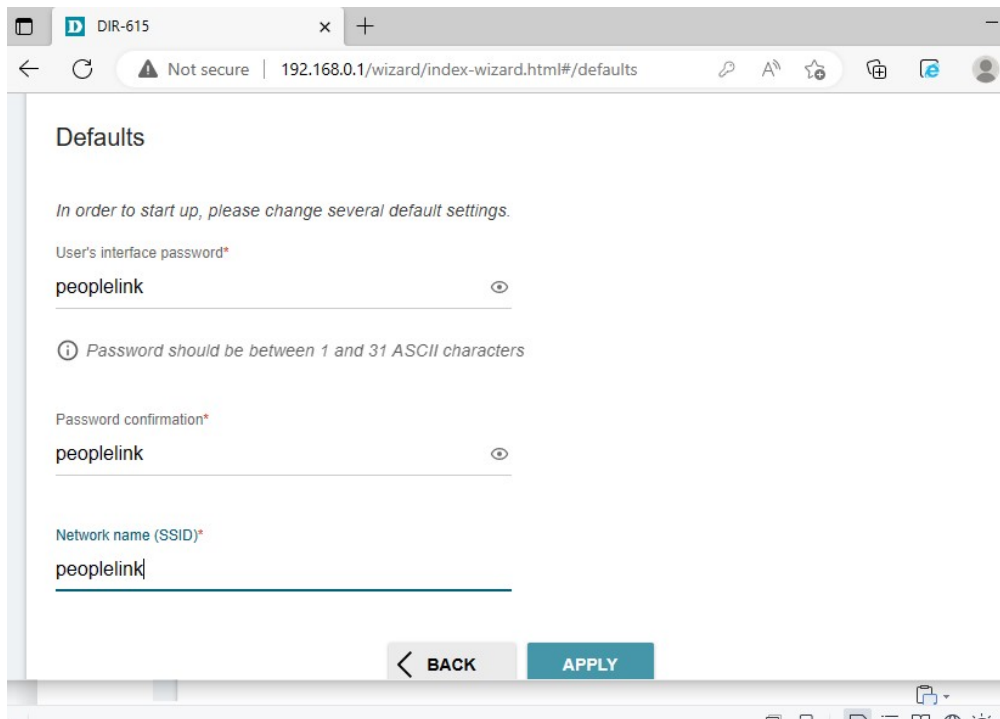

```
ssid set to peoplelink
wifi password set to peoplelink
```

DIR-615 HW:Z1 FW:1.0.2

Home

Settings

Functions

Management

Settings >> Wireless Network

Setup Wizard

Internet

WAN Failover

Wireless Network

Network

Basic Settings

You can change basic parameters for the wireless interface and configure the basic and additional wireless networks.

Enable Wireless

Wireless mode

802.11 B/G/N mixed

Wi-Fi Network

Network name (SSID)*

peoplelink

- Block traffic between devices connected to the access point

Security Settings

Network authentication

WPA2-PSK

Password PSK*

peoplelink

① Password should be between 8 and 63 ASCII characters



Encryption type*

AES


Group key update interval (in seconds)*

3600


LAN IP set to 192.168.2.1

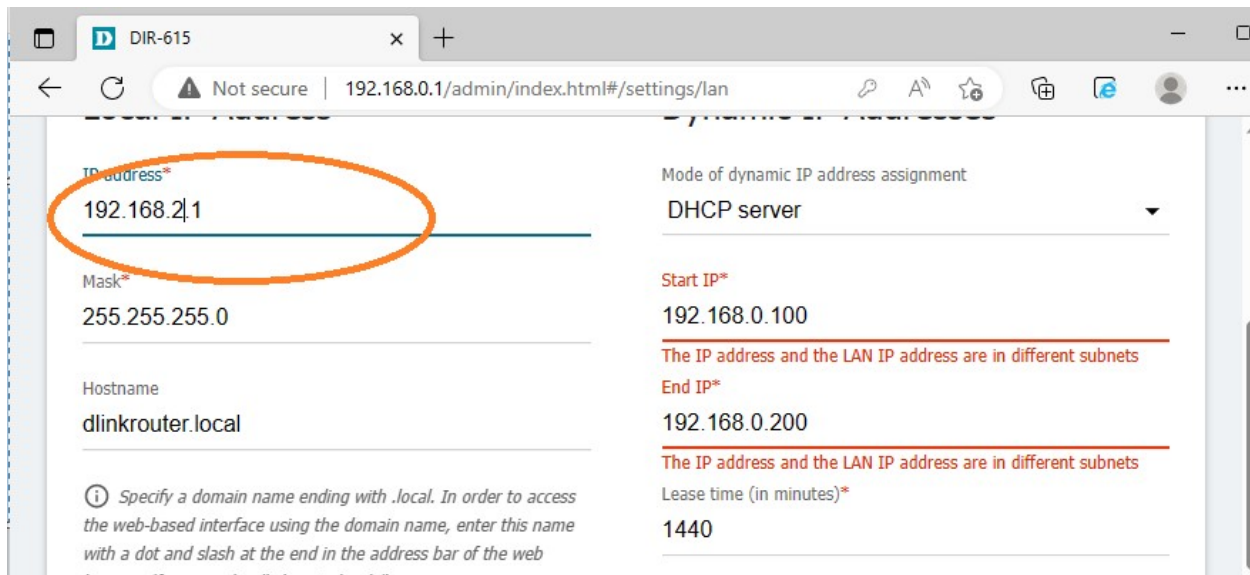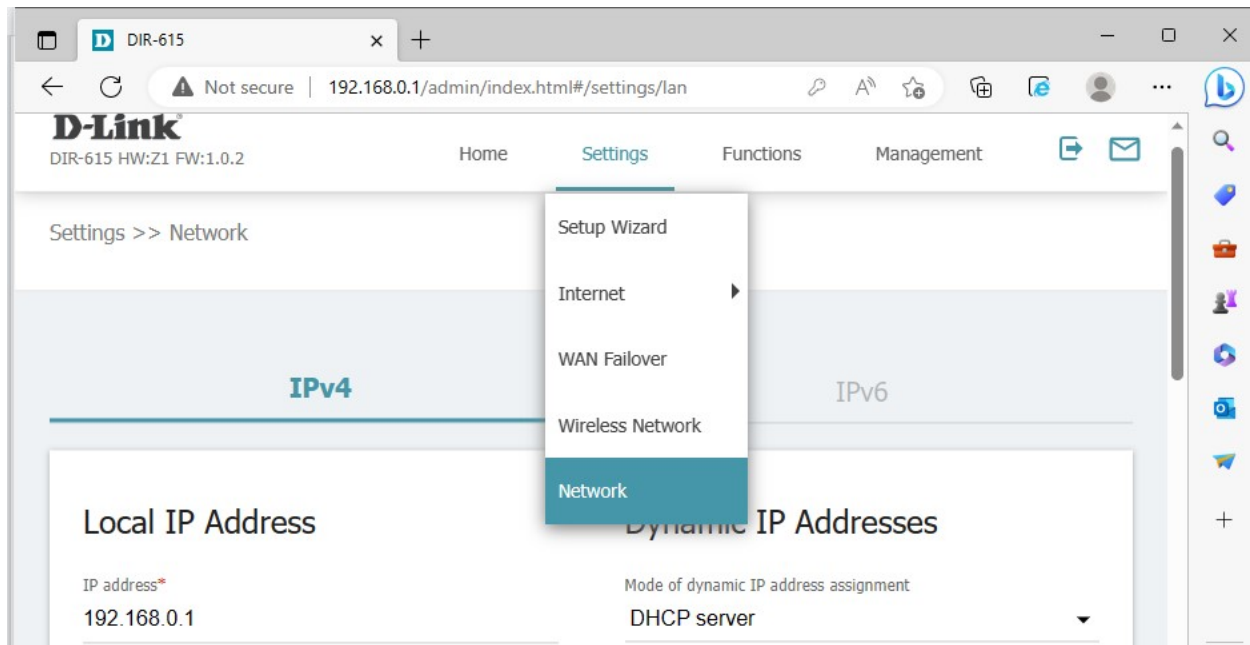

Apply changes and OK

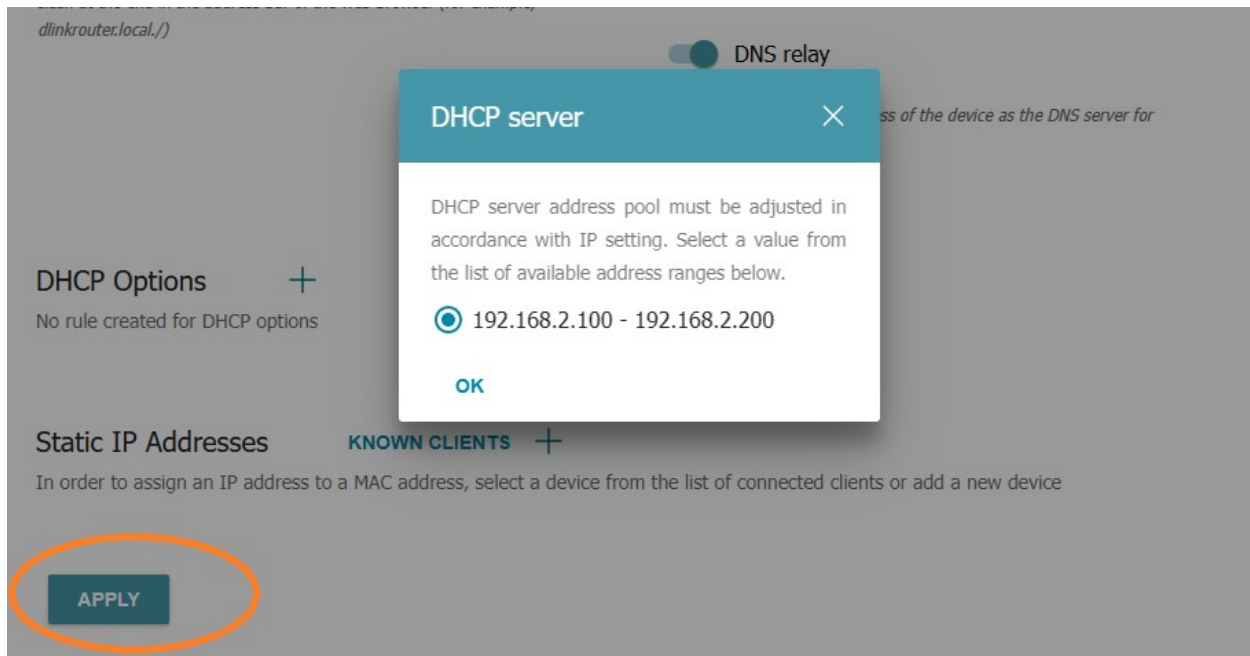

DHCP range set to 192.168.2.100 to 192.168.2.200
OK and reboot automatically with new settings.

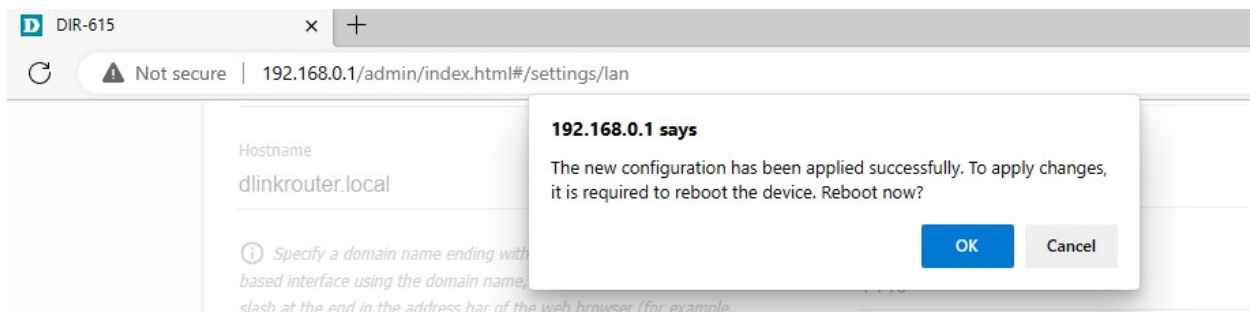

D-Link

Model: DIR-615

Firmware version: 1.0.2

Username

admin

Password

peoplelink



LOGIN

CLEAR