



## PRO AUDIO DSP & Display Serial control through InstaController


Configure This Device on serial ports 1 or 2 or 3

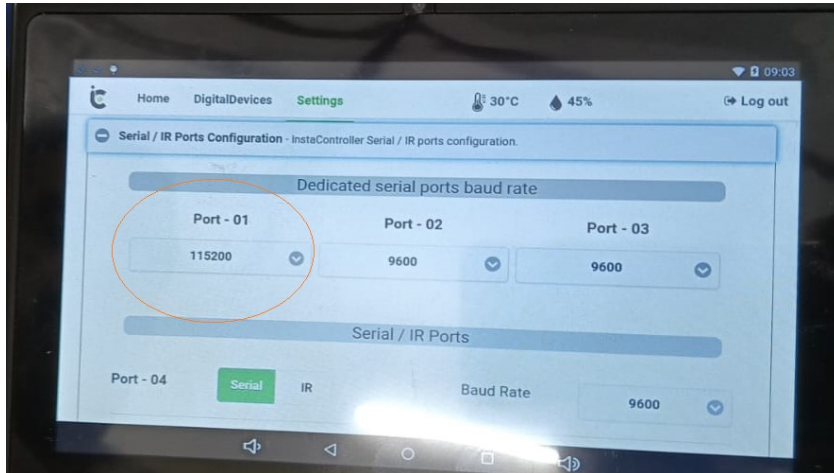


Required Port need to configure baud rate 115200

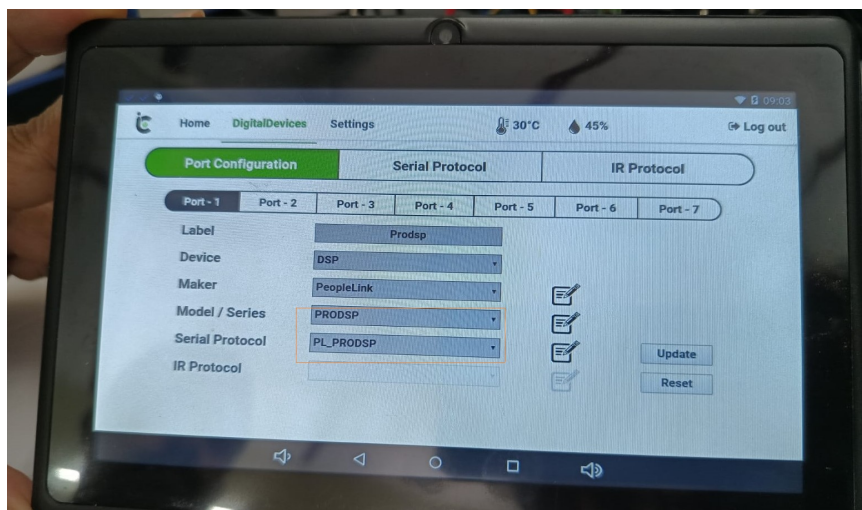


Digital Devices Port Configuration for PRODSP

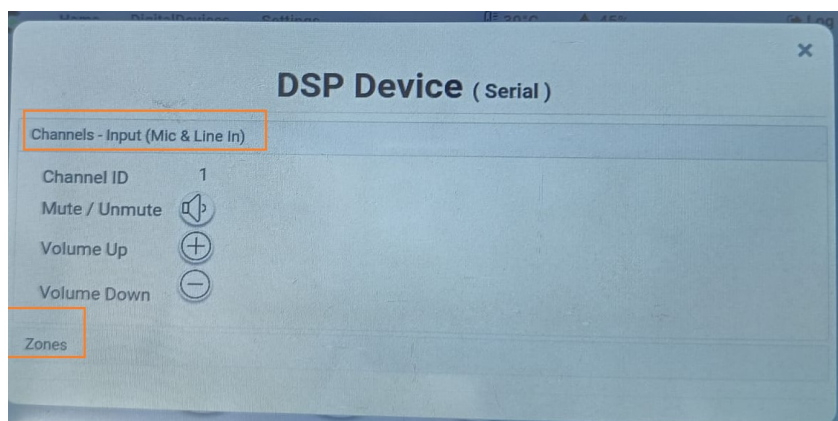

1,2,3, 4 mics Input grouped under Mic&Input , can control Mute, Unmute , Vol +/- by 1dB steps. 5,6,7,8 mics grouped under Zones

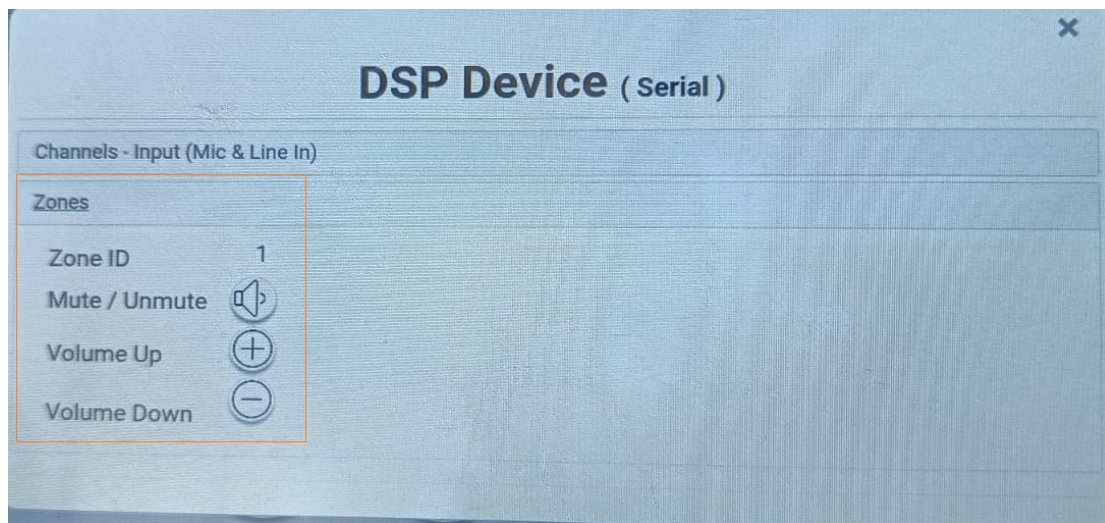

5,6,7,8 Mic channels grouped under zones , can control Mute , Unmute, Vol +/- by 1dB steps.

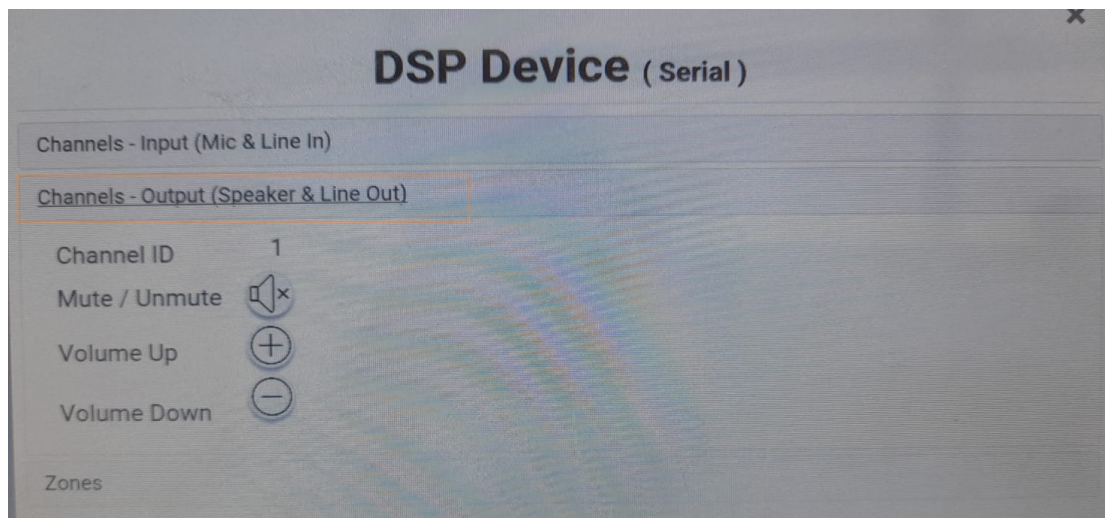


**1,2,5,6 speaker & Line Out** grouped under Channels-out put, can control Volume, Mute under this settings.

## Files need to update In TAB configuration Files :


Config\_DSP\_Serial

Config\_DSP\_Master

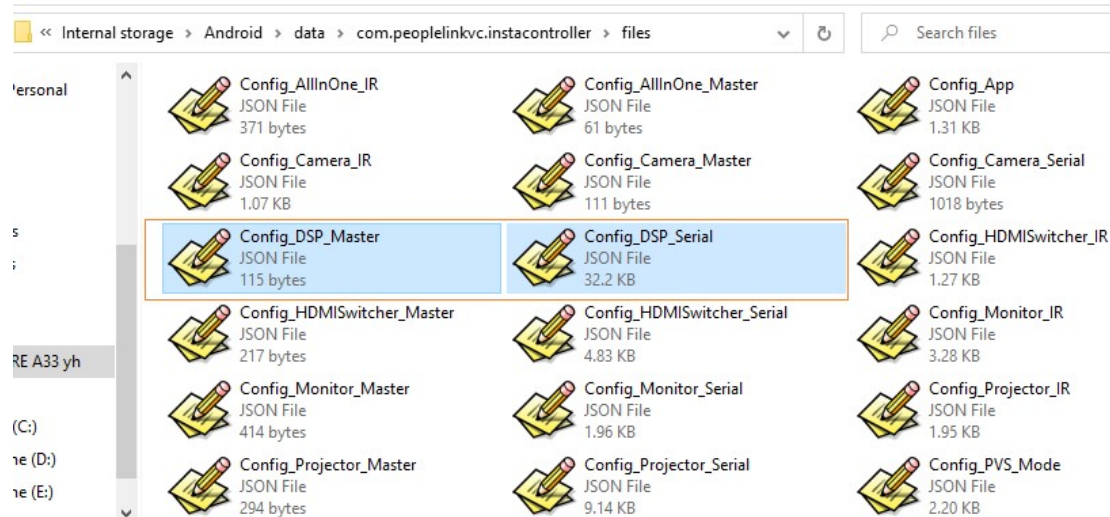


## Peoplelink S86 Display control through InstaController

(update Config\_Monitor\_Serial , Config\_Monitor\_Master 19Oct23 dated files)

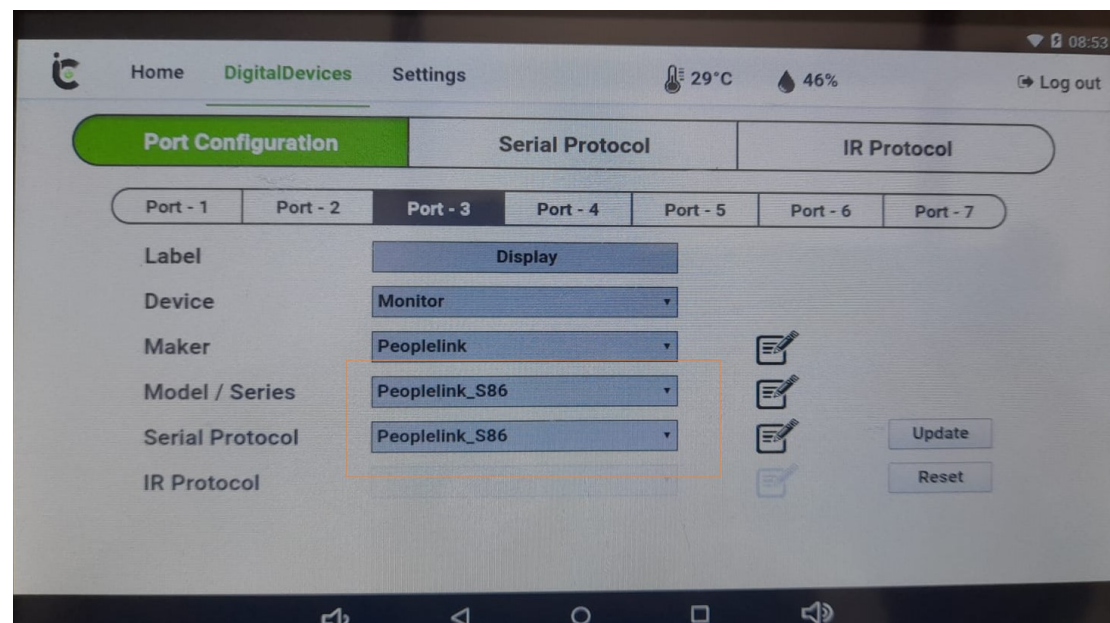


Example Port-3 configured for Peoplelink-S86 display



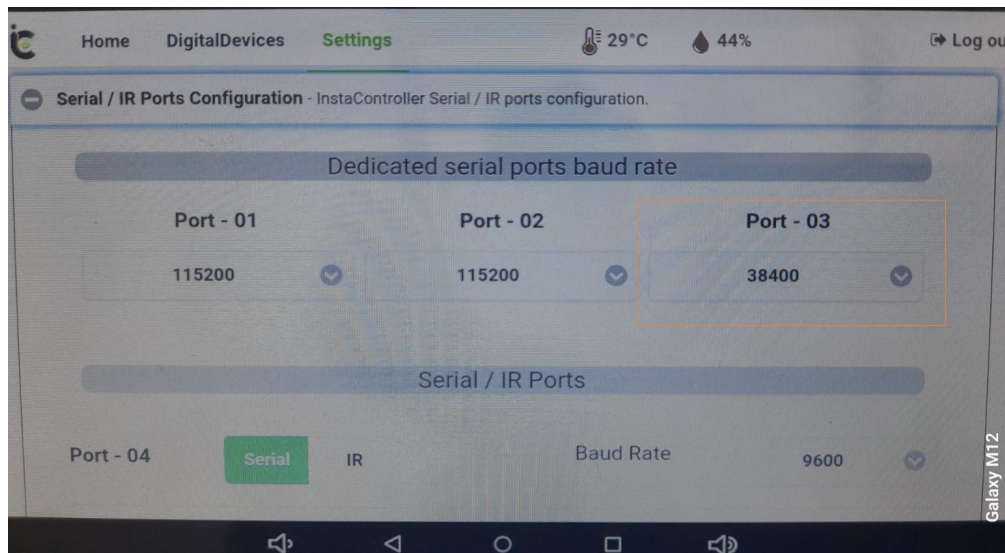

Serial port baud rate need to configure 38400 for Peoplelink-S86 /S65/S75 displays.

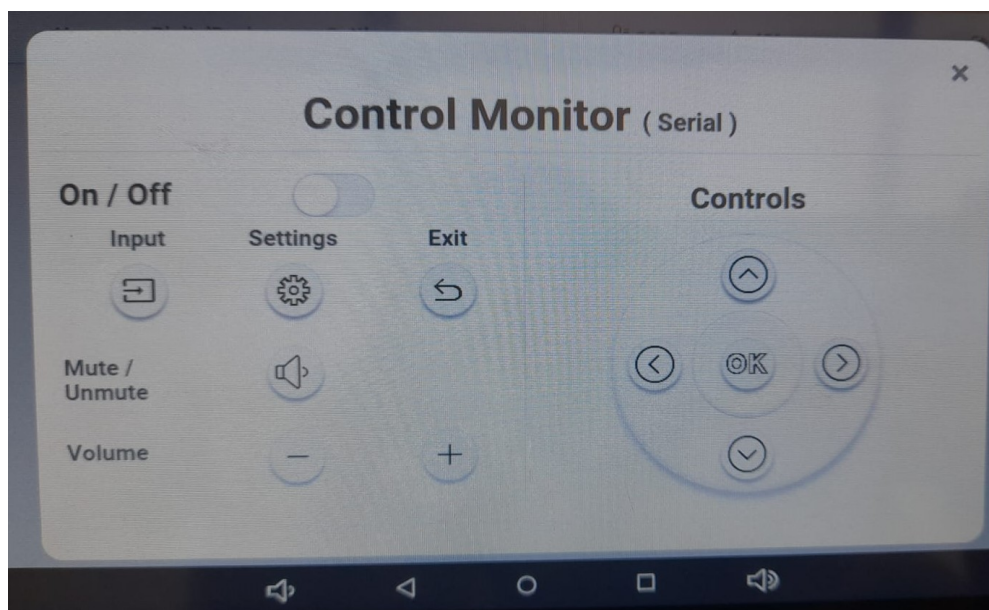

S86 Display - Control Monitor (Serial) user tab view

Note :

- 1) Pro Audio DSP - ports 1 or 2 or 3 , Baud rate 115200
- 2) S86 Display - ports 1 or 2 or 3 , Baud rate 38400
- 3) Peoplelink AIO DSP - ports 1-7, Baud rate 9600
- 4) Peoplelink- Camera - ports 1-7 , Baud rate 9600
- 5) BenQ Projector - ports 1-7, Baud rate 9600 ( on Projector also configure)
- 6) Peoplelink Android 8, Android 10 Displays IR control - Ports 4 to 7.

Refer below link for latest Updates

[https://github.com/sudeepPpl/Insta\\_conf\\_update\\_Proj](https://github.com/sudeepPpl/Insta_conf_update_Proj)