



## How to Enable Virtualization in any laptop

- Boot systems to BIOS with the F1 key at power on.
- Go to security tab in bios
- Enable intel VTT and VT-d



→ for amd thinkpad v technology

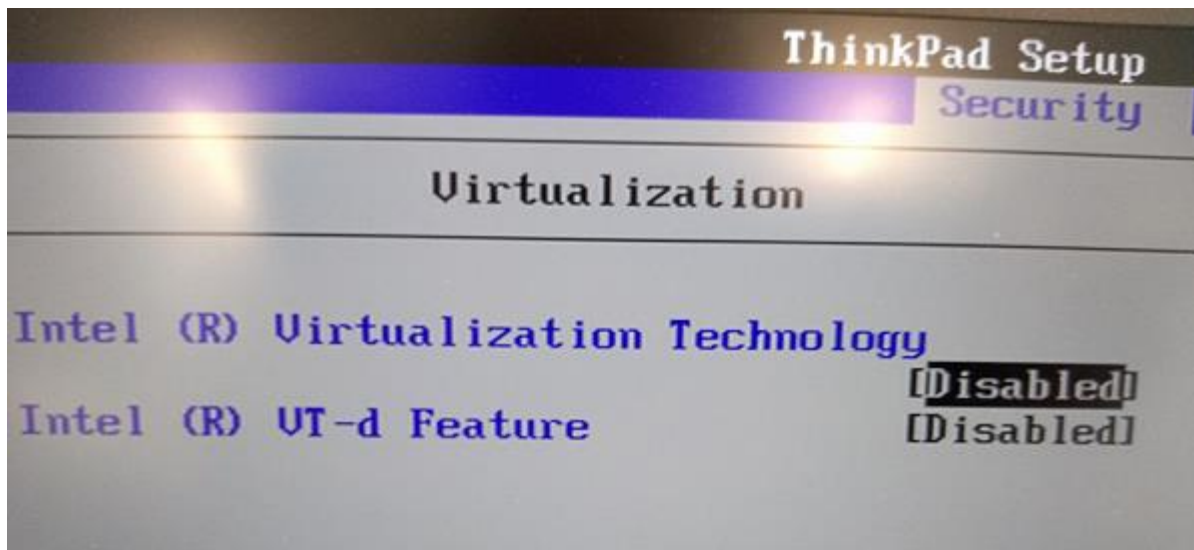

→ For idea ThinkPad

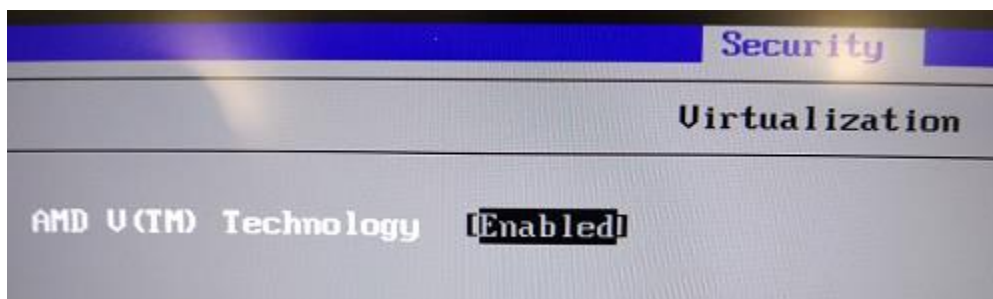

## ➤ Asus laptops

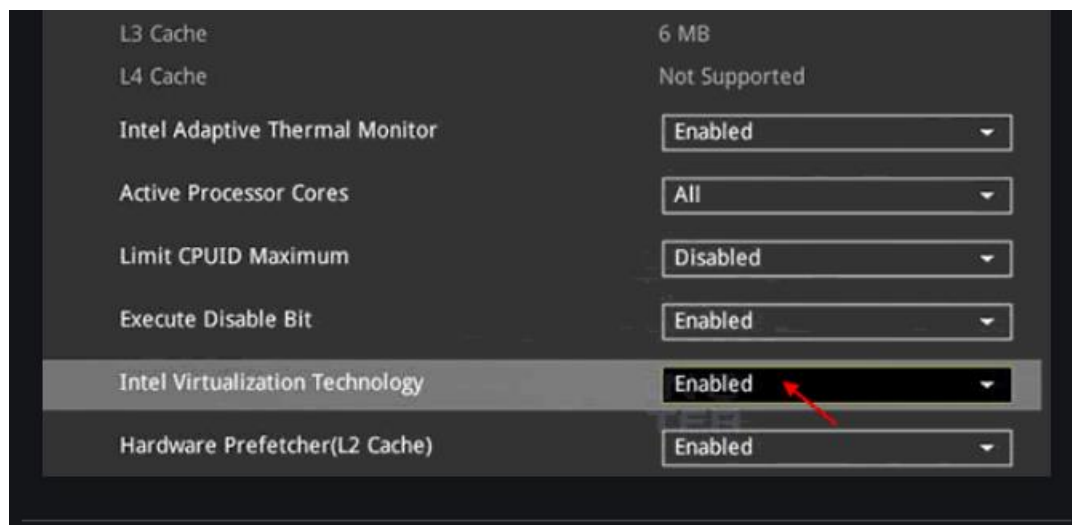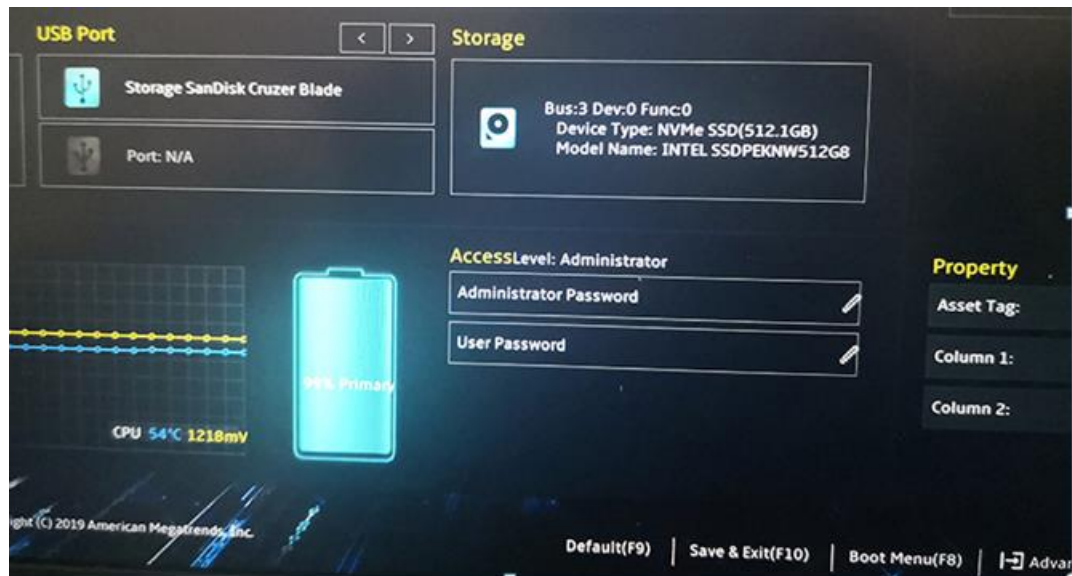

→ Dell , HP , lenovo laptops

