

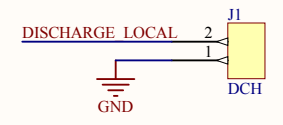
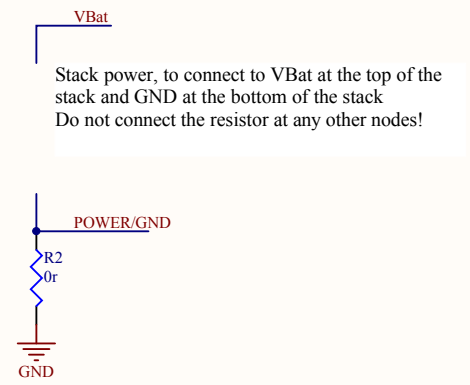


Discharge Section


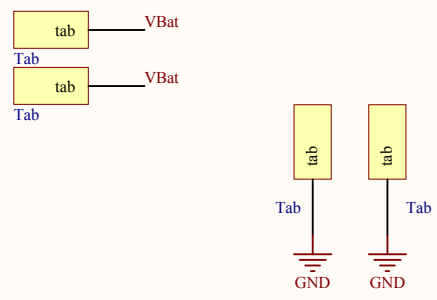


Test point to enable discharge to verify correct operation. Short to enable.

These connections allow the measure and discharge lines to be flipped on the connector, this is needed when the board is rotated 180 degrees on some modules.

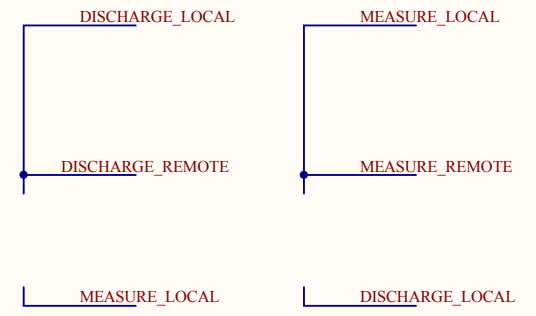

Measurement

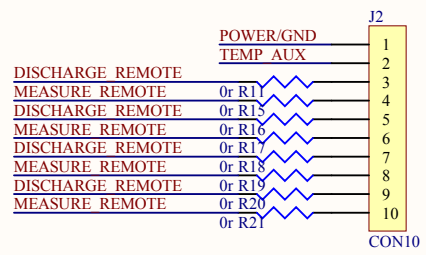

Interface



Title		
Size	Number	Revision
A4		
Date:	25/04/2013	Sheet of
File:	F:\Sync\... 4.SchDoc	Drawn By:

