



Access Point Connectivity to EVE NG:

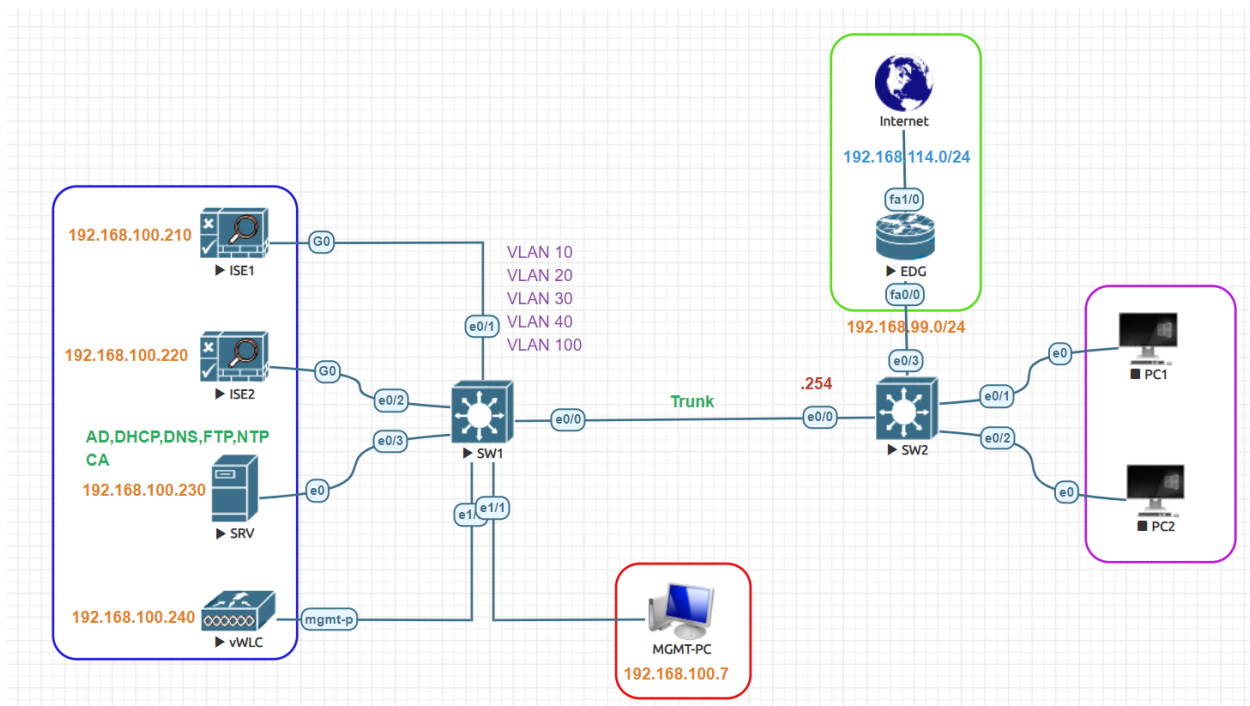

After the AP has rebooted login to the AP using the default username/password (the password is case sensitive, upper case C): Username: **Cisco** and Password: **Cisco**. The enable password is the same password: **Cisco**

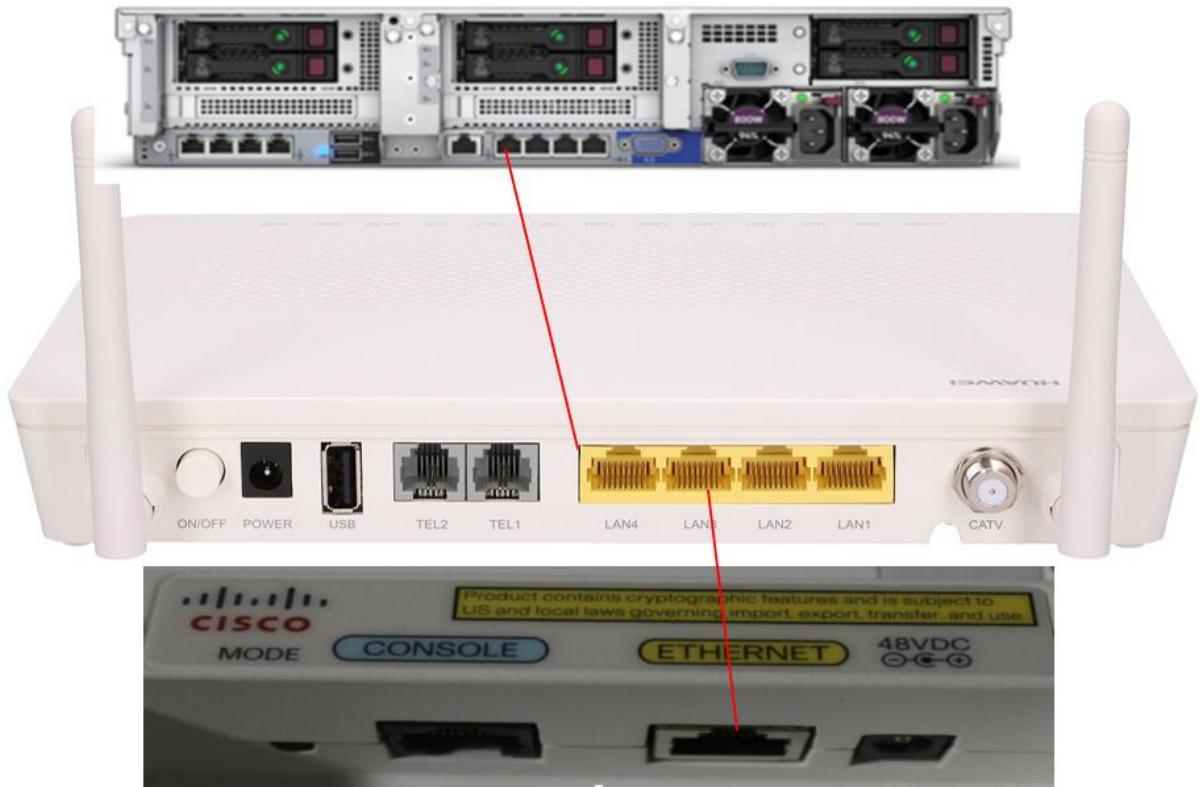

It will join Wireless LAN Controller Automatically On the WLC Web GUI; under the AP Join Stats you should be able to confirm that the MAC address of the AP is Joined.



Manually Configuration:

Confirm if there is any existing WLC config through the following command:

show capwap ip config

Delete any existing entries:

clear capwap private-config

From the command line you can tell the AP what Controller to join

lwapp ap controller ip address <IP Address>

capwap ap controller ip address <IP Address>

AP# show capwap ip config
AP# clear capwap private-config
AP# capwap ap controller ip address 192.168.100.240
AP#capwap ap primary-base WLC 192.168.100.240
AP# capwap ap hostname AP