

General Commands Reference Guide D



Release 09.2021

General Commands Reference Guide D

TRACE32 Online Help

TRACE32 Directory

TRACE32 Index

| | |
|---|---|
| TRACE32 Documents |  |
| General Commands |  |
| General Commands Reference Guide D | 1 |
| History | 8 |
| Data | 9 |
| Data | Memory access 9 |
| Overview Data | 9 |
| Memory Access by the TRACE32 Debugger | 9 |
| Access Procedures | 9 |
| Keywords for <format> | 10 |
| Keywords for <width> | 11 |
| Functions | 12 |
| Data.AllocList | Static memory allocation analysis 13 |
| Data.Assemble | Built-in assembler 18 |
| Data.ATTACH | Attach data sequence 20 |
| Data.ATTACH.CONDITION | Define attach condition 21 |
| Data.ATTACH.CORE | Select core for attach sequence 22 |
| Data.ATTACH.OFF | Switch attach sequence off 22 |
| Data.ATTACH.ON | Switch attach sequence on 22 |
| Data.ATTACH.RESets | Reset attach data sequence 23 |
| Data.ATTACH.SELect | Increment the index number to the next sequence 23 |
| Data.ATTACH.SEQuence | Define attach data sequence 24 |
| Data.ATTACH.state | Attach data state display 25 |
| Data.BDTAB | Display buffer descriptor table 25 |
| Data.BENCHMARK | Determine cache/memory bandwidth 26 |
| Data.CHAIN | Display linked list 30 |
| Data.CHAINFind | Search in linked list 33 |
| Data.CLEARVM | Clear the TRACE32 virtual memory (VM:) 34 |
| Data.ComPare | Compare memory 35 |
| Data.COpy | Copy memory 37 |
| Data.CSA | Display linked list of CSA entries 39 |
| Data.DRAW | Graphical memory display of arrays 40 |
| Data.DRAFFT | Graphical display of fast fourier transformation 44 |
| Data.DRAWXY | Graphical display of xy-graphs 47 |

| | | |
|--|---|-----|
| Data.dump | Memory dump | 50 |
| Format Options | | 52 |
| Standard Options | | 53 |
| Advanced Options | | 60 |
| Data.EPILOG | Automatic data modification on program execution halt | 62 |
| Data.EPILOG.CONDITION | Define condition for data epilog | 63 |
| Data.EPILOG.CORE | Select core for data epilog | 64 |
| Data.EPILOG.OFF | Switch data epilog off | 64 |
| Data.EPILOG.ON | Switch data epilog on | 65 |
| Data.EPILOG.RESet | Reset all data epilogs | 65 |
| Data.EPILOG.SELect | Increment the index number to the next data epilog | 66 |
| Data.EPILOG.SEQuence | Define epilog sequence | 67 |
| Data.EPILOG.state | Display data epilogs | 68 |
| Data.EPILOG.TARGET | Define epilog target call | 69 |
| Data.Find | Search in memory | 70 |
| Data.FindCODE | Execute command on specified code type | 72 |
| Data.GOTO | Specify reference address for address tracking | 73 |
| Data.GREP | Search for string | 75 |
| Data.IMAGE | Display image data | 76 |
| Data.In | Read port | 80 |
| Data.List | Display Source Listing (deprecated) | 80 |
| Data.LOAD | Load file | 81 |
| Alphabetic List of Generic Load Options | | 82 |
| Details on Generic Load Options | | 86 |
| Format Specific Data.LOAD Commands and Options | | 94 |
| Data.LOAD.AIF | Load ARM image file | 94 |
| Data.LOAD.AOUT | Load a.out file | 95 |
| Data.LOAD.ASAP2 | Load ASAP2 file | 95 |
| Data.LOAD.Ascii | Load ASCII file | 96 |
| Data.LOAD.AsciiDump | Load ASCII file generated from Data.dump window | 96 |
| Data.LOAD.AsciiHex | Load hex file | 97 |
| Data.LOAD.AsciiOct | Load octal file | 97 |
| Data.LOAD.AVocet | Load AVOCET file | 98 |
| Data.LOAD.BDX | Load BDX file | 98 |
| Data.LOAD.Binary | Load binary file | 99 |
| Data.LOAD.Bound | Load BOUND file | 102 |
| Data.LOAD.CCSDAT | Load CCSDAT file | 102 |
| Data.LOAD.CDB | Load SDCC CDB file format | 103 |
| Data.LOAD.COFF | Load COFF file | 105 |
| Data.LOAD.ColonHex | Load colon hex file | 106 |
| Data.LOAD.COMFOR | Load COMFOR (TEKTRONIX) file | 107 |
| Data.LOAD.CORE | Load Linux core dump file | 108 |
| Data.LOAD.COSMIC | Load COSMIC file | 109 |

| | | |
|---------------------|---------------------------------|-----|
| Data.LOAD.CrashDump | Load MS Windows Crash Dump file | 110 |
| Data.LOAD.DAB | Load DAB file | 110 |
| Data.LOAD.DBX | Load a.out file | 111 |
| Data.LOAD.Elif | Load ELF file | 112 |
| Data.LOAD.ESTFB | Load EST flat binary | 123 |
| Data.LOAD.eXe | Load EXE file | 123 |
| Data.LOAD.FIASCO | Load FIASCO BB5 file | 125 |
| Data.LOAD.HiCross | Load HICROSS file | 125 |
| Data.LOAD.HiTech | Load HITECH file | 126 |
| Data.LOAD.HP | Load HP-64000 file | 127 |
| Data.LOAD.ICoff | Load ICOFF file | 128 |
| Data.LOAD.Ieee | Load IEEE-695 file | 129 |
| Data.LOAD.IntelHex | Load INTEL-HEX file | 131 |
| Data.LOAD.LDR | Load META-LDR file | 131 |
| Data.LOAD.MachO | Load 'Mach-O' file | 132 |
| Data.LOAD.MAP | Load MAP file | 135 |
| Data.LOAD.MCDS | Load MCDS file | 135 |
| Data.LOAD.MCoff | Load MCOFF file | 136 |
| Data.LOAD.OAT | Load OAT file | 136 |
| Data.LOAD.Omf | Load OMF file | 137 |
| Data.LOAD.Omf2 | Load OMF-251 files | 140 |
| Data.LOAD.OriginHex | Load special hex files | 140 |
| Data.LOAD.PureHex | Load hex-byte file | 141 |
| Data.LOAD.REAL | Load R.E.A.L. file | 141 |
| Data.LOAD.ROF | Load OS-9 file | 142 |
| Limitations | | 142 |
| Data.LOAD.S1record | Load S1-Record file | 143 |
| Data.LOAD.S2record | Load S2-Record file | 144 |
| Data.LOAD.S3record | Load S3-Record file | 144 |
| Data.LOAD.S4record | Load S4-Record file | 145 |
| Data.LOAD.SAUF | Load SAUF file | 145 |
| Data.LOAD.SDS | Load SDSI file | 146 |
| Data.LOAD.SPARSE | Load SPARSE file | 147 |
| Data.LOAD.sYm | Load symbol file | 148 |
| Data.LOAD.SysRof | Load RENESAS SYSROF file | 149 |
| Data.LOAD.TEK | Load TEKTRONIX file | 150 |
| Data.LOAD.TekHex | Load TEKTRONIX HEX file | 150 |
| Data.LOAD.Ubrof | Load UBROF file | 151 |
| Data.LOAD.VersaDos | Load VERSADOS file | 152 |
| Data.LOAD.XCoff | Load XCOFF file | 152 |
| Data.MSYS | M-SYSTEMS FLASHDISK support | 153 |
| Data.Out | Write port | 153 |
| Data.PATTERN | Fill memory with pattern | 154 |

| | | |
|---------------------------|--|-----|
| Data.Print | Display multiple areas | 157 |
| Data.PROfile | Graphical display of data value | 160 |
| Data.PROGRAM | Editor for writing assembler program | 162 |
| Data.PROLOG | Automatic data modification on program execution start | 163 |
| Data.PROLOG.CONDition | Define PROLOG condition | 164 |
| Data.PROLOG.CORE | Select core for data prolog | 165 |
| Data.PROLOG.OFF | Switch data prolog off | 165 |
| Data.PROLOG.ON | Switch data prolog on | 166 |
| Data.PROLOG.RESet | Reset all data prologs | 166 |
| Data.PROLOG.SELect | Increment the index number to the next data prolog | 167 |
| Data.PROLOG.SEQUENCE | Define prolog sequence | 168 |
| Data.PROLOG.state | Display data prologs | 169 |
| Data.PROLOG.TARGET | Define PROLOG target call | 170 |
| Data.REF | Display current values | 171 |
| Data.ReProgram | Assemble instructions into memory | 172 |
| Data.ReRoute | Reroute function call | 172 |
| Data.SAVE.<format> | Save data in file with specified format | 173 |
| Data.SAVE.Ascii | Save ASCII file | 175 |
| Data.SAVE.AsciiHex | Save hex file | 175 |
| Data.SAVE.AsciiOct | Save octal file | 177 |
| Data.SAVE.BDX | Save BDX file | 178 |
| Data.SAVE.Binary | Save binary file | 178 |
| Data.SAVE.CCSDAT | Save CCSDAT file | 179 |
| Data.SAVE.DAB | Save DAB file | 179 |
| Data.SAVE.ElF | Save ELF file | 180 |
| Data.SAVE.ESTFB | Save EST flat binary file | 180 |
| Data.SAVE.IntelHex | Save INTEL-HEX file | 181 |
| Data.SAVE.Omf | Save OMF file | 181 |
| Data.SAVE.PureHex | Save pure HEX file | 182 |
| Data.SAVE.S1record | Save S1-record file | 183 |
| Data.SAVE.S2record | Save S2-record file | 185 |
| Data.SAVE.S3record | Save S3-record file | 185 |
| Data.SAVE.S4record | Save S4-record file | 186 |
| Data.Set | Modify memory | 187 |
| Data.SOFTEPILOG | Automated sequence after setting software breakp. | 190 |
| Data.SOFTEPILOG.CONDition | Define condition for data softepilog | 191 |
| Data.SOFTEPILOG.CORE | Select core for data softepilog | 191 |
| Data.SOFTEPILOG.OFF | Switch data softepilog off | 192 |
| Data.SOFTEPILOG.ON | Switch data softepilog on | 192 |
| Data.SOFTEPILOG.RESet | Reset all data softepilogs | 192 |
| Data.SOFTEPILOG.SELect | Increment the index number to the next epilog | 192 |
| Data.SOFTEPILOG.SEQUENCE | Define softepilog sequence | 193 |
| Data.SOFTEPILOG.state | Display data softepilogs | 193 |

| | | |
|---------------------------|--|-----|
| Data.SOFTPROLOG | Automated sequence before setting software breakp. | 194 |
| Data.SOFTPROLOG.CONDITION | Define condition for data softprolog | 195 |
| Data.SOFTPROLOG.CORE | Select core for data softprolog | 195 |
| Data.SOFTPROLOG.OFF | Switch data softprolog off | 196 |
| Data.SOFTPROLOG.ON | Switch data softprolog on | 196 |
| Data.SOFTPROLOG.RESet | Reset all data softprolog | 196 |
| Data.SOFTPROLOG.SELect | Increment the index number to the next prolog | 196 |
| Data.SOFTPROLOG.SEQuence | Define softprolog sequence | 197 |
| Data.SOFTPROLOG.state | Display data softprologs | 197 |
| Data.STANDBY | Standby data-sequences | 198 |
| Data.STANDBY.CONDITION | Define condition | 200 |
| Data.STANDBY.CORE | Assign sequence to core | 201 |
| Data.STANDBY.OFF | Switch all sequences off | 201 |
| Data.STANDBY.ON | Switch all sequences on | 202 |
| Data.STANDBY.RESet | Clear all settings | 202 |
| Data.STANDBY.SELect | Increment index number for next sequence | 203 |
| Data.STANDBY.SEQuence | Define sequence | 204 |
| Data.STANDBY.state | Open configuration window | 205 |
| Data.STARTUP | Startup data sequence | 206 |
| Data.STARTUP.CONDITION | Define startup condition | 207 |
| Data.STARTUP.CORE | Select core for startup sequence | 208 |
| Data.STARTUP.OFF | Switch startup sequence off | 209 |
| Data.STARTUP.ON | Switch startup data sequence on | 209 |
| Data.STARTUP.RESet | Reset startup data sequence | 209 |
| Data.STARTUP.SELect | Increment the index number to the next sequence | 210 |
| Data.STARTUP.SEQuence | Define startup data sequence | 211 |
| Data.STARTUP.state | Startup data state display | 212 |
| Data.STRING | ASCII display | 213 |
| Data.SUM | Memory checksum | 213 |
| Data.TABLE | Display arrays | 216 |
| Data.TAG | Tag code for analysis | 219 |
| Data.TAGFunc | Tag code for analysis | 219 |
| Data.Test | Memory integrity test | 221 |
| Data.TestList | Test for memory type | 224 |
| Data.TIMER | Periodical data sequence | 225 |
| Data.TIMER.CONDITION | Define timer condition | 226 |
| Data.TIMER.CORE | Select core for timer sequence | 227 |
| Data.TIMER.ERRORSTOP | Stop data timer on errors | 228 |
| Data.TIMER.OFF | Switch timer off | 228 |
| Data.TIMER.ON | Switch timer on | 228 |
| Data.TIMER.RESet | Reset timer | 229 |
| Data.TIMER.SELect | Increment the index number to the next sequence | 229 |
| Data.TIMER.SEQuence | Define timer sequence | 230 |

| | | |
|---|--|------------|
| Data.TIMER.state | Timer state display | 231 |
| Data.TIMER.TARGET | Define timer target call | 232 |
| Data.TIMER.Time | Define period for timer | 232 |
| Data.UNTAGFunc | Remove code tags | 233 |
| Data.UPDATE | Target memory cache update | 233 |
| Data.USRACCESS | Prepare USR access | 234 |
| Data.VECTOR | Display memory as vectors | 235 |
| Data.View | Display memory | 237 |
| Data.WRITESTRING | Write string to PRACTICE file | 239 |
| DCI | | 240 |
| DCI | Direct Connect Interface (DCI) | 240 |
| DQMTrace | | 241 |
| DTM | | 242 |
| DTM | DTM trace sources (Data Trace Module) | 242 |
| DTM.CLOCK | Set core clock frequency for timing measurements | 242 |
| DTM.CycleAccurate | Cycle accurate tracing | 242 |
| DTM.Mode | Define DTM mode | 242 |
| DTM.OFF | Disable DTM | 243 |
| DTM.ON | Enable DTM | 243 |
| DTM.Register | Display DTM registers | 243 |
| DTM.RESet | Reset DTM settings | 243 |
| DTM.TraceID | Change the default ID for a DTM trace source | 244 |
| DTM.TracePriority | Define priority of DTM | 244 |
| DTM<trace> - Trace Data Analysis | | 245 |
| DTM<trace> | Command groups for DTM<trace> | 245 |
| Overview DTM<trace> | | 245 |
| DTMAnalyzer | Analyze DTM information recorded by TRACE32 PowerTrace | 246 |
| DTMCAalyzer | Analyze DTM information recorded by CombiProbe | 246 |
| DTMHAlyzer | Analyze DTM information captured by the host analyzer | 247 |
| DTMLA | Analyze DTM information from binary source | 247 |
| DTMOnchip | Analyze DTM information captured in target onchip memory | 248 |
| DTMTrace | Method-independent analysis of DTM trace data | 248 |

History

24-May-21 Description of the [DTM<trace>](#) command group.

Overview Data

Memory Access by the TRACE32 Debugger

TRACE32 debuggers operate on the memory of the target system.

Access Procedures

The following examples show typical memory access commands:

```
Data.dump 0x1000                ; display a hex dump starting at  
                                ; address 0x1000  
  
Data.Set 0x1000 %Byte 0x55      ; write 0x55 as a byte to the  
                                ; address 0x1000  
  
Data.LOAD.Elf demo.elf          ; load program from file to  
                                ; the target memory
```

An [access class](#) can be used to specify memory access details.

Examples:

```
Data.dump A:0x1000              ; display a hex dump starting at  
                                ; address 0x1000, physical access  
  
Data.dump NC:0x1234            ; display a hex dump starting at  
                                ; address 0x1234, non-cached access  
  
Data.dump L2:0x1234            ; display a hex dump starting at  
                                ; address 0x1234, L2 cache access
```

Keywords for <format>

You can display memory in TRACE32 using the following formats. Please note that not all format are supported by all **Data.<sub_cmd>** commands. Please refer to the documentation of the single commands for more information.

```
[<format>]:    Decimal [.<width> [.<endianness> [.<bitorder>]]]  
               DecimalU [.<width> [.<endianness> [.<bitorder>]]]  
               Hex [.<width> [.<endianness> [.<bitorder>]]]  
               HexS [.<width> [.<endianness> [.<bitorder>]]]  
               OCTal [.<width> [.<endianness> [.<bitorder>]]]  
               Ascii [.<width> [.<endianness> [.<bitorder>]]]  
               Binary [.<width> [.<endianness> [.<bitorder>]]]  
               Float. [leee | leeeDbl | leeeExt | leeeMFFP | ...]  
               sYmbol [.<width> [.<endianness> [.<bitorder>]]]  
               Var  
               DUMP [.<width> [.<endianness> [.<bitorder>]]]  
               Byte [.<endianness> [.<bitorder>]]  
               Word [.<endianness> [.<bitorder>]]  
               Long [.<endianness> [.<bitorder>]]  
               Quad [.<endianness> [.<bitorder>]]  
               TByte [.<endianness> [.<bitorder>]]  
               PByte [.<endianness> [.<bitorder>]]  
               HByte [.<endianness> [.<bitorder>]]  
               SByte [.<endianness> [.<bitorder>]]
```

| | |
|-----------------|---|
| Decimal | Display the data as decimal number. |
| DecimalU | Display the data as unsigned decimal number. |
| Hex | Display the data as hexadecimal number. |
| HexS | Display the data as signed hexadecimal number. |
| OCTal | Display the data as octal number. |
| Ascii | Display the data in an ASCII representation. |
| Binary | Display the data as binary number. |
| Float | Display the data in a floating point representation. |
| sYmbol | Display the data as hexadecimal number. The column "symbol" in the window will show the symbol corresponding to the address to which the data <i>points</i> (while without sYmbol the column symbol shows the symbol corresponding to the address <i>containing</i> the data). |
| Var | Display HLL variables at their memory location (similar to Var.Watch). |

DUMP

Hexadecimal dump.

Byte, Word, Long,...

See [“Keywords for <width>”](#), page 11

Keywords for <width>

In TRACE32, you can access and display memory and register contents by using the following keywords for <width>:

[<width>]:

Byte
Word
TByte
Long
PByte
HByte
SByte
Quad

| | |
|--------------|---------------------|
| Byte | 8-bit |
| Word | 16-bit |
| TByte | 24-bit (tribyte) |
| Long | 32-bit (long word) |
| PByte | 40-bit (pentabyte) |
| HByte | 48-bit (hexabyte) |
| SByte | 56-bit (septuabyte) |
| Quad | 64-bit (quad word) |

Functions

The following table lists frequently-used **Data.*()** functions. For a complete list, see “[Data Functions](#)” in General Function Reference, page 132 (general_func.pdf).

| | |
|-------------------------------------|--|
| Data.Byte(<address>) | Returns memory content of a byte. |
| Data.Word(<address>) | Returns memory content of a word (16-bit). |
| Data.Long(<address>) | Reads memory at specified address. Address must be used with access class. |
| Data.String(<address>) | Reads zero-terminated string from memory, the result is a string. |
| Data.SUM() | Gets the checksum of the last executed Data.SUM command. |

Examples:

```
Register.Set PC Data.Long(SD:4)      ; set PC to start value

PRINT Data.Byte(SD:flag+4)           ; display single byte

&memstring=Data.String(string1)      ; copy and print string
PRINT "&memstring"
Data.Set string2 "&memstring"

Data.SUM 0x0--0x0fffe /Byte           ; fill last byte to build zero
Data.Set 0x0ffff Data.SUM()           ; checksum in 64K block
```

Format: **Data AllocList** [*<address>*] [*/<option> ...*]

<option>:

- Time**
- Address**
- Caller**
- Size**
- SumCaller**
- SumSize**
- Track**
- Guard** *<size>*

The basic idea of the static memory allocation analysis is the following:

- The user program manages a double linked list that contains all information about the allocated memory blocks.
- The TRACE32 software offers the command **Data AllocList** to analyze this information.

Each element of the double linked list has the following structure:

| |
|--------------------------------------|
| <i>T32_allocHeader</i> |
| <i>guard area head</i> |
| <i>allocated memory block</i> |
| <i>guard area tail</i> |

Each allocated memory block is surrounded by 2 so-called guard areas. The default size of each guard area is 16 bytes. The option **/Guard** *<size>* allows to use a different size for the guard areas.

Each guard area has to be filled with a fixed pattern when the memory block is allocated.

```
static void SetGuard(unsigned char * guard)
{
    int i;
    for (i = 0; i < T32_GUARD_SIZE; i++)
        guard[i] = (unsigned char) (i + 1);
}
```

- The user program can check if there were write accesses beyond the upper or lower bound of the allocated memory block when the memory block is freed and stop the program execution in such a case.
- The TRACE32 software can check all blocks for writes beyond the upper or lower bound when the **Data.AllocList** window is displayed.

The *T32_allocHeader* contains information to maintain the double linked list, information about the caller who requested the memory block and information about the originally requested memory size.

```
typedef struct T32_allocHeader
{
    struct T32_allocHeader * prev;
    struct T32_allocHeader * next;
    void * caller;
    size_t size;
#ifdef T32_GUARD_SIZE
    unsigned char guard[T32_GUARD_SIZE];
#endif
}
T32_allocHeader;
```

In order to maintain the double linked list that is required by the TRACE32 software to analyze the static memory allocation all ***malloc(size)***, ***realloc(ptr,size)***, ***free(ptr)*** calls in the user program have to be replaced by an extended version.

This can be done in two ways:

1. Within the source files.


```
#ifdef PATCHING_REQUIRED
#define malloc(size) T32_malloc(size)
#define realloc(ptr,size) T32_realloc(ptr,size)
#define free(ptr) T32_free(ptr)
extern void * T32_malloc();
extern void * T32_realloc();
extern void T32_free();
#endif
```

2. By using the **Data.ReRoute** command for a binary patch.

```
Data.ReRoute sYmbol.SECRANGE(.text) malloc T32_malloc \t32mem
Data.ReRoute sYmbol.SECRANGE(.text) realloc T32_realloc \t32mem
Data.ReRoute sYmbol.SECRANGE(.text) free T32_free \t32mem
```

What does T32_malloc(size) do?

1. A memory block is allocated. This memory block has the following size:
size of the requested memory block + sizeof(T32_allocHeader) + T32_GUARD_SIZE
2. The caller of the T32_malloc function is stored in the structure of the type T32_allocHeader.
3. The size of the requested memory is stored in the structure of the type T32_allocHeader.
4. Both guard areas are initialized with fixed values, so that the TRACE32 software can later check if there are any write accesses beyond the block bounds (ERROR HEAD, ERROR TAIL).
5. The information about the allocated memory block is entered into the double linked list.

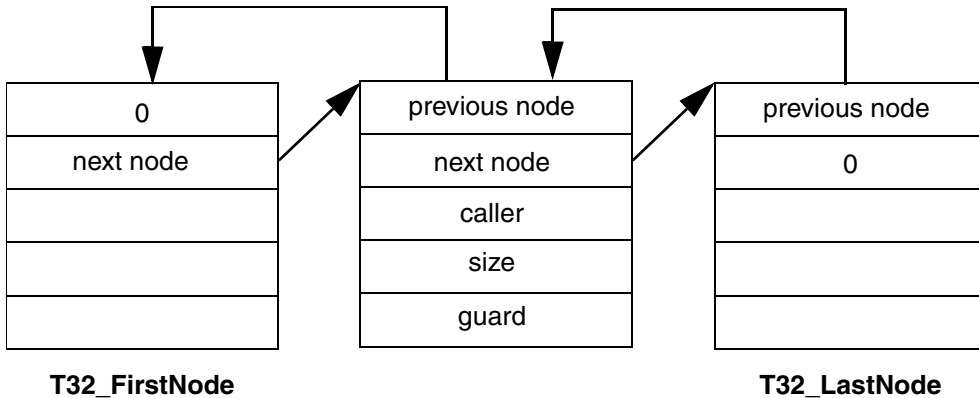


The TRACE32 software assumes that **T32_FirstNode** is the default symbol for the first element of the list. If another symbol is used this information has to be provided when the command **Data AllocList** is used.

```
Data AllocList List_M2 ; List_M2 is the start of the linked  
; list for the command Data AllocList
```

What does T32_free(ptr) do?

1. Both guard areas are checked to detect any write access beyond the block bounds. If such a write access happened a error handling function is called.
2. The information about the allocated memory block is removed from the double linked list.

A complete example for the implementation of the linked list and for the use of the command **Data.AllocList** can be found in `~/demo/powerpc/etc/malloc`. The example can be used with the simulator for the PowerPC family.

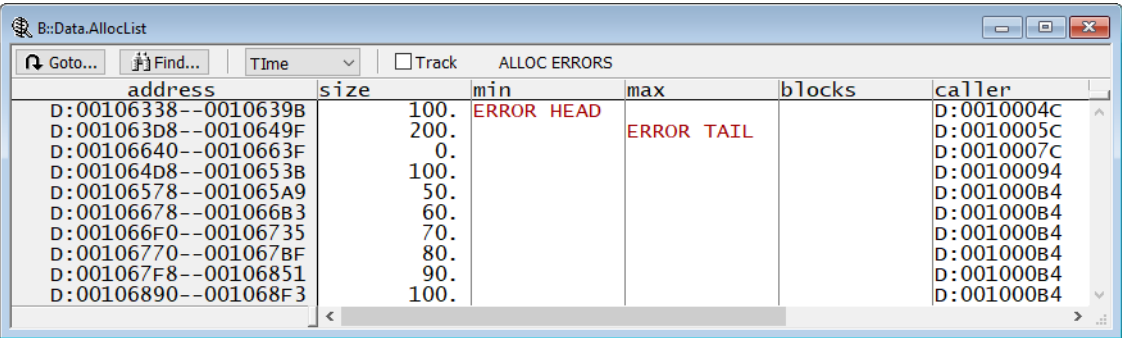

Description of the Data.AllocList Options

| | |
|----------------|--|
| Track | The allocated memory blocks are displayed in the order of their entry. |
| Address | The allocated memory blocks are sorted by address. |
| Caller | The allocated memory blocks are sorted by the caller. |
| Size | The allocated memory blocks are sorted by their size. |
| SumCaller | The allocated memory blocks are sorted by the caller and for each caller the sum of all allocated blocks is displayed. |
| SumSize | The allocated memory blocks are sorted by the caller. The caller who allocated most memory blocks is on top of the list. |
| Time (default) | Tracks the window to the reference position of other windows. |
| Guard | Defines the size of the guard areas. Default is 16. |

Examples

```
Data.AllocList /Size           ; display a static memory allocation
                                ; sorted by size

Data.AllocList /Guard 20.      ; the user program uses a guard area
                                ; of 20 bytes

Data.AllocList List_M2         ; List_M2 is the start of the linked
                                ; list for the command Data.AllocList
```

See also

[□ Data.AL.ERRORS\(\)](#)

[▲ 'Release Information' in 'Release History'](#)

Format: **Data.Assemble** [<address>] <mnemonic> [{<mnemonic>}]

Writes an opcode specified by an assembler instruction <mnemonic> to the memory at <address>.

Entering a specific opcode is facilitated by softkeys indicating the available options (e.g. offsets, registers, ...) according to the current CPU architecture.

Multiple mnemonics can be specified with a single **Data.Assemble** command. For improving readability in scripts you may use a line continuation character

```
Data.Assemble T:0x20 push lr   pop pc           ; two commands in one line

Data.Assemble R:0x0 blx 0x21 \
                    add r6 , r6 , #1\
                    b 0x0
```

To quickly modify a code line, use the commands **Modify here** or **Assemble here** from the popup menu in the **List** window. The commands **Data.PROGRAM** and **Data.ReProgram** can be used to enter multiple instructions or small programs.

```
; fill memory-range from 0x0 up to 0xffff with NOP:
Data.Assemble 0x0--0xffff nop

; insert and assemble an move- command at address 0 next command to next
; address:

Data.Assemble 0 move.b d0,d1
Data.Assemble , move.b d3,d4
```

NOTE:

Note the syntax for expressing

- *absolute addresses* using the plain constant and
- *PC-relative offsets* using the format `${+|-}offset`).
(Always one of the +/- sign specifiers must be present!)

Examples:

```
J 0xFC000000    ; Jump to absolute address 0xFC000000
JLA $-0x10      ; Jump And Link to PC-0x10
JLA $+100       ; Jump And Link to PC+0x100
```

NOTE:

If there are multiple ISAs for a CPU family (e.g. ArmV4, Arm4T, ARMv7, for the family of ARM cores), the **Data.Assemble** command might not check whether the *<mnemonic>* is supported by the CPU currently chosen by **SYStem.CPU** and the opcode is written regardless.


See also

■ [Data.dump](#)

■ [Data.PROGRAM](#)

The **Data.ATTACH** command group allows to define a sequence of **Data.Set** commands that are executed when the debugger is activated with **SYStem.Mode Attach**.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.ATTACH.state** window:

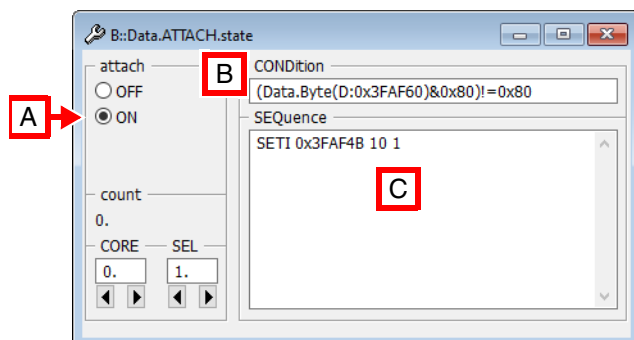

A For descriptions of the commands in the **Data.ATTACH.state** window, please refer to the **Data.ATTACH.*** commands in this chapter.

Example: For information about **ON**, see **Data.ATTACH.ON**.

B Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.

C Access sequences can be set up in the **SEquence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

See also

■ [Data.EPILOG](#)

■ [Data.PROLOG](#)

■ [Data.STARTUP](#)

■ [Data.TIMER](#)

▲ 'Release Information' in 'Release History'

| | |
|--------------------------------|--|
| Format: | Data.ATTACH.CONDition <i><condition></i> |
| <i><condition></i> : | <i><memory_access></i> & <i><mask></i> == <i><value></i> <i><memory_access></i> & <i><mask></i> != <i><value></i> |
| <i><memory_access></i> : | Data.Byte (<i><address></i>) Data.Word (<i><address></i>) Data.Long (<i><address></i>) |

Defines a condition on which the command sequence defined with **Data.ATTACH.SEQUENCE** will be executed periodically.

| | |
|------------------------------|---|
| <i><memory_access></i> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|------------------------------|---|

Examples:

```
; reads the long at address D:0x3faf30, proceeds a binary AND with
; a constant (here 0xffffffff). If the result is equal to 0x80000000 the
; condition is true and the defined sequence is executed.
Data.ATTACH.CONDition (Data.Long(D:0x3faf30)&0xffffffff)==0x80000000
```

```
; read the word at address D:0x3faf30
Data.ATTACH.CONDition (Data.Word(D:0x3faf30)&0xff00)!=0x8000
```

```
; reads the byte at address D:0x3faf30
Data.ATTACH.CONDition (Data.Byte(D:0x3faf30)&0xf0)!=0x80
```

Format:

Data.ATTACH.CORE <core_number>

Selects the core for which you want to define one or more data attach sequences.

Prerequisite: You have successfully configured an SMP system with the **CORE.ASSIGN** command.

Example: This script shows how to define a data attach sequence that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a data attach sequence
Data.ATTACH.CORE 3.

;Define the data attach sequence for core 3
Data.ATTACH.CONDITION <your_code>
Data.ATTACH.SEQUENCE <your_code>
```

For information on how to configure two different attach sequences, see **Data.ATTACH.SELECT**.

Format:

Data.ATTACH.OFF

Switches the **Data.ATTACH** feature off.

Format:

Data.ATTACH.ON

Switches the **Data.ATTACH** feature on.

Format: **Data.ATTACH.RESet**

Switches the **Data.ATTACH** feature off and clears all settings.

Data.ATTACH.SELectIncrement the index number to the next sequence

Format: **Data.ATTACH.SELect** <serial_number>

Increments the index number for each new data attach sequence. This is useful, for example, if you need two separate attach sequences with each sequence having its own **Data.ATTACH.CONDITION**.

TRACE32 automatically assigns the index number 1. to the first **Data.ATTACH.SEquence**. If you require a second, separate attach sequence, then increment the <index_number> to 2. Otherwise the second attach sequence will overwrite the first one. You can define a maximum of 10 attach sequences.

Example 1: Two attach sequences with the *same* **Data.ATTACH.CONDITION** may have the *same* index number. The backslash \ is used as a line continuation character. No white space permitted after the backslash.

```
;Set the index number to 1.
Data.ATTACH.SELect 1.

;Attach sequences shall be executed only if this condition is true:
Data.ATTACH.CONDITION (Data.Word(D:0x4faf34)&0xff00)==0x4000

;Define the two attach sequences:
Data.ATTACH.SEquence SET 0x4faf54 %Word 0xC0C0 \
                      SET 0x4faf64 %Word 0xD0D0
```

Example 2: Two attach sequences with *different* **Data.ATTACH.CONDITION** settings require two *different* index numbers.

```
;1st attach sequence - TRACE32 automatically sets the index number to 1.
Data.ATTACH.SELect 1.

;If this data attach condition is true, ...
Data.ATTACH.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x2000

;... then the 1st attach sequence will be executed
Data.ATTACH.SEquence SET 0x4faf58 %Word 0xE0E0

;Increment the index number to define the 2nd attach sequence
Data.ATTACH.SELect 2.

;If this data attach condition is true, ...
Data.ATTACH.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x3000

;... then the 2nd attach sequence will be executed
Data.ATTACH.SEquence SET 0x4faf58 %Word 0xF0F0
```

Data.ATTACH.SEquence

Define attach data sequence

| | |
|--------------------------|--|
| Format: | Data.ATTACH.SEquence <i><command></i> ... |
| <i><command></i> : | SET <i><address></i> % <i><format></i> <i><data></i> SETI <i><address></i> % <i><format></i> <i><data></i> <i><increment></i> SETS <i><address></i> GETS <i><address></i> |

Defines a sequence of **Data.Set** commands that are executed when the emulation system is activated.

| | |
|-------------|--|
| SET | Write <i><data></i> to <i><address></i> . |
| SETI | Write <i><data></i> to <i><address></i> . Then <i><data></i> is incremented by <i><increment></i> . |
| GETS | Save the data at <i><address></i> . |
| SETS | Write the data that was saved with a previous GETS back to <i><address></i> . |

Examples:

```
Data.ATTACH.SEquence SET 0x3faf50 %Word 0xa0a0
Data.ATTACH.SEquence SETI 0x3faf50 %Word 0xa0a0 2
Data.ATTACH.SEquence SETS 0x3faf60
Data.ATTACH.SEquence GETS 0x3faf60
```

Data.ATTACH.state

Attach data state display

Format:

Data.ATTACH.state

Displays the **Data.ATTACH** state window.

Data.BDTAB

Display buffer descriptor table

Format:

Data.BDTAB *<address>* *<size>*

The command **Data.BDTAB** is implemented for most PowerPC processors.

- <address>*

Defines the start address of the buffer descriptor.
- <size>*

Defines the size of each entry in the buffer descriptor table. Possible is a size of 8 or 16 byte.

Example:

```
Data.BDTAB iobase()+Data.Word(D:iobase()+0x8400) 8
```

It is recommended to use a mouse click in the peripheral window to display the buffer descriptor table.

See also

- [Data.CHAIN](#)

Format: **Data.BENCHMARK** <range> [<range> [<range>]] [<size> ...]

<range>: <program_range>
 <data_stack_range>
 <data_test_range>

<size>: <ic_size>
 <dc_size>
 <l2_size>
 <l3_size>

Basic Concept

The basic idea of the **Data.BENCHMARK** command is the following:

- Load a benchmark program that performs various memory read, memory write and memory copy operations to the target.
- Enable all caches.
- The command **Data.BENCHMARK** starts the benchmark program and measures the bandwidth of all caches and memories with the help of the [RunTime](#) counters.

The Benchmark Program

Precompiled benchmark program can be found in `~~/demo/<cpu>/etc/benchmark`, e.g.
`~~/demo/arm/etc/benchmark`

In the same directory you can also find the C source for the benchmark program. It is recommended to compile the benchmark program with your compiler if you want to test the functions (block write, copy etc.) provided by your compiler. Before you compile the benchmark program with your compiler please read the comments in the C source.

The Result

The following window displays the result of the **Data.BENCHMARK** command:

| E:\Data.BENCHMARK 0x10000--0x1ffff 0x30000000--0x3000ffff 0x20000--0x4ffff | | | | | | | | | | | |
|--|--------------------|------------|-----------------|-----------|--------------------|-----------|------------------------|--------------|-------------------|--------------|-------------|
| | max size: 0x400000 | | peak MIPS: 1492 | | dhrystone MIPS: 94 | | dhrystones/sec: 174006 | | tolerance: 3.570% | | |
| | cache size | block read | block write | lib write | block copy | lib copy | random read | random write | random copy | latency near | latency far |
| IC | 0x000008000 | 5.82768/s | - | - | - | - | - | - | - | - | - |
| DC | 0x000008000 | 3.478GB/s | 95.68MB/s | 95.74MB/s | 95.32MB/s | 95.73MB/s | 665.3MHz | 18.44MHz | 24.0MHz | n.d. | n.d. |
| L2 | 0x000008000 | 767.9MB/s | 96.43MB/s | 95.72MB/s | 86.75MB/s | 90.51MB/s | 64.98MHz | 18.42MHz | 18.63MHz | 33.518ns | 12.145ns |
| L3 | 0x000040000 | - | - | - | - | - | - | - | - | - | - |
| MEM | - | 236.1MB/s | 243.9MB/s | 232.3MB/s | 113.3MB/s | 83.17MB/s | 17.88MHz | 18.42MHz | 14.13MHz | 135.325ns | 66.317ns |

| Column / Header | Description |
|-----------------|--|
| block copy | Bandwidth for block copy algorithm of the benchmark program |
| block read | Bandwidth for block read |
| block write | Bandwidth for block write |
| cache size | Cache size of the different caches If off-chip caches are used, their sizes has to be defined as parameter when using the Data.BENCHMARK command. |
| latency far | laTency until data is available for far addresses |
| latency near | lateNcy until data is available for near addresses |
| lib copy | Bandwidth for block copy function provided by the compiler library |
| lib write | Bandwidth for block write function provided by the compiler library |
| max size | Maximum block size used during the test |
| random copy | Frequency of random copy operations |
| random read | Frequency of random read operations |
| random write | Frequency of random write operations |
| tolerance | Tolerance of the RunTime counters. Depending of the implementation the RunTime counters the result of the time measurement deviates slightly. |

Example for the PowerQuicc III:

```
; select the CPU
SYStem.CPU MPC85xx

SYStem.Option.FREEZE OFF

; initialize your target hardware
...

; load the benchmark program to address 0x1000
Data.LOAD.Elf benchmark.x 0x1000

; enable L1 cache
Data.Set SPR:0x3F2 %Long 3
Data.Set SPR:0x3F3 %Long 3

; enable L2 cache
Data.Set A:0xFDF20000 %Long 0XD4000000

; execute the Data.BENCHMARK program

; the <program_range> is 0x10000--0x1ffff

; the <data_stack_range> is 0x30000000--0x3000ffff
; the test data and the stack for the benchmark program are located from
; 0x30000000--0x3000ffff

; the <data_test_range> is 0x20000--0x4ffff
; the memory range that is tested by the benchmark program is
; 0x20000--0x4ffff

; Data.BENCHMARK <program_range> <data_stack_range> <data_test_range>
; <ic_size> <dc_size> <l2_size> <l3_size>
Data.BENCHMARK 0x10000--0x1ffff 0x30000000--0x3000ffff 0x20000--0x4ffff
```

Further examples:

```
; load the benchmark program to address 0x20000
Data.LOAD.Elf benchmark.x 0x20000

; the address range 0x20000--0x4ffff is used for the program,
; data/stack and is also the test address range

; Data.BENCHMARK <program_range> <data_stack_range> <data_test_range>
; <ic_size> <dc_size> <l2_size> <l3_size>

Data.BENCHMARK 0x20000--0x4ffff
```

```
; load the benchmark program to address 0x20000
Data.LOAD.Elf benchmark.x 0x20000

; the address range 0x20000--0x4ffffff is used for the program
; data/stack and is also the test address range

; the size of the L2 cache is 128K

; parameters that are skipped are represented by a comma

; Data.BENCHMARK <program_range> <data_stack_range> <data_test_range>
; <ic_size> <dc_size> <l2_size> <l3_size>

Data.BENCHMARK 0x20000--0x4ffffff ,,,, 0x1000
```

| | |
|---------------|---|
| Format: | Data.CHAIN <base> <link_offset> <elements> [/<option> ...] |
| <elements>: | [[%<format>] [<address> <range>] ...] |
| <format>: | Decimal [.<width> [.<endianness> [.<bitorder>]]] DecimalU [.<width> [.<endianness> [.<bitorder>]]] Hex [.<width> [.<endianness> [.<bitorder>]]] HexS [.<width> [.<endianness> [.<bitorder>]]] OCTal [.<width> [.<endianness> [.<bitorder>]]] Ascii [.<width> [.<endianness> [.<bitorder>]]] Binary [.<width> [.<endianness> [.<bitorder>]]] Float [.<float_rep> [.<endianness>]] sYmbol [.<width> [.<endianness> [.<bitorder>]]] Var DUMP [.<width> [.<endianness> [.<bitorder>]]] Byte [.<endianness> [.<bitorder>]] Word [.<endianness> [.<bitorder>]] Long [.<endianness> [.<bitorder>]] Quad [.<endianness> [.<bitorder>]] TByte [.<endianness> [.<bitorder>]] PByte [.<endianness> [.<bitorder>]] HByte [.<endianness> [.<bitorder>]] SByte [.<endianness> [.<bitorder>]] |
| <width>: | Default Byte Word Long Quad TByte PByte HByte SByte |
| <float_rep>: | ieee ieeeRev ieeeS ieeeDbI ... |
| <endianness>: | Default LE BE |
| <bitorder>: | Default BitSwap |
| <option>: | CORE <core_number> COVerage CTS Track FLAG <flag> CFlag <cflag> Mark <break> |

| | |
|-----------------------|---|
| <flag>: | Read Write NoRead NoWrite |
| <cflag>: | OK NoOK NOTEXEC EXEC |
| <break>: | Program HII Spot Read Write Alpha Beta Charly Delta Echo |

Displays a linked list without high-level information. The link to the next element is taken from the current element address plus *link offset*. The size of the pointer is one, two or four bytes, depending on the CPU type and address space.

**Decimal,
DecimalU,...**

Refer to “**Keywords for <format>**”, page 10

Byte, Word, ...

Refer to “**Keywords for <width>**”, page 11

DEfault, BE, LE

Define byte-order display direction: default target endianness, Big Endian or Little Endian

DEfault, BitSwap

BitSwap allows to display data in reverse bit-order in each byte. If **BitSwap** is used together with BE or LE, the byte order will not change, otherwise **BitSwap** will also reverse the byte-order.

CORE <number>

Display memory from the perspective of the specified core (SMP debugging only).

COverage

Highlight data memory locations that have never been read/written.

Track

Track the window to the reference address of other windows.

Mark <break>

Highlight memory locations for which the specified breakpoint is set.


CTS

Display **CTS** access information when CTS mode is active.

Example:

```
; Display a linked list, the first element is the symbol ast. The
; pointer to the next element is found at offset 8. from the base
; address. The element consists of a pointer, a counter, 2 pointers
; and a byte

Data.CHAIN ast 8. %Hex.Long 0. %Decimal.Long 4. %Hex.Long 8. %Hex.Long
12. %Hex.Byte 16.
```

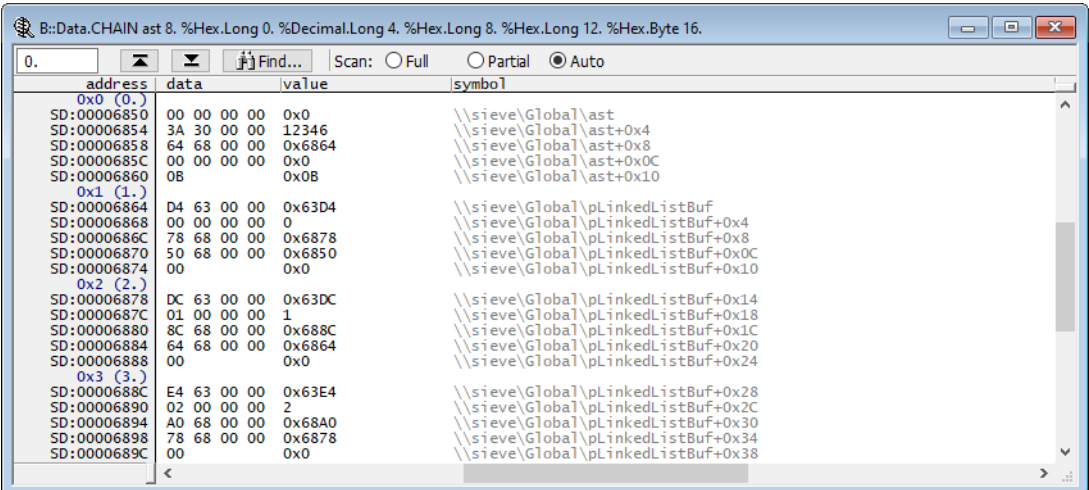

By double-clicking a data word, a **Data.Set** command can be executed on the current address.

The **Data.CHAIN** window supports three different scan modes:

| | |
|----------------|---|
| Full | The linked list is always completely updated. |
| Partial | The linked list is only partially updated. The update starts at the element that was on top of the window when the Partial button was selected the last time. |
| Auto (default) | The linked list is always completely updated. To balance the effect on the user interface, the list is updated for a specific time interval, then the update is stopped for a specific time interval to allow other activities on the user interface etc. The number of the last updated element is displayed beside the Auto button. |

See also

- [Data.CHAINFind](#)
- [Data.CSA](#)
- [Data.BDTAB](#)
- [Data.dump](#)
- [Data.TABLE](#)
- [Data.View](#)

Format: **Data.CHAINFind** <address> <value> [/<option>]

<option>: **Address** <range>

Searches for data in linked lists. Currently only searching for invalid address pointers is implemented. The search stops when the address of the element is inside the given address range.

The **Data.CHAINFind** command affects the following functions:

| | |
|------------------------|---|
| FOUND() | Returns TRUE if data was found. |
| TRACK.ADDRESS() | Returns the address of the last found data. |

Example:

```
; A linked list is searched starting with the first element
; at symbol 'xlist'.
; The pointer to the next element is found at offset 12. from the
; base address of a element.
; Look for an address outside the allowed range 0x10000--0x1ffff.
```

```
Data.CHAINFind xlist 0x0c /Address !0x10000--0x1ffff
IF FOUND()
    Data.dump TRACK.ADDRESS()
```

See also

■ [Data.CHAIN](#)

Format: **Data.CLEARVM** [<address> | <addressrange>]

Clears the entire **TRACE32 virtual memory (VM:)** if <address> or <range> are not specified.

- <address> Clears one byte at the specified address.
- <addressrange> Clears the specified range.


Example:

```
;Open the Data.dump window displaying the virtual memory at address 0x0
Data.dump VM:0x0 /Byte

;clear the entire virtual memory (VM:), see [A]
Data.CLEARVM

;write 0x0 to the specified range in the virtual memory (VM:), see [B]
Data.Set VM:0x0++0x3F %Byte 0x0

;clear one byte at the specified address, see [B]
Data.CLEARVM VM:0x24
```

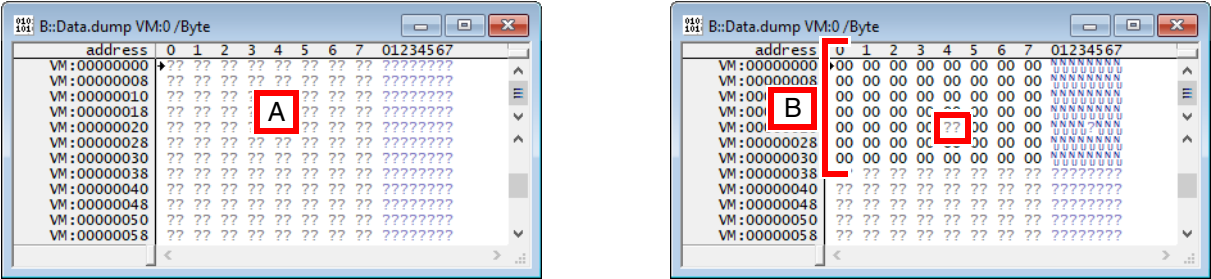

- A Question marks (?????) indicate uninitialized address locations.
- B A 64-byte <range> was initialized with 0x0. The address VM:0x24 was uninitialized again.

Format: **Data.ComPare** <addressrange> [<address>] [/<option>]

<option>: **Back** | **NoFind** | **ALL**

The contents of a memory area is compared byte-wise against the range starting with the second argument.

```
Data.ComPare 0x0--0x3fff 0x4000 ; compare two memory regions
```

```
; copy contents of specified address range to TRACE32 virtual memory
Data.Copy 0x3fa000++0xffff VM:
```

```
; display contents of TRACE32 virtual memory at specified address
Data.dump VM:0x3fa000
```

```
Go
```

```
Break
```

```
; compare contents of target memory with contents of TRACE32 virtual
; memory for specified address range
Data.ComPare 0x3fa000++0xffff VM:0x3fa000
```

```
; search for next difference
Data.ComPare
```

```
...
```

The **Data.ComPare** command affects the following functions:

FOUND()

Returns TRUE if a difference was found.

TRACK.ADDRESS()

Returns the address of the last found difference.

```
Data.ComPare 0x100--0xffff 0x3f
```

```
IF FOUND()
    Data.dump TRACK.ADDRESS()
```

```
Data.ComPare 0x100--0xffff 0x3f
```

```
IF FOUND()  
    PRINT "Difference found at address " TRACK.ADDRESS()
```

See also

■ [Data.COPY](#)

▲ ['Release Information' in 'Release History'](#)

Format: **Data.COPY** *<addressrange>* [*<address>*] [*/<option>*]

<option>: **Verify | ComPare | DIFF**
Byte | Word | Long | Quad | TByte | PByte | HByte | SByte
wordSWAP | LongSWAP | QuadSWAP | BitSwap
SkipErrors
PlusVM

Data areas are copied. The address ranges may overlap.

| | |
|------------------------|--|
| Verify | Verify data by following a read operation. |
| ComPare | Data at address ranges is compared. Memory is not changed. The comparison stops with an error message after the first difference. |
| DIFF | Data at address ranges is compared. Memory is not changed. The address of the compare can be checked using the FOUND() function. |
| Byte, Word, ... | See “ Keywords for <width> ”, page 11. |
| wordSWAP | Swaps high and low bytes of a 16-bit word during copy. |
| LongSWAP | Swaps high and low bytes of a 32-bit word during copy. |
| QuadSWAP | Swaps high and low bytes of a 64-bit word during copy. |
| BitSwap | Swaps the bits of each byte during copy. |
| SkipErrors | Skips memory that cannot be read. Otherwise TRACE32 would abort the command if a bus error occurs while copying the specified <i><range></i> . |
| PlusVM | The code is loaded into the target memory plus into the virtual memory. |

Example 1

```
; copy within memory
Data.COPY 0x1000--0x1fff 0x3000      ; move 4 K block
```

Example 2

The **Data.COPY** <addressrange> **/DIFF** command is used together with the following functions:

| | |
|------------------------|---|
| FOUND() | Returns TRUE if a difference was found in the comparison. |
| TRACK.ADDRESS() | Returns the address of the first difference. |

```
;Copy from VM: to SD:
Data.COPY VM:0x0--0x1F SD:0xB0

;Check if there are any differences between VM: and SD:
Data.COPY VM:0x0--0x1F SD:0xB0 /DIFF

IF FOUND()
    PRINT "Difference found at address " TRACK.ADDRESS()
```

Example 3

The **Data.COPY** <addressrange> **/LongSWAP** command is used to copy and swap a memory range and to convert it e.g. from Little- to Big-Endian or vice versa.

```
; set VM:0x0
Data.Set  VM:0x0 %Long %LE 0x11223344 0x55667788

; now copy the buffer to VM:0x20
Data.COPY VM:0x0++0x7 VM:0x20 /LongSWAP

; at VM:0x20 the memory content is now 0x44332211 0x88776655
```

See also

■ [Data.ComPare](#)

▲ ['Release Information' in 'Release History'](#)

Format: **Data.CSA** <csa_link>

Displays a linked list of CSA entries. **Data.CSA** is a specialized variant of the **Data.CHAIN** command.

TriCore does not store the context information on the stack. Instead it saves them as a linked list in user-definable memory areas. The **Data.CSA** command displays the content of these lists in a user-friendly format. TRACE32 knows about the structure of the CSA lists and detects the end of the list. The user only has to specify the base link.

<csa_link>

Link to the first CSA entry to display. The link needs to be encoded in the format TriCore uses internally. This allows a to pass the content of the corresponding register directly. See example below.

Example:

Data.CSA Register(FCX)

| address | data | value | symbol |
|------------|-------------|------------|-----------------------------------|
| 0x0 (0.) | | | |
| D:D0000F40 | 3C 00 0D 00 | 0xD003C | \\demo\Global\l_c_ub_csa.01+0xF40 |
| D:D0000F44 | 83 08 00 08 | 0x8000883 | \\demo\Global\l_c_ub_csa.01+0xF44 |
| D:D0000F48 | 90 25 08 A1 | 0xA1082590 | \\demo\Global\l_c_ub_csa.01+0xF48 |
| D:D0000F4C | D4 01 00 A1 | 0xA10001D4 | \\demo\Global\l_c_ub_csa.01+0xF4C |
| D:D0000F50 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF50 |
| D:D0000F54 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF54 |
| D:D0000F58 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF58 |
| D:D0000F5C | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF5C |
| D:D0000F60 | D8 25 08 A1 | 0xA10825D8 | \\demo\Global\l_c_ub_csa.01+0xF60 |
| D:D0000F64 | C0 25 08 A1 | 0xA10825C0 | \\demo\Global\l_c_ub_csa.01+0xF64 |
| D:D0000F68 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF68 |
| D:D0000F6C | 14 00 08 A1 | 0xA1080014 | \\demo\Global\l_c_ub_csa.01+0xF6C |
| D:D0000F70 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF70 |
| D:D0000F74 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF74 |
| D:D0000F78 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF78 |
| D:D0000F7C | 04 00 00 00 | 0x4 | \\demo\Global\l_c_ub_csa.01+0xF7C |
| 0x1 (1.) | | | |
| D:D0000F00 | 3B 00 0D 00 | 0xD003B | \\demo\Global\l_c_ub_csa.01+0xF00 |
| D:D0000F04 | 84 08 00 08 | 0x8000884 | \\demo\Global\l_c_ub_csa.01+0xF04 |
| D:D0000F08 | 88 25 08 A1 | 0xA1082588 | \\demo\Global\l_c_ub_csa.01+0xF08 |
| D:D0000F0C | 9A 02 00 A1 | 0xA100029A | \\demo\Global\l_c_ub_csa.01+0xF0C |
| D:D0000F10 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF10 |
| D:D0000F14 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF14 |
| D:D0000F18 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF18 |
| D:D0000F1C | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF1C |
| D:D0000F20 | D8 25 08 A1 | 0xA10825D8 | \\demo\Global\l_c_ub_csa.01+0xF20 |
| D:D0000F24 | C0 25 08 A1 | 0xA10825C0 | \\demo\Global\l_c_ub_csa.01+0xF24 |
| D:D0000F28 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF28 |
| D:D0000F2C | 14 00 08 A1 | 0xA1080014 | \\demo\Global\l_c_ub_csa.01+0xF2C |
| D:D0000F30 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF30 |
| D:D0000F34 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF34 |
| D:D0000F38 | 00 00 00 00 | 0x0 | \\demo\Global\l_c_ub_csa.01+0xF38 |
| D:D0000F3C | C6 01 9C 00 | 0x9C01C6 | \\demo\Global\l_c_ub_csa.01+0xF3C |

See also

■ [Data.CHAIN](#)

| | |
|---------------|---|
| Format: | Data.DRAW [%<format>] <range1> [[%<format>] <range2> ...] [<scale> [<offset>]] [/<options>...] |
| <format>: | Decimal .[<width>[.<endianness>]] DecimalU .[<width>[.<endianness>]] Hex .[<width>[.<endianness>]] HexS .[<width>[.<endianness>]] OCTal .[<width>[.<endianness>]] Float .[<float_rep>[.<endianness>]] Byte [.<endianness>] Word [.<endianness>] Long [.<endianness>] Quad [.<endianness>] TByte [.<endianness>] PByte [.<endianness>] HByte [.<endianness>] SByte [.<endianness>] |
| <width>: | DEfault Byte Word Long Quad TByte PByte HByte SByte |
| <float_rep>: | ieee ieeeRev ieeeS ieeeDbl ... |
| <endianness>: | DEfault LE BE |
| <options>: | LOG Track Vector Points Steps Impulses Alternate <number> Element <number> |

The **Data.DRAW** command is used to visualize the contents of arrays. The array index is the x-axis, and the array content is the y-axis.

The command is useful, for example, for sampling signal quality in the mobile communications area or for sampling fuel injection in the automotive area. The **Var.DRAW** command has the same functionality, but takes the <format> information from the debug symbols.

Decimal,
DecimalU,...

Refer to “**Keywords for <format>**”, page 10

Byte, Word, ...

Refer to “**Keywords for <width>**”, page 11

DEfault, BE, LE

Define byte-order display direction: default target endianness, Big Endian or Little Endian

| | |
|---|---|
| <i><range1></i> ... <i><range6></i> | Array address range. Depending on the <i><array_options></i> , one or more lines are drawn per specified array. |
| <i><scale></i> | Units per pixel of y-axis (floating point). Default: 1.0 |
| <i><offset></i> | Offset of y-axis (floating point). Default: 0.0 |
| LOG | display y-axis in logarithmic scale |
| Track | Track the window to the reference address of other windows. |
| Vector (default) | draw each data value as a single pulse. |
| Points | display each data value as a dot. |
| Steps | connect the dots for the data values by steps. |
| Impulses | draw each data vales as a single pulse. |
| Alternate <i><number></i> | Split the array in <i><number></i> graphs. <i><number>=2</i> first graph display even elements second graph displays odd element. <i><number>=3</i> first graph displays element 0, n, 2n, ... second graph displays 1, n+1, 2n+1, ... third graph display 2, n+2, 2n+2, ... |
| Element <i><number></i> | Specify the structure component to be displayed graphically. |

```

SYSTEM.Up

; Load application
Data.LOAD.ElF ~/demo/arm/compiler/arm/armle.axf

Register.Set PC main
Go
WAIT 2.s
Break

; See result 1.
;          <format>          <range1>          <scale> <offset> <option>
Data.DRAW %Float.IeeeDblT Var.RANGE(sinewave) 0.003 -0.2 /Vector


; See result 2.
Data.DRAW %Float.IeeeDblT sinewave++0xffff 0.003 -0.2 /Impulses

; See result 3.
;          <format>          <range1>          <range2>          <disp>
Data.DRAW %Float.IeeeDblT sinewave++0xffff (sinewave+0x60)++0xffff
/Impulses


; See result 4.
;          <format>          <range1>          <arrayoptions>
Data.DRAW %Float.IeeeDblT sinewave++0xffff /Alternate 12 /Element 1 6 9

```


Result 1:

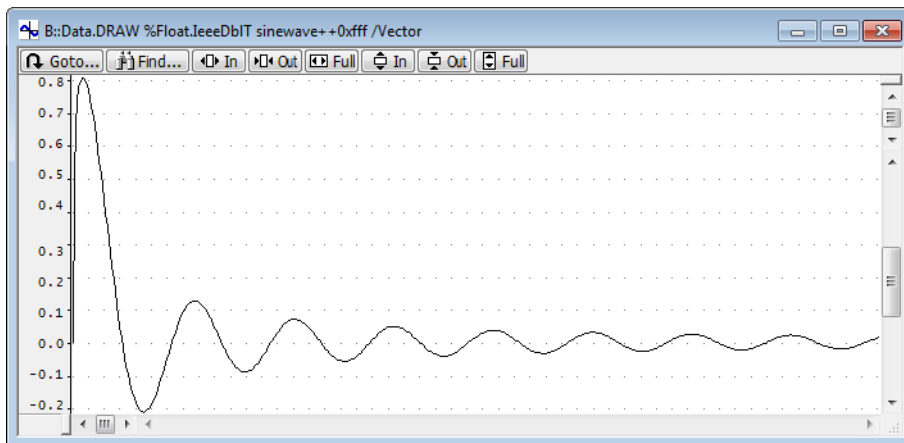

Result 2:

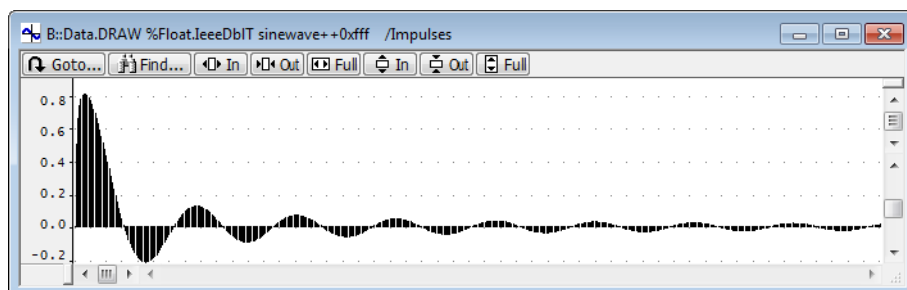


Result 3:

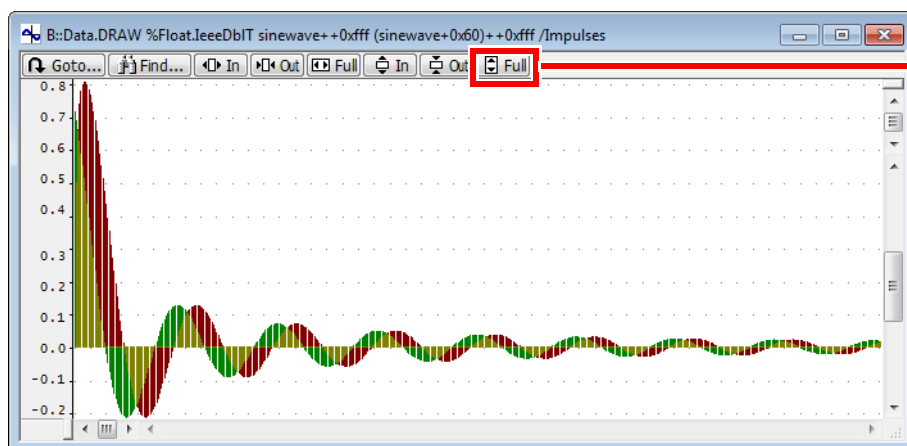

Click the **Full** button.

Result 4:

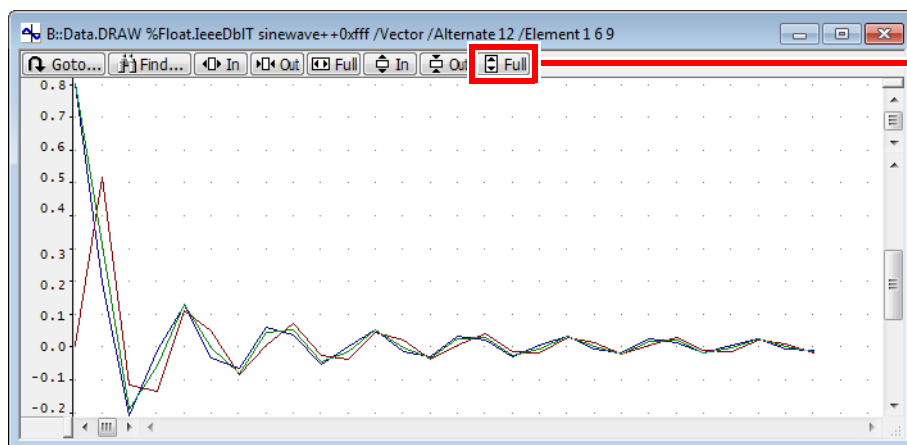

Click the **Full** button.

See also

- [Data.DRAWFFT](#)
- [Data.DRAWXY](#)
- [Data.IMAGE](#)
- [Data.PROfile](#)
- [<trace>.DRAW](#)
- [Var.DRAW](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|---------------|---|
| Format: | Data.DRAFFT [%<format>] <range> <scale> <fftsize> [/<option>] |
| <format>: | Decimal .[<width>[.<endianness>]] DecimalU .[<width>[.<endianness>]] Hex .[<width>[.<endianness>]] HexS .[<width>[.<endianness>]] OCTal .[<width>[.<endianness>]] Float .[<float_rep>[.<endianness>]] Byte [.<endianness>] Word [.<endianness>] Long [.<endianness>] Quad [.<endianness>] TByte [.<endianness>] PByte [.<endianness>] HByte [.<endianness>] SByte [.<endianness>] |
| <width>: | DEFault Byte Word Long Quad TByte PByte HByte SByte |
| <float_rep>: | ieee ieeeRev ieeeS ieeeDbl ... |
| <endianness>: | DEFault LE BE |
| <option>: | BLACKMAN HAMMING HANN REAL COMPLEX Vector Points Steps Impulses |

Computes a fast Fourier transform (FFT) of the input data located in the specified memory range and graphically displays the spectrum.

This command can be used to visualize the frequencies in a signal; for example, the frequencies of audio and video input data. However, to illustrate and explain the command in this manual, a very simple example data set is used.

- Decimal,
DecimalU,...

Refer to “Keywords for <format>”, page 10
- Byte, Word, ...

Refer to “Keywords for <width>”, page 11
- DEFault, BE, LE

Define byte-order display direction: default target endianness, Big Endian or Litte Endian

| | |
|------------------------|---|
| <scale> | Scale factor (normalization) for the x-axis as floating-point value. The spectrum will range from 0 to <scale>/2. Example: 44100.044100.0 |
| <fftsize> | Number of points, must be power of 2, e.g. 128. 256. 512. |

| | |
|------------------------------------|--|
| Real | array consists of real numbers only. |
| COMPLEX | array consists of complex number pairs. |
| Vector (default) | draw each data value as a single pulse. |
| Points | display each data value as a dot. |
| Steps | connect the dots for the data values by steps. |
| Impulses | draw each data vales as a single pulse. |
| BLACKMAN, HAMMING, HAHN | window options. |

Example for Data.DRAWFFT

```
;set a test pattern to the virtual memory of the TRACE32 application
Data.Set VM:0--0x4f %Byte 1 0 0 0

Data.dump VM:0x0 ;open the Data.dump window to view the test pattern

;visualize the contents of the TRACE32 virtual memory as a graph
Data.DRAWFFT %Decimal.Byte VM:0++0x4f 2.0 512.

Data.DRAWFFT %Decimal.Word VM:0++0x4f 2.0 512.


Data.DRAWFFT %Decimal.Long VM:0++0x4f 2.0 512.

Data.DRAWFFT %Decimal.Quad VM:0++0x4f 2.0 512.
```


Result:

Resize the window, and then click the two **Full** buttons.


$\langle scale \rangle = 2.0$
2.0 divided by 2 = 1.0

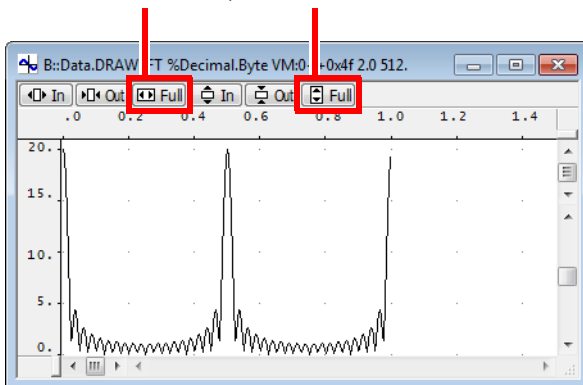


$\langle format \rangle$: **Decimal.Byte**

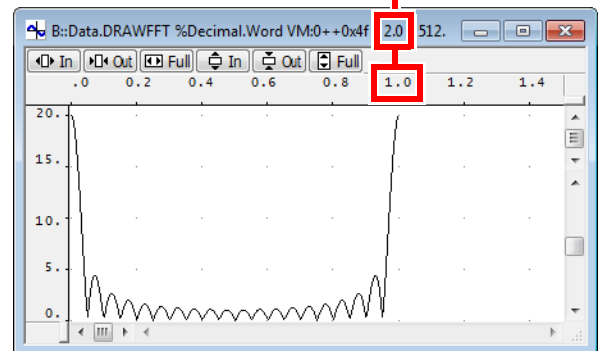

$\langle format \rangle$: **Decimal.Word**

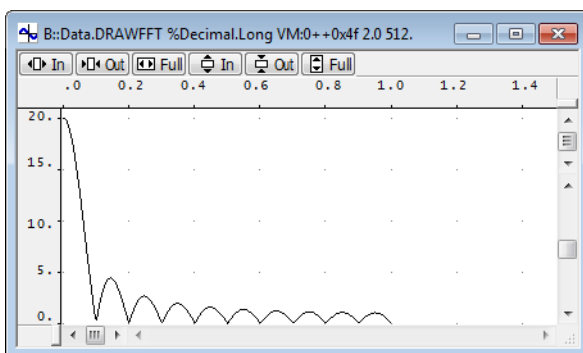

$\langle format \rangle$: **Decimal.Long**

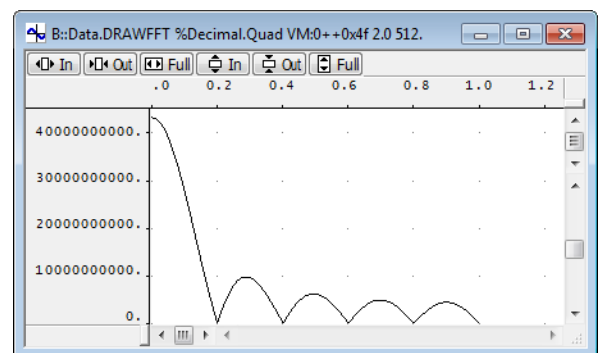

$\langle format \rangle$: **Decimal.Quad**

See also

- [■ Data.DRAW](#) [■ Data.DRAWXY](#) [■ Data.IMAGE](#) [■ <trace>.DRAW](#)
- [■ Var.DRAW](#)
- [▲ 'Release Information' in 'Release History'](#)

| | |
|--------------|---|
| Format: | Data.DRAWXY [%<format>] <range_y> <range_x> [<scale> [<offset>]] [/ <i><options></i>] |
| <format>: | Decimal .[<width>[.<endianness>]] DecimalU .[<width>[.<endianness>]] Hex .[<width>[.<endianness>]] HexS .[<width>[.<endianness>]] OCTal .[<width>[.<endianness>]] Float .[<float_rep>[.<endianness>]] Byte [.<endianness>] Word [.<endianness>] Long [.<endianness>] Quad [.<endianness>] TByte [.<endianness>] PByte [.<endianness>] HByte [.<endianness>] SByte [.<endianness>] |
| <width>: | Default Byte Word Long Quad TByte PByte HByte SByte |
| <float_rep>: | ieee ieeeRev ieeeS ieeeDbl ... |
| <options>: | LOG Track YX Vector Points Steps Impulses Alternate <number> Element <number> |

Draws a graph based on array with x and y coordinates.

| | |
|--|--|
| Decimal, DecimalU,... | Refer to “Keywords for <format>” , page 10 |
| Byte, Word, ... | Refer to “Keywords for <width>” , page 11 |
| Default, BE, LE | Define byte-order display direction: default target endianness, Big Endian or Litte Endian |
| <scale> | Units per pixel of y-axis (floating point). Default: 1.0 |
| <offset> | Offset of y-axis (floating point). Default: 0.0 |

| | |
|--|---|
| LOG | display y-axis in logarithmic scale |
| Track | Track the window to the reference address of other windows. |
| YX | swap <i><range_y></i> and <i><range_x></i> . |
| Vector (default) | draw each data value as a single pulse. |
| Points | display each data value as a dot. |
| Steps | connect the dots for the data values by steps. |
| Impulses | draw each data vales as a single pulse. |
| Alternate <i><number></i> | Split the array in <i><number></i> graphs. <i><number>=2</i> first graph display even elements second graph displays odd element. <i><number>=3</i> first graph displays element 0, n, 2n, ... second graph displays 1, n+1, 2n+1, ... third graph display 2, n+2, 2n+2, ... |
| Element <i><number></i> | Specify the structure component to be displayed graphically. |

Example

In this example, **Data.DRAWXY** is executed in the TRACE32 Instruction Set Simulator for ARM.

```

SYStem.Up

; Load application
Data.LOAD.Elf ~/demo/arm/compiler/arm/armle.axf


Register.Set PC main
Go
WAIT 2.s
Break

; See result 1.
;           <format>           <range>           <range>
Data.DRAWXY %Float.IeeeDblT sinewave++0xffff (sinewave+0x60)++0xffff

; See result 2.
Data.DRAWXY %Float.IeeeDblT sinewave++0xffff (sinewave+0x60)++0xffff /YX


```


Result 1:

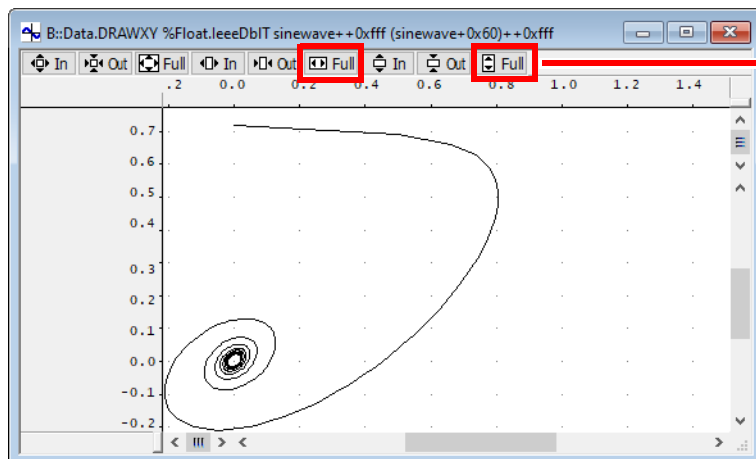

Click the **Full** buttons.

Result 2:

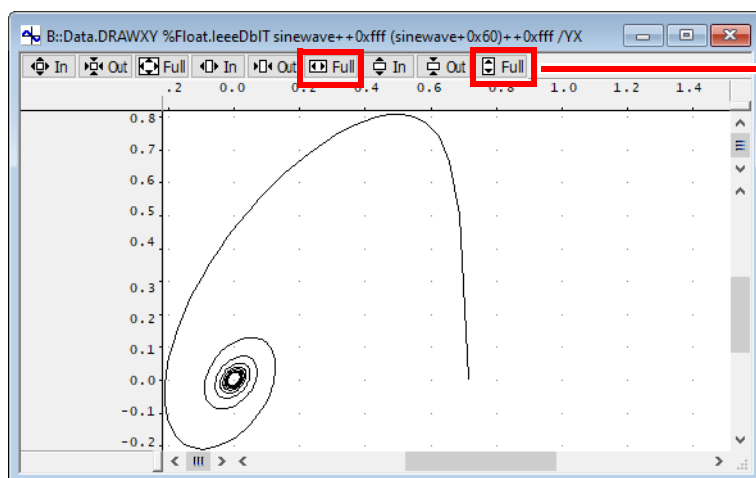

Click the **Full** buttons.

See also

■ [Data.DRAW](#)
■ [Var.DRAW](#)

■ [Data.DRAWFFT](#)

■ [Data.IMAGE](#)

■ [<trace>.DRAW](#)

| | |
|--|---|
| Format: | Data.dump [<i><address></i> <i><range></i>] [<i>/<option></i> ...] |
| <i><option></i> : (format) | Hex NoHex Decimal DecimalU Ascii NoAscii Byte Word Long Quad TByte PByte HByte SByte BE LE Reverse |
| <i><option></i> : (standard) | DIALOG Track CORE <i><core_number></i> Orient NoOrient SpotLight NoSpotLight STRING COLumns [<i><columns></i>] ICache DCache L2Cache Mark <i><break></i> |
| <i><option></i> : (advanced) | ICacheHits DCacheHits L2CacheHits XICacheHits XDCacheHits XL2CacheHits COVerage CFlag <i><cflag></i> FLAG <i><flag></i> CTS |
| <i><flag></i> : | Read Write NoRead NoWrite |
| <i><cflag></i> : | OK NoOK NOTEXEC EXEC |
| <i><break></i> : | Program HII Spot Read Write Alpha Beta Charly Delta Echo |


NOTE: Please be aware that TRACE32 can perform a memory dump only under the following conditions:

- The program execution is stopped.
- Or alternatively, [run-time memory access](#) is enabled.

If the parameter is a single address, it specifies the initial position of the memory dump.

```
Data.dump 0x4A54
```

```
Data.dump vdblarray ; symbolic address
```

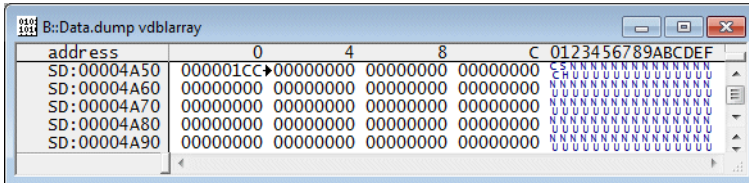

| address | 0 | 4 | 8 | C | 0123456789ABCDEF |
|-------------|----------|----------|----------|----------|-----------------------------------|
| SD:00004A50 | 000001CC | 00000000 | 00000000 | 00000000 | C N N N N N N N N N N N N N N N N |
| SD:00004A60 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A70 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A80 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A90 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |


If the parameter is an address range, the memory dump is only displayed for the specified address range.

```
Data.dump 0x4A54--0x4A73
```

```
Data.dump Var.RANGE(vdblarray)
```

Var.RANGE(<hll_expression>)


Returns the address range occupied by the specified HLL expression

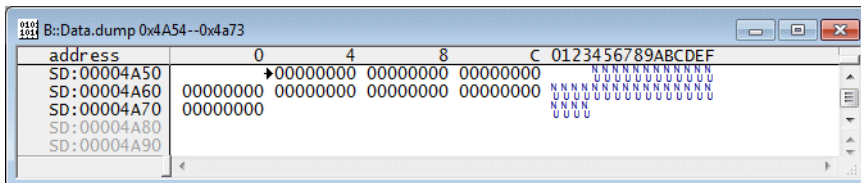

| address | 0 | 4 | 8 | C | 0123456789ABCDEF |
|-------------|----------|----------|----------|----------|-----------------------------------|
| SD:00004A50 | 00000000 | 00000000 | 00000000 | 00000000 | C N N N N N N N N N N N N N N N N |
| SD:00004A60 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A70 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A80 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |
| SD:00004A90 | 00000000 | 00000000 | 00000000 | 00000000 | C U U U U U U U U U U U U U U U U |

If the **Data.dump** command is entered without parameter the **Data.dump** dialog is displayed.

```
Data.dump
```

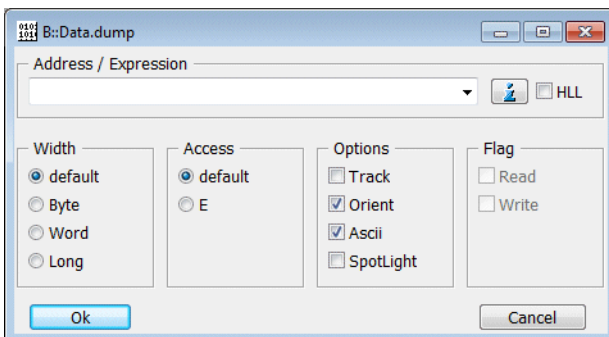

Address / Expression

Width

☒ default

☐ Byte

☐ Word

☐ Long

Access

☒ default

☐ E

Options

☐ Track

☒ Orient

☒ Ascii

☐ SpotLight

Flag

☐ Read

☐ Write

Ok Cancel

The use of [access class information](#) might be helpful if you want to specify the memory access more precisely:

```
Data.dump A:0xc3f90004          ; advise TRACE32 to perform an
                                ; access to physical memory by
                                ; bypassing the MMU

Data.dump NC:0x5467             ; advise TRACE32 to perform a
                                ; non-cached access

Data.dump Z:0x5467             ; advise TRACE32 to perform a
                                ; secured access
                                ; (TrustZone ARM cores)
```

Format Options

[\[Back to Top\]](#)

| | |
|-----------------|---|
| Byte, Word, ... | <p>If a memory dump is displayed, TRACE32 PowerView uses the default processing width of the core/processor. Another display format can be specified by format options.</p> <p>See “Keywords for <width>”, page 11.</p> |
|-----------------|---|

```
Data.dump flags /Byte
```

| | |
|---|--|
| BE (big endian) LE (little endian) | <p>If a memory dump is displayed TRACE32 PowerView uses the default endianness of the core/processor. Another endianness can be specified by the format options BE / LE.</p> |
| Decimal DecimalU (unsigned dec.) | <p>If a memory dump is displayed TRACE32 PowerView displays the memory contents in hex.</p> <p>The options Decimal and DecimalU allow a decimal display.</p> |

```
Data.dump flags /Decimal

Data.dump flags /DecimalU /Byte
```


| | |
|--|--|
| Hex (default) NoHex | If a memory dump is displayed TRACE32 PowerView displays an hex representation of the memory contents. This can be suppressed by the option NoHex . |
| Ascii (default) NoAscii | If a memory dump is displayed TRACE32 PowerView displays an ASCII representation of the memory contents. This can be suppressed by the option NoAscii . |
| Reverse | Reverses the order of columns in the Data.dump window. |

Standard Options

[\[Back to Top\]](#)

| | |
|---------------|--|
| DIALOG | Display memory dump window with dialog elements. |
|---------------|--|


```
Data.dump 0x100 /DIALOG
```

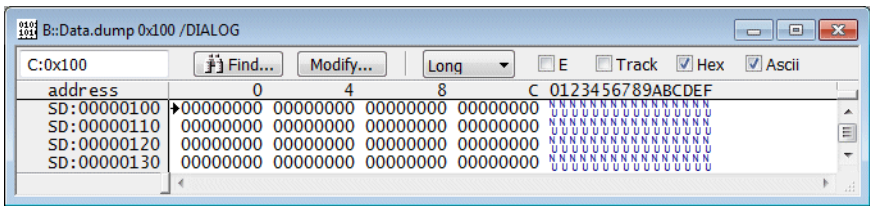


| | |
|--------------|--|
| Track | Tracks the window to the reference address of other windows. If this option is combined with a variable argument, like a register value, an argument tracking is performed. This will hold the argument value in the middle of the window and follow the value of the argument. |
|--------------|--|

```
Var.View flags vdbllarray  
  
Data.dump /Byte /Track
```

Example for a DATA reference: If the contents of a variable is selected, the corresponding memory location is shown and highlighted in the memory dump window.

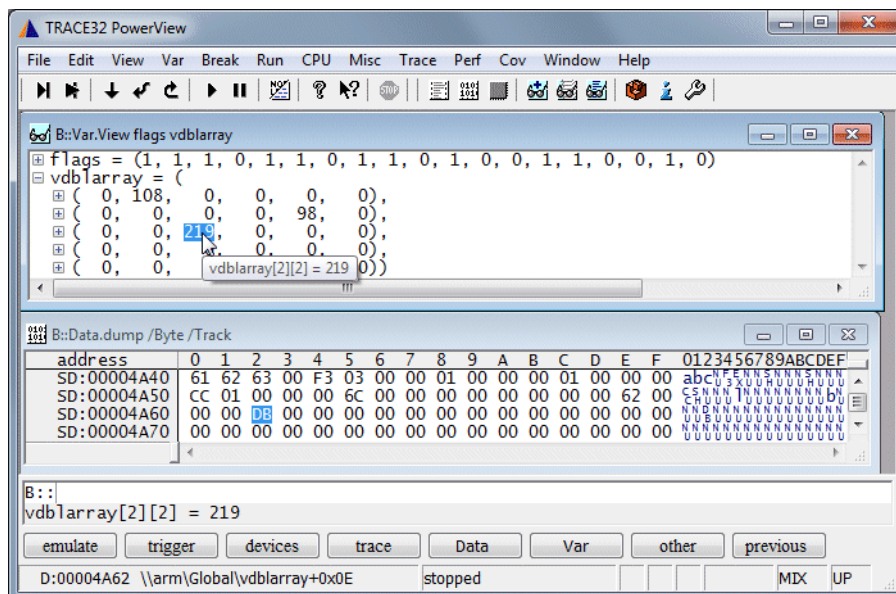


Example for a PROGRAM reference: If a source code line is selected the corresponding memory location is shown and highlighted in the memory dump window.

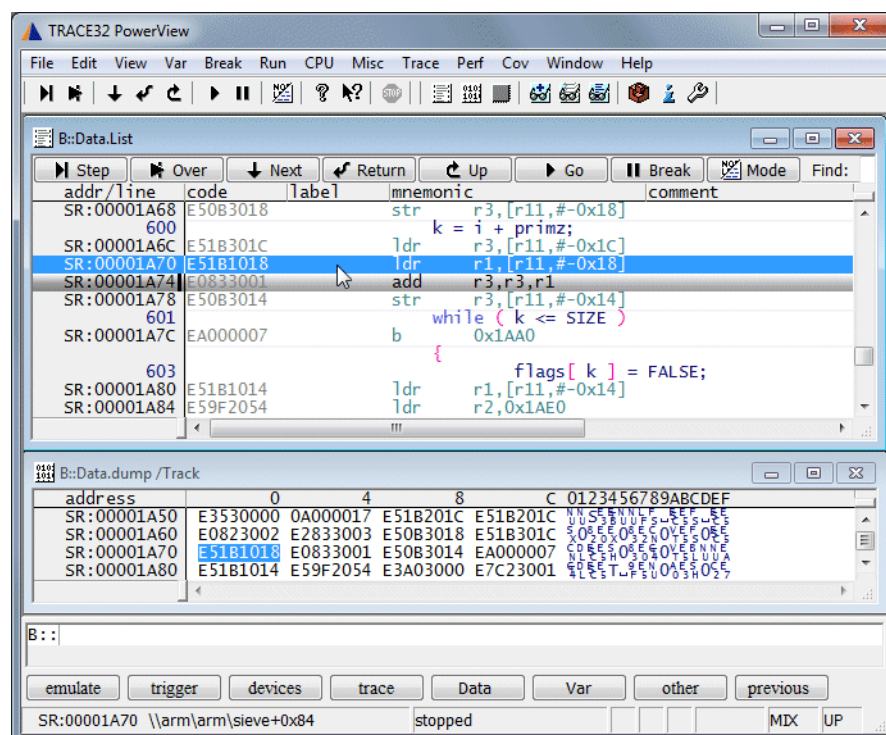

Example for register tracking:

```
Data.dump Register(R13) /Track /NoAscii
```

Register(<register_name>) Returns register contents

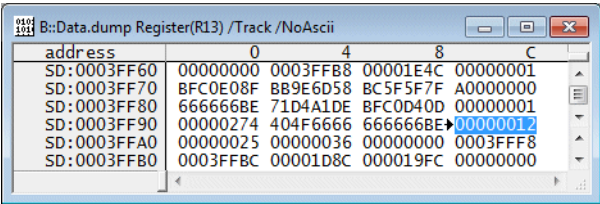

| | |
|----------------------|---|
| CORE <number> | Display memory dump from the perspective of the specified core (SMP debugging only) |
|----------------------|---|

TRACE32 assumes that an SMP system maintains memory coherency, so it should not matter from which perspective a memory dump is performed.


```
CORE.select 0. ; select core 0

Data.dump 0x1000 ; display a memory dump from the
                  ; perspective of the selected core


Data.dump 0x1000 /CORE 1. ; display a memory dump from the
                           ; perspective of the specified core
                           ; (here core 1)
```

| | |
|-------------------------|---|
| Orient (default) | <p>The start address of the memory dump window matches to bounds of power of two. It is assumed that this is easier to read.</p> <p>The address specified in the Data.dump command is marked with a small arrow.</p> |
| NoOrient | <p>The dump starts exactly at the address specified in the Data.dump command.</p> |

```
Data.dump 0x4aca /DIALOG
```

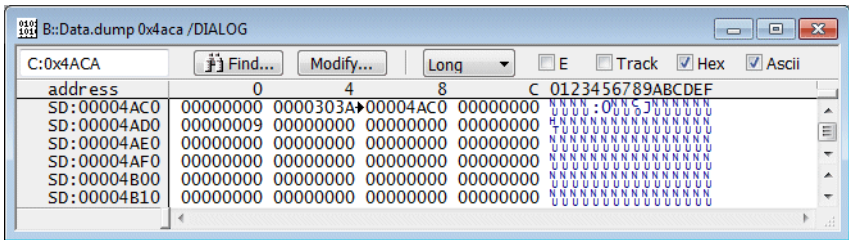


```
Data.dump flags /NoOrient /Byte /DIALOG
```

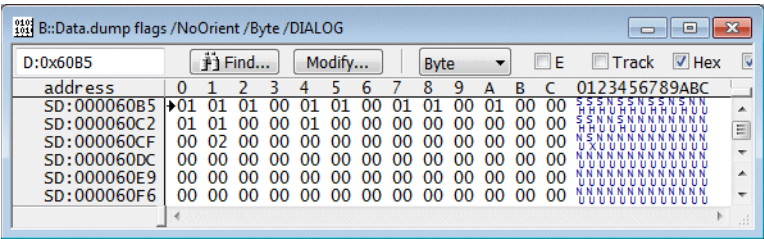


| | |
|---------------------------------|--|
| NoSpotLight (default) | No highlighting of changed memory locations. |
| SpotLight | Highlight changed memory locations. Memory locations changed by the last program run/single step are marked in dark red. Memory locations changed by the second to last program run/single step are marked a little bit lighter. This works up to a level of 4. |

Data.dump flags /SpotLight /Byte /DIALOG

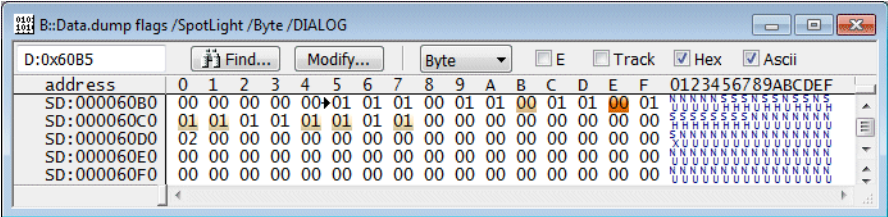

| | |
|---------------|---|
| STRING | Display memory dump of zero-terminated string. If the STRING option is used, zero-terminated strings are underlined for improved visibility. |
|---------------|---|

Data.dump 0x60b5 /STRING

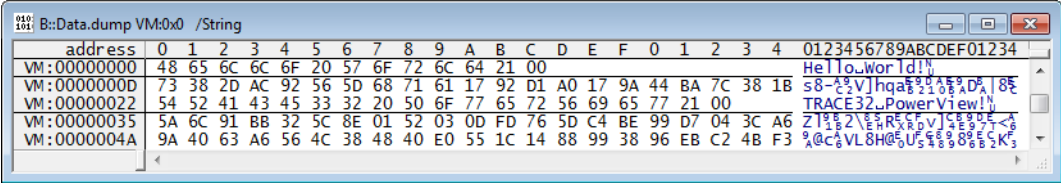



| | |
|--|---|
| <p>COLumns [<columns>]</p> <p>WIDTH (deprecated)</p> | <p>Determines how many memory <columns> are displayed in the window. The column width can be formatted with the <format> options Byte, Word, Long, etc.</p> <ul style="list-style-type: none"> To use the TRACE32 default setting, omit option and parameter. When you now resize the window width, the number of columns adjusts to the window width. COLumns without the <columns> parameter: The number of columns remains fixed when you resize the window width. |
|--|---|

```

;display memory dump with 7 columns and format each col. as 8-bit values
;
;      <number_of_columns>      <format>
Data.dump sieve                /COLumns 7.                /Byte

;display memory dump with 4 columns and format each col. as 32-bit values
Data.dump sieve                /COLumns 4.                /Long

```

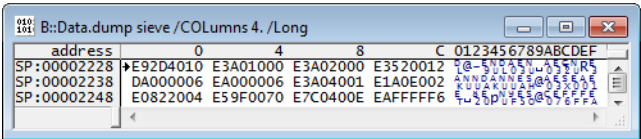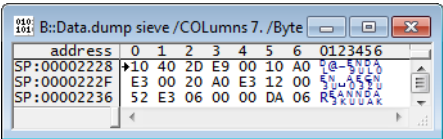


| | |
|----------------|---|
| ICache | Highlight memory locations cached to the instruction cache and display way information in the memory dump |
| DCache | Highlight memory locations cached to the data cache and display way information in the memory dump |
| L2Cache | Highlight memory locations cached to the level 2 cache and display way information in the memory dump |

```

Data.dump sieve /ICache /NoAscii


```

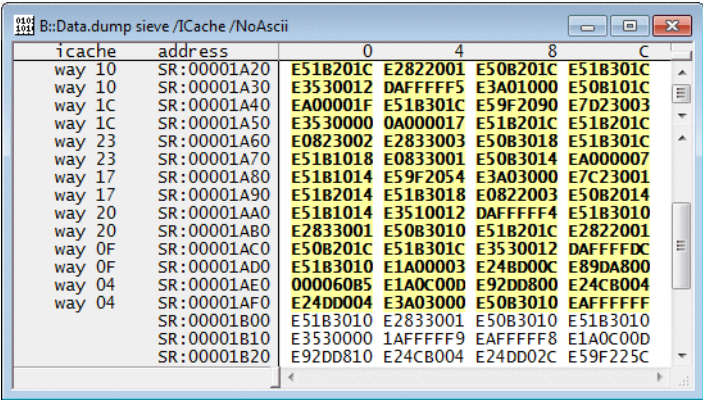

Mark <break>

Highlight memory locations for which the specified breakpoint is set.

```
; highlight memory locations for which a Write breakpoint is set  
Data.dump flags /Mark Write /Byte /NoAscii
```

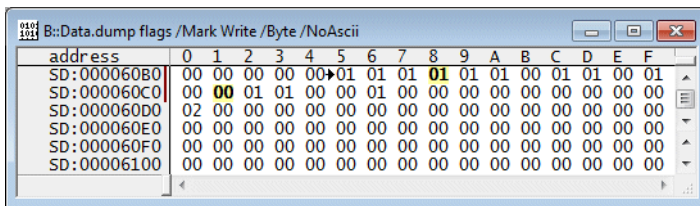

The screenshot shows a window titled "B::Data.dump flags /Mark Write /Byte /NoAscii". It displays a table of memory addresses and their corresponding hexadecimal values. The first row is highlighted in yellow, indicating a write breakpoint.

| address | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
|-------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|
| SD:000060B0 | 00 | 00 | 00 | 00 | 00 | 01 | 01 | 01 | 01 | 01 | 00 | 01 | 01 | 00 | 01 | |
| SD:000060C0 | 00 | 00 | 01 | 01 | 00 | 00 | 01 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| SD:000060D0 | 02 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| SD:000060E0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| SD:000060F0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| SD:00006100 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |

TRACE32 PowerView uses its default formatting for the **Data.dump** command. These defaults can be changed by the command **SETUP.DUMP**.

The following options are used to map the results of the trace-based cache analysis (**CTS.CACHE**) to memory dumps.

| | |
|---------------------|--|
| ICacheHits | Highlight memory locations for which instruction cache hits were detected. |
| DCCacheHits | Highlight memory locations for which data cache hits were analyzed. |
| L2CacheHits | Highlight memory locations for which level 2 cache hits were analyzed. |
| XICacheHits | - |
| XDCCacheHits | Highlight program memory locations which caused data cache hits. |
| L2CacheHits | Highlight program memory locations which caused level 2 cache hits. |

01010101

B::Data.dump 0x11300 /DCCacheHits /Byte /NoAscii

| hits | misses | victims | ratio | address | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F | | | |
|-------|--------|---------|----------|-------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 5759. | 0. | 0. | 100.000% | SD:00011300 | 56 | 34 | 12 | EF | FE | FF | FF | EA | 26 | 00 | 02 | 00 | 23 | 00 | 02 | 00 | | | |
| | | | | SD:00011310 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 38 | 06 | 01 | 00 | A0 | 75 | 03 | 00 | | | | |
| | | | | SD:00011320 | A0 | 75 | 03 | 00 | 00 | 00 | 00 | 00 | 40 | 09 | 01 | 00 | 68 | 09 | 01 | 00 | | | |
| | | | | SD:00011330 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | FF | FF | EF | 7F | | | |
| | | | | SD:00011340 | FF | FF | FF | FF | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 6. | 0. | 0. | 100.000% | SD:00011350 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | | |
| | | | | SD:00011360 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| | | | | SD:00011370 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 01 | 01 | 00 | 00 | 00 | 00 | 00 | |
| | | | | SD:00011380 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| | | | | SD:00011390 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | |
| | | | | SD:000113A0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | | | | |

The following option is used to map the result of trace-based code coverage (**COV**erage) to memory dumps.

| | |
|------------------|---|
| COV erage | Highlight program memory location that are never executed respectively data memory locations that are never read/written. |
|------------------|---|

```
Data.dump 0x4e7c /COVcoverage /WIDTH 1. /NoAscii /Byte
```

| coverage | address | 0 |
|-----------|-------------|----|
| write | SD:000068C0 | A0 |
| write | SD:000068C1 | 68 |
| write | SD:000068C2 | 00 |
| write | SD:000068C3 | 00 |
| never | SD:000068C4 | 00 |
| never | SD:000068C5 | 00 |
| never | SD:000068C6 | 00 |
| never | SD:000068C7 | 00 |
| readwrite | SD:000068C8 | D0 |
| readwrite | SD:000068C9 | 03 |
| readwrite | SD:000068CA | D1 |
| readwrite | SD:000068CB | 03 |
| write | SD:000068CC | 44 |

The following option is used to map the results of **CTS** to memory dumps.

| | |
|-----|--|
| CTS | Display CTS access information when CTS mode is active. |
|-----|--|


See also

- [■ Data.Assemble](#)
[■ Data.PATTERN](#)
[■ Data.Test](#)
[■ SETUP.DUMP](#)
[■ SETUP.ASCII TEXT](#)
[□ ADDRESS.WIDTH\(\)](#)
[□ Data.Quad\(\)](#)
- [■ Data.CHAIN](#)
[■ Data.Print](#)
[■ Data.USRACCESS](#)
[■ SETUP.TIMEOUT](#)
[□ ADDRESS.OFFSET\(\)](#)
[□ Data.Byte\(\)](#)
[□ Data.STRING\(\)](#)
- [■ Data.Find](#)
[■ Data.STRING](#)
[■ Data.View](#)
[■ sYmbol.INFO](#)
[□ ADDRESS.SEGMENT\(\)](#)
[□ Data.Float\(\)](#)
[□ Data.STRINGN\(\)](#)
- [■ Data.In](#)
[■ Data.TABLE](#)
[■ List](#)
[■ DUMP](#)
[□ ADDRESS.STRACCESS\(\)](#)
[□ Data.Long\(\)](#)
[□ Data.Word\(\)](#)
- [▲ 'Release Information' in 'Release History'](#)

The **Data.EPILOG** command group allows to define a sequence of read/write accesses that are automatically performed directly after the program execution has halted (manual break, breakpoint or end of single step). The complementary command **Data.PROLOG** performs read/write accesses before program execution is continued. It is also possible to store data read with **Data.EPILOG** and restore with **Data.PROLOG**, and vice versa.

The **Data.EPILOG** command group can be used e.g. to manually freeze peripherals, if the processor itself does not provide this feature. Use **Data.EPILOG.Sequence** and **Data.PROLOG.Sequence** to set up the access sequences.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.EPILOG.state** window.

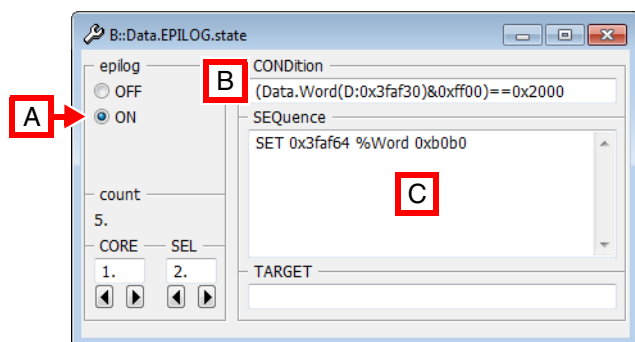

- A** For descriptions of the commands in the **Data.EPILOG.state** window, please refer to the **Data.EPILOG.*** commands in this chapter. **Example:** For information about **ON**, see **Data.EPILOG.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEquence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

Examples:

- Overview including illustration - see **Data.EPILOG.state**.
- Epilog conditions - see **Data.EPILOG.CONDition**.
- Access sequences - see **Data.EPILOG.SEquence**.

See also

■ **Data.ATTACH**

■ **Data.PROLOG**

■ **Data.STARTUP**

■ **Data.TIMER**

▲ 'Release Information' in 'Release History'

| | |
|--------------------------------|--|
| Format: | Data.EPILOG.CONDITION <i><condition></i> |
| <i><condition></i> : | <i><memory_access></i> & <i><mask></i> == <i><value></i> <i><memory_access></i> & <i><mask></i> != <i><value></i> |
| <i><memory_access></i> : | Data.Byte (<i><address></i>) Data.Word (<i><address></i>) Data.Long (<i><address></i>) |

Defines a condition on which the command sequence defined with **Data.EPILOG.SEquence** will be executed each time after the program execution was stopped.

| | |
|------------------------------|---|
| <i><memory_access></i> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|------------------------------|---|

Examples:

```
;reads the long at address D:0x3faf30, proceeds a binary AND with
;a constant (here 0xffffffff). If the result is equal to 0x80000000 the
;condition is true and the defined sequence is executed.
Data.EPILOG.CONDITION (Data.Long(D:0x3faf30)&0xffffffff)==0x80000000
```

```
;read the word at address D:0x3faf30
Data.EPILOG.CONDITION (Data.Word(D:0x3faf30)&0xff00)!=0x8000
```

```
;reads the byte at address D:0x3faf30
Data.EPILOG.CONDITION (Data.Byte(D:0x3faf30)&0xf0)!=0x80
```

See also

- [Data.EPILOG.state](#)
- [Data.Byte\(\)](#)
- [Data.Long\(\)](#)
- [Data.Word\(\)](#)

Format:

Data.EPILOG.CORE *<core_number>*

Selects the core for which you want to define one or more data epilogs.

Prerequisite: You have successfully configured an SMP system with the **CORE.ASSIGN** command.

Example: The following example shows how to define a data epilog that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a data epilog
Data.EPILOG.CORE 3.

;Define the data epilog for core 3
Data.EPILOG.CONDition <your_code>
Data.EPILOG.SEquence  <your_code>
```

For information on how to configure two different data epilogs, see **Data.EPILOG.SELect**.

See also

[Data.EPILOG.state](#)

Format:

Data.EPILOG.OFF

Disables the execution of the **Data.EPILOG** sequence on program execution halt.

See also

[Data.EPILOG.RESet](#) [Data.EPILOG.state](#)

Format:

Data.EPILOG.ON

Enables the execution of the **Data.EPILOG** sequence on program execution halt.

See also

- [Data.EPILOG.RESet](#)
- [Data.EPILOG.state](#)

Format:

Data.EPILOG.RESet

Switches the **Data.EPILOG** feature off and clears all settings.

See also

- [Data.EPILOG.OFF](#)
- [Data.EPILOG.ON](#)
- [Data.EPILOG.state](#)

Format: **Data.EPILOG.SELect** <index_number>

Increments the index number for each new data epilog. This is useful, for example, if you need two separate data epilogs with each data epilog having its own **Data.EPILOG.CONDITION**.

TRACE32 automatically assigns the index number 1. to the 1st **Data.EPILOG.SEquence**. If you require a 2nd, separate data epilog sequence, then increment the <index_number> to 2. Otherwise the 2nd data epilog will overwrite the 1st data epilog. You can define a maximum of 10 data epilogs.

Example 1: Two data epilogs with the *same* **Data.EPILOG.CONDITION** may have the *same* index number. The backslash \ is used as a line continuation character. No white space permitted after the backslash.

```
;Set the index number to 1.
Data.EPILOG.SELect 1.

;Data epilog sequences shall be executed only if this condition is true:
Data.EPILOG.CONDITION (Data.Word(D:0x3faf30)&0xff00)==0x1000

;Define the two data epilog sequences:
Data.EPILOG.SEquence SET 0x3faf50 %Word 0xA0A0 \
                      SET 0x3faf60 %Word 0xB0B0
```

Example 2: Two data epilogs with *different* **Data.EPILOG.CONDITION** settings require two *different* index numbers.

```
;1st data epilog - TRACE32 automatically sets the index number to 1.
Data.EPILOG.SELect 1.

;If this epilog condition is true, ...
Data.EPILOG.CONDITION (Data.Word(D:0x3faf30)&0xff00)==0x1000

;... then the 1st epilog sequence will be executed
Data.EPILOG.SEquence SET 0x3faf50 %Word 0xA0A0

;Increment the index number to define the 2nd data epilog
Data.EPILOG.SELect 2.

;If this epilog condition is true, ...
Data.EPILOG.CONDITION (Data.Word(D:0x3faf34)&0xff00)==0x2000

;... then the 2nd epilog sequence will be executed
Data.EPILOG.SEquence SET 0x3faf54 %Word 0xB0B0
```

See also

■ [Data.EPILOG.state](#)

Format: **Data.EPILOG.SEquence** *<command>* ...

<command>: **SET** *<address>* %*<format>* *<data>*
SETI *<address>* %*<format>* *<data>* *<increment>*
SETS *<address>*
GETS *<address>*

Defines a sequence of **Data.Set** commands that are automatically executed by the TRACE32 software directly after the program execution is stopped.

SET Parameters: *<address>* %*<format>* *<value>*
Write *<value>* with data type *<format>* to *<address>*

SETI Parameters: *<address>* %*<format>* *<start>* *<increment>*
At the first time performed, write *<start>* to *<address>*.
<start> is incremented by *<increment>* on each successive call.

GETS Parameters: *<address>* %*<format>*
Reads the value at *<address>* and stores it into an internal data buffer.
The internal data buffer can contain multiple records and is reset when the command **Data.PROLOG.Sequence** is called.

SETS Parameters: *<address>* %*<format>*
If the internal data buffer contains a record for *<address>*, the stored value is written to the processor.

Examples:

```
;Set peripheral register to 0 when halted, 1 when starting
Data.EPILOG.SEquence SET 0x3faf50 %Long 0x00000000
Data.PROLOG.SEquence SET 0x3faf50 %Long 0x00000001

;Set register to 0 when halted, restore original value when starting
Data.EPILOG.SEquence GETS 0x1230 %Byte SET 0x1230 %Byte 0x00
Data.PROLOG.SEquence SETS 0x1230 %Byte

;Set (clear) a single bit when starting (stopping)
Data.EPILOG.SEquence SET 0x3faf50 %Word 0yXXXX1xxxXXXXxxxx
Data.PROLOG.SEquence SET 0x3faf50 %Word 0yXXXX0xxxXXXXxxxx


;Write 0xa0a0 when starting, increment by 2 for each successive start
Data.PROLOG.SEquence SETI 0x3faf50 %Word 0xa0a0 2
```

See also

■ [Data.EPILOG.state](#)

| | |
|---------|--------------------------|
| Format: | Data.EPILOG.state |
|---------|--------------------------|

Opens the **Data.EPILOG.state** window, where you can configure data epilogos.

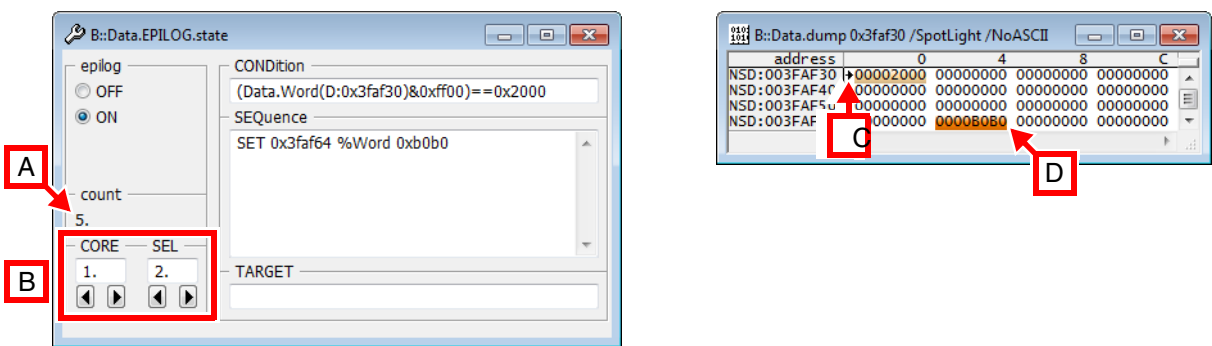

- A** Counts the number of times the **Data.EPILOG.SEQUENCE** command has been executed.
- B** Lets you create and view the data epilogs of a particular core. This example shows the 2nd data epilog of core 1.
The **CORE** field is grayed out for single-core targets.
- C**, The **Data.dump** window is just intended to visualize that the **CONDition [C]** was true (==0x2000),
D and thus the **SEQUENCE** was executed [**D**].

```
Data.EPILOG.state           ;open the window
Data.EPILOG.CORE 1.         ;for core 1, two data epilogs will be defined:

Data.EPILOG.SELect 1.       ;1st data epilog with condition and sequence:
                             ;if condition is true, then execute seq. below
Data.EPILOG.CONDition (Data.Word(D:0x3faf30)&0xff00)==0x1000
Data.EPILOG.SEQuence SET 0x3faf54 %Word 0xa0a0

Data.EPILOG.SELect 2.       ;2nd data epilog with condition and sequence:
                             ;if condition is true, then execute seq. below
Data.EPILOG.CONDition (Data.Word(D:0x3faf30)&0xff00)==0x2000
Data.EPILOG.SEQuence SET 0x3faf64 %Word 0xb0b0

Data.EPILOG.ON              ;activate all data epilogs
Go                           ;start program execution
```

See also

- Data.EPILOG.CONDITION ■ Data.EPILOG.CORE ■ Data.EPILOG.OFF ■ Data.EPILOG.ON
 ■ Data.EPILOG.RESet ■ Data.EPILOG.SELect ■ Data.EPILOG.SEquence ■ Data.EPILOG.TARGET
 ▲ 'Release Information' in 'Release History'

Format: **Data.EPILOG.TARGET** *<code_range>* *<data_range>*

Defines a target program that is automatically started by the TRACE32 software directly after the program execution was stopped.

<code_range> Defines the address range for the target program.

<data_range> Defines the address range used for the data of the target program.

Example:

```
Data.EPILOG.TARGET 0x3fa948--0x3faa07 0x1000--0x1500
```

See also

■ [Data.EPILOG.state](#)

| | |
|--------------|---|
| Format: | Data.Find [<address_range> [%<format>] <data> <string> [/<option>]] |
| <format>: | Byte Word Long Quad TByte HByte SBYyte Float [:,<float_rep.>] BE LE |
| <float_rep>: | leee leeeRev leeeS leeeDbI ... |
| <option>: | Back NoFind ALL |

The data/string is searched within the given address range. If it is found, a corresponding message will be displayed.

Without parameters, the **Data.Find** commands will search for the next occurrence of the data/string in the specified address range.

The command can also be executed when using the **Find** button in the **Data.dump ... /DIALOG** window.

Byte, Word, ...

See “[Keywords for <width>](#)”, page 11.

BE, LE

Define the endianness: BigEndian or LittleEndian. The target endianness is used if nothing is specified.

Examples:

```
; search for byte 0x3f in the specified address range
Data.Find 0x100--0xffff 0x3f

; search the next byte x3f
Data.Find

; search for specified string
Data.Find 0x100--0xffff "Test"

; search for 32 bit value 0x00001234 in big endian mode
Data.Find 0x100++0xefff %Long %BE 0x1234

; search backward for 16 bit value 0x0089
Data.Find 0x100++0xefff %Word 0x89 /Back

; search for the float 1.45678 in IEEE format
Data.Find 0x4e00--0x4eff %Float.Ieee 1.45678
```

The **Data.Find** command affects the following functions:

| | |
|------------------------|--|
| FOUND() | Returns TRUE if data/string was found. |
| TRACK.ADDRESS() | Returns the address of the last found data/string. |

```
Data.Find 0x100--0xffff 0x3f

IF FOUND()
    Data.dump TRACK.ADDRESS()
```

```
Data.Find 0x100--0xffff 0x3f

IF FOUND()
    PRINT "Data found at address " TRACK.ADDRESS()
```

The option **/NoFind** sets up the search, but does not process it. This can be beneficial for scripts.

```
OPEN #1 result.txt /Create

&i=1

Data.Find 0x100--0xffff 0x3f /NoFind

Repeat
(
    Data.Find
    WRITE #1 "Address " &i ": " TRACK.ADDRESS()
    &i=&i+1
)
WHILE FOUND()

CLOSE #1

TYPE result.txt

ENDDO
```

See also

- | | | | |
|-----------------------------------|-----------------------------|------------------------------------|--------------------------------|
| ■ Data.dump | ■ Data.GOTO | ■ Data.GREP | ■ sYmbol.MATCH |
| ■ FIND | ■ WinFIND | □ ADDRESS.OFFSET() | □ FOUND() |
| □ TRACK.ADDRESS() | | | |

▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.FindCODE <address_range> <type> [<command>] |
| <type>: | CALL IndirectCALL RETURN JUMP <access> |
| <access>: | ReadWrite <address> Read <address> Write <address> |

Processes the source code in the specified <address_range> in order to find the specified instruction type. The command **Data.FindCODE** is mainly used to automatically set the **statistic markers**.

<command> The specified <command> is executed on all found program addresses. If you omit <command>, all found addresses are printed to the active message **AREA**.

Simple examples:

```
; find all indirect calls in the program address range 0x0++0xffff,
; open a source listing for each found indirect call
Data.FindCODE 0x0++0xffff IndirectCALL "List"

; find all returns in the function sieve and set an onchip breakpoint to
; all found returns
Data.FindCODE sieve RETURN "Break.Set * /Onchip"
```

```
; find all write accesses to the address flags+3 in the function sieve,
; open a source listing for each found write access
Data.FindCODE sieve Write flags+3 "List"

; find all read accesses to the integer variable mstatic1 in the function
; func2, open a source listing for each found read access
Data.FindCODE func2 Read mstatic1 "List"
```


Statistic marker examples:

```
; find all returns in the address range OSLongJump++0x3F and set a
; statistic marker of the type FEXITCLEANUP to all found program
; addresses
Data.FindCODE OSLongJump++0x3F RETURN \
"sYmbol.MARKER.Create FEXITCLEANUP *"

; find all write accesses to the address TASK.CONFIG(magic[1]) in the
; function OSTaskInternalDispatch, set a statistic marker of the type
; CORRELATE to all found program addresses
Data.FindCODE OSTaskInternalDispatch Write TASK.CONFIG(magic[1]) \
"sYmbol.MARKER.Create CORRELATE *"

; find all indirect calls in the function OSTaskInternalDispatch and set
; a statistic marker of the type CLEANUP to all found program addresses
Data.FindCODE OSTaskInternalDispatch IndirectCALL \
"sYmbol.MARKER.Create CLEANUP *"
```

Data.GOTO

Specify reference address for address tracking

Format: **Data.GOTO** [<address>]


The given address is used for tracking the windows (like **FIND** / **ComPare** commands).

Example1: Tracks all windows that have the **/Track** option to program address func10.

```
List.Mix /Track
sYmbol.INFO /Track
PERF.ListFunc /Track
Data.GOTO func10
```

Example2: Tracks all windows that have the `/Track` option to the `datat` address `flags+3`.

```
Data.View /Track  
symbol.INFO /Track  
Data.DRAW Var.RANGE(flags) /Track  
Data.GOTO flags+3
```

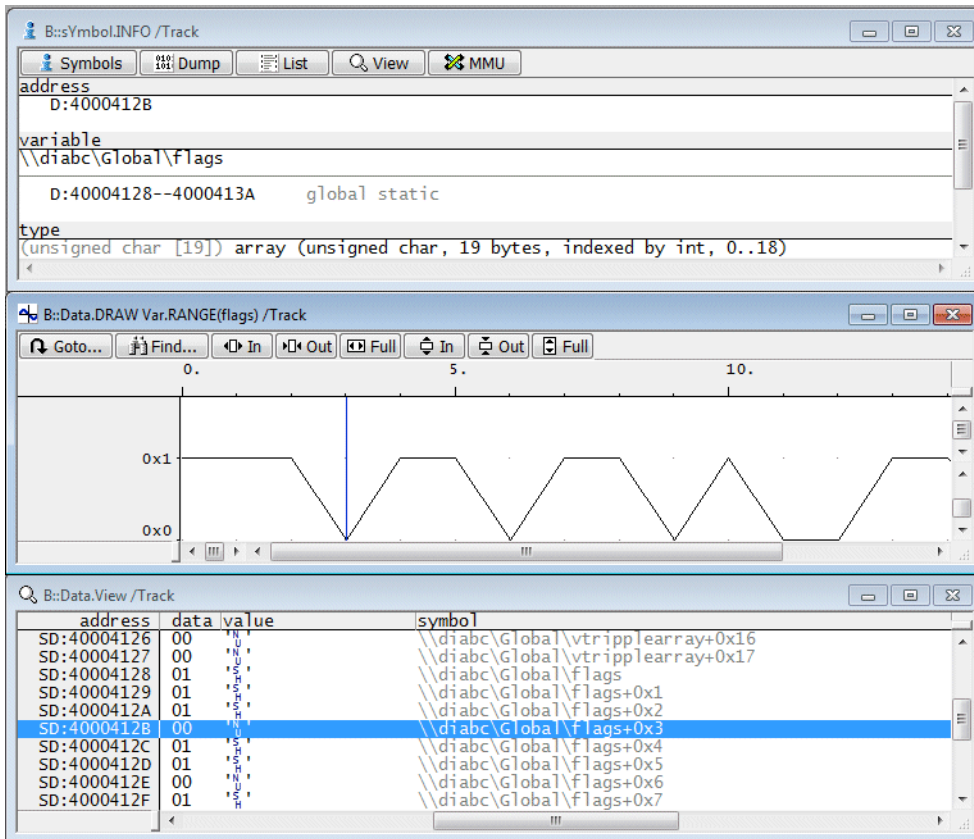

See also

- [Data.GREP](#)
- [Data.Find](#)
- [FIND](#)
- [WinFIND](#)
- [TRACK.ADDRESS\(\)](#)

| | |
|-----------|--|
| Format: | Data.GREP <string> [<file> [/<option>]] |
| <option>: | Word Case <other_options> |

Searches for a specific string in one or all source files; regular expressions are not supported


| | |
|-----------------|---|
| Word | Search for the whole word. |
| Case | Perform a case sensitive search. |
| <other_options> | For descriptions of the other options, see List . |

Example:

```
Data.GREP "func"           ; search for "func" in all source files

Data.GREP "func" */sieve.c ; search for "func" only in sieve.c

Data.GREP "if" *.* /Word   ; search for the word "if" in all source
                           ; files
```

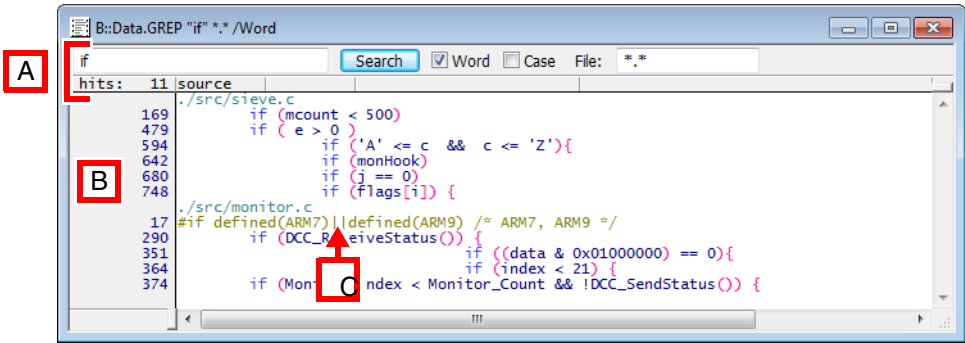

- A Search <string> and number of hits.
- B Line numbers of hits.
- C Double-clicking a function opens a listing for the selected function in a [List](#) window. Right-clicking a function opens the **Function** popup menu.

See also

- [Data.GOTO](#)
- [Data.Find](#)
- [APU.GREP](#)
- [FIND](#)
- [WinFIND](#)
- [WinOverlay](#)

| | |
|-----------|--|
| Format: | Data.IMAGE <address> <horiz> <vert> [<scale>] [/<format> [/<option>]] |
| <format>: | MONO MONOLSB CGA GrayScale8 JPEG RGB111 RGB555 RGB555LE RGB565 RGB565LE RGB888 RGB888LE RGBX888 RGBX888LE XXXA888 RGBCUSTOM RGBCUSTOMLE YUV420 YUV420W YUV420WS YUV422 YUV422W YUV422WS YUV422P YUV422PS Palette256 <red> <green> <blue> ... Palette256X6 <address> Palette256X12 <address> Palette256X24 <address> |
| <option>: | BottomUp FullUpdate STRIDE <bytes_per_stride> SignedY SignedU SignedV UVPLANEbase UPLANEbase VPLANEbase RGBBITS "<[RGBXA]>" |

Displays graphic bitmap data. Zooming is supported by scrolling the mouse wheel or double-clicking the image. Right-clicking an image allows advanced data operations.

| | |
|-----------|---|
| <address> | Base address of the image, e.g.: D:0x10000 |
| <horiz> | Horizontal size of the image (decimal value with postfix '.') |
| <vert> | Vertical size of the image (decimal value with postfix '.') |
| <scale> | Initial scale of the image (zoom value) |

| | |
|-------------------|--|
| MONO | Monochrome bitmap (default format). Each byte represents eight consecutive pixels. The MSB is the leftmost bit. |
| MONOLSB | Monochrome bitmap. Each byte represents eight consecutive pixels. The LSB is the leftmost bit. |
| CGA | Colors compatible to the CGA (Color Graphics Adapter). In this mode each byte represents two pixels, each nibble can encode 16 predefined colors. |
| GrayScale8 | Each byte contains one pixel with 256 shades of gray. |
| JPEG | JPEG compressed image. |

| | |
|--|---|
| RGB111 (RGB) | Color display. One byte represents one pixel. Bit 0 is the blue color, bit 1 is green, bit 2 is red. All bits clear displays the background color, all three bits set displays the foreground color (host dependent). |
| RGB555 RGB555LE (BGR555) | Two bytes make up one pixel. First bit ignored, 5 bit red, 5 bit green, 5 bit blue. For RGB555LE the order is ignore-blue-green-red. |
| RGB565 RGB565LE (BGR565) | Two bytes make up one pixel. 5 bit red, 6 bit green, 5 bit blue. For RGB565LE the order is blue-green-red. |
| RGB888 (RGB24) RGB888LE (BGR24) | Three bytes make up one pixel. The first byte contains 256 shades of red, the second byte green and the third byte blue. For RGB888LE the order is blue-green-red. |
| RGBX888 (RGB32) RGBX888LE (BGR32) | Four bytes make up one pixel. The first byte contains 256 shades of blue, the second byte green and the third byte blue. the fourth byte is ignored. For RGBX888LE the order is blue-green-red-ignore. |
| XXXA888 (ALPHA) | Four bytes make up one pixel. The first three bytes are ignored (X), the alpha (A) channel is displayed as a grayscale image (256 shades of gray). |
| RGBCUSTOM | Custom RGB format, needs to be used in conjunction with /RGBBITS option. |
| YUV420 | YUV encoded, three separate planes (4xY,1xU,1xV). |
| YUV420W | YUV encoded, two planes of 16bit words (4xY,1xUV). |
| YUV420WS | YUV encoded, two planes of 16bit words, byte swapped (4xY,1xVU). |
| YUV422 | YUV encoded, three separate planes (2xY,1xU,1xV). |
| YUV422W | YUV encoded, two planes of 16bit words (2xY,1xUV). |
| YUV422WS | YUV encoded, two planes of 16bit words, byte swapped (2xY,1xVU). |
| YUV422P | YUV encoded, one plane of 32bit words (Y,U,Y,V). |
| YUV422PS | YUV encoded, one plane of 32bit words, byte swapped (U,Y,V,Y). |
| Palette256 | Full color display. One byte represents one pixel. The byte selects one of 256 different color values in the palette defined by the parameters. |
| Palette256X6 | Full color display. One bytes represents one pixel. The byte selects one of 256 different color values in the palette read from memory. Each palette value is a byte containing 2 bits for the intensity of each color. |

| | |
|----------------------|---|
| Palette256X12 | Full color display. One bytes represents one pixel. The byte selects one of 256 different color values in the palette read from memory. Each palette value is a 16 bit word containing 4 bits for the intensity of each color. |
| Palette256X24 | Full color display. One bytes represents one pixel. The byte selects one of 256 different color values in the palette read from memory. Each palette value is a 32 bit long containing 8 bits for the intensity of each color. |
| BottomUp | Mirrors the image horizontally. |
| FullUpdate | Performs a complete redraw each time the window is updated. The default is to update the window step by step to keep the response time of the debugger fast. |
| STRIDE | Number of bytes for one row of pixels in memory (image width in bytes plus padding bytes). |
| SignedY | Y values of YUV encoded images are treated as signed values. |
| SignedU | U values of YUV encoded images are treated as signed values. |
| SignedV | V values of YUV encoded images are treated as signed values. |
| UVPLANEbase | Specify a separate base address for the UV-plane of a YUV image (instead of assuming to find it consecutive to the Y-plane). This option is available for YUV formats with two planes, e.g. YUV420W. |
| UPLANEbase | Specify a separate base address for the U-Plane of a YUV image (instead of assuming to find it consecutive to the Y-plane). This option is available for YUV formats with three planes, e.g. YUV420. |
| VPLANEbase | Specify a separate base address for the V-Plane of a YUV image (instead of assuming to find it consecutive to the Y- and U-planes). This option is available for YUV formats with two planes, e.g. YUV420. |
| RGBBITS | Define bits for custom RGB format. The format must be passed as string, containing one or more of the following characters: "RrGgBbXxAa". Each character represents one bit (Red, Green, Blue, Ignore, Alpha/Gray). The memory access is aligned to the next byte. See demo scripts for examples. |

Example to show a 50x40 pixel true color bitmap image:

```
; load the image into virtual memory skipping bmp header
Data.LOAD.Binary image.bmp VM:0x0 /OFFSET 0x36

; stride is (50.*3.+3)&~0x3
Data.IMAGE VM:0x0 50. 40. /RGB888LE /BottomUp /STRIDE 152.
```

More examples are available in the ~/demo directory:

```
PSTEP ~/demo/practice/image/*.cmm
```

See also

■ [Data.DRAW](#)

■ [Data.DRAWFFT](#)

■ [Data.DRAWXY](#)

■ [<trace>.DRAW](#)

■ [Var.DRAW](#)

▲ ['Release Information' in 'Release History'](#)

| | |
|------------|--|
| Format: | Data.In <address> [<count>] [/<options>] |
| <options>: | Byte Word Long Quad TByte PByte HByte SByte BE LE Repeat INCrement CORE <core_number> |

This command reads data from the specified address and prints it to the message line. The read access occurs either once or the specified number of repetitions. The read address does not increment during the repetitions, unless option /INCrement is set. If the number of repetitions exceeds a certain amount, the output in the message line will be truncated.

| | |
|------------------------|--|
| Byte, Word, ... | See “ Keywords for <width> ”, page 11. |
| BE, LE | Endianness: BigEndian or LittleEndian |
| Repeat | Repeats the input endlessly, e.g. for external measurements. |
| INCrement | Address is incremented by <width> with each repeated access. |
| CORE <number> | Read memory from the perspective of the specified core /SMP debugging only). |

Example:

```
;read a byte from address 0x40
Data.In D:0x40

;read a 32-bit word from address 0x40, repeat 4 times
Data.In D:0x40 4. /Long

;read a 32-bit word from addresses 0x40 and 0x44
Data.In D:0x40 2. /Long /INCrement
```

See also

- [■ Data.dump](#)
[□ Data.Float\(\)](#)
[□ Data.STRingN\(\)](#)
- [■ Data.Out](#)
[□ Data.Long\(\)](#)
[□ Data.Word\(\)](#)
- [■ Data.View](#)
[□ Data.Quad\(\)](#)
- [□ Data.Byte\(\)](#)
[□ Data.STRing\(\)](#)

Data.List

Display Source Listing (deprecated)

The commands [Data.List](#), [Data.ListAsm](#), etc. have been renamed to [List.auto](#), [List.Asm](#), etc. The old **Data.List*** commands continue to be available.

| | |
|--------------------------------------|--|
| Format: | Data.LOAD <file> [<address>] [<range>] [/<load_option>] Data.LOAD.auto <file> [<address>] [<range>] [/<load_option>] Data.LOAD. <file_format><file> [<address>] [<range>] [/<load_option>] |
| <generic_load_option>: | Verify PVerify NoVerify CHECKLOAD [<address_range>] ComPare DIFF CHECKONLY [<address_range>] ZIPLOAD [<code_range> [<data_range>]] DIFFLOAD [<address_range>] DualPort (EF) Byte Word TByte Long PByte HByte SByte Quad BSPLIT <width> <offset> wordSWAP LongSWAP QuadSWAP BitSwap VM PlusVM NoCODE NosYmbol NoRegister NoBreak NOFRAME NoClear More PATH <dir> SOURCEPATH <dir> StripPATH LowerPATH StripPART <parts> <part_name> StripBeforePART <pattern> TASK <task> NAME <name> MAP DIAG Include NoInclude COLumns MACRO CYGDRIVE SingleLine SingleLineAdjacent NoTranspose ... |
| <architecture_specific_load_option>: | LARGE LDT SingleLDT FLAT ProtectedFLAT [<code_descriptor><data_descr> <stack_descr>] (only 386) SPlit (only 80196) |

The debugger tries to detect the data format of the file automatically when the command **Data.LOAD.auto** (or **Data.LOAD**) is used. The automatic detection is not possible for all formats. In this case please use **Data.LOAD.<file_format>**.

Only the generic options can be used with **Data.LOAD.auto**. All options described below are available for **Data.LOAD.auto** and ALL formats of **Data.LOAD.<file_format>**. There are also options which are only usable for a specific file format. These options are only available if **Data.LOAD.<file_format>** is used (see [following commands](#)).

The parameter `<address>` and `<range>` are file format dependent:

| | |
|-----------------------------------|---|
| <code><address></code> | <ul style="list-style-type: none"> File format without address information (e.g. binary): base address File format with address information: address offset |
| <code><addressrange></code> | <ul style="list-style-type: none"> If specified, only the data within the address range will be loaded. Data outside this address range will be ignored. If specified for file formats without address information, the start address of <code><range></code> is used as base address and <code><address></code> will be ignored. |

Alphabetic List of Generic Load Options

| | |
|--|---|
| BitSwap | Swap the bits of each byte during load. |
| Byte Word TByte Long PByte HByte SByte Quad | <p>Data is loaded in the specified width:</p> <ul style="list-style-type: none"> Byte (8-bit accesses) Word (16-bit accesses) TByte (24-bit accesses) Long (32-bit accesses) PByte (40-bit accesses) HByte (48-bit accesses) SByte (56-bit accesses) Quad (64-bit accesses) <p>Must be used if the target can only support memory accesses of a fixed width. The default width is determined automatically by TRACE32 to achieve the best download speed.</p> |
| BSPLIT <code><stride></code> <code><offset></code> <code>[<width>]</code> | <p>Loads only certain bytes of the memory.</p> <ul style="list-style-type: none"> <code><stride></code> defines a chunk of data which the other two parameters relate to. <code><offset></code> defines the offset of the bytes being saved. <code><width></code> defines the bus width in bytes. <p>For an illustration of <code><stride></code>, <code><offset></code>, and <code><width></code>, see below.</p> <p>The option BSPLIT 2 0 loads the lower byte of a 16-bit bus.</p> |
| CHECKDIFF | Checks the target code with the target agent and reports the result in the FOUND() function. |
| CHECKLOAD | See CHECKLOAD . |
| CHECKONLY | See CHECKONLY . |
| COLumns | Loads information for single stepping columns in HLL mode. May not be available in all file formats. |
| Compare | See Compare . |
| CutPATH | <p>Deprecated.</p> <p>Cuts name in path to 8 characters.</p> |

| | |
|---|--|
| CYGDRIVE | Use this option to make TRACE32 aware of object files compiled within a Cygwin environment (e.g. the Xilinx MB compiler). This will strip the prefix <code>c:\cygdrive\c\</code> from source paths so TRACE32 looks for source files at the correct location in the file system. |
| DIAG | Enable diagnostic messages, which are shown in the AREA window during loading. |
| DIFF | See DIFF . |
| DIFFLOAD | See DIFFLOAD . |
| DualPort (EF) | Data is stored directly to dual-port memory where possible. Data is stored regular if there is no memory mapped at the target address. This option can speed up the download of code by a factor between 2 and 10. It should be used whenever possible, i.e. when the most part of the code is downloaded into emulation memory. |
| FIXPATH | Deprecated. Remove duplicates of // or \\ from path. |
| FLASHONLY | Loads the file just to the defined FLASH memories. You can view the defined FLASH memories in the FLASH.List window. The number of dropped bytes is displayed in the TRACE32 message line . |
| FRAME | Consider the stack frame information of the symbol information of the loaded file. (E.g. consider section ".debug_frame" of an ELF file) The stack frame information in the file is used for the Frame window. Without this option the TRACE32 tool try's to analyze the function prolog code to get the stack frame. This options is enabled by default for the following CPU families: MMDSP+, Nios II, ARC, C166, Hexagon, APS, Intel X86, Ubicom32 (You can disable it with NOFRAME) |
| GO | Start target CPU after loading the target program. |
| GTLDMALOAD <i><offset></i> | Forces the Data.LOAD.* command to use the back-door memory access of the emulation system that is configured by the command SYStem.GTL.DMANAME . The Data.LOAD.* command can be executed in SYStem.Mode.Down , because it does not use the debug capabilities of the CPU. For an example, see below . |
| HIPERLOAD <i><target_ip_addr></i> | High performance load. Sends the data via UDP packets to the target - bypassing the JTAG interface. |
| Include | Activates the loading of source lines, which are generated from include files. By default this option is enabled. Disable it with option NoInclude . |
| LowerPATH | See LowerPATH . |

| | |
|------------------------------------|---|
| LongSWAP | Swaps high and low bytes of a 32-bit word during load. |
| MACRO | Loads information from C Macros for HLL debugging. May not be available in all file formats. |
| MAP | Generates memory load map information and checks for overlapping memory writes during download. The load map information can be examine with sYmbol.List.MAP . The option can be useful if the load map is questionable. This option is nowadays enabled by default. Disable it with NOMAP . |
| MERGE [\\<program-name>] | Merges debug information from the loaded file with already loaded plain symbol information of another program. Useful when debug information was stripped of the work file but is available in another file. |
| More | This option speeds up the download of large projects consisting of multiple files. The option suppresses the database generation process after loading. The option must be set on all load commands, except the last one. |
| MultiLine | Allows to show a single source line at multiple target locations. The default for most debug formats. |
| NAME | Overwrites the program name with the specified one. This option is useful when the same copy of one program is loaded more than once (e.g. in multitask environments). |
| NoClear | Existing symbols are not deleted. This option is necessary if multiple programs must be loaded (Tasks, Overlays, Banking). |
| NoCODE | Suppress the code download. Only loads symbolic information. |
| NOFRAME | Ignore the stack frame information of the symbol information of the loaded file. (E.g. ignore section ".debug_frame" of an ELF file) The stack frame information in the file is used for the Frame window. Use this option, if your compiler doesn't produce the correct information. The TRACE32 tool try's then to analyze the function prolog code to get the stack frame. |
| NoInclude | Deactivates the loading of source lines generated from include files. (By default, these source lines are included.) |
| NoINCrement | Loads code to a single address (of a FIFO). |
| NOMAP | During program download the debugger generates usually load map information and checks for overlapping memory writes. The load map information can be examine with sYmbol.List.MAP . The option NOMAP disables the generation and checking of load map information. |
| NoRegister | Any startup values for registers (e.g. Program Counter) are not taken from the file. |

| | |
|----------------------------|---|
| NosYmbol | No symbols will be loaded (even no program symbol). This option should be used, when pure data files are loaded. |
| NoTranspose | Module and program names are transcoded per default to avoid reserved characters. Examples: my-main is transcoded to my_name mm\init.c is transcoded to mm_init.c This can be disabled using the /NoTranspose option. |
| NoVerify | See NoVerify . |
| PATH | See PATH . |
| PlusVM | The code is loaded into target memory plus into the virtual memory. |
| PVerify | See PVerify . |
| QuadSWAP | Swaps high and low bytes of a 64-bit word during load. |
| Register | Initialize some registers (e.g. Program Counter) with startup values taken from the file. This is usually enabled by default. Disable it with option NoRegister . |
| SingleLineAdjacent | See SingleLineAdjacent . |
| SOURCEPATH | See SOURCEPATH . |
| StripPATH | See StripPATH . |
| StripPART | See StripPART . |
| TASK | Defines the magic word for the program of this task. This option is only supported for specific processors, which have a built-in MMU (e.g. 68040/60). For more information about the usage of this option, refer to the Processor Architecture Manual. |
| TYPEMAX <number> | Maximum number of types allowed in one single module when type information is compressed (with /FASTPACK option). |
| TypesOnly | Loads only type information. |
| Verify | See Verify . |

| | |
|-----------------|---|
| VM | <p>The TRACE32 software provides a virtual memory (VM:) on the host. With this option the code is loaded into this virtual memory.</p> <p>The virtual memory is mainly used for program flow traces e.g. MPC500/800, ARM-ETM ... Since only reduced trace information is sampled, the TRACE32 software also needs the code from the target memory in order to provide a full trace listing. If the on-chip debugging logic of the processor doesn't support memory read while the program is executed a full trace display can only be provided if the program execution is stopped.</p> <p>If the code is loaded into the virtual memory the TRACE32 software can use code from the virtual memory in order to provide a full trace listing.</p> |
| wordSWAP | Swaps high and low bytes of a 16-bit word during load. |
| ZIPLOAD | See ZIPLOAD . |

Details on Generic Load Options

| Options which verify that code blocks were written error-free to the target memory | |
|--|--|
| Verify | Data memory is verified after the complete code has been downloaded to the target. The option also slows down the download process by about three times. See also the ComPare option. |
| CHECKLOAD | <p>Data memory is checked after writing by calculating checksums. Recommended if large files are loaded to targets with a slow upload speed.</p> <p>Checksums over the memory blocks are built by a so-called target agent. The target agent is part of the TRACE32 software and is automatically loaded at the end of the loaded data. If this is not practicable it is also possible to define an at least 64K byte <i><address_range></i> for the target agent.</p> |
| PVerify | Partial verify. Same as verify, but only first part of each continuous memory section will be verified. Faster than verify, but still provides some kind of memory checking. |
| NoVerify | Minimum verification is also turned off. This verification includes checking for existing dual-port memory when loading to dual-port memory and checking for ROM limits when loading to a ROM monitor. With this option all this code outside limits will be silently thrown away. |

Examples:

```
Data.LOAD.Elf arm.elf /Verify
Data.LOAD.Elf diabp8.x /CHECKLOAD
Data.LOAD.Elf diabp8.x /CHECKLOAD 0xA0000000++0xFFFF
```

| Options that allow to check whether the data in memory match the data in the file. Memory is not changed. | |
|---|--|
| ComPare | Data is compared against the file by reading the data from memory. Memory is not changed. The comparison stops after the first difference. |
| CHECKONLY | <p>Data is compared against the file by calculating checksums. Memory is not changed. The comparison stops when checksum is wrong. Recommended if large files are loaded to targets with a slow upload speed.</p> <p>Checksums over the memory blocks are build by a so-called target agent. The target agent is part of the TRACE32 software and is automatically loaded at the end of the data. If this is not practicable it is also possible to define an at least 64K byte <code><address_range></code> for the target agent.</p> |
| DIFF | Data is compared against the file, memory is not changed. The result of the compare is available in the FOUND() and TRACK.ADDRESS() function. |

Examples:

```

; check if diabp8.x is already loaded by calculating checksums on data
; in target memory
Data.LOAD.Elf diabp8.x /CHECKONLY

...
; Load code from binary and verify specific sections with the Elf file
Data.LOAD.Binary f.bin 0x0
Data.LOAD.Elf f.elf /NoCODE
Data.LOAD.Elf f.elf sYmbol.SECRANGE(".text") /DIFF /NoRegister /NosYmbol
IF FOUND()
(
    PRINT ADDRESS.OFFSET(TRACK.ADDRESS())
)
...

```

| Options to improve the download speed for debug ports with slow download | |
|--|--|
| DIFFLOAD | <p>Downloads only changed code in a compressed form via a target agent.</p> <p>The target agent is part of the TRACE32 software and is automatically loaded at the end of the data. If this is not practicable it is also possible to define an at least 64K byte <code><address_range></code> for the target agent.</p> <p>Switching the instruction cache ON before loading improves the download performance.</p> <p>DIFFLOAD is recommended for fast targets with a slow download speed (i.e. lower then 100 KBytes/s).</p> |
| ZIPLOAD | <p>Data are zipped before the download and unzipped on the target by a so-called target agent. Recommended if large files are loaded to targets with a slow download speed.</p> <p>The target agent is part of the TRACE32 software and is automatically loaded at the end of the data. If this is not practicable it is also possible to define a <code><code_range></code> and a <code><data_range></code> respectively for the code and data of the target agent. If no <code><data_range></code> is specified, the target agent data will be stored after its code. The specified ranges should be within RAM.</p> |

Examples:

```

; first download in standard speed
Data.LOAD.Elf demo.elf /DIFFLOAD
;...
; next download with improved speed
Data.LOAD.Elf demo.elf /DIFFLOAD
;...

; load diabp8.x via ZIPLOAD
Data.LOAD.Elf diabp8.x /ZIPLOAD


Data.LOAD.Elf diabp8.x /DIFFLOAD /ZIPLOAD

```


| Options to change the mapping between HLL source code line and blocks of assembler lines | |
|--|---|
| SingleLineAdjacent | Adjacent blocks of assembler code generated for an HLL line are concentrated. |
| SingleLine | All blocks of assembler code generated for an HLL line are concentrated. |


The debug information loaded from *<file>* provides the mapping between HLL source code lines and the blocks of assembler code generated for these lines. Their are mainly three types of mapping:

1. A continuous block of assembler code is generated for an HLL line.

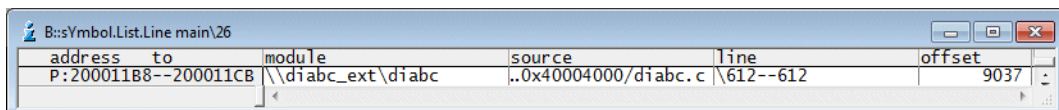


| address | to | module | source | line | offset |
|----------------------|----|-------------------|----------------------|-----------|--------|
| P:200011B8--200011CB | | \\diabc_ext\diabc | ..0x40004000\diabc.c | \612--612 | 9037 |

2. Two or more adjacent blocks of assembler code are generated for an HLL line.

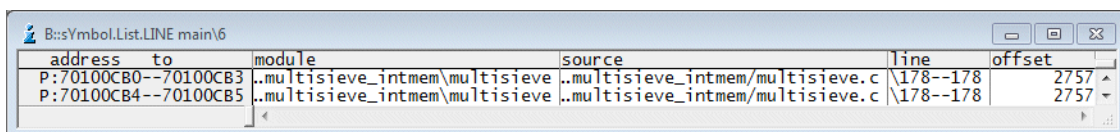

| address | to | module | source | line | offset |
|----------------------|----|--------------------------------|----------------------------------|-----------|--------|
| P:70100CB0--70100CB3 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \178--178 | 2757 |
| P:70100CB4--70100CB5 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \178--178 | 2757 |


3. Two or more detached blocks of assembler code are generated for an HLL line.

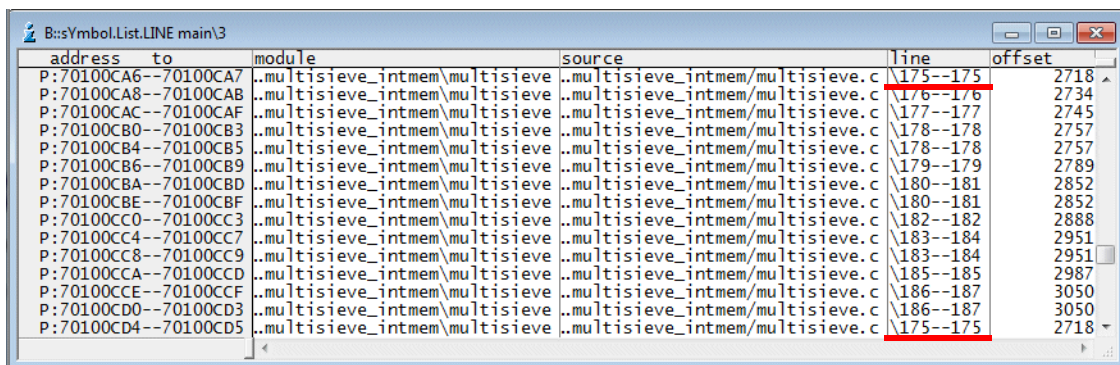


| address | to | module | source | line | offset |
|----------------------|----|--------------------------------|----------------------------------|-----------|--------|
| P:70100CA6--70100CA7 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \175--175 | 2718 |
| P:70100CA8--70100CAB | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \176--176 | 2734 |
| P:70100CAC--70100CAF | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \177--177 | 2745 |
| P:70100CB0--70100CB3 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \178--178 | 2757 |
| P:70100CB4--70100CB5 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \178--178 | 2757 |
| P:70100CB6--70100CB9 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \179--179 | 2789 |
| P:70100CBA--70100CBD | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \180--181 | 2852 |
| P:70100CBE--70100CBF | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \180--181 | 2852 |
| P:70100CC0--70100CC3 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \182--182 | 2888 |
| P:70100CC4--70100CC7 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \183--184 | 2951 |
| P:70100CC8--70100CC9 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \183--184 | 2951 |
| P:70100CCA--70100CCD | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \185--185 | 2987 |
| P:70100CCE--70100CCF | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \186--187 | 3050 |
| P:70100CD0--70100CD3 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \186--187 | 3050 |
| P:70100CD4--70100CD5 | | ..multisieve_intmem\multisieve | ..multisieve_intmem/multisieve.c | \175--175 | 2718 |

It has the following effects on debugging if more the on block of assembler code is generated for an HLL line:

- The HLL line is marked with a drill-down box.

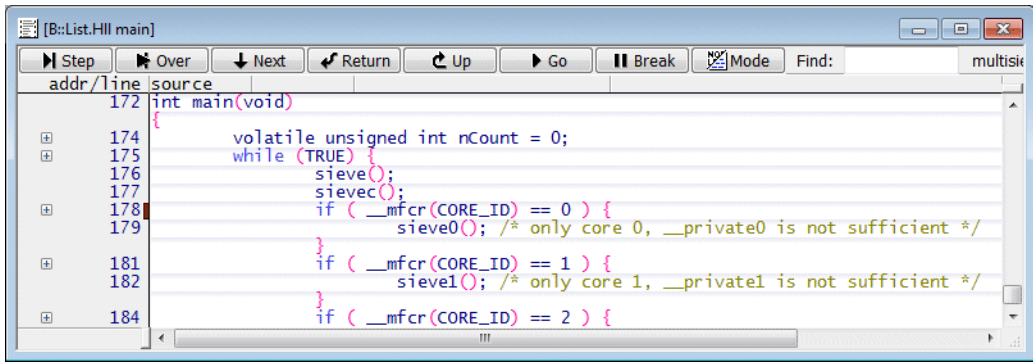

- If a breakpoint is set to the HLL line, a breakpoint is set to every block of assembler code.

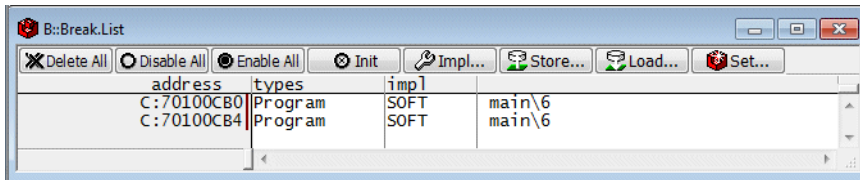

If the option **SingleLineAdjacent** is used, adjacent blocks of assembler code generated for an HLL line are concentrated.

If the option **SingleLine** is used, all blocks of assembler code generated for an HLL line are concentrated.

The object file (e.g. ELF file) does not contain the source code. It only contains the paths from which the source code can be loaded. The source code paths need to be adjusted if the build host environment differs from the debug host environment.

| Option to adjust the debug paths for the source files | |
|---|--|
| PATH | <p>If the source files are not found with the paths provided by the object file, additional direct directories can be given by this option. The option can be used more than once to include more directories into the search path.</p> <p>The command sYmbol.SourcePATH can be used to define more and permanent search directories.</p> |
| SOURCEPATH | <p>Define a new base directory for the source files.</p> <p>This replaces the current working directory that is taken by default if the source files are not find under the paths provided by the object file.</p> |
| StripPATH | <p>The file name is extracted from the source paths given in the object file.</p> |

| Option to adjust the debug paths for the source files | |
|---|--|
| StripPART | <p>Parts of the file paths provided by the object file are removed. The option takes either a <i><number></i> or a <i><string></i> as parameter.</p> <p><i><number></i> defines how many parts of the path are removed. <i><string></i> is searched in the path provided by the object file. Everything until <i><string></i> is removed from the source path.</p> <p>This allow to specify a new base directory for a complete file tree by using the command sYmbol.SOURCEPATH.SetBaseDir.</p> |
| StripBeforePART | <p>Strips the file path up to, but excluding the specified <i><pattern></i>. For an example, see below.</p> |
| LowerPATH | <p>The file name is converted to lower-case characters.</p> |


Examples for the options PATH, StripPART, and SOURCEPATH

[\[Back to PATH\]](#) [\[Back to StripPART\]](#) [\[Back to SOURCEPATH\]](#)


```
Data.LOAD.Elf demo.axf /PATH ~/demo/quickstartboard/demo_ext
```

```
Data.LOAD.Elf demo.axf /StripPART 4. /SOURCEPATH ~/demo/hardware/imx53
```



```
Data.LOAD.Elf demo.axf /StripPART 2.
```



```
Data.LOAD.Elf demo.axf /StripPART "PEG"
```




```
;strip the path up to and excluding the string starting with "co"
Data.LOAD.Elf ~/demo/arm/compiler/arm/thumbm3.axf /StripBeforePART "co"
sYmbol.List.SOURCE
```

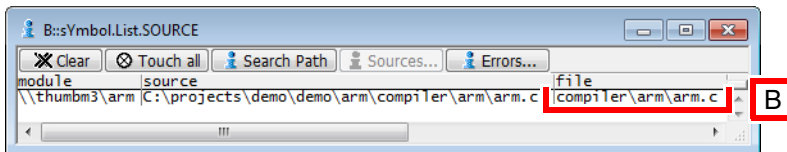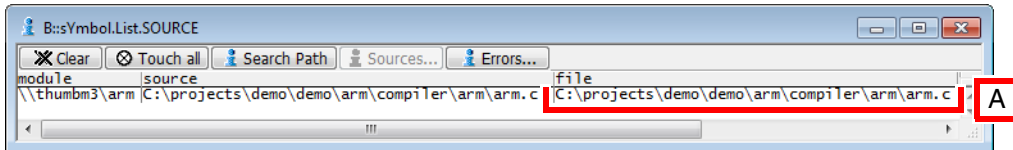

A Without **StripBeforePART**

B Path stripped with **StripBeforePART** "co"

BSPPLIT: illustration of <stride>, <offset>, and <width>

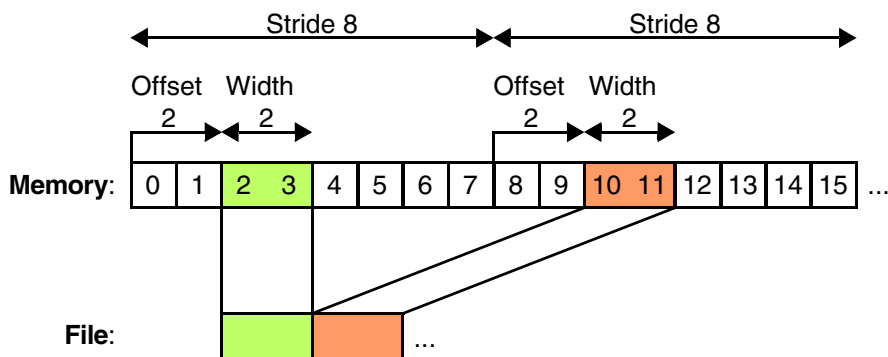

```
;configure the DMA transactor interface
SYStem.GTL.DMANAME "DMA0 "

;connect to emulation system
SYStem.GTL.CONNECT

;load the elf file by using DMA0 starting with offset 0x1000
Data.LOAD.Elf "demo.axf" /GTLDMALOAD 0x1000
```

See also

- | | | | |
|---------------------------------------|--------------------------------------|---------------------------------------|---------------------------------------|
| ■ Data.LOAD.AIF | ■ Data.LOAD.AOUT | ■ Data.LOAD.ASAP2 | ■ Data.LOAD.Ascii |
| ■ Data.LOAD.AsciiDump | ■ Data.LOAD.AsciiHex | ■ Data.LOAD.AsciiOct | ■ Data.LOAD.AVocet |
| ■ Data.LOAD.BDX | ■ Data.LOAD.Binary | ■ Data.LOAD.Bound | ■ Data.LOAD.CCSDAT |
| ■ Data.LOAD.CDB | ■ Data.LOAD.COFF | ■ Data.LOAD.ColonHex | ■ Data.LOAD.COMFOR |
| ■ Data.LOAD.CORE | ■ Data.LOAD.COSMIC | ■ Data.LOAD.CrashDump | ■ Data.LOAD.DAB |
| ■ Data.LOAD.DBX | ■ Data.LOAD.Elf | ■ Data.LOAD.ESTFB | ■ Data.LOAD.eXe |
| ■ Data.LOAD.FIASCO | ■ Data.LOAD.HiCross | ■ Data.LOAD.HiTech | ■ Data.LOAD.HP |
| ■ Data.LOAD.ICoff | ■ Data.LOAD.Ieee | ■ Data.LOAD.IntelHex | ■ Data.LOAD.LDR |
| ■ Data.LOAD.MachO | ■ Data.LOAD.MAP | ■ Data.LOAD.MCDS | ■ Data.LOAD.MCoff |
| ■ Data.LOAD.OAT | ■ Data.LOAD.Omf | ■ Data.LOAD.Omf2 | ■ Data.LOAD.OriginHex |
| ■ Data.LOAD.PureHex | ■ Data.LOAD.REAL | ■ Data.LOAD.ROF | ■ Data.LOAD.S1record |
| ■ Data.LOAD.S2record | ■ Data.LOAD.S3record | ■ Data.LOAD.S4record | ■ Data.LOAD.SAUF |
| ■ Data.LOAD.SDS | ■ Data.LOAD.SPARSE | ■ Data.LOAD.sYm | ■ Data.LOAD.SysRof |
| ■ Data.LOAD.TEK | ■ Data.LOAD.TekHex | ■ Data.LOAD.Ubrof | ■ Data.LOAD.VersaDos |
| ■ Data.LOAD.XCoff | ■ List | □ ADDRESS.isDATA() | |

▲ 'Release Information' in 'Release History'

▲ 'Load the Application Program' in 'Training HLL Debugging'

Format Specific Data.LOAD Commands and Options

The following **Data.LOAD.*** commands are format-specific. No automatic detection is performed. All generic options documented for **Data.LOAD.auto** are also available for the format-specific commands. The options documented below are only available for the format-specific commands, not for the generic **Data.LOAD.auto**.

Data.LOAD.AIF

Load ARM image file

| | |
|-------------------------|---|
| Format: | Data.LOAD.AIF <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | Puzzled AnySym PACK FASTPACK RAMINIT <i><generic_load_option></i> |

Loads a file in the AIF format (ARM Image Format). The debugging information must be in ARMSD format.

| | |
|-----------------------|---|
| Puzzled | If the compiler rearranges the source lines, i.e. the lines will be no longer linear growing, this option must be used. |
| AnySym | Loads also special symbols that are otherwise suppressed. |
| PACK | Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. |
| FASTPACK | Same as above. Fastpack is faster and more efficient than PACK , but it requires unique type names in the whole application. Fastpack assumes that types of identical name represent the same structure. |
| RAMINIT | Loads the data sections at its final position in RAM and fills the BSS section with zeros. Otherwise the data section will be loaded immediately after the code section and the BSS section remains unchanged. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

■ [Data.LOAD](#)

| | |
|-------------------------|---|
| Format: | Data.LOAD.AOUT <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads a file in BSO/Tasking A.OUT format.

<option> For a description of the generic options, click [<generic_load_option>](#).

| | |
|--------------|---|
| NOTE: | This is not the a.out format of the GNU compiler (see Data.LOAD.DBX for this format). |
|--------------|---|

See also

- [Data.LOAD](#)

| | |
|-------------------------|---|
| Format: | Data.LOAD.ASAP2 <i><file></i> [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads a file in ASAP2 format.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)
- [sYmbol.AddInfo.LOADASAP2](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.LOAD.Ascii <file> <address> <range> [/<option>] |
| <option>: | SKIP <offset> <generic_load_option> |

Loads a pure data file in word-oriented Ascii file format.

- SKIP** <offset>
- If the option **/SKIP** <offset> is specified, the first <offset> bytes of the file are omitted.
- <option>
- For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

Data.LOAD.AsciiDump

Load ASCII file generated from Data.dump window

| | |
|-----------|---|
| Format: | Data.LOAD.AsciiDump <file> [<address> <range>] [/<option>] |
| <option>: | OFFSET <value> <generic_load_option> |

Loads an Ascii file that was generated from the contents of a [Data.dump](#) window. To generate the Ascii file, use the command **PRinTer.FILE** and the pre-command **WinPrint**.

- OFFSET** <value>
- Offset value in relation to the start <address>.
- <option>
- For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

Format: **Data.LOAD.AsciiHex** <file> [/<option>]
 Data.LOAD.AsciiHexA <file> [/<option>]
 Data.LOAD.AsciiHexB <file> [/<option>]
 Data.LOAD.AsciiHexC <file> [/<option>]
 Data.LOAD.AsciiHexP <file> [/<option>]
 Data.LOAD.AsciiHexS <file> [/<option>]

<option>: **OFFSET** <offset>

Loads a file in a simple Ascii file format. Refer to [Data.SAVE.AsciiHex](#) for a description of the file formats.

See also

■ [Data.LOAD](#)

Format: **Data.LOAD.AsciiOct** <file> [/<option>]
 Data.LOAD.AsciiOctA <file> [/<option>]
 Data.LOAD.AsciiOctP <file> [/<option>]
 Data.LOAD.AsciiOctS <file> [/<option>]

<option>: **OFFSET** <offset>

Loads a file in a simple Ascii file format. Refer to [Data.SAVE.AsciiOct](#) for a description of the file formats.

See also

■ [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.AVocet <file> [<class>] [/<option>] |
| <option>: | NOHEX <generic_load_option> |

Loads a file in Avocet format. Without option the command will load the hex and sym files.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)

Data.LOAD.BDX

Load BDX file

| | |
|-----------|---|
| Format: | Data.LOAD.BDX <file> <address> <range> [/<option>] |
| <option>: | <generic_load_option> |

Loads a file in WindRiver visionICE/visionPROBE Binary Download Format (BDX).

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.Binary <file> <address> <range> [/<option>] |
| <option>: | SKIP <offset> UNZIP <generic_load_option> |

Loads a plain binary file.

| | |
|----------------------|--|
| <address> | If <address> is specified, the complete file will be loaded to the target <address>. |
| <range> | If <range> is specified, the file will be loaded to the range start address until the end of the range, or the end of the file. |
| SKIP <offset> | If the option /SKIP <offset> is specified, the first <offset> bytes of the file are omitted. |
| UNZIP | Unpacks files compressed with the ZIP option of a TRACE32 command, or files compressed by an external tool that uses the gzip archive format. |
| <option> | For a description of the generic options, click <generic_load_option> . |

Example 1 - Patch a File

If you need to patch binary files, an elegant and fast way is to use the [TRACE32 virtual memory \(VM:\)](#). The following example shows how the file contents are loaded to and modified in the virtual memory of TRACE32. The result is then saved back to the original file.

```
;Load the binary file to the virtual memory starting at address VM:0
Data.LOAD.Binary "myfile.bin"    VM:0

;Display the virtual memory contents starting at address VM:0
Data.dump      VM:0

;Return the virtual memory content for the specified address
PRINT "0x"    %Hex    Data.Byte(VM:0x04)

;Modify the virtual memory
Data.Set  VM:0x04    0x42

;Save a range of the virtual memory back to the binary file
Data.SAVE.Binary "myfile.bin" VM:0--0x4F
```

Example 2 - Load Directly into RAM

This script shows how to directly load a file into RAM.

Prerequisite: A target board with a boot loader; this example is based on the U-Boot bootloader. Loading required files directly into RAM is a time saver because loading from flash is bypassed. This approach is useful, for example, if you want to quickly test different versions of a kernel.

```
LOCAL &base_path
&base_path="path/to/kernel/sources"

SYStem.Mode.Up
Go

WAIT 2.s ;Wait until the boot loader has initialized the target board

TERM.OUT " " ;Hit any key to stop autoboot and thus
;bypass loading from flash
Break ;Halt the whole system (U-Boot is waiting
;for terminal commands)

;1) Load kernel image to RAM address 0x1020000
Data.LOAD.Binary "&base_path/Linux/uImage" 0x1020000

;2) Load ramdisk to RAM address 0x2300000
Data.LOAD.Binary "&base_path/Linux/rootfs.ext2.gz.uboot" 0x2300000

;3) Load device tree blob (DTB) to RAM address 0x1800000
Data.LOAD.Binary "&base_path/Linux/p4080ds.dtb" 0x1800000

;Instruct TRACE32 to load ONLY the debug symbols of the kernel
Data.LOAD "&base_path/vmlinux" /NoReg /NoCODE /StripPART 5.
/SOURCEPATH &base_path/Linux/Kernel_sources/linux-2.6.34.6

GO ;Resume waiting of U-Boot for terminal commands

;Instruct U-Boot to boot from the RAM addresses to which 1), 2), 3) have
;been loaded. "10." is the ASCII code for LF.
TERM.OUT "bootm 0x1020000 0x2300000 0x1800000" 10.
```

Example 3 - Load a Flash Image

In this script, a flash image is loaded into the FLASH of a target board.

```
//Target-specific code and code for the debugger, e.g. to declare the
//flash layout to the debugger

;Erase the whole flash
FLASH.Erase ALL

;Load image and program it into flash:
;1) Activate all FLASHs for programming
FLASH.Program ALL

;2) Load binary file
Data.LOAD.Binary flash_img.bin D:0xfe000000 /Long

;3) Deactivate FLASH programming
FLASH.Program off

;4) Compare the contents of the FLASH with the file contents
;   The comparison stops after the first difference
Data.LOAD.Binary flash_img.bin D:0xfe000000 /ComPare
```

See also

■ [Data.LOAD](#) ■ [Data.SAVE.Binary](#)

▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.LOAD.Bound <file> [<access> [/<option>] |
| <option>: | IEEE MFFP 68881 OLD Puzzled <generic_load_option> |

The floating-point format is set by means of the IEEE and MFFP options. The compiler options -VDB and -VPOST=NONE should be used.

| | |
|--------------------------|--|
| IEEE, MFFP, 68881 | Selects the floating-point format used by the compiler. |
| OLD | Load a file from an old complier version. Use this option, if source lines at the start of a function are not set correctly. |
| Puzzled | If the compiler rearranges the source lines, i.e. the lines will be no longer linear growing, this option must be used. |
| <option> | For a description of the generic options, click <generic_load_option> . |

See also

■ [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.CCSDAT <file> [/<option>] |
| <option>: | <generic_load_option> |

Loads a file in CCSDAT file format.

| | |
|----------|---|
| <option> | For a description of the generic options, click <generic_load_option> . |
|----------|---|

See also

■ [Data.LOAD](#)

▲ ['Release Information' in 'Release History'](#)

Format: **Data.LOAD.CDB** *<file>* [*<class>*] [*/<option>*]

<option>:
IntelHexFile *<binary_file>*
NoIntelHexFile
WarningsAll
WarningsNo
<generic_load_option>

Loads debug information and binary code from SDCC-proprietary (Small Device C Compiler) file format called CDB. The file format description is available from SDCC / SourceForge / Free Software Foundation. The debug information and the binary code are saved in two separate files. The load command tries to find the corresponding file and loads debug information and code automatically together (see options to avoid this behavior). The binary part is stored in IntelHex-Format and can also be loaded separately.

| | |
|-----------------------|---|
| IntelHexFile | Define a dedicated Intel Hex file, which contains the binary code information. The option /NoIntelHexFile will be ignored. If the file does not exist, an error message will appear. The default is to search the binary file automatically and announce an error message, if no file is found. |
| NoIntelHexFile | No additional file (binary file) will be searched and loaded. Only the defined file will be processed. |
| WarningsAll | All applicable warnings will be display in the AREA window. By default a set of warnings will be ignored, which will not lead to a reduced debug capability. |
| WarningsNo | No warnings will be display. All warnings are internally ignored. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

Examples:

```
; Example for loading binary and symbol information separately

Data.LOAD.IH a.ihx /NosYmbol           ; Load binary only

Data.LOAD.CDB a.cdb                   ; Load symbol information only
/NoIntelHexFile

; Example for loading symbols and binary implicitly

Data.LOAD.CDB a.cdb                   ; binary must be named a.ihx

; Example for loading symbols (*.cdb) and binary (*.ihx)
; with one command (explicit)

Data.LOAD.CDB a.cdb /IntelHexFile othername.ihx
```

See also

■ [Data.LOAD](#)

Format: **Data.LOAD.COFF** *<file>* [*<class>*] [*/<option>*]

<option>: **FPU**
MCS2 | **ICC** | **MOTC11** | **GHILLS** | **GNUCPP**
INT16
SHORT8
ALLLINE
Puzzled
PACK
AnySym
CFRONT
GlobTypes
LOGLOAD
<generic_load_option>

Loads a file in the UNIX-COFF format (Common Object File Format). The file format is described in all UNIX manuals. For some processors the command also supports debug information in STABS format.

| | |
|----------------|---|
| MCS2 | Should be used when loading a file generated by the MCS2-Modula compiler. |
| MOTC11 | Should be used when loading a file generated by the Motorola cc11 compiler. |
| ICC | Should be used when loading a file generated by the Intermetrics compiler. |
| GHILLS | Should be used when loading a file generated by the Greenhills compiler. |
| GNUCPP | Should be used when loading a file generated by the GNU C++ compiler. |
| ICC | Should be used when loading a file generated by the Intermetrics compiler. |
| CFRONT | Should be used when loading a file precompiled by CFRONT. |
| FPU | Indicates the debugger that the code for an FPU was generated by the compiler. |
| Puzzled | If the compiler rearranges the source lines, i.e. the lines will be no longer linear growing, this option must be used. |
| INT16 | Specifies the size of integers to 16 bits. |
| SHORT8 | Specifies the size of shorts to 8 bits. |

| | |
|------------------------------------|--|
| ALLLINE | Loads HLL source lines in all sections. As a default only lines in the executable section are loaded. |
| PACK | Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. |
| AnySym | Loads also special symbols that are otherwise suppressed. |
| GlobTypes | Must be set when the debug information is shared across different modules. If the option is required, but not set, the loader will generate an error message requesting for the option. |
| LOGLOAD | Load using logical addresses contained in the COFF file. |
| ASMFUNC Ceva-X, TeakLite | Creates extra information for assembler functions. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

- [Data.LOAD](#)
- ▲ ['Release Information' in 'Release History'](#)

Data.LOAD.ColonHex

Load colon hex file

| | |
|-------------------------|--|
| Format: | Data.LOAD.ColonHex <i><file></i> [<i>/<option></i>] |
| <i><option></i> : | OFFSET LineWidth <i><generic_load_option></i> |

Loads a colon hex file format with ":" as separator.

See also

- [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.COMFOR <file> [/<option>] |
| <option>: | PHANTOM <generic_load_option> |

The **PHANTOM** option loads also phantom (out-of-sequence) line numbers.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

| | |
|-------------------------|--|
| Format: | Data.LOAD.CORE <i><file></i> [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads a Linux core dump file into the TRACE32 Instruction Set Simulator. The object file has to be loaded before loading the core file.

<option> For a description of the generic options, click [<generic_load_option>](#).

Example:

```
Data.LOAD Elf object.elf ;Load the object file
Data.LOAD.CORE corefile /NoClear ;Load the core dump file
```

See also

- [Data.LOAD](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|-------------------------|---|
| Format: | Data.LOAD.COSMIC <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | INT16 SCHAR SPREC MODD MODP MODF (only 68HC16) IEEE MMU REV ADDBANK LOGLOAD <i><generic_load_option></i> |

The loader is implemented for 68K, 32K, 68HC11 and 68HC16 families.

| | |
|-------------------------|--|
| INT16 | Uses 16 bit integers, instead of 32 bit (only 68K). |
| IEEE | Uses IEEE floating point format instead of processor specific format. |
| SCHAR | Char type is signed, instead of unsigned. |
| MODD, MODP, MODF | Memory models for 68HC16 compiler. |
| SPREC | Use single precision floating point only. |
| REV | Reverse bit fields. Must be set when the compiler option was set. |
| ADDBANK | Add information about the bank number to the module names. Must be used if modules with the same name are duplicated in different banks. |
| LOGLOA | Loads to logical addresses instead of physical addresses. Only relevant for banked systems. |
| MMU | Loads information and translation tables for on-chip MMU. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

| | |
|--------------|--|
| NOTE: | If loading a file for the 68HC11K4 processor in banked configuration the MMU command and banking registers of the CPU must be prepared before loading (see emulation probe manual for 68HC11). |
|--------------|--|

See also

■ [Data.LOAD](#)

| | |
|-----------|---|
| Format: | Data.LOAD.CrashDump <file> [/<option>] |
| <option>: | <generic_load_option> |

Loads a Microsoft Windows Crash Dump or Minidump file into the TRACE32 Instruction Set Simulator. The command supports the Crash Dump files of types “Kernel memory Dump” and “Complete memory dump”.

For a complete analysis of the MS Crash Dump, the Windows awareness needs to be used in addition to this command. This helps to retrieve and autoload the Windows kernel debug symbols and sets the context of all the CPUs that are available in the Crash Dump.

For more details about the Windows awareness extension and the MS Crash Dump analysis, please refer to “[OS Awareness Manual Windows Standard](#)” (rtos_windows.pdf).

<option>

For a description of the generic options, click [<generic_load_option>](#).

Example:

```
Data.LOAD.CrashDump memory.dmp ;Load the crash dump file
```

See also

■ [Data.LOAD](#)

▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.LOAD.DAB <file> [/<option>] |
| <option>: | <generic_load_option> |

Loads a file in DAB file format.

<option>

For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

▲ ['Release Information' in 'Release History'](#)

Format: **Data.LOAD.DBX** *<file>* *<code>* *<data>* [*<sym>*] [*/<option>*]

<option>:

- CPP**
- AnySym**
- CFRONT**
- GHILLS**
- PACK**
- FASTPACK**
- LIMITED**
- <generic_load_option>*

Loads a file in DBX-format (sometimes called 'a.out' or Berkeley-Unix file format). The format is used by SUN native compilers and GNU compilers. As the standard format doesn't include any start address the first addresses for code and optionally data must be defined. The third address argument can be used to relocate the symbols when a relocatable program is loaded.

| | |
|-----------------------|---|
| CPP | Must be set when debugging C++ applications. |
| AnySym | Loads also any special labels (defining file names etc.) which are usually suppressed by the loader. |
| CFRONT | Load C++ files converted by the AT&T cfront preprocessor. |
| GHILLS | Load file from Greenhills compiler. For C++ files the CFRONT switch is also required. |
| PACK | Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. This option may save approx 40 % of the memory space required without packing. |
| FASTPACK | Same as above. Fastpack is faster and more efficient than PACK , but it requires unique type names in the whole applications. Fastpack assumes that types of identical name represent the same structure. |
| LIMITED | Doesn't load any type information. Loads the code and the source information only. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

■ [Data.LOAD](#)

| | |
|------------------------------------|--|
| Format: | Data.LOAD.Elf <i><file></i> [<i><memory_class></i> <i><offset></i> <i><range></i>] [<i>/<option></i>] |
| <i><option></i> : | FPU NOFPU AnySym ZeroSym NOMERGE NOEXTERNALS STRIPPREFIX <i><prefix></i> STRIPADANAMES PACK FASTPACK CODESEC LOGLOAD PHYSLOAD LOADSEC <i><section_name></i> LOADSEC ! <i><section_name></i> GlobTypes NoGlobTypes GHS GNU IAR METAWARE MetroWerks MRI WRS CFRONT PROTOTYPES STARTTHUMB STABS DWARF DWARF2 NOLINES NOCONST NOMETHODS NOCALLINFO CPP GNUPPP IA64 DeBuGInfoFILE <i><file2></i> |
| <i><option></i> : (cont.) | CHILL PASCAL ALTBITFIELDS ALTRELOC2 ENUMCONSTS ABSLINES ABSLIFETIMES ForceLines FUNCLines RelPATH RelPATH2 ModulePATH ChainedStab ChainedStab4 ChainedAbbrev ChainedLines BUGFIX4 RELOC <i><section_name></i> AT <i><address></i> RELOC <i><section_name></i> AFTER <i><section_name_other></i> RELOC <i><section_name></i> LIKE <i><section_name_other></i> RELOCTYPE <i><type></i> |
| <i><option></i> : (cont.) | LOCATEAT <i><address></i> RemoveModuleInSection <i><section_name></i> RemoveModuleAfterSection <i><section_name></i> OVERLAY NoFILEHDR NoPHDRS <i><architecture_specific_load_option></i> <i><generic_load_option></i> |

| | |
|--|--|
| <i><architecture_ specific_load_ option></i> : | RVCT ABI <i><vers></i> (only ARM) ALTDDOUBLE NOALTDDOUBLE (only ARM) ALTTHUMBSYMBOLS (only ARM) REAL REAL32 SMALLREAL SMALLREAL32 (only Intel x86) ALTRELOC (only M68K and ColdFire) REV MMU (only HC11 and HC12) NMF <i><address></i> DynamicNMF (only MMDSP) LARGE (only Intel DSP56K) |
|--|--|

Load a file in the ELF format. The file format description is available from UNIX International. The debug information can be in DWARF1 or DWARF2 format. For some processors STABS debug information is also supported.

When *<file>* does not contain debug information (stripped file) the debuglink or build-id may be used to automatically search for the debug information in a separate file.

The search strategy is in descending order:

- *<base>/build-id/<xx>/<yy...yy>.debug*
 - *<xx>* are the first two hex characters of the build-id
 - *<yy...yy>* are the remaining hex characters of the build-id
 - *<base>* is set by **sYmbol.SourcePATH.SetBaseDir**
- *<path of file>/<debuglink>*
 - debuglink is the name stored in the .gnu_debuglink section of the *<file>*
- *<path of file>/.debug/<debuglink>*
 - debuglink is the name stored in the .gnu_debuglink section of the *<file>*
- *<base>/<root-path of file>/<debuglink>*
 - *<debuglink>* is the name stored in the .gnu_debuglink section of the *<file>*
 - *<root-path of file>* is automatically detected by removing the leading folders one after each other

Example:

```

<file> = /home/user/sysroot/lib/libc.so

<root-path of file> =
[home/user/sysroot/lib,user/sysroot/lib,sysroot/lib,lib]

```

- *<base>* is set by **sYmbol.SourcePATH.SetBaseDir**
- *<pwd>/<debuglink>*
 - *<debuglink>* is the name stored in the .gnu_debuglink section of the *<file>*
 - *<pwd>* is the present working directory (e.g. `CD /home/user`)

Options:

| | |
|-----------------------|--|
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |
| ABSLIFETIMES | Special option - activates workarounds for compiler/linker issues. |
| ABSLINES | Special option - activates workarounds for compiler/linker issues. |
| ALTBITFIELDS | This option might solve problems with regards to the display of bitfields. |
| ALTRELOC2 | Supports special relocation variant. |
| AnySym | Loads all symbols generated by the compiler (defining file names, local labels etc.) which are usually suppressed by the loader. |
| BUGFIX4 | Option for an alternative interpretation of the DWARF Line Number Information (section ".debug_line"). With this option the offset to a Line Number Program gets calculated from <code>unit_length</code> (<code>==total_length</code>) and <code>header_length</code> (<code>==prologue_length</code>) of the Line Number Program Header (<code>==Statement Program Prologue</code>). Without this option TRACE32 assumes that a Line Number Program starts directly after its header. Try this option only if the Line Number Information in the sYmbol.List.LINE window seems to be wrong. |
| CFRONT | Enable workarounds for Cfront C++ compiler. |
| PROTOTYPES | Force all functions to include prototype information. |
| ChainedAbbrev | Special option - activates workarounds for compiler/linker issues. |
| ChainedLines | Enables workaround for not relocated line tables. |
| ChainedStab | Special option - activates workarounds for compiler/linker issues. |
| ChainedStab4 | Special option - activates workarounds for compiler/linker issues. |
| CHILL | Set this option if your program was coded in CHILL (CCITT High Level Language). |
| CODESEC | Normally the code download is done by using the program table of the ELF file. This option selects the Section table for code download. Some linkers produce a buggy Program table. |
| CPP | Must be set when loading an ELF file with symbol information in STABS format for C++. |

| | |
|----------------------------------|---|
| DeBuGInfoFILE <file2> | <p>Loads the debug information from <file2> in case the main file does not contain any debug information.</p> <p>Specifying this option disables the automatic search strategy in TRACE32.</p> <p>If <file2> is an empty string, the automatic search strategy is disabled and only the stripped main file is loaded.</p> |
| DWARF DWARF2 | <p>Forces debugger to load only debug information in DWARF format (ignoring debug information in STABS format). The default is to load all available debug information independently of the formats.</p> |
| FASTPACK | <p>Same as PACK. Fastpack is faster and more efficient than PACK, but it requires unique type names in the whole applications. Fastpack assumes that types of identical name represent the same structure.</p> |
| ForceLines | <p>Force loading of source code lines which are not “recommended breakpoint locations” according to the DWARF line table.</p> <p>The line table tells the debugger to which target address a line of source code is associated</p> |
| FPU, NOFPU | <p>Indicates the debugger that the code for FPU or without FPU was generated by the compiler.</p> |
| FUNCLines | <p>Force a source line at first address of function</p> <p>[build no. 46143 - DVD 08/2013]</p> |
| GHS | <p>Enable workarounds for GreenHills compiler.</p> |
| GlobTypes | <p>Must be set when the debug information is shared across different modules. If the option is required, but not set, the loader will generate an error message requesting for the option.</p> |
| GNU | <p>Needs to be set for some older GNU compilers.</p> |
| GNUCPP | <p>Same as GNU and CPP. Enables GNU specific workarounds for loading of programs written in C++</p> |
| IA64 | <p>Enable IA-64 style symbol demangling of programs written in C++ . This is enabled by default for several modern compiler e.g. GCC vers. 3 and higher, DIAB vers. 5.9 and higher, TASKING VX-toolset, ...</p> |
| IAR | <p>Enable workarounds for IAR compiler.</p> |
| LOADSEC <section_name> | <p>Loads the code of a single ELF section.</p> <p>Example: <code>Data.LOAD.Elf <file> /LOADSEC <section_name></code></p> <p>Suppresses the code of a single ELF section.</p> <p>Example: <code>Data.LOAD.Elf <file> /LOADSEC !<section_name></code></p> |
| LOGLOAD | <p>Takes the logical address (p_vaddr) of the program table to load the code (instead of the physical address).</p> |

| | |
|--------------------|---|
| METAWARE | Enable workarounds for Synopsys' MetaWare® C/C++ Compiler |
| MetroWerks | Enable workarounds for MetroWerks Compiler |
| ModulePATH | Keeps the path name information in the module names. By default the module names are reduced to the pure source name (without path and file extension) whenever possible. The option has no effects on the source file names or directories. |
| MRI | Must be set for the Microtec compiler. |
| NOCALLINFO | Suppresses loaded call debug information (loaded by default). |
| NOCONST | Suppresses the load of "const" variables. |
| NOEXTERNALS | Ignore declaration of external variables in DWARF debug information. |
| NoFILEHDR | <p>Suppress the loading of the ELF Header to target memory. Most ELF files do not load the ELF Header to the target memory by default anyway.</p> <p>The loading of the ELF Header should also be configurable via the linker script (scatter file). E.g.: For GCC see 'PHDRS' statement of PHDRS command in GNU Linker Scripts.</p> <p>[build no. 46001 - DVD 08/2013]</p> |
| NoGlobTypes | Can be set when there is no shared debug information in a file format where the loader expects them (e.g. for ARM). |
| NOLINES | Suppresses the load of the line table. The line table tells the debugger to which target address a line of source code is associated. |
| NOMERGE | Symbol information of the different formats (DWARF/STABS) are not merged together. The default is to merge the symbol information. |
| NOMETHODS | Suppresses loading of C++ method debug information. |
| NoPHDRS | <p>Suppress the loading of the ELF Program Header Table to target memory. Most ELF files do not load the ELF Program Header Table to the target memory by default anyway.</p> <p>The loading of the ELF Program Header Table should also be configurable via the linker script (scatter file). E.g.: For GCC see 'PHDRS' statement of PHDRS command in GNU Linker Scripts.</p> <p>[build no. 46001 - DVD 08/2013]</p> |

| | |
|--|--|
| OVERLAY | <p>Set when loading</p> <ul style="list-style-type: none"> an ELF file containing overlay code sections (declared as such be the debug information in the file) or an ELF file containing plain code sections (not marked in any special way in the debug information) that overlay code sections of other ELF files (that were loaded or will be loaded). <p>The option makes the ELF-Loaded consider existing relocation sections and the details from the table of declared overlay sections (sYmbol.OVERLAY.List) to load the symbols of each overlaying section to a separate virtual memory segment (Each address is virtually extended by an “overlay ID”).</p> <p>If your ELF file does not contain relocation information you have to declare the overlaying sections and source files using sYmbol.OVERLAY.Create before loading the ELF file (“File-based Code Overlay Support”). In this case the load options /NOFRAME and /NoClear are also recommended.</p> |
| PACK | Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. |
| PASCAL | Manually set programming language to Pascal. |
| PHYSLOAD | Use the physical address (p_paddr) of the program table to load the program. |
| RELOC <secname> AT <address> RELOC <secname> AFTER <secname_other> RELOC <secname> LIKE <secname_other> | Relocates code/symbols of the specified section to the specified logical address or after the specified section. |
| RELOCTYPE <type> | Relocates sections based on the OS Awareness. |

| | |
|---|---|
| ReIPATH | <p>Source files can be compiled with a full or a relative path. Example:</p> <pre>/home/irohloff/my_project/obj > gcc -c -g ../my_file.c</pre> <pre>/home/irohloff/my_project/obj > gcc -c -g /home/irohloff/my_project/my_file.c</pre> <p>If the source file was compiled with a relative path, the compilation path is also stored in the *.elf file. TRACE32 combines the compilation path with the relative path to the source file path by default.</p> <p>The option /ReIPATH advises TRACE32 use only the relative path as source file path.</p> <p>The option can be combined with other source search path commands to adjust the search path for the debugger in case the source files have been moved.</p> |
| ReIPATH2 | <p>The option /ReIPATH2 strips away the path information from the DWARF2 line number information. This is usually the directory path to the source file given in the compiler command line.</p> |
| RemoveModuleAfterSection <sename> | <p>Removes dummy modules after section.</p> |
| RemoveModuleInSection <secname> | <p>Removes dummy modules in section.</p> |
| REV | <p>Reverse bit fields. Must be set when the compiler option was set. (only HC11/HC12)</p> |
| STABS | <p>Forces debugger to load only debug information in STABS format (ignoring debug information in DWARF format). The default is to load all available debug information independently of the formats.</p> |
| STARTTHUMB | <p>Forces the start PC to thumb mode (as workaround for buggy ELF files).</p> |
| STRIPADANAMES | <p>Strips off parents from nested function names.</p> |
| STRIPPREFIX <prefix> | <p>Strip given string from the beginning of every ELF symbol. E.g. The symbol "F_main" becomes "main" with /STRIPPREFIX "F_"</p> |
| WRS | <p>Enable workarounds for WindRiver Diab compiler.</p> |
| ZeroSym | <p>By default modules linked to address 0x00 are not loaded. The option /ZeroSym advises the loader to also load all modules linked to address 0x00.</p> |

Architecture Specific Load Options:

ARM architecture:

| | |
|-------------------|--|
| ABI <vers> | Force ARM ABI version. |
| RVCT | Force IA-64 style symbol demangling of programs written in C++ . |

Intel® x86 architecture:

| | |
|--------------------|--|
| REAL | Memory model (only used for x86 REAL-mode debug info in stabs format). |
| REAL32 | Memory model (only used for x86 REAL-mode debug info in stabs format). |
| SMALLREAL | Memory model (only used for x86 REAL-mode debug info in stabs format). |
| SMALLREAL32 | Memory model (only used for x86 REAL-mode debug info in stabs format). |

M68K and Coldfire architecture:

| | |
|-----------------|--------------------------------------|
| ALTRELOC | Supports special relocation variant. |
|-----------------|--------------------------------------|

HC11 and HC12 architecture:

| | |
|------------|---|
| MMU | Loads information and translation tables for onchip MMUs |
| REV | Reverse bit fields. Must be set when the compiler option was set. |

MMDSP architecture:

| | |
|----------------------|---|
| NMF <address> | NMF framework support. |
| DynamicNMF | Special option (not active architecture). |

DSP56K architecture:

| | |
|--------------|---------------------|
| LARGE | Large memory model. |
|--------------|---------------------|

Examples

Example for <memory_class>:

```
; If loading the code to the target memory is not working, you can
; inspect the code by loading it to the virtual memory

Data.LOAD.Elf demo.elf VM:

Data.List VM:                                ; Display a source listing based on
                                              ; the code in the virtual memory

sYmbol.List.MAP                              ; Display the addresses to which
                                              ; the code/data was written
```

Example for <offset> for the TriCore:

```
; The program was linked for address 0x83000000, which is cached external
; memory, but FLASH programming is not working on cached memory.
; To solve this situation the program has to be programmed to 0xA3000000
; which is in not cached external memory

...

FLASH.Program ALL

Data.LOAD.Elf demo.elf 0x20000000           ; Add offset for loading

FLASH.Program off
```

Examples for the option /RELOC:

```
; relocate the code section of the file mymodul.o
; to the address 0x40000000
Data.LOAD.Elf mymodul.o /NoCODE /NoClear /RELOC .text AT 0x40000000

; relocate the const. section of the file mymodul.o
; after the code section
Data.LOAD.Elf mymodul.o /NoCODE /NoClear /RELOC .text AT 0x40000000 \
/RELOC .const AFTER .text

; relocate the const. section of the file mymodul.o
; the same delta like the code section
Data.LOAD.Elf mymodul.o /NoCODE /NoClear /RELOC .text AT 0x40000000 \
/RELOC .const LIKE .text
```


Example for <range>:

```
; The elf files contains program for the FLASH and data loaded to RAM,  
; the data loaded to RAM might disturb the target-controlled FLASH  
; programming.  
; To solve this situation the code is loaded only to the specified  
; address range.  
  
...  
  
FLASH.Program ALL  
  
Data.Load.Elf demo.elf 0xa3000000++0x3fffff  
  
FLASH.Program off
```

Example for <offset> <range>:

```
Data.LOAD.Elf demo.elf 0x1000000 0x13f9900++0xff  
  
; Please be aware that the code is first moved by <offset> so the <range>  
; has to be specified by using its new addresses
```

Example for loading the program to a virtual machine.

```
Data.LOAD.Elf ../FreeRTOS/FreeRTOS.elf N:3::0 /NoClear /NoCODE
```

Examples for split debug information

Example 1: gnu-debuglink in same folder:

```
; $ gcc -g -o foo foo.c  
; $ objcopy --only-keep-debug foo foo.debug ;  
; $ strip -g foo  
; $ objcopy --add-gnu-debuglink=foo.debug foo  
Data.LOAD.Elf foo ; loads './foo' and './foo.debug'
```

Example 2: gnu-debuglink in .debug subfolder:

```
; $ gcc -g -o foo foo.c  
; $ mkdir .debug  
; $ objcopy --only-keep-debug foo .debug/foo.debug  
; $ strip -g foo  
; $ objcopy --add-gnu-debuglink=foo.debug foo  
Data.LOAD.Elf foo ; loads './foo' and './.debug/foo.debug'
```

Example 3: gnu-debuglink in /usr/lib/debug subfolder:

```
; $ gcc -g -o /usr/local/bin/foo foo.c
; $ objcopy --only-keep-debug /usr/local/bin/foo \
;                               /usr/lib/debug/usr/local/bin/foo.debug
; $ strip -g /usr/local/bin/foo
; $ objcopy --add-gnu-debuglink=foo.debug /usr/local/bin/foo
sYmbol.SourcePATH.SetBaseDir /usr/lib/debug
Data.LOAD.Elf /usr/local/bin/foo
; loads /usr/local/bin/foo and /usr/lib/debug/usr/local/bin/foo.debug
```

Example 4: build-id in /usr/lib/debug:

```
; $ gcc -g -Wl,--build-id -o foo foo.c
; $ objcopy --only-keep-debug foo \
;                               /usr/lib/debug/.buildid/<xx>/<yy..yy>.debug
; # where <xx> are the first two hex characters of the build-id
; # where <yy..yy> are the remaining hex characters of the build-id
; $ strip -g foo
sYmbol.SourcePATH.SetBaseDir /usr/lib/debug
Data.LOAD.Elf foo
; loads ./foo and /usr/lib/debug/.build-id/<xx>/<yy..yy>.debug
```

Example 5: explicitly set debug information file e.g. no gnu-debuglink, no build-id available:

```
; $ gcc -g -o foo foo.c
; $ objcopy --only-keep-debug foo foo.bar
; $ strip -g foo
Data.LOAD.Elf foo /DeBuGInfoFILE foo.bar ; loads ./foo and ./foo.bar
```

See also

- [Data.LOAD](#)
- [SETUP.DropCoMmanD](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|--|
| Format: | Data.LOAD.ESTFB <file> [<offset> <range>] [/<option>] |
| <option>: | <generic_load_option> |

Loads an EST flat binary file. An EST flat binary is a binary file with a 32 byte header which defines start and end address of the included binary data.

| | |
|----------|--|
| <offset> | If <offset> is specified, the load address is increased by <offset> bytes. Positive and negative offsets are possible. |
| <range> | If <range> is specified, only the parts within <range> are loaded. |
| <option> | For a description of the generic options, click <generic_load_option> . |

See also

- [Data.LOAD](#)

Data.LOAD.eXe

Load EXE file

| | |
|-----------|--|
| Format: | Data.LOAD.eXe <file> [<access> <address>] [/<option>] |
| <option>: | AnySym CPP ENUMCONSTS RELOC <section_name> AT <address> RELOC <section_name> AFTER <section_name> FPU LOCATEAT <address> NoMMU (default, except for 8086, 80186 and 80286) <generic_load_option> |

Loads files in EXE-format. The command accepts different formats for symbolic information. Plain MS-DOS EXE formats require a base address for the starting segment. Files from Paradigm Locate or PE-Files from Pharlap require no load address.

| | |
|-----------------------|--|
| <option> | For a description of the options, see Data.LOAD.Elf . |
| <generic_load_option> | For a description, click <generic_load_option> . |

The following formats are accepted:

| Real Mode | Debug-Format | Compiler |
|--------------|--------------|--|
| DOS-EXE | CodeView 4 | MSVC 16-bit edition, DOS File |
| WIN-EXE | CodeView 4 | MSVC 16-bit, Windows Executable (only symbols) |
| DOS-EXE | CodeView 3 | MS-C, Logitech Modula |
| DOS-EXE | Borland | Borland-C/C++ 2.x-3.x |
| PARADIGM-AXE | Borland | Borland-C/C++ 2.x-3.x and Paradigm Locator |

Protected Mode

| | | |
|-------------|--------------|---|
| PHARLAP-P3 | CodeView 4 | MSVC 32-bit edition and Pharlap Locator |
| Windows(CE) | CodeView 4/5 | MSVC 32-bit edition |
| Windows(CE) | PECOFF | MSVC 32-bit edition |
| Windows(CE) | PDB | MSVC (x86,ARM,SH,PowerPC) |
| SymbianOS | STABS | GCC |
| Windows | PDB | MSVC (x64) |

See also

■ [Data.LOAD](#) ■ [SETUP.DropCoMmanD](#)

▲ ['Release Information'](#) in ['Release History'](#)

| | |
|-----------|--|
| Format: | Data.LOAD.FIASCO <file> [<address> <range>] [/<option>] |
| <option>: | NoCRCcheck CRCcheck <generic_load_option> |

Default: NoCRCcheck.

Loads a data file of the FIASCO BB5 file format (*.fpsx).

<option> For a description of the generic options, click [<generic_load_option>](#).

NoCRCcheck The check sums in the file are ignored.

CRCcheck The check sums in the file are taken into account. If one or more errors are encountered in the check sums, a warning message is displayed in the TRACE32 [message line](#). Detailed warning messages are printed to the **AREA** window.

See also

■ [Data.LOAD](#)

Data.LOAD.HiCross

Load HICROSS file

| | |
|-----------|---|
| Format: | Data.LOAD.HiCross <file> [<class>] [/<option>] |
| <option>: | M2 DBGTOASM <generic_load_option> |

Loads a file from Hiware Modula2 or C Cross Development System. The file name is the name of the absolute file, all other files are searched automatically.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

| | |
|-------------------------|---|
| Format: | Data.LOAD.HiTech <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | NOHEX NOSDB Puzzled <i><generic_load_option></i> |

Load a file in HI-TECH object format. The code is loaded in S-Record format. When the code is not in S-Record (Motorola) format, it must be loaded separate with the appropriate command and the symbol file can be loaded with the **/NOHEX** option.

| | |
|-----------------------|---|
| NOHEX | Don't load code, load only symbol files. |
| NOSDB | Don't load the HLL-debugging information. |
| Puzzled | This option should be used, when the global optimizer of the compiler is activated. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

■ [Data.LOAD](#)

Format: **Data.LOAD.HP** *<file>* [*<class>* | *<offset>*] [*/<option>*]

<option>:

- NOX**
- NOL**
- NOA**
- NoMMU**
- PACK**
- WARN**
- MODULES**
- <generic_load_option>*

Loads a file in HP-64000 format. All three file types (.X/.L/.A) are loaded if existing. The command **sYmbol.LSTLOAD.HPASM** allows source debugging in assembler files. The optional address value defines an offset for the code of the program. This offset can be used to load a file into a different bank on banked 8-bit systems.

| | |
|-----------------------|--|
| NOX | Doesn't load the absolute code file. The file name must be the name of the symbol file (.L). |
| NOL | Doesn't load any symbols. |
| NOA | Doesn't load local symbols from '.A' files. |
| NoMMU | Doesn't set up the MMU table. The MMU table is usually loaded with information from the sections of the file (64180, 80186, etc.). |
| PACK | Compress symbol information by saving the same labels in different modules only once. |
| MODULES | Takes the object file from a different location. Try this option if local symbols from modules are missing. |
| WARN | Issues a warning message when '.A' files are not found. The default is to silently ignore these files. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

■ [Data.LOAD](#)

| | |
|-------------------------|--|
| Format: | Data.LOAD.ICoff <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | FPU MOD Puzzled <i><generic_load_option></i> |

Loads files in Intrnl ICOFF format.

| | |
|-----------------------|---|
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |
| FPU | Tells the debugger that code for the FPU was generated by the compiler. |
| MOD | Adjusts the loader for INTROL MODULA2 files. |
| Puzzled | If the compiler rearranges the source lines, i.e. the lines are no longer linear growing, this option has to be used. |

See also

- [Data.LOAD](#)

Format: **Data.LOAD.ieee** <file> [<address> | <access>] [/<option>]

<option>: **FPU** | **NOCLR** | **STandarD**
InLine | **NoInLine**
INT16
NoMATCH
MSEction
PACK | **FASTPACK**
NOFRAME
LIMITED
CFRONT
PREFIX <char>
ZP2 | **MCC3** | **C** | **ALSYS** | **XDADA** | **A5** (only 68K)
NoMMU (only x86)
LARGE (only C166)
<generic_load_option>

The access class can be used to select a different access class for the saving of code or for the symbols, e.g. the code can be saved directly in emulation memory (**E:**). The address parameter is used as an offset to the addresses in the IEEE file. It is only useful for loading different memory banks on a banked system.

<option> For a description of the generic options, click [<generic_load_option>](#).

ALSYS Must be used when loading ALSYS IEEE files.

C Forces the language to 'C'. This option must be used, when the compiler generates a wrong 'compiler-id', i.e. the displayed language is PL/M or ADA.

CFRONT Load C++ files converted by a CFront preprocessor. NOTE: This option should not be used for Microtec C++ files.

FASTPACK Same as above. Fastpack is faster and more efficient than **PACK**, but it requires unique type names in the whole applications. Fastpack assumes that types of identical name represent the same structure.

FPU Tells the debugger that code for an FPU (Floating Point Unit) was generated by the compiler.

INT16 Specifies the size of integers to 16 bits.

LIMITED Doesn't load any type information. Loads the code and the source information only.

MCC3 Must be used when loading MCC68K 3.0 files.

| | |
|-----------------|---|
| MSEction | Assembler module sections are included in the section table. As a default the IEEE sections are included in the table. If the compiler generates the assembler module information, this information will be more exact. |
| NOCLR | If the 'NOCLR' option was selected in the Microtec C compiler, this option has to be set in order to display enumeration types properly. |
| NOFRAME | Ignore the stack frame information in the IEEE file. The stack frame information in the file is used for the Frame.view window only. Use this option, if your compiler doesn't produce the correct information. The TRACE32 tool try's then to analyze the function prolog code to get the stack frame. |
| NoInLine | Suppresses the lines generated by the compiler when inline optimizing is activated (-Oi). The code generated by a call to an inlined function is then executed as one line. |
| NoMATCH | If the loader detects externals with type information it tries to combine them with globals of the same name without type information. This matching process can be turned off with this option. |
| NoMMU | Suppress the generation of the address translation table for the MMU command. This table is used to recreate logical addresses from physical addresses seen on the address bus (80x86). |
| PACK | Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. This option may save approx 40% of the memory space required without packing. |
| STandard | If the 'STANDARD' option was selected in Microtec PAS68K, then the associated underscores can be removed at the time of loading by setting this option. |
| ZP2 | Must be set, when the ZP2 option was used to compile the file. |

See also

■ [Data.LOAD](#)

▲ ['Release Information'](#) in ['Release History'](#)

| | |
|-----------|---|
| Format: | Data.LOAD.IntelHex <file> [<addressrange>] [/<option>] |
| <option>: | OFFSET <offset> <generic_load_option> |

The file is shifted (by the factor of the Offset) and loaded.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)
- [Data.SAVE.IntelHex](#)
- ['Release Information' in 'Release History'](#)

Data.LOAD.LDR

Load META-LDR file

Meta

| | |
|-----------|--|
| Format: | Data.LOAD.LDR <file> [<addressrange>] [/<option>] |
| <option>: | <generic_load_option> |

Load LDR file for Meta architecture. Please refer to [“Meta Debugger”](#) (debugger_meta.pdf) for more information.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)

Format: **Data.LOAD.MachO** *<file>* [*<class>*] [*/<option>*]

<option>:

- DebugFile** *<binary_file>*
- NoDebugFile**
- DWARF | STABS**
- NOCONST**
- NOMERGE**
- UUID**
- IgnoreARCH**
- ARCHNumber** *<value>*
- IgnoreModuleRange**
- <generic_load_option>*

Load a file in the Mach-O file format. The file format description is available from Apple Inc. The debug information can be in DWARF2 or STABS format. For some compiler (e.g. GCC) both formats are combined in one file. Binary and symbol information could be found separated in two files with an identical UUID. The load command tries to find silently a corresponding debug file and load its symbol information.

| | |
|--------------------------|---|
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |
| ARCHNumber | Loads the entry with the specified number of an universal binary (FAT). Counting starts from zero. Default is to load the first matching architecture (target <-> Mach-O-file) of the universal binary. |
| DebugFile | Define a dedicated file, which contains the symbol information. The option /NoDebugFile will be ignored. If the file does not exist, an error message will appear. The default is to search the debug file automatically and does not announce anything, if no file is found. The UUIDs instead will always be checked between the two files. |
| DWARF, STABS | Forces debugger to load only debug information in DWARF respectively STABS format. The default is to load all available debug information independently of the formats. |
| IgnoreARCH | The architecture field of the Mach-O-file will be ignored and no warning will be emitted, if does not match. If the Mach-O-file is an universal binary (FAT), the first entry (number=0) will be loaded regardless of its and the others architecture-codes. |
| IgnoreModuleRange | Ignores address range information for modules from the DWARF debug. |
| NOCONST | Suppresses the load of "const" variables. |

| | |
|--------------------|--|
| NoDebugFile | <p>No additional file (debug file) will be searched. Only the defined file will be processed. No UUIDs will be compared. This allows to load even non-correspondent files.</p> <p>The NoDebugFile option will be set implicitly by the generic load options NoCODE and NosYmbol (see example).</p> |
| NOMERGE | <p>Symbol information of the different formats (DWARF/STABS) are not merged together. The default is to merge the symbol information.</p> |
| UUID | <p>Only the universally unique identifier (UUID) of a Mach-O file is read, shown and saved. Target code, registers or symbols will not be changed. The function MACHO.LASTUUID() dispenses this UUID. After every Mach-O load command the UUID is saved and could be read via the function MACHO.LASTUUID().</p> <p>If no UUID is found in a Mach-O file, MACHO.LASTUUID() will dispense "no UUID read" independently rather UUID option is set or not. But only with the UUID option set, a failure will be returned by the load command. This option should be used exclusively, because if used all other options are ignored.</p> |

Examples:

Example for loading binary and symbol information separately:

```
Data.LOAD.MachO a.out /NosYmbol      ; Load binary only
Data.LOAD.MachO sym.out /NoCODE       ; Load symbol information only
; Example for loading binary and symbols with one command
Data.LOAD.MachO a.out /DebugFile sym.out
```

Example for usage of **UUID** option:

```
PRINT MACHO.LASTUUID()              ; "no UUID read" will be displayed,
                                     ; because no Mach-O file was loaded

Data.LOAD.MachO a.out /NosYmbol      ; Load binary only

PRINT MACHO.LASTUUID()              ; UUID of a.out will be displayed
                                     ; in area window, like: "ba4718af-
                                     ; 884c-6b81-b7e8-5d771938ac83"

Data.LOAD.MachO sym.out /UUID        ; UUID of sym.out will be displayed
                                     ; in area window and could be
                                     ; compared with those of a.out.
                                     ; Nothing will be loaded.

Data.LOAD.MachO sym.out /NoCODE      ; If both are equal, load symbols
```

See also

■ [Data.LOAD](#)

□ [MACHO.LASTUUID\(\)](#)

| | |
|-------------------------|--|
| Format: | Data.LOAD.MAP <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads a .MAP file from the Logitech Modula2 Cross Development System.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

| | |
|-------------------------|---|
| Format: | Data.LOAD.MCDS <i><file></i> [<i><class></i>] [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads a file from Hiware Modula2 Cross Development System. The file name is the name of the absolute file, all other files are searched automatically. The source line numbers will be loaded only if the source files are found.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

| | |
|-----------|---|
| Format: | Data.LOAD.MCoff <file> [<range> <class>] [/<option>] |
| <option>: | ALLLINE <generic_load_option> |

Loads a file in the MCOFF format (Motorola Common Object File Format). The format is generated by the GNU-56K DSP compiler.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

Data.LOAD.OAT

Load OAT file

| | |
|-----------|---|
| Format: | Data.LOAD.OAT <file> [<address>] [/<option>] |
| <option>: | LOCATEAT <address> |

Loads *.oat files generated by the Android RunTime (ART).

LOCATEAT Relocates the symbols to the specified start <address>.

See also

■ [Data.LOAD](#)

▲ ['Release Information' in 'Release History'](#)


```

Format:      Data.LOAD.OMF <file> [<class>] [/<option>]

<option>:    PLM | PAS | C | CPP | ADA
              MIX (only 8086, 8051)
              LST (only 8051, 8086)
              SRC
              MIXASM | MIXPLM | MIXPAS (only 8086)
              REAL (only 8086)
              NoMMU (only 8086)
              MRI | IC86 | IC86OLD | ParaDigm | CADUL (only 8086)
              RevArgs (only 8086)
              PLAIN (only 8086, 8096)
              EXT | SPJ (only 8051)
              MMU | MMU1 (only 8051)
              SMALL | LARGE (only 8051)
              ASMVAR (only 8051)
              UBIT (only 8051)
              NoGlobal (only 8086)
              DOWNLINE
              PACK
              <generic_load_option>

```

The implementation of this command is processor specific.

| | |
|---------------|---|
| PLM | With this option the file extension can be set to '.plm'. The source lines in the object file must relate directly to the source file (no list file). |
| PAScal | Same as above, but for PASCAL files. |
| C | Same as above for 'C' files (only for 80186). NOTE: For Microtec MCC86, Intel IC86 and Paradigm compilers/converters are extra options available. |
| MIX | Assumes a mixed object file, generated from PLM/86 and another compiler. The switch must be used in combination with another 'language' switch. The PL/M source is loaded from the listing file. |
| LST | Loads line number information from the listfile of PL/M compilers. This option must be set when loading file generated by Intel 8051 or 8086 PL/M compilers. |
| MIXASM | Assumes a mixed object file, generated by a standard compiler and an assembler. The switch must be used in combination with another 'language' switch. If set, the source search path is extended to search first the high level source file (e.g. '.c') and then the assembler source file ('.asm'). |

| | |
|-------------------------|---|
| MIXPLM | Assumes a mixed object file, generated by a standard compiler and a PL/M compiler. The switch must be used in combination with another 'language' or compiler switch. If set, the source search path is extended to search first the high level source file (e.g. '.c') and then the PL/M source file ('.plm'). When using Intel PL/M, the object files must be converted by the 'cline' utility. |
| MIXPAS | Assumes a mixed object file, generated by a standard compiler and an pascal compiler. The switch must be used in combination with another 'language' switch. If set, the source search path is extended to search first the high level source file (e.g. '.c') and then the pascal source file ('.pas'). |
| REAL | Assumes that all selectors outside the GDT range are REAL or VIRTUAL-86 mode addresses. |
| MRI | Loads extended OMF files, as generated by the Microtec MCC86 compiler. This extensions include register variables, bitfields in structures and the name of the source files. The stack traceback is adapted to the MCC86 stack format. |
| IC86 | Load OMF files from Intel IC86. The stack traceback is adapted to the Intel IC86 stack format. |
| ParaDigm | Loads extended OMF files from PARADIGM LOCATE. The extensions include source file names, register variables and enumeration values. |
| PLAIN | This option must be used, if the 'BLKDEF' and 'BLKEND' records in the OMF file are not correctly nested. |
| EXT | Must be set, when loading an extended OMF-51 file (KEIL), i.e. if the nesting of the blocks and the code section in the file reflect the original nesting of the source. |
| MMU | Generates MMU translation information for KEIL-51 banked linker. Bank 0 is placed to logical address 0x10000, Bank 1 to 0x20000 a.s.o. The first 64K (0x0--0xffff) are transparently translated or used for the common area. |
| MMU1 | Same as above, but different translation. Bank 1 is placed to logical address 0x10000, Bank 2 to 0x20000 a.s.o. The first 64K (0x0--0xffff) are transparently translated or used for the common area. Bank 0 is not allowed in this configuration. |
| SMALL, LARGE | Define the memory access class for EQU symbols to be either X: or I:. |
| ASMVAR | Generates HLL variable information for assembler variables. |
| UBIT | Unsigned bit fields. |

NoGlobal

Suppresses the global symbols of the file. This can speed up download and save memory when the globals are redundant.

<option>

For a description of the generic options, click [<generic_load_option>](#).

The following compilers are accepted:

| Format | Compiler | Remarks |
|---------|--|---|
| OMF-51 | Intel-PL/M Intel-C51 Keil-C51 SPJ-C KSC/System51 | Use LST or PLM option Use C option Use EXT and Puzzled option, includes extended information. Use the 'OBJECTEXTEND' option to compile the files. Use MMU or MMU1 option when loading files from BL51. Use SPJ option. Use PAS option. |
| OMF-96 | Intel-C96 | Use SPLIT option when code and data are two separate memory spaces. |
| OMF-86 | Intel-PL/M Intel-iC86 Microtec Paradigm | Use LST or PLM or MIX or MIXPLM option. Use IC86 or IC86OLD option, RevArgs option when PASCAL calling conventions are used. Use MRI option, includes extended type and source file information. Use ParaDigm option, includes extended type and source file information. |
| OMF-386 | Pharlap SSI/Intel SSI/CodeView SSI/Metaware | No option required, includes extended register variables information. Use the '-regvars' option to produce register variable information. No option required. The Codeview debugging format provides more information than the intel format info. No option required. SPF Format from SPLINK. CPP switch required for C++. |
| OMF-166 | Keil-C166 | Use Puzzled option, includes extended type information. |

See also

■ [Data.LOAD](#)

■ [Data.SAVE.Omf](#)

| | |
|-----------|--|
| Format: | Data.LOAD.Omf2 <file> [/<option>] |
| <option>: | <generic_load_option> |

Loads OMF-251 files.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.OriginHex <file> <addressrange> [/<option>] |
| <option>: | OFFSET <value> <generic_load_option> |

Loads a file in special hex file format.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#)

| | |
|-----------|---|
| Format: | Data.LOAD.PureHex <file> <address> <range> [/<option>] |
| <option>: | SKIP <offset> <generic_load_option> |

Loads a file in hex-byte format. The file format contains no address information. The input file should contain ASCII hexadecimal data in one or multiple lines.

| | |
|----------------------|---|
| SKIP <offset> | If the option /SKIP <offset> is specified, the first <offset> bytes of the file are omitted. |
| <option> | For a description of the generic options, click <generic_load_option> . |

See also

- [Data.LOAD](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|--|
| Format: | Data.LOAD.REAL <file> [/<option>] |
| <option>: | <generic_load_option> |

Loads a file in R.E.A.L. object file format.

| | |
|----------|---|
| <option> | For a description of the generic options, click <generic_load_option> . |
|----------|---|

See also

- [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.ROF <file> [<code>] [<data>] [/<option>] |
| <option>: | NoSTB NoDBG NoMOD MAP FPU CPP CFRONT TURBOPACK <generic_load_option> |

Code and *data* defines the addresses of the code and data regions. With the command **sYmbol.RELOCate** these addresses can be moved after loading the file. The loader loads the three files produced by the compiler (code, symbols, HLL). The symbol files will be searched first on the actual path and then in the subdirectory 'STB'. The option **PATH** should be used to define the path to the source files if the files are compiled on an OS-9 host.

| | |
|------------------|--|
| FPU | If code for the FPU has been generated this option should be used. |
| NoMOD | Is used for loading the symbols only. The file name has to be the name of the symbol file (.stb). |
| NoSTB | The loading of symbols is suppressed. |
| NoDBG | The loading of HLL information is suppressed. |
| MAP | The '.map' file (produced by the linker on request) is used to get the symbols instead of the '.stb' file. The '.map' file includes the absolute symbols, which are not inside the '.stb' file. |
| TURBOPACK | Saves memory space by compressing type information during load. Loading speed is also improved. Assumes that types with identical names have the same physical layout (even in different modules). |
| <option> | For a description of the generic options, click <generic_load_option> . |

Limitations

The data symbols are loaded to absolute addresses, i.e. only one copy of the data will contain the symbols. Within the disassembler the base register's relative address offset will only display the correct symbol, when the current base register value has the correct value for this module.

See also

■ [Data.LOAD](#)

| | |
|-----------|--|
| Format: | Data.LOAD.S1record <file> [<addressrange>] [/<option>] |
| <option>: | FLAT OFFSET <offset> RECORDLEN <value> <generic_load_option> |

Load an SREC file containing S19-style 16-bit address records.

If a single address is selected this address will define an address offset like the option **OFFSET**. A given address range will suppress the loading of data and symbols outside of this defined destination address area.

Options available for SREC formats:

| | |
|------------------|---|
| FLAT | Loads S-Record files to linear address spaces for those CPUs not supporting linear logical address spaces. |
| OFFSET | Changes the address value to value plus offset. The Srecord will be loaded to the address plus offset value. |
| RECORDLEN | Defines the number of data bytes per line in the Srecord file. Decimal values have to be given with decimal point behind. |
| <option> | For a description of the generic options, click <generic_load_option> . |

The file may contain also symbolic information, which needs the following format:

```
$$
$$_MODULNAME1
__SYMBOLNAME1 $00000000_
__SYMBOLNAME2 $12345678_
$$_MODULNAME2
__SYMBOLNAME3 $AB0000CF_
```

The character '_' stands for BLANK (0x20). The address has to be entered in 8 digits.

See also

- [Data.LOAD](#)
- [Data.SAVE.S1record](#)
- [Data.SAVE.S2record](#)
- [Data.SAVE.S3record](#)

| | |
|-----------|--|
| Format: | Data.LOAD.S2record <file> [<addressrange>] [/<option>] |
| <option>: | FLAT OFFSET <offset> RECORDLEN <value> <generic_load_option> |

Load an SREC file containing S28-style 24-bit address records. The description of options, further information and examples are [here](#).

See also

■ [Data.LOAD](#)

■ [Data.SAVE.S1record](#)

■ [Data.SAVE.S2record](#)

■ [Data.SAVE.S3record](#)

| | |
|-----------|--|
| Format: | Data.LOAD.S3record <file> [<addressrange>] [/<option>] |
| <option>: | FLAT OFFSET <offset> RECORDLEN <value> <generic_load_option> |

Load an SREC file containing S37-style / 32-bit address records. The description of options, further information and examples are [here](#).

See also

■ [Data.LOAD](#)

■ [Data.SAVE.S1record](#)

■ [Data.SAVE.S2record](#)

■ [Data.SAVE.S3record](#)

▲ 'Release Information' in 'Release History'

| | |
|-----------|--|
| Format: | Data.LOAD.S4record <file> [<addressrange>] [/<option>] |
| <option>: | FLAT OFFSET <offset> RECORDLEN <value> <generic_load_option> |

Load an SREC file containing S47-style / 64-bit address records. The description of options, further information and examples are [here](#).

See also

■ [Data.LOAD](#)

■ [Data.SAVE.S1record](#)

■ [Data.SAVE.S2record](#)

■ [Data.SAVE.S3record](#)

Data.LOAD.SAUF

Load SAUF file

| | |
|-----------|--|
| Format: | Data.LOAD.SAUF <file> [/<option>] |
| <option>: | CFRONT <generic_load_option> |

Loads SAUF file format.

See also

■ [Data.LOAD](#)

■ [Data.SAVE.S1record](#)

■ [Data.SAVE.S2record](#)

■ [Data.SAVE.S3record](#)

Format: **Data.LOAD.SDS** <file> [<address>] [/<option>]

<option>:
FPU
NOCONST
PACK
FASTPACK
<generic_load_option>

Loads files in Software Development Systems (SDSI) or Uniware format. The address parameter can be used to load via dual port access or to define a different load address for banked applications.

FPU Tells the debugger that code for the FPU was generated by the compiler.

PACK Saves memory space by removing redundant type information. Standard types (e.g. char/long) are assumed to be equal in all modules. Types with the same definition can share the same memory space. This option may save approx 40% of the memory space required without packing.

FASTPACK Same as above. Fastpack is faster and more efficient than **PACK**, but it requires unique type names in the whole applications. Fastpack assumes that types of identical name represent the same structure.

NOCONST Suppresses the load of "const" variables. These are often removed from the optimizer anyway.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

■ [Data.SAVE.S1record](#)

■ [Data.SAVE.S2record](#)

■ [Data.SAVE.S3record](#)

| | |
|-------------------------|--|
| Format: | Data.LOAD.SPARSE <i><file></i> [<i>/<option></i>] |
| <i><option></i> : | <i><generic_load_option></i> |

Loads SPARSE image.

See also

- [Data.LOAD](#)
- [Data.SAVE.S1record](#)
- [Data.SAVE.S2record](#)
- [Data.SAVE.S3record](#)

| | |
|-----------|---|
| Format: | Data.LOAD.sYm <file> [<address>] [/<option>] |
| <option>: | LOC NOLOC <generic_load_option> |

Loads simple symbol files.

The debug information is contained in different types of files. The SYM files (*.sym) contain the global symbols, the optional LOC files (*.loc) contain the local symbols for each module.

| | |
|----------|--|
| <option> | For a description of the generic options, click <generic_load_option> . |
| <file> | Specify the global SYM file as <file>. Depending on its content, the LOC files are loaded automatically. If not, the option LOC activates the loader for local symbol information and line numbers. |

The command accepts the following formats as main symbol files:

PLAIN SYMBOLS

```
1234_SYMBOLNAME1 <TAB> 5678_SYMBOLNAME2
F000_SYMBOLNAME3
```

The hex number (one to 8 digits) is followed by a blank and the symbol name. Multiple symbol names in one line are separated by TAB's (0x9).

ZAX

```
$$ progame
    symbol 1234H
$$ module
    symbol 5678H
    symbol $5678
```

LOC

The local symbol file is compatible to the TRACE80 emulators.

The following example show a LOC file (*.LOC) for a “C” file defining source line #183 at program relative address 0x00AD and one data label at data address 0x0242. The source code must always precede the line definition

```
:C
; vfloat = -1.0;
00AD' 183
0242" mstatic1
```

The module base addresses (code start and end and data start) must be in the global symbol file (*.SYM):

```
1000 [main
1fff ]main
2000 [ "main
```

See also

- [Data.LOAD](#)

Data.LOAD.SysRof

Load RENESAS SYSROF file

Format: **Data.LOAD.SysRof** <file> [<access>] [/<option>]

<option>: <generic_load_option>

Loads a file in Renesas SYSROF object file format.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

- [Data.LOAD](#) ■ [Data.SAVE.S1record](#) ■ [Data.SAVE.S2record](#) ■ [Data.SAVE.S3record](#)
- ▲ 'Release Information' in 'Release History'

| | |
|-----------|---|
| Format: | Data.LOAD.TEK <file> [<address>] [/<option>] |
| <option>: | NoMMU <generic_load_option> |

The optional *address* parameter can be used to load to a different memory class (like E:) or to supply an offset for loading banked applications.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

Data.LOAD.TekHex

Load TEKTRONIX HEX file

| | |
|-----------|--|
| Format: | Data.LOAD.TekHex <file> [<address>] [/<option>] |
| <option>: | OFFSET <generic_load_option> |

The optional *address* parameter can be used to load to a different memory class (like E:) or to supply an offset for loading banked applications.

<option> For a description of the generic options, click [<generic_load_option>](#).

See also

■ [Data.LOAD](#)

| | |
|-------------------------|--|
| Format: | Data.LOAD.Ubrof <i><file></i> [<i><address></i>] [<i>/<option></i>] |
| <i><option></i> : | ICC3S ICC3L XSP NoMMU LARGE EXTPATH <i><.extension></i> <i><generic_load_option></i> |

If the option '-r' is used as a compiler option, the source text will be loaded directly from the object file, whereby the option '-rn' the source text will be loaded as usual. The optional *address* parameter can be used to load to a different memory class (like E:) or to supply an offset for loading banked applications.

| | |
|-----------------------|---|
| COLumns | With this option the column debugging is activated. |
| ICC3S, ICC3L | Loads files from ICC8051 3.0. |
| XSP | Generates virtual stack pointer information for optimized stack frames (68HC12, H8). This is a workaround for not sufficient information in the debug file. |
| NoMMU | Doesn't load the MMU tables from the file contents. This table is used to translate physical addresses to their logical counterparts (only 64180). |
| LARGE | This option must be set when a large memory model is used. |
| EXTPATH | Defines an alternate file extension for the source files, if the .c file is not found. |
| <i><option></i> | For a description of the generic options, click <generic_load_option> . |

See also

- [Data.LOAD](#)
- ▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.LOAD.VersaDos <file> [<access_class>] [/<option>] |
| <option>: | NoLO NoDB <generic_load_option> |

Loads the *.lo file first, which contains the code, and then the *.db symbol file (if existent). The file name of the *.lo file must be given.

| | |
|-------------|---|
| <option> | For a description of the generic options, click <generic_load_option> . |
| NoDB | With the option NoDB the loading of the symbols is suppressed. |
| NoLO | The option NoLO suppresses the loading of the data file. The symbol file name has to be given as an argument in this case. |

See also

- [Data.LOAD](#)

Data.LOAD.XCoff

Load XCOFF file

| | |
|-----------|---|
| Format: | Data.LOAD.XCoff <file> [<class>] [/<option>] |
| <option>: | <generic_load_option> |

Loads a file in the IBM-RS6000/XCOFF format (PowerPC).

| | |
|----------|---|
| <option> | For a description of the generic options, click <generic_load_option> . |
|----------|---|

See also

- [Data.LOAD](#)

| | |
|---------|---------------------------------------|
| Format: | Data.MSYS <dll_file> <cmdline> |
|---------|---------------------------------------|

Starts a flashdisk support utility to program, view or format M-Systems flashdisks. The utility is supplied by M-Systems in form of a DLL module. The syntax of the command depends on the DLL module.

Data.Out

Write port

| | |
|------------------|---|
| Format: | Data.Out <address> [%[<accessformat>].<dataformat>] <data> [/<option>] |
| <access format>: | Byte Word Long Quad TByte PByte HByte SByte |
| <dataformat>: | Byte Word Long Quad TByte PByte HByte SByte BE LE |
| <option>: | Repeat CORE <core_number> |

As opposed to the [Data.Set](#) command, the address is not increased during write-to. If the CPU structure decides between IO and DATA area, the IO area is selected on default (Z80, 186 ...).

- Byte, Word, ...

See [“Keywords for <width>”](#), page 11.
- Repeat

Repeats the input endlessly, e.g. for external measurements.

Examples:

```
Data.Out IO:0x10 0x33 ; write one byte to I/O space
Data.Out D:0x10 0x33 ; write one byte to memory-mapped I/O
Data.Out IO:0x10 "ABC" 0x33 ; writes 4 characters to io port
Data.Out IO:0x10 "ABCD" /Repeat ; continuously writes data to the port
; write 32-bit bitwise
Data.Out IO:0x10 %Byte.Long 0x12345678
```

See also

- [Data.In](#)
[ADDRESS.SEGMENT\(\)](#)
- [Data.Set](#)
[ADDRESS.STRACCESS\(\)](#)
- [Data.Test](#)
[ADDRESS.WIDTH\(\)](#)
- [ADDRESS.OFFSET\(\)](#)

Data.PATTERN

Fill memory with pattern

[\[Examples\]](#)

Format: **Data.PATTERN** <addressrange> [/<option>]

<option>: **Verify** | **ComPare** | **DIFF**
ByteCount | **WordCount** | **LongCount**
ByteShift | **WordShift** | **LongShift**
RANDOM | **PRANDOM**
Byte | **Word** | **Long** | **Quad** | **TByte** | **PByte** | **HByte** | **SByte**
PlusVM
SEED <value>
LFSR32 <taps>

Fills the memory with a predefined pattern for the specified address range.

| | |
|---|---|
| Verify | Verify the data by a following read operation. |
| ComPare | Pattern is compared against memory. Memory is not changed. The comparison stops after the first difference |
| DIFF | Pattern is compared against memory. Memory is not changed. The result of the compare is available in the FOUND() function. |
| ByteCount, Word-Count, LongCount | Pattern is an incrementing count of 8, 16, or 32 bit. |
| ByteShift, Word-Shift, LongShift | Pattern is an left rotating bit of 8, 16, or 32 bit. |
| RANDOM | Pattern is a random sequence. |
| PRANDOM | Pattern is a pseudo random sequence. |
| Byte, Word, ... | Specify memory access size. See “ Keywords for <width> ”, page 11. If no access size is specified, the debugger uses the optimum size for the processor architecture. |
| PlusVM | The data patter is written into the target memory plus into the virtual memory. |

LFSR32 < taps >

Pattern is generated by a 32-bit Linear-Feedback-Shift-Register.
 < taps > is a 32-bit number.
 The pseudo code used to generate the sequence is

```

if (lfsr & 0x80000000)
  lfsr = (lfsr<<1)^(taps<1);
else
  lfsr = (lfsr<<1);

```

SEED < value >

This option is used together with the **PRANDOM** or **LFSR32** option in order to initialize the pseudo random generator or the initial LFSR value with a different seed.

Example 1

This example shows how to test memory address translations (MMU) with a pattern:

```

Data.PATTERN A:0x0--0x7ffff          ; fill memory with pattern
...                                  ; (A: enforces physical address)
Data.dump 0x0                        ; display logical view of memory
Data.dump 0x4000
...
Data.PATTERN 0x0--0x7fff /ComPare     ; compare memory against pattern

```

Example 2

The **Data.PATTERN** < addressrange > **/DIFF** command is used together the following functions:

| | |
|------------------------|---|
| FOUND() | Returns TRUE if a difference was found in the comparison. |
| TRACK.ADDRESS() | Returns the address of the first difference. |

```

...
;fill memory with a predefined pattern
Data.PATTERN 0x0++0xffff

;any write access or code manipulation
...

;compare predefined pattern against memory to check if the previous
;write access or code manipulation has had an impact on the pattern
Data.PATTERN 0x0++0xffff /DIFF

IF FOUND()
  PRINT "Error found at address " TRACK.ADDRESS()
...

```

Example 3

```
;Same as /LongShift
Data.PATTERN VM:0x0000--0xffff /LFSR32 0x1 /SEED 0x1

;LFSR as pseudo random sequence, starting with 0x12345678
;Note: There are many other <taps> values, which result in long number
;sequences.
Data.PATTERN VM:0x0000--0xffff /LFSR32 0x10904081 /SEED 0x12345678
```

See also

■ [Data.dump](#)

■ [Data.Set](#)

■ [Data.Test](#)

▲ ['Release Information' in 'Release History'](#)

Format: **Data.Print** [[%<format>][<address> | <range>] ...] [/<option> ...]

<format>: **Decimal** [.<width> [.<endianness> [.<bitorder>]]]
DecimalU [.<width> [.<endianness> [.<bitorder>]]]
Hex [.<width> [.<endianness> [.<bitorder>]]]
HexS [.<width> [.<endianness> [.<bitorder>]]]
OCTal [.<width> [.<endianness> [.<bitorder>]]]
Ascii [.<width> [.<endianness> [.<bitorder>]]]
Binary [.<width> [.<endianness> [.<bitorder>]]]
Float [.<float_rep> [.<endianness>]]
sYmbol [.<width> [.<endianness> [.<bitorder>]]]
Var
DUMP [.<width> [.<endianness> [.<bitorder>]]]
Byte [.<endianness> [.<bitorder>]]
Word [.<endianness> [.<bitorder>]]
Long [.<endianness> [.<bitorder>]]
Quad [.<endianness> [.<bitorder>]]
TByte [.<endianness> [.<bitorder>]]
PByte [.<endianness> [.<bitorder>]]
HByte [.<endianness> [.<bitorder>]]
SByte [.<endianness> [.<bitorder>]]

<width>: **DEfault** | **Byte** | **Word** | **Long** | **Quad** | **TByte** | **PByte** | **HByte** | **SByte**

<endianness>: **DEfault** | **LE** | **BE**

<bitorder>: **DEfault** | **BitSwap**

<option>: **CORE** <core_number>
COVerage
CTS
Track
FLAG <flag>
CFlag <cflag>
Mark <break>

<flag>: **Read** | **Write** | **NoRead** | **NoWrite**

<cflag>: **OK** | **NoOK** | **NOTEXEC** | **EXEC**

<break>: **Program** | **Hll** | **Spot** | **Read** | **Write** | **Alpha** | **Beta** | **Charly** | **Delta** | **Echo**

Displays the bare memory content on multiple address ranges as a list. If the single address format is selected, only one word at this address will be displayed. When selecting an address range the defined data range can be dumped.

| | |
|------------------------------|---|
| Decimal, DecimalU,... | Refer to “ Keywords for <format> ”, page 10 |
| Byte, Word, ... | Refer to “ Keywords for <width> ”, page 11 |
| DEfault, BE, LE | Define byte-order display direction: default target endianness, Big Endian or Little Endian |
| DEfault, BitSwap | BitSwap allows to display data in reverse bit-order in each byte. If BitSwap is used together with BE or LE, the byte order will not change, otherwise BitSwap will also reverse the byte-order. |
| CORE <core> | Display memory from the perspective of the specified core /SMP debugging only). |
| COverage | Highlight data memory locations that have never been read/written. |
| Track | Track the window to the reference address of other windows. |
| Mark <break> | Highlight memory locations for which the specified breakpoint is set. |
| CTS | Display CTS access information when CTS mode is active. |

Examples:

```
Data.Print 0x1000--0x10ff           ; display fixed range

Data.Print Var.RANGE(flags)         ; display range defined by object
                                   ; name

Data.Print %Binary Register(ix)     ; display data byte referenced by IX

Data.Print %Var                     ; display indexed by HLL pointer
Var.VALUE(dataptr)
```

| address | data | value | symbol |
|-------------|-------|--------------|-----------------------------|
| SD:00005218 | 01 | 1 | \\sieve\Global\Flags |
| SD:00005219 | 01 | 1 | \\sieve\Global\Flags+0x1 |
| SD:0000521A | 01 | 1 | \\sieve\Global\Flags+0x2 |
| SD:00005218 | 01 | flags[0] = 1 | \\sieve\Global\Flags |
| SD:00005219 | 01 | flags[1] = 1 | \\sieve\Global\Flags+0x1 |
| SD:0000521A | 01 | flags[2] = 1 | \\sieve\Global\Flags+0x2 |
| SD:0000521B | 00 | flags[3] = 0 | \\sieve\Global\Flags+0x3 |
| SD:00003B3C | 89 D0 | 0xD089 | \\sieve\sieve\func2\fstatic |

| breakpoint | address | data | value | symbol |
|------------|-------------|-------|--------------|---|
| | SD:000023CC | 01 | 1 | \\sieve\Global_kernel_rem_pio2+0x6A4 |
| WR | SD:00005218 | 01 | 0x1 | \\sieve\Global\Flags |
| WR | SD:00005218 | 01 | flags[0] = 1 | \\sieve\Global\Flags |
| WR | SD:0000521C | 01 | flags[4] = 1 | \\sieve\Global\Flags+0x4 |
| WR | SD:00003B3C | 14 7C | 31764 | \\sieve\sieve\func2\fstatic |

D

- A Read/Write breakpoint (created with **Break.Set**).
- B Hex data.
- C Symbolic address.
- D Scale area.

The scale area contains Flag and Breakpoint information, memory classes and addresses. The [state line](#) displays the currently selected address, both in hexadecimal and symbolic format. By double-clicking a data word, a **Data.Set** command can be executed on the current address.

By holding down the right mouse button, the most important memory functions can be executed via the **Data Address** pull-down menu. If the **Mark** option is on, the relevant bytes will be highlighted. For more information, see [Data.dump](#).

See also

- [Data.dump](#)
- [Data.TABLE](#)
- [Data.View](#)
- [ADDRESS.OFFSET\(\)](#)
- [ADDRESS.SEGMENT\(\)](#)
- [ADDRESS.STRACCESS\(\)](#)
- [ADDRESS.WIDTH\(\)](#)
- [Data.Byte\(\)](#)
- [Data.Float\(\)](#)
- [Data.Long\(\)](#)
- [Data.Quad\(\)](#)
- [Data.STRING\(\)](#)
- [Data.STRINGN\(\)](#)
- [Data.Word\(\)](#)


| | |
|-----------|---|
| Format: | Data.PROfile [%<format>][<address> ...] [<gate>] [<scale>] [/<option>] |
| <format>: | Decimal .[<width>[.<endianness>]] DecimalU .[<width>[.<endianness>]] Hex .[<width>[.<endianness>]] HexS .[<width>[.<endianness>]] OCTal .[<width>[.<endianness>]] Float .[<float_rep>[.<endianness>]] Byte [.<endianness>] Word [.<endianness>] Long [.<endianness>] Quad [.<endianness>] TByte [.<endianness>] PByte [.<endianness>] HByte [.<endianness>] SByte [.<endianness>] |
| <width>: | DEFault Byte Word Long Quad TByte PByte HByte SByte |
| <gate>: | 0.1s 1.0s 10.0s |
| <scale>: | 1. ... 32768. |
| <option>: | AutoInit AutoArm AutoScale |

The value at the specified memory location(s) is displayed graphically. The display requires **run-time memory access** if the data value should be displayed while the program execution is running. The display is updated and shifted every 100 ms. The <gate> parameter allows to change this shift rate.

| | |
|------------------|--|
| AutoInit | The results are re-initialized each time the program execution is started. |
| AutoArm | Update is started and stopped with the program execution. |
| AutoScale | The graph is automatically scaled according to the sampled data values. |

Example 1:


```
Data.PROfile %DecimalU.Long E:0x67C0 /AutoScale
```

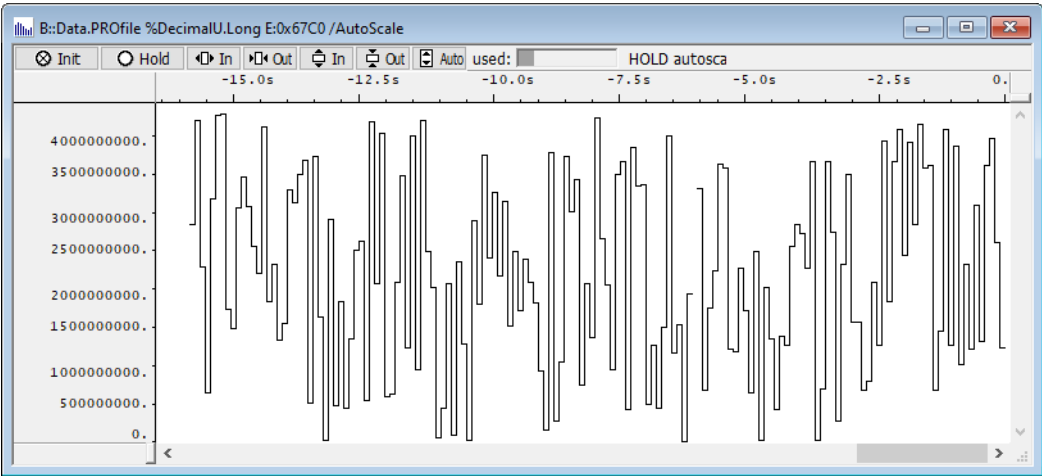

| Buttons | |
|---------|---|
| Init | Restart display |
| Hold | Stop update/re-start update |
| In, Out | Zoom in/out horizontally and vertically |
| Auto | Enable auto scale |

Example 2: Up to three data values can be displayed. The following color assignment is used: first data value red, second data value green, third data value blue.

```
Data.PROfile %DecimalU.Word E:0x672C E:0x67C0 %DecimalU.Long E:0x67C8 /AutoScale
```

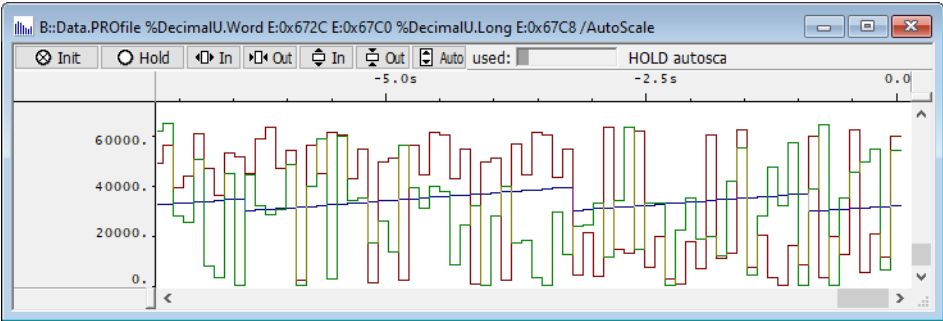


See also

- [Data.DRAW](#)
- [Var.PROfile](#)
- ▲ ['Release Information' in 'Release History'](#)

Format: **Data.PROGRAM** [*<address>* | *<addressrange>* [*<file>* [*<line>*]]]

This command creates a window for editing and assembling a short assembler program. Without a specified file name, the file t32.asm is generated.

If the **Compile** button is used, syntax errors and undefined labels will be detected. The resulting program will be assembled for the specified address and saved to memory. The labels entered will be added to the symbol list.

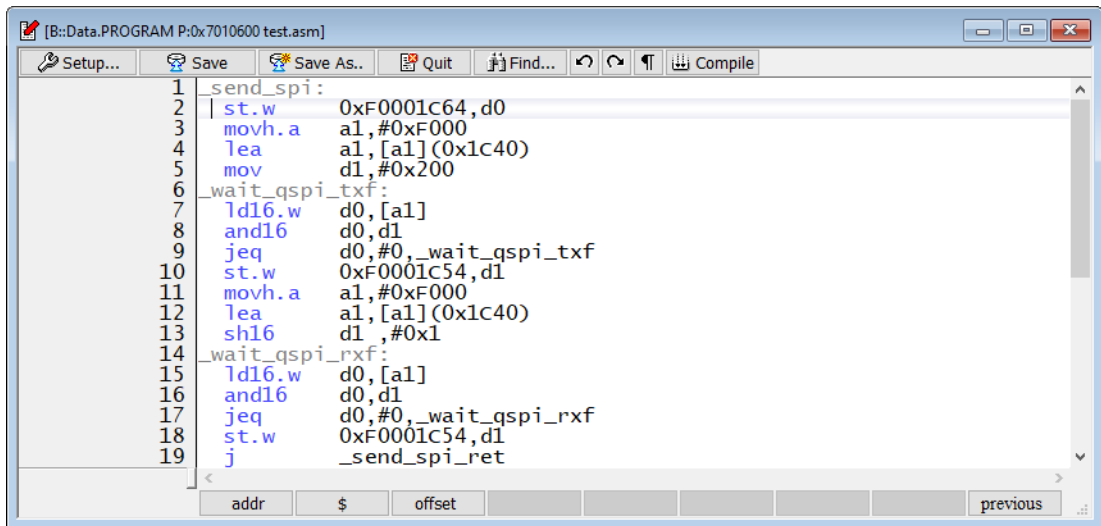

See also


- [Data.Assemble](#) ■ [Data.ReProgram](#) ■ [Data.Set](#) ■ [SETUP.DropCoMmanD](#)
- [SETUP.EDITOR](#)
- ▲ 'Text Editors' in 'PowerView User's Guide'
- ▲ 'Release Information' in 'Release History'

The **Data.PROLOG** command group allows to define a sequence of read/write accesses that are automatically performed directly before the program execution is continued with **Go** or **Step**.

The **Data.PROLOG** command group can also be used, for example, to manually freeze peripherals, if the processor itself does not provide this feature.

The complementary command **Data.EPILOG** performs read/write accesses after program execution halted. It is also possible to store data read with **Data.EPILOG** and restore with **Data.PROLOG**, and vice versa.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.PROLOG.state** window:

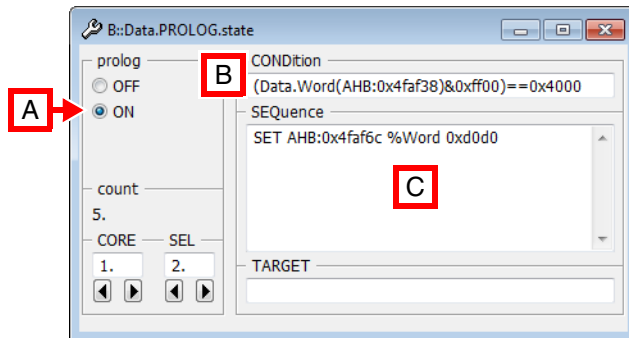

- A** For descriptions of the commands in the **Data.PROLOG.state** window, please refer to the **Data.PROLOG.*** commands in this chapter. Example: For information about **ON**, see **Data.PROLOG.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEquence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

Examples:

- Overview including illustration - see **Data.PROLOG.state**.
- Prolog conditions - see **Data.PROLOG.CONDition**.
- Access sequences - see **Data.PROLOG.SEquence**.

See also

- [Data.ATTACH](#) ■ [Data.EPILOG](#) ■ [Data.STARTUP](#) ■ [Data.TIMER](#)
- ▲ 'Release Information' in 'Release History'

| | |
|------------------|--|
| Format: | Data.PROLOG.CONDITION <condition> |
| <condition>: | <memory_access> & <mask> == <value> <memory_access> & <mask> != <value> |
| <memory_access>: | Data.Byte (<address>) Data.Word (<address>) Data.Long (<address>) |

Defines a condition on which the command sequence defined with **Data.PROLOG.SEQUENCE** will be executed each time before the program execution is started by **Go / Step**.

| | |
|-----------------|---|
| <memory_access> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|-----------------|---|

Examples:

```
;reads the long at address D:0x3faf30, performs a binary AND with
;a mask (here 0xffffffff). If the result is equal to 0x80000000, then the
;condition is true and the defined sequence is executed.
Data.PROLOG.CONDITION (Data.Long(D:0x3faf30)&0xffffffff)==0x80000000
```

```
;reads the word at address D:0x3xfaf30
Data.PROLOG.CONDITION (Data.Word(D:0x3faf30)&0xff00)!=0x8000
```

```
;reads the byte at address D:0x3xfaf30
Data.PROLOG.CONDITION (Data.Byte(D:0x3faf30)&0xf0)!=0x80
```

See also

- [Data.PROLOG.state](#)
- [Data.Byte\(\)](#)
- [Data.Long\(\)](#)
- [Data.Word\(\)](#)

| | |
|---------|--|
| Format: | Data.PROLOG.CORE <i><core_number></i> |
|---------|--|

Selects the core for which you want to define one or more data prologs.

Prerequisite: You have successfully configured an SMP system with the **CORE.ASSIGN** command.

Example: This script shows how to define a data prolog that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a data prolog
Data.PROLOG.CORE 3.

;Define the data prolog for core 3
Data.PROLOG.CONDITION <your_code>
Data.PROLOG.SEQUENCE <your_code>
```

```
;Define the data prolog for core 3
Data.PROLOG.CONDITION <your_code>
Data.PROLOG.SEQUENCE <your_code>
```

For information on how to configure two different data epilogs, see [Data.PROLOG.SELECT](#).

See also

■ Data.PROLOG.state

| | |
|---------|------------------------|
| Format: | Data.PROLOG.OFF |
|---------|------------------------|

Disables the execution of the **Data.PROLOG** sequence on program execution start.

See also

■ Data.PROLOG.state

| | |
|---------|-----------------------|
| Format: | Data.PROLOG.ON |
|---------|-----------------------|

Enables the execution of the **Data.PROLOG** sequence on program execution start.

See also

■ [Data.PROLOG.state](#)

Data.PROLOG.RESet

Reset all data prologs

| | |
|---------|--------------------------|
| Format: | Data.PROLOG.RESet |
|---------|--------------------------|

Switches the **Data.PROLOG** feature off and clears all settings.

See also

■ [Data.PROLOG.state](#)

Format: **Data.PROLOG.SELECT** <serial_number>

Increments the index number for each new data prolog. This is useful, for example, if you need two separate data prologs with each data prolog having its own **Data.PROLOG.CONDITION**.

TRACE32 automatically assigns the index number 1. to the 1st **Data.PROLOG.SEQUENCE**. If you require a 2nd, separate data prolog sequence, then increment the <index_number> to 2. Otherwise the 2nd data prolog will overwrite the 1st data prolog. You can define a maximum of 10 data prologs.

Example 1: Two data prologs with the *same* **Data.PROLOG.CONDITION** may have the *same* index number. The backslash \ is used as a line continuation character. No white space permitted after the backslash.

```
;Set the index number to 1.
Data.PROLOG.SELECT 1.

;Data PROLOG sequences shall be executed only if this condition is true:
Data.PROLOG.CONDITION (Data.Word(D:0x4faf34)&0xff00)==0x4000

;Define the two data PROLOG sequences:
Data.PROLOG.SEQUENCE SET 0x4faf54 %Word 0xC0C0 \
                      SET 0x4faf64 %Word 0xD0D0
```

Example 2: Two data prologs with *different* **Data.PROLOG.CONDITION** settings require two *different* index numbers.

```
;1st data prolog - TRACE32 automatically sets the index number to 1.
Data.PROLOG.SELECT 1.

;If this prolog condition is true, ...
Data.PROLOG.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x2000

;... then the 1st prolog sequence will be executed
Data.PROLOG.SEQUENCE SET 0x4faf58 %Word 0xE0E0

;Increment the index number to define the 2nd data prolog
Data.PROLOG.SELECT 2.

;If this prolog condition is true, ...
Data.PROLOG.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x3000

;... then the 2nd prolog sequence will be executed
Data.PROLOG.SEQUENCE SET 0x4faf58 %Word 0xF0F0
```

See also

■ [Data.PROLOG.state](#)

Format: **Data.PROLOG.SEquence** *<data_set_command>* ...

<data_set_command>:
SET *<address>* %*<format>* *<data>*
SETI *<address>* %*<format>* *<data>* *<increment>*
SETS *<address>*
GETS *<address>*

Defines a sequence of *<data_set_commands>* that are automatically executed by the TRACE32 software directly before the program execution is started by **Go** / **Step**.

- SET** Parameters: *<address>* %*<format>* *<value>*
Write *<value>* with data type *<format>* to *<address>*
- SETI** Parameters: *<address>* %*<format>* *<start>* *<increment>*
At the first time performed, write *<start>* to *<address>*.
<start> is incremented by *<increment>* on each successive call.
- GETS** Parameters: *<address>* %*<format>*
Reads the value at *<address>* and stores it into an internal data buffer.
The internal data buffer can contain multiple records and is reset when the command **Data.PROLOG.SEquence** is called.
- SETS** Parameters: *<address>* %*<format>*
If the internal data buffer contains a record for *<address>*, the stored value is written to the processor.

Examples:

```
;Write 0xa0a0 when starting, increment by 2 for each successive start
Data.PROLOG.SEquence SETI 0x3faf50 %Word 0xa0a0 2

;Set peripheral register to 0 when halted, 1 when starting
Data.EPILOG.SEquence SET 0x3faf50 %Long 0x00000000
Data.PROLOG.SEquence SET 0x3faf50 %Long 0x00000001

;Set register to 0 when halted, restore original value when starting
Data.EPILOG.SEquence GETS 0x1230 %Byte SET 0x1230 %Byte 0x00
Data.PROLOG.SEquence SETS 0x1230 %Byte


;Set (clear) a single bit when starting (stopping)
Data.EPILOG.SEquence SET 0x3faf50 %Word 0yXXXX1xxxXXXXxxxx
Data.PROLOG.SEquence SET 0x3faf50 %Word 0yXXXX0xxxXXXXxxxx
```

See also

■ [Data.PROLOG.state](#)

Format: **Data.PROLOG.state**

Opens the **Data.PROLOG.state** window, where you can configure data prologs.

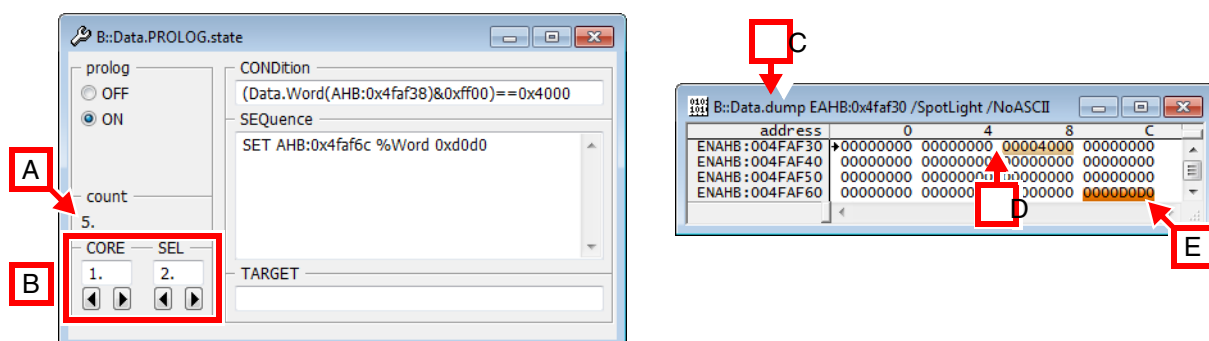

- A** Counts the number of times the **Data.PROLOG.Sequence** command has been executed.
- B** Lets you create and view the data prologs of a particular core. This example shows the 2nd data prolog of core 1. The **CORE** field is grayed out for single-core targets.
- C** The **Data.dump** window is just intended to visualize what happens behind the scenes:
 - ... • The **access class** E: in the **Data.dump** window is required if you want the window to display memory while the program is running; refer to [C].
- E**
 - The **CONDITION** [D] is true (`==0x4000`), and thus the **SEQUENCE** is executed [E] before the program execution is started with the **Go** command.

```

Data.PROLOG.state           ;open the window
Data.PROLOG.CORE 1.         ;for core 1, two data prologs will be defined:

Data.PROLOG.SELect 1.       ;1st data prolog with condition and sequence:
                             ;if condition is true, then execute seq. below
Data.PROLOG.CONDition (Data.Word(AHB:0x4faf38)&0xff00)==0x3000
Data.PROLOG.SEQuence SET AHB:0x4faf5c %Word 0xc0c0

Data.PROLOG.SELect 2.       ;2nd data prolog with condition and sequence:
                             ;if condition is true, then execute seq. below
Data.PROLOG.CONDition (Data.Word(AHB:0x4faf38)&0xff00)==0x4000
Data.PROLOG.SEQuence SET AHB:0x4faf6c %Word 0xd0d0

Data.PROLOG.ON              ;activate all data prologs
Go                          ;start program execution
  
```

See also

[Data.PROLOG.CONDition](#) [Data.PROLOG.CORE](#) [Data.PROLOG.OFF](#) [Data.PROLOG.ON](#)
[Data.PROLOG.RESet](#) [Data.PROLOG.SELect](#) [Data.PROLOG.SEQuence](#) [Data.PROLOG.TARGET](#)

▲ 'Release Information' in 'Release History'

Format: **Data.PROLOG.TARGET** *<code_range>* *<data_range>*

Defines a target program that is automatically started by the TRACE32 software directly before the program execution is started by [Go](#) / [Step](#).

<code_range> Defines the address range for the target program.

<data_range> Defines the address range used for the data of the target program.

Example:


```
Data.PROLOG.TARGET 0x3fa948--0x3faa07 0x1000--0x1500
```

See also

■ [Data.PROLOG.state](#)

| | |
|-----------|--|
| Format: | Data.REF [<address>] [/<option>] |
| <option>: | CORE <core_number> COV erage CTS Track FLAG <flag> CFlag <cflag> Mark <break> |
| <flag>: | Read Write NoRead NoWrite |
| <cflag>: | OK NoOK NOTEXEC EXEC |
| <break>: | Program Hll Spot Read Write Alpha Beta Charly Delta Echo |

Displays all values (registers or memory locations) that are referenced by the current assembler instruction. This command is not implemented for all processors.

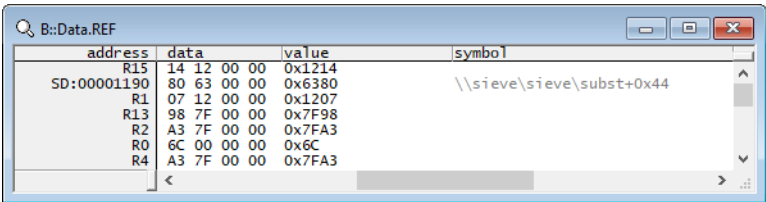

- CORE <core>

Display memory from the perspective of the specified core /SMP debugging only).
- COV

erage

Highlight data memory locations that have never been read/written.
- Track

Track the window to the reference address of other windows.
- Mark <break>

Highlight memory locations for which the specified breakpoint is set.
- CTS

Display CTS access information when CTS mode is active.

Format: **Data.ReProgram** [*<address>* | *<addressrange>*] [*<file>*]

Assembles instructions from a file into memory. It is similar to the **Data.PROGRAM** command.

The **Data.Assemble** command can be used to patch single instructions.

See also

Data.PROGRAM

Reroute function call

Format: **Data.ReRoute** *<address_range>* *<old_destination>* *<new_destination>*
[*<exclude_range>*]

Replaces, within the specified address range, all function calls to *<old_destination>* by function calls to *<new_destination>*. Function calls within *<exclude_range>* are not replaced.

Examples:

```
; replace all function calls to 0x3fa96c by 0x3fa9e4
; within the address range 0x3f9900--0x3fae1f
Data.ReRoute 0x3f9900--0x3fae1f 0x3fa96c 0x3fa9e4
```

```
; replace all function calls to func5 by func7 within the module diabc
Data.ReRoute diabc func5 func7
```

```
; replace all function calls to malloc by T32_malloc within the code
; segment of the currently loaded program
; don't replace the calls to malloc in the module t32mem
Data.ReRoute sYMBOL.SECRANGE(.text) malloc T32_malloc \t32mem
```

| | |
|-----------|---|
| Format: | Data.SAVE.<format> <file> [<addressrange>] [/<option>] |
| <option>: | <format_specific_save_options> <generic_save_options> |

Saves the data from the specified address range in a file with the specified file format.

| | |
|----------------|---|
| <file> | File name and (optional) path |
| <addressrange> | Address range to be saved. It is possible to use access classes, e.g. A: |
| <option> | <ul style="list-style-type: none">For descriptions of the format-specific save options, refer to the respective Data.SAVE.<format> command.For descriptions of the generic save options, see table below. |


List of Generic Save Options

| | | | | | | | | | |
|--|---|------------------------------|-------------------------------|--------------------------------|-------------------------------|--------------------------------|--------------------------------|--------------------------------|-------------------------------|
| BSPLIT <stride><offset> [<width>] | <p>Saves only certain bytes of the memory.</p> <ul style="list-style-type: none"><stride> defines a chunk of data to which the other two parameters refer to.<width> defines the bus width in bytes.<offset> defines the offset of the bytes being saved.For an illustration of <stride>, <offset>, and <width>, see below. <p>The option BSPLIT 2 0 saves the lower byte of a 16-bit bus.</p> | | | | | | | | |
| Byte Word TByte Long PByte HByte SByte Quad | <p>Data is saved in the specified width:</p> <table><tr><td>Byte (8-bit accesses)</td><td>Word (16-bit accesses)</td></tr><tr><td>TByte (24-bit accesses)</td><td>Long (32-bit accesses)</td></tr><tr><td>PByte (40-bit accesses)</td><td>HByte (48-bit accesses)</td></tr><tr><td>SByte (56-bit accesses)</td><td>Quad (64-bit accesses)</td></tr></table> <p>Must be used if the target can only support memory accesses of a fixed width. The default width is determined automatically by TRACE32 to achieve the best upload speed.</p> | Byte (8-bit accesses) | Word (16-bit accesses) | TByte (24-bit accesses) | Long (32-bit accesses) | PByte (40-bit accesses) | HByte (48-bit accesses) | SByte (56-bit accesses) | Quad (64-bit accesses) |
| Byte (8-bit accesses) | Word (16-bit accesses) | | | | | | | | |
| TByte (24-bit accesses) | Long (32-bit accesses) | | | | | | | | |
| PByte (40-bit accesses) | HByte (48-bit accesses) | | | | | | | | |
| SByte (56-bit accesses) | Quad (64-bit accesses) | | | | | | | | |
| LongSWAP | Swaps high and low bytes of a 32-bit word during save. | | | | | | | | |
| QuadSWAP | Swaps high and low bytes of a 64-bit word during save. | | | | | | | | |
| SkipErrors | <p>Skips memory that cannot be read. Otherwise TRACE32 would abort the command if a bus error occurs while saving the specified <range>.</p> <p>No data is saved for addresses that cause bus errors, provided the format allows this.</p> | | | | | | | | |

| | |
|--------------------|--|
| wordSWAP | Swaps high and low bytes of a 16-bit word during save. |
| BITSWAP | Swaps the bits of each byte during save. |
| NoINCrement | Saves code to a single address (of a FIFO). |

BSPLIT: illustration of <stride>, <offset>, and <width>

[\[Back\]](#)

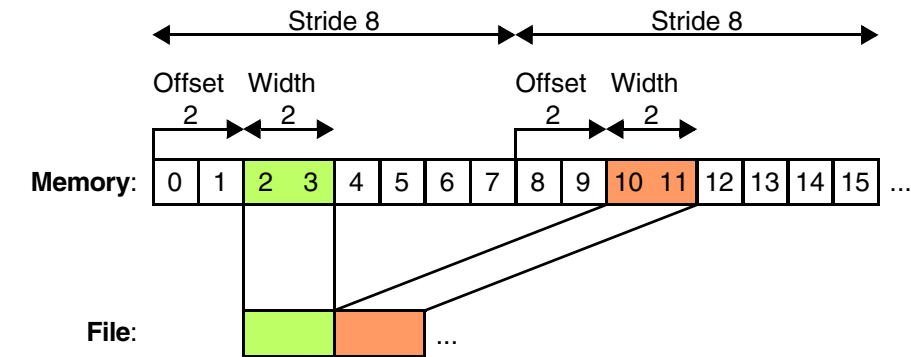

Examples

```

; Save data from uncached and physical address 0x00000000--0x0001ffff
; to s3record file.
Data.SAVE.S3record flashdump.s3 ANC:0x00000000--0x0001ffff

```

```

; Save data from supervisor data memory 0xc0000000--0xcfffffff
; to binary file and compress.
Data.SAVE.Binary memorydump.bin.zip SD:0xc0000000--0xcfffffff /ZIP

```

See also

- [Data.SAVE.Ascii](#)
- [Data.SAVE.AsciiHex](#)
- [Data.SAVE.AsciiOct](#)
- [Data.SAVE.BDX](#)
- [Data.SAVE.Binary](#)
- [Data.SAVE.CCSDAT](#)
- [Data.SAVE.DAB](#)
- [Data.SAVE.Elif](#)
- [Data.SAVE.ESTFB](#)
- [Data.SAVE.IntelHex](#)
- [Data.SAVE.Omf](#)
- [Data.SAVE.PureHex](#)
- [Data.SAVE.S1record](#)
- [Data.SAVE.S2record](#)
- [Data.SAVE.S3record](#)
- [Data.SAVE.S4record](#)

▲ 'Release Information' in 'Release History'

| | |
|-----------|--|
| Format: | Data.SAVE.Ascii <file> [<addressrange>] [/<option>] |
| <option>: | Hex Decimal DecimalU BINary Float. [leee leeeDbl leeeXt <others>] Append |

Saves an <addressrange> as a pure data file in word-oriented ASCII file format. The output file includes one byte in each line.

| | |
|-----------------|---|
| Append | Appends data to an existing file. |
| <option> | Saves the file in one of the following formats: |
| DecimalU | • Unsigned Decimal |
| Decimal | • Signed Decimal |
| Hex | • Hexadecimal value |
| Binary | • Binary value |
| Float | • Floating point value |

See also

■ [Data.SAVE.<format>](#)

| | |
|-----------|---|
| Format: | Data.SAVE.AsciiHex <file> [<addressrange>] [/<option>] Data.SAVE.AsciiHexP <file> [<addressrange>] [/<option>] Data.SAVE.AsciiHexA <file> [<addressrange>] [/<option>] Data.SAVE.AsciiHexS <file> [<addressrange>] [/<option>] Data.SAVE.AsciiHexC <file> [<addressrange>] [/<option>] Data.SAVE.AsciiHexB <file> [<addressrange>] [/<option>] |
| <option>: | OFFSET <offset> <generic_save_options> |

Saves a file in a simple ASCII file format.

| | |
|----------|--|
| <option> | For a description of the generic options, see <generic_save_options> . |
|----------|--|

Examples:

| TRACE32 Command Line | Content of file 'x.txt' |
|-----------------------------|---|
| D.SAVE.AH x.txt d:0++1f | <STX> \$A0000, DA F2 DA 33 69 8C 83 B4 F7 6E 59 E8 48 7D 90 64 85 29 75 66 84 F1 A4 05 52 34 51 CA 36 B0 04 73 <ETX> \$S1009 |
| D.SAVE.AHP x.txt d:0++1f | <STX> \$A0000, DA%F2%DA%33%69%8C%83%B4%F7%6E%59%E8%48%7D%90%64% 85%29%75%66%84%F1%A4%05%52%34%51%CA%36%B0%04%73% <ETX> \$S1009 |
| D.SAVE.AHA x.txt d:0++1f | <STX> \$A0000, DA'F2'DA'33'69'8C'83'B4'F7'6E'59'E8'48'7D'90'64' 85'29'75'66'84'F1'A4'05'52'34'51'CA'36'B0'04'73' <ETX> \$S1009 |
| D.SAVE.AHS x.txt d:0++1f | <DC2> \$A0000, DA'F2'DA'33'69'8C'83'B4'F7'6E'59'E8'48'7D'90'64' 85'29'75'66'84'F1'A4'05'52'34'51'CA'36'B0'04'73' <DC4> \$S1009 |
| D.SAVE.AHC x.txt d:0++1f | <STX> \$A0000. DA,F2,DA,33,69,8C,83,B4,F7,6E,59,E8,48,7D,90,64, 85,29,75,66,84,F1,A4,05,52,34,51,CA,36,B0,04,73, <ETX> \$S1009 |
| D.SAVE.AHB x.txt d:0++1f | DA F2 DA 33 69 8C 83 B4 F7 6E 59 E8 48 7D 90 64 85 29 75 66 84 F1 A4 05 52 34 51 CA 36 B0 04 73 |

Key: **<STX>**=(char)0x02, **<ETX>**=(char)0x03, **<DC2>**=(char)0x12, **<DC4>**=(char)0x14
 Lines end with **<CR><LF>**=(char)0x0D(char)0x0A, added after the byte if (addr & 0x0F == 0x0F).
 Address prefix is \$A, Checksum \$S (where available) is 16bit sum of bytes.

See also

■ [Data.SAVE.<format>](#)

Format: **Data.SAVE.AsciiOct** <file> [<addressrange>] [/<option>]
 Data.SAVE.AsciiOctP <file> [<addressrange>] [/<option>]
 Data.SAVE.AsciiOctA <file> [<addressrange>] [/<option>]
 Data.SAVE.AsciiOctS <file> [<addressrange>] [/<option>]

<option>: **OFFSET** <offset>
 <generic_save_options>

Saves a file in a simple ASCII file format.

<option> For a description of the generic options, see [<generic_save_options>](#).

Examples:

```
; Command
Data.SAVE.AsciiOct out.txt 0x0--0x1f
; out.txt:
<STX>$A000000,
356 335 314 273 252 002 003 004 005 006 007 010 011 012 013 014
015 016 017 020 021 022 023 024 025 026 027 030 031 032 033 034
<ETX>$S100261

; Command
Data.SAVE.AsciiOctP out.txt 0x0--0x1f
; out.txt:
<STX>$A000000,
356%335%314%273%252%002%003%004%005%006%007%010%011%012%013%014%
015%016%017%020%021%022%023%024%025%026%027%030%031%032%033%034%
<ETX>$S100262

; Command
Data.SAVE.AsciiOctA out.txt 0x0--0x1f
; out.txt:
<STX>$A000000,
356'335'314'273'252'002'003'004'005'006'007'010'011'012'013'014'
015'016'017'020'021'022'023'024'025'026'027'030'031'032'033'034'
<ETX>$S100262

; Command
Data.SAVE.AsciiOctA out.txt 0x0--0x1f
; out.txt:
<DC2>$A000000,
356'335'314'273'252'002'003'004'005'006'007'010'011'012'013'014'
015'016'017'020'021'022'023'024'025'026'027'030'031'032'033'034'
<DC4>$S100262
```

Key: <STX>=(char)0x02, <ETX>=(char)0x03, <DC2>=(char)0x12, <DC4>=(char)0x14Lines end with <CR><LF>=(char)0x0D(char)0x0A, added after the byte if (addr & 0x0F == 0x0F).
Address prefix is \$A, Checksum \$\$ (where available) is 16bit sum of bytes.

See also

- [Data.SAVE.<format>](#)
- ▲ 'Data Access' in 'EPROM/FLASH Simulator'

Data.SAVE.BDX

Save BDX file

Format:

Data.SAVE.BDX <file> <addressrange> [/<option>]

<option>:

<generic_save_options>

Saves a file in BDX format (binary format).

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)

Data.SAVE.Binary

Save binary file

Format:

Data.SAVE.Binary <file> [<addressrange>] [/<option>]

<option>:

ZIP | Append
<generic_save_options>

The contents of the entire address range are saved if no address parameter has been defined! The save procedure may be interrupted at any time (Control-C).

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)
- [Data.LOAD.Binary](#)

| | |
|-----------|---|
| Format: | Data.SAVE.CCSDAT <file> <addressrange> [/<option>] |
| <option>: | OFFSET <offset> <generic_save_options> |

Saves memory in CCSDAT file format.

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)
- ▲ ['Release Information'](#) in ['Release History'](#)

| | |
|-----------|--|
| Format: | Data.SAVE.DAB <file> <addressrange> [/<option>] |
| <option>: | <generic_save_options> |

Saves memory in DAB file format.

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)
- ▲ ['Release Information'](#) in ['Release History'](#)

| | |
|-----------|--|
| Format: | Data.SAVE.Elf <file> <addressrange> [/<option>] |
| <option>: | ELF32 ELF64 <generic_save_options> |

Saves binary data in ELF format.

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)

Data.SAVE.ESTFB

Save EST flat binary file

| | |
|-----------|--|
| Format: | Data.SAVE.ESTFB <file> <addressrange> [/<option>] |
| <option>: | <generic_save_options> |

Saves memory in EST flat binary file format.

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

- [Data.SAVE.<format>](#)

| | |
|-----------|--|
| Format: | Data.SAVE.IntelHex <file> <addressrange> [/<option>] |
| <option>: | ADDR <address_size> TYPE2 TYPE4 OFFSET <offset> <generic_save_options> |

Saves a file in an IntelHex format.

| | |
|---------------|--|
| ADDR | Defines the <address_size> of the INTEL-HEX file. |
| TYPE2 | Defines 20 bits for the address field. |
| TYPE4 | Defines 32 bits for the address field. |
| OFFSET | Gives the offset to the address range to store. |
| <option> | For a description of the generic options, see <generic_save_options> . |

See also

- [Data.SAVE.<format>](#)
- [Data.LOAD.IntelHex](#)

Data.SAVE.Omf

Save OMF file

| | |
|-----------|--|
| Format: | Data.SAVE.Omf <file> <addressrange> [/<option>] |
| <option>: | <generic_save_options> |

Saves memory in OMF file format. The command is implemented for the OMF-96 format.

| | |
|----------|--|
| <option> | For a description of the generic options, see <generic_save_options> . |
|----------|--|

See also

- [Data.SAVE.<format>](#)
- [Data.LOAD.Omf](#)

Format: **Data.SAVE.PureHEX** *<file> <addressrange> [/<option>]*

<option>: *<generic_save_options>*

Saves memory in pure HEX file format. The output file includes the saved memory contents as ASCII hexadecimal data. After each 18 characters a CR (0x0D) and a LF (0x0A) characters are added.

<option> For a description of the generic options, see [<generic_save_options>](#).

See also

■ [Data.SAVE.<format>](#)

▲ ['Release Information' in 'Release History'](#)

| | |
|-----------|---|
| Format: | Data.SAVE.S1record <file> <range>[<ranges> ...] [/<option>] |
| <option>: | OFFSET RECORDLEN Append SkipErrors <generic_save_options> |

Saves memory content as SREC S19 style / 16-bit address record. The following options are available:

| | |
|------------------|---|
| Append | Appends data to an existing file. |
| OFFSET | Changes the address value to value plus offset. The Srecord will be loaded to the address plus offset value. |
| RECORDLEN | Defines the number of data bytes per line in the Srecord file. Decimal values have to be given with decimal point behind. |
| <option> | For a description of the generic options, see <generic_save_options> . |

Example 1

```
Data.SAVE.S3record mydata.s3 0x1000++0fff
```

Example 2

TRACE32 allows to specify more than one address *<range>*. The ranges are separated by two pipe symbols **||**, no space allowed. The example below is for demo purposes only.

```
Data.dump VM:0x1000

;initialize a TRACE32 virtual memory (VM:) area with a test pattern
Data.PATTERN VM:0x1000++3ff /WordCount

;save three non-contiguous ranges to one S3 file
Data.SAVE.S3record ~~~\s3multirange.s3 VM:0x1000++0f||\
VM:0x1040++1f||VM:0x1110++0f

Data.CLEARVM VM:0x1000++0xFFFF ;clear the 1st 64 kB block of the virtual
memory

;load the S3 file back to the virtual memory
Data.LOAD.S3record ~~~\s3multirange.s3 /VM /OFFSET 0x200
```

See also

- | | | | |
|--------------------------------------|--------------------------------------|--------------------------------------|--|
| ■ Data.SAVE.S2record | ■ Data.SAVE.S3record | ■ Data.SAVE.S4record | ■ Data.SAVE.<format> |
| ■ Data.LOAD.S1record | ■ Data.LOAD.S2record | ■ Data.LOAD.S3record | ■ Data.LOAD.S4record |
| ■ Data.LOAD.SAUF | ■ Data.LOAD.SDS | ■ Data.LOAD.SPARSE | ■ Data.LOAD.SysRof |

Format:

Data.SAVE.S2record <file> <range>[|<ranges> ...] [/<option>]

<option>:

OFFSET | RECORDLEN | Append | SkipErrors
<generic_save_options>

Saves memory content as SREC S28 style / 24-bit address record. The description of options, further information and examples are [here](#).

See also

[■ Data.SAVE.S1record](#)

[■ Data.SAVE.S3record](#)

[■ Data.SAVE.S4record](#)

[■ Data.SAVE.<format>](#)

[■ Data.LOAD.S1record](#)

[■ Data.LOAD.S2record](#)

[■ Data.LOAD.S3record](#)

[■ Data.LOAD.S4record](#)

[■ Data.LOAD.SAUF](#)

[■ Data.LOAD.SDS](#)

[■ Data.LOAD.SPARSE](#)

[■ Data.LOAD.SysRof](#)

Format:

Data.SAVE.S3record <file> <range>[|<ranges> ...] [/<option>]

<option>:

OFFSET | RECORDLEN | Append | SkipErrors
<generic_save_options>

Saves memory content as SREC S37 style / 32-bit address record. The description of options, further information and examples are [here](#).

See also

[■ Data.SAVE.S1record](#)

[■ Data.SAVE.S2record](#)

[■ Data.SAVE.S4record](#)

[■ Data.SAVE.<format>](#)

[■ Data.LOAD.S1record](#)

[■ Data.LOAD.S2record](#)

[■ Data.LOAD.S3record](#)

[■ Data.LOAD.S4record](#)

[■ Data.LOAD.SAUF](#)

[■ Data.LOAD.SDS](#)

[■ Data.LOAD.SPARSE](#)

[■ Data.LOAD.SysRof](#)

| | |
|-----------|---|
| Format: | Data.SAVE.S4record <file> <range>[<ranges> ...] [/<option>] |
| <option>: | OFFSET RECORDLEN Append SkipErrors <generic_save_options> |

Saves memory content as SREC S47 style / 64-bit address record. The description of options, further information and examples are [here](#).

See also

- [■ Data.SAVE.S1record](#)
- [■ Data.SAVE.S2record](#)
- [■ Data.SAVE.S3record](#)
- [■ Data.SAVE.<format>](#)

| | |
|------------------|---|
| Format: | Data.Set [<address> <range>] [{%<format> <value>} [{/<option>}]] |
| <format>: | [<access_format>.<data_format> Float. [leee leeeDbl leeeXt <others>] BE LE BitSwap |
| <access_format>: | Byte Word Long Quad TByte PByte HByte SByte |
| <data_format>: | Byte Word Long Quad TByte PByte HByte SByte |
| <value>: | <data> "<string>" [0] |
| <option>: | Verify ComPare DIFF PlusVM CORE <core_number> |

Write data to memory. If no byte access is possible for an address location, the write is performed in the smallest possible width.

If you run **Data.Set** without command line arguments, then the **Modify Memory** dialog opens.



The data set function may be called by mouse-click (left button) to a data field. By choosing an address range, memory can be filled with a constant.

| | |
|--|---|
| 0 | Writes the "<string>" as a zero-terminated string to memory. |
| BE, LE | Defines byte-order display direction: Big Endian or Little Endian. |
| BitSwap | Reverses the bit-order within a byte. This will not affect the byte-order. |
| Byte (default), Word , TByte , Long , PByte , HByte , SByte , Quad | Data size for integer or string constants. See "Keywords for <width>" , page 11. |

| | |
|----------------------|--|
| ComPare | Compares the data against memory, don't write to memory. |
| CORE <number> | Performs write operation on the specified hardware thread. |
| DIFF | Data is compared against memory. Memory is not changed. The result of the compare is available in the FOUND() function. |
| Float | Data format for floating point constants. |
| Verify | Sets and verifies complete block of data by a following read operation. |

Example 1

Various **Data.Set** operations with and without the use of PRACTICE functions:

```

Data.Set 0x100 "hello world" 0x0           ; set string to memory
Data.Set 0x100 %Long 0x12345678           ; write long word
Data.Set 0x0--0x0ffff 0x0                 ; init memory with 0
Data.Set Var.RANGE(flags) 0x0             ; fill field with constant
Data.Set 0x100--0x3ff %Long 0x20000000    ; fill with long word
Data.Set 0x100--0x3ff %Word 0x2000 /ComPare
                                           ; verify that memory contains
                                           ; this data

Data.Set 0x100 %Float.IeeeDb1 1.25        ; set floating point in
                                           ; IEEE-Double format

PRINT Data.Short(D:0x200)                  ; prints short at address
PRINT Data.Short(D:0x200)                  ; D:0x200

Data.Set 0x4128 %BE %Byte.Long            ; write the 32-bit <data>
0x12345678                                ; bitwise to memory

                                           ; equivalent command
Data.Set 0x4128 0x12 0x34 0x56 0x78

Data.Set 0x4128 %BE %Byte.Long 0xab       ; write the 32-bit <data>
                                           ; bitwise to memory


Data.Set 0x4128 0x00 0x00 0x00 0xab       ; equivalent command

```

Example 2

Shows how to write a zero-terminated string to memory. In this case, a zero-terminated string is written to the TRACE32 virtual memory.

```
Data.Set VM:0x0 "Hello World!" 0 ;set two zero-terminated strings
Data.Set VM:0x30 "Hello Universe!" 0 ;to the TRACE32 virtual memory
```

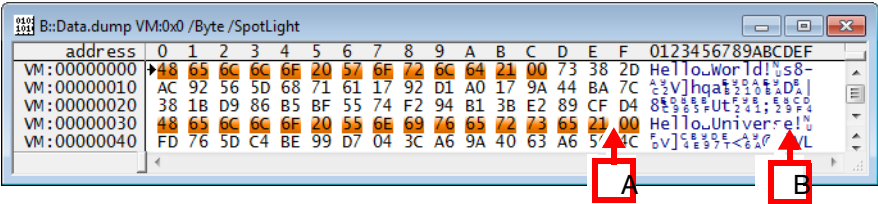

- A In the byte-formatted output, 00 indicates a zero-terminated string.
- B In the ASCII-formatted output, % indicates a zero-terminated string.

Example 3

The **Data.Set** <addressrange> /DIFF command is used together with the following functions:

| | |
|------------------------|---|
| FOUND() | Returns TRUE if a difference was found in the comparison. |
| TRACK.ADDRESS() | Returns the address of the first difference. |

```
...
Data.Set 0x0++0xffff 123
Data.Set 0x0++0xffff 123 /DIFF

IF FOUND()
    PRINT "Error found at address " TRACK.ADDRESS()


...
```

See also

- [Data.Out](#)
- [Data.PATTERN](#)
- [Data.PROGRAM](#)
- [Data.Test](#)
- ▲ 'Release Information' in 'Release History'

The **Data.SOFTEPILOG** command group allows to define a sequence of read/write accesses that are automatically performed directly after a **software** breakpoint is written to the memory by the debugger. The complementary command **Data.SOFTPROLOG** performs read/write accesses before a software breakpoint is written to the memory.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.SOFTEPILOG.state** window.

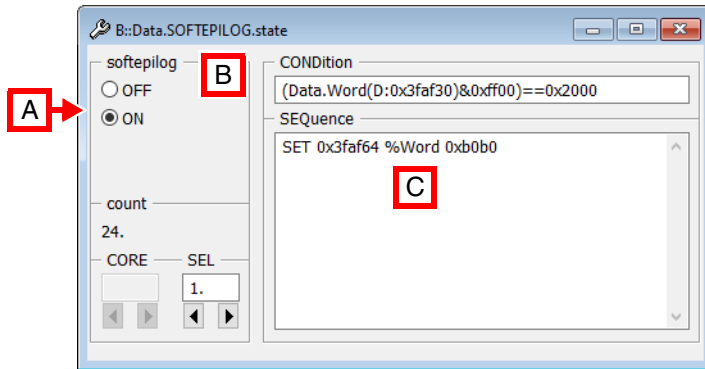

- A** For descriptions of the commands in the **Data.SOFTEPILOG.state** window, please refer to the **Data.SOFTEPILOG.*** commands in this chapter. **Example:** For information about **ON**, see **Data.SOFTEPILOG.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEquence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

Defines a condition on which the command sequence defined with **Data.SOFTEPILOG.Sequence** will be executed directly after a software breakpoint is written to the memory.

| ta.SOFTEPILOG.CORE | Select core for data softepilog |
|--------------------|---------------------------------|
| 0 | 0 |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 10 | 10 |
| 11 | 11 |
| 12 | 12 |
| 13 | 13 |
| 14 | 14 |
| 15 | 15 |
| 16 | 16 |
| 17 | 17 |
| 18 | 18 |
| 19 | 19 |
| 20 | 20 |
| 21 | 21 |
| 22 | 22 |
| 23 | 23 |
| 24 | 24 |
| 25 | 25 |
| 26 | 26 |
| 27 | 27 |
| 28 | 28 |
| 29 | 29 |
| 30 | 30 |
| 31 | 31 |
| 32 | 32 |
| 33 | 33 |
| 34 | 34 |
| 35 | 35 |
| 36 | 36 |
| 37 | 37 |
| 38 | 38 |
| 39 | 39 |
| 40 | 40 |
| 41 | 41 |
| 42 | 42 |
| 43 | 43 |
| 44 | 44 |
| 45 | 45 |
| 46 | 46 |
| 47 | 47 |
| 48 | 48 |
| 49 | 49 |
| 50 | 50 |
| 51 | 51 |
| 52 | 52 |
| 53 | 53 |
| 54 | 54 |
| 55 | 55 |
| 56 | 56 |
| 57 | 57 |
| 58 | 58 |
| 59 | 59 |
| 60 | 60 |
| 61 | 61 |
| 62 | 62 |
| 63 | 63 |
| 64 | 64 |
| 65 | 65 |
| 66 | 66 |
| 67 | 67 |
| 68 | 68 |
| 69 | 69 |
| 70 | 70 |
| 71 | 71 |
| 72 | 72 |
| 73 | 73 |
| 74 | 74 |
| 75 | 75 |
| 76 | 76 |
| 77 | 77 |
| 78 | 78 |
| 79 | 79 |
| 80 | 80 |
| 81 | 81 |
| 82 | 82 |
| 83 | 83 |
| 84 | 84 |
| 85 | 85 |
| 86 | 86 |
| 87 | 87 |
| 88 | 88 |
| 89 | 89 |
| 90 | 90 |
| 91 | 91 |
| 92 | 92 |
| 93 | 93 |
| 94 | 94 |
| 95 | 95 |
| 96 | 96 |
| 97 | 97 |
| 98 | 98 |
| 99 | 99 |

Selects the core for which you want to define one or more data softepilogs.

Example: The following example shows how to define a data softepilog that is executed on core 3 of a multicore chip.

```
;Define the data softepiolog for core 3
Data.SOFTEPILOG.CONDition <your_code>
Data.SOFTEPILOG.SEQuence   <your_code>
```

For information on how to configure two different data softepilogs, see [Data.SOFTEPILOG.SELECT](#).

Format: **Data.SOFTEPILOG.OFF**

Disables the execution of the **Data.SOFTEPILOG** sequence.

Format: **Data.SOFTEPILOG.ON**

Enables the execution of the **Data.SOFTEPILOG** sequence.

Format: **Data.SOFTEPILOG.RESet**

Switches the **Data.SOFTEPILOG** feature off and clears all settings.

Format: **Data.SOFTEPILOG.SELect** *<index_number>*

Increments the index number for each new data softepilog. This is useful, for example, if you need two separate data softepilogs with each data softepilog having its own **Data.SOFTEPILOG.CONDITION**.

TRACE32 automatically assigns the index number 1. to the 1st **Data.SOFTEPILOG.SEquence**. If you require a 2nd, separate data softepilog sequence, then increment the *<index_number>* to 2. Otherwise the 2nd data softepilog will overwrite the 1st data softepilog. You can define a maximum of 10 data softepilogs.

| | |
|--------------------------|--|
| Format: | Data.SOFTEPILOG.SEquence <i><command></i> ... |
| <i><command></i> : | SET <i><address></i> % <i><format></i> <i><data></i> SETI <i><address></i> % <i><format></i> <i><data></i> <i><increment></i> SETS <i><address></i> GETS <i><address></i> |

Defines a sequence of **Data.Set** commands that are automatically executed by the TRACE32 software directly after writing the software breakpoint into the memory.


| | |
|-------------|---|
| SET | Parameters: <i><address></i> % <i><format></i> <i><value></i> Write <i><value></i> with data type <i><format></i> to <i><address></i> |
| SETI | Parameters: <i><address></i> % <i><format></i> <i><start></i> <i><increment></i> At the first time performed, write <i><start></i> to <i><address></i> . <i><start></i> is incremented by <i><increment></i> on each successive call. |
| GETS | Parameters: <i><address></i> % <i><format></i> Reads the value at <i><address></i> and stores it into an internal data buffer. The internal data buffer can contain multiple records and is reset when the command Data.SOFTEPILOG.Sequence is called. |
| SETS | Parameters: <i><address></i> % <i><format></i> If the internal data buffer contains a record for <i><address></i> , the stored value is written to the processor. |

| | |
|---------|------------------------------|
| Format: | Data.SOFTEPILOG.state |
|---------|------------------------------|

Opens the **Data.SOFTEPILOG.state** window, where you can configure data softepilogs.

The **Data.SOFTPROLOG** command group allows to define a sequence of read/write accesses that are automatically performed before a **software** breakpoint is written to the memory by the debugger. The complementary command **Data.SOFTEPILOG** performs read/write accesses directly after a software breakpoint is written to the memory.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.SOFTPROLOG.state** window.

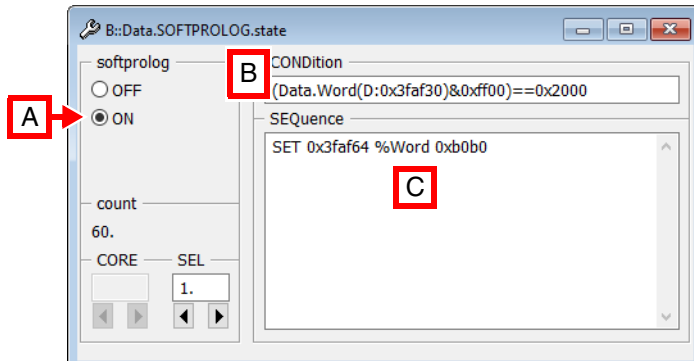

- A** For descriptions of the commands in the **Data.SOFTPROLOG.state** window, please refer to the **Data.SOFTPROLOG.*** commands in this chapter. **Example:** For information about **ON**, see **Data.SOFTPROLOG.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEQUence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

| | |
|------------------|--|
| Format: | Data.SOFTPROLOG.CONDITION <condition> |
| <condition>: | <memory_access> & <mask> == <value> <memory_access> & <mask> != <value> |
| <memory_access>: | Data.Byte (<address>) Data.Word (<address>) Data.Long (<address>) |

Defines a condition on which the command sequence defined with [Data.SOFTPROLOG.SEquence](#) will be executed before a software breakpoint is written to the memory.

| | |
|-----------------|--|
| <memory_access> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|-----------------|--|

| | |
|---------|---|
| Format: | Data.SOFTPROLOG.CORE <core_number> |
|---------|---|

Selects the core for which you want to define one or more data softprologs.

Prerequisite: You have successfully configured an SMP system with the [CORE.ASSIGN](#) command.

Example: The following example shows how to define a data softprolog that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a data softprolog
Data.SOFTPROLOG.CORE 3.

;Define the data softprolog for core 3
Data.SOFTPROLOG.CONDITION <your_code>
Data.SOFTPROLOG.SEquence <your_code>
```

For information on how to configure two different data softprologs, see [Data.SOFTPROLOG.SELect](#).

Format: **Data.SOFTPROLOG.OFF**

Disables the execution of the **Data.SOFTPROLOG** sequence.

Format: **Data.SOFTPROLOG.ON**

Enables the execution of the **Data.SOFTPROLOG** sequence.

Format: **Data.SOFTPROLOG.RESet**

Switches the **Data.SOFTPROLOG** feature off and clears all settings.

Format: **Data.SOFTPROLOG.SELect** *<index_number>*

Increments the index number for each new data softprolog. This is useful, for example, if you need two separate data softprolog with each data softprolog having its own **Data.SOFTPROLOG.CONDition**.

TRACE32 automatically assigns the index number 1. to the 1st **Data.SOFTPROLOG.SEquence**. If you require a 2nd, separate data softprolog sequence, then increment the *<index_number>* to 2. Otherwise the 2nd data softprolog will overwrite the 1st data softprolog. You can define a maximum of 10 data softprolog.

| | |
|------------|---|
| Format: | Data.SOFTPROLOG.SEquence <command> ... |
| <command>: | SET <address> %<format> <data> SETI <address> %<format> <data> <increment> SETS <address> GETS <address> |

Defines a sequence of **Data.Set** commands that are automatically executed by the TRACE32 software before writing the software breakpoint into the memory.

| | |
|-------------|---|
| SET | Parameters: <address> %<format> <value> Write <value> with data type <format> to <address> |
| SETI | Parameters: <address> %<format> <start> <increment> At the first time performed, write <start> to <address>. <start> is incremented by <increment> on each successive call. |
| GETS | Parameters: <address> %<format> Reads the value at <address> and stores it into an internal data buffer. The internal data buffer can contain multiple records and is reset when the command Data.SOFTPROLOG.Sequence is called. |
| SETS | Parameters: <address> %<format> If the internal data buffer contains a record for <address>, the stored value is written to the processor. |



| | |
|---------|--------------------------|
| Format: | Data.EPILOG.state |
|---------|--------------------------|

Opens the **Data.SOFTPROLOG.state** window, where you can configure data softprologs.

Only for PowerPC MPC5xxx, TriCore


Using the **Data.STANDBY** command group, you can define one or more sequences that perform write operations to registers or memory. For example, you can use the **Data.STANDBY** command group to deactivate a watchdog.

These standby data-sequences are executed automatically as soon as target power is switched on while the debugger is in **StandBy** mode (**SYStem.Mode StandBy**):

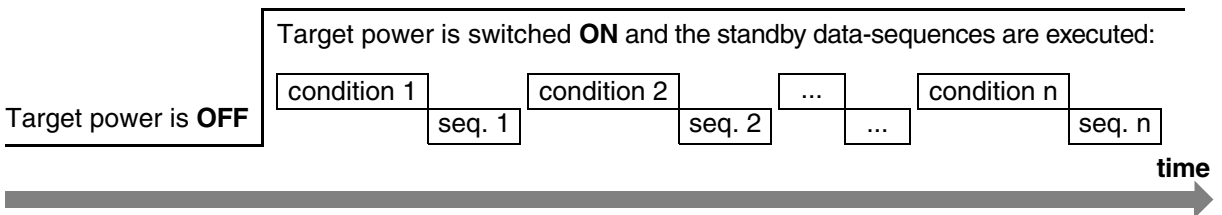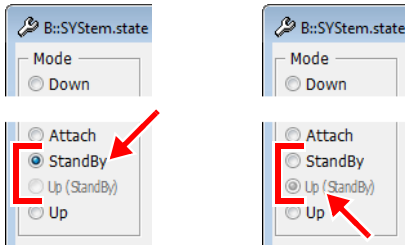

Each sequence can optionally depend on a condition, see also [B] in the figure below.

For configuration of standby data-sequences, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.STANDBY.state** window:

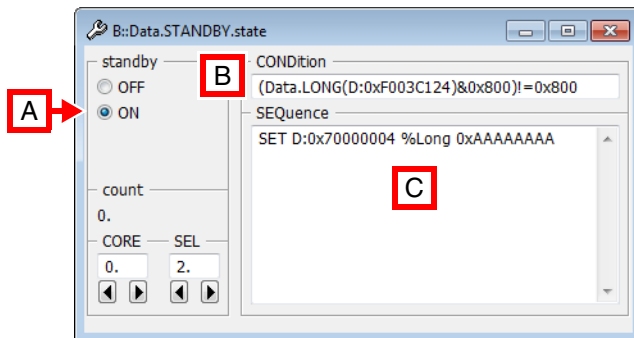

- A** For descriptions of the commands in the **Data.STANDBY.state** window, please refer to the **Data.STANDBY.*** commands in this chapter.
Example: For information about **ON**, see **Data.STANDBY.ON**.
- B** Simple conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Standby data-sequences can be set up in the **SEQUence** field using the memory modification commands **SET**, **SETI**, **GETS**, and **SETS**.

A good way to familiarize yourself with the **Data.STANDBY** command group is to start with the following example.

Example

This demo script illustrates how to define standby data-sequences for two cores.

```
Data.STANDBY.state                ;optional step: open the window

Data.STANDBY.CORE    0            ;let's define two sequences for core 0
Data.STANDBY.SELect  1            ;sequence 1 on core 0

;no condition is specified for sequence 1 on core 0:
Data.STANDBY.SEquence SET D:0x70000000 %Long 0x55555555

;set the index number to 2, else the first sequence would be
;overwritten by the 2nd sequence
Data.STANDBY.SELect  2

;the 2nd sequence consisting of two SET sequences shall be executed
;only if this condition is true:
Data.STANDBY.CONDITION (Data.LONG(D:0xF003C124)&0x800)!=0x800

;define the two SET sequences for the condition above:
Data.STANDBY.SEquence SET D:0x70000004 %Long 0xAAAAAAAA \
                      SET D:0x70000014 %Long 0BBBBBBBBB

Data.STANDBY.CORE    1            ;let's define a sequence for core 1
Data.STANDBY.SELect  1            ;sequence 1 on core 1

;no condition is specified for sequence 1 on core 1:
Data.STANDBY.SEquence SET D:0x70000010 %Long 0x11111111

Data.STANDBY.ON                ;we are now ready to activate the
                               ;standby data-sequences

SYStem.Mode StandBy            ;switch to StandBy mode
```

As soon as target power is switched **ON**, the standby data-sequences are executed.

See also

■ [Data.STANDBY.CONDITION](#) ■ [Data.STANDBY.CORE](#) ■ [Data.STANDBY.OFF](#) ■ [Data.STANDBY.ON](#)
■ [Data.STANDBY.RESet](#) ■ [Data.STANDBY.SELect](#) ■ [Data.STANDBY.SEquence](#) ■ [Data.STANDBY.state](#)
■ [Data.STARTUP](#)

▲ ['Release Information' in 'Release History'](#)

| | |
|------------------|--|
| Format: | Data.STANDBY.CONDition <condition> |
| <condition>: | <memory_access> & <mask> == <value> <memory_access> & <mask> != <value> |
| <memory_access>: | Data.Byte (<address>) Data.Word (<address>) Data.Long (<address>) |

Defines a condition on which a standby data-sequence will be executed automatically. To define the standby data-sequence, use the command **Data.STANDBY.SEquence**.

| | |
|-----------------|---|
| <memory_access> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|-----------------|---|

Example:

```
;reads the long at address 0xF003C124. If the result is not equal to
;0x800,...
Data.STANDBY.CONDition (Data.LONG(D:0xF003C124)&0x800)!=0x800

;... then the standby data-sequence is executed.
Data.STANDBY.SEquence SET D:0x70000004 %Long 0xAAAAAAAA
```

See also

- [Data.STANDBY](#)
- [Data.STANDBY.state](#)

Example: The following example shows how to define a standby data-sequences that is executed on core 3 of a multicore chip.

```

;select the core for which you want to define a standby data-sequence
Data.STANDBY.CORE 3.

;define the standby data-sequence for core 3
Data.STANDBY.CONDITION <your_code>
Data.STANDBY.SEQUENCE <your_code>

```

For information on how to configure two separate standby data-sequences, see [Data.STANDBY.SElect](#).

See also

- Data.STANDBY ■ Data.STANDBY.state

Switch all sequences off

See also

- Data.STANDBY ■ Data.STANDBY.state

Only for PowerPC MPC5xxx, TriCore

| | |
|---------|------------------------|
| Format: | Data.STANDBY.ON |
|---------|------------------------|

Switches the **Data.STANDBY** feature on.

See also

- [Data.STANDBY](#)
- [Data.STANDBY.state](#)

Only for PowerPC MPC5xxx, TriCore

| | |
|---------|---------------------------|
| Format: | Data.STANDBY.RESet |
|---------|---------------------------|

Switches the **Data.STANDBY** feature off and clears all settings.

See also

- [Data.STANDBY](#)
- [Data.STANDBY.state](#)

Format:

Data.STANDBY.SELECT <index_number>

Selects the sequence that is configured by the subsequent **Data.STANDBY.*** commands. This is useful, for example, when you are working with multiple sequences and conditions.

Sequence **1.** is automatically selected after start-up. You can define up to 10 sequences.

Example: This script defines two separate sequences with the index numbers **1.** and **2.**. Sequence 2, in turn, consists of two **SET** sequences that depend on the *same* condition. The backslash **** is used as a line continuation character. No white space permitted after the backslash.



```
;optional step for you: set the index number to 1.
Data.STANDBY.SELECT 1.

;no condition is specified for this sequence:
Data.STANDBY.SEQUENCE SET D:0x70000000 %Long 0x55555555

;set the index number to 2, else the first sequence would be
;overwritten by the 2nd sequence
Data.STANDBY.SELECT 2.

;the 2nd sequence consisting of two SET sequences shall be executed
;only if this condition is true:
Data.STANDBY.CONDITION (Data.LONG(D:0xF003C124)&0x800)!=0x800

;define the two SET sequences for the condition above:
Data.STANDBY.SEQUENCE SET D:0x70000004 %Long 0xAAAAAAAA \
                        SET D:0x70000014 %Long 0BBBBBBBBB
```

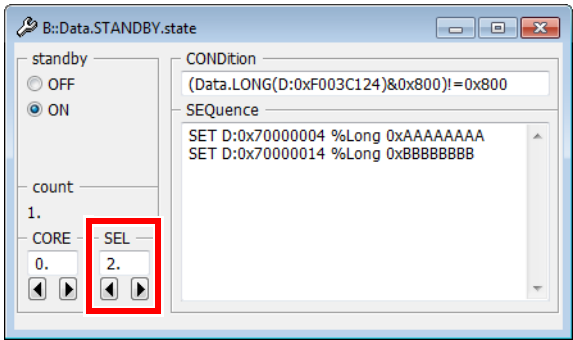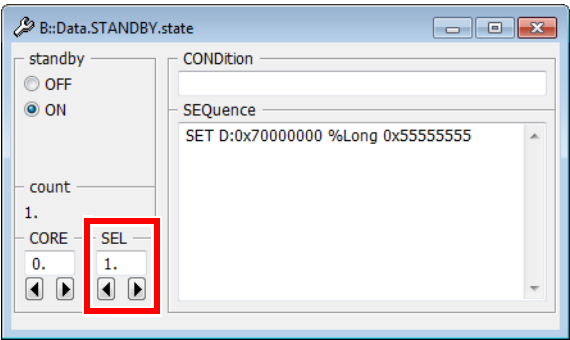

See also

- Data.STANDBY
- Data.STANDBY.state

| | |
|--------------------------|--|
| Format: | Data.STANDBY.SEquence <i><command></i> ... |
| <i><command></i> : | SET <i><address></i> % <i><format></i> <i><data></i> SETI <i><address></i> % <i><format></i> <i><data></i> <i><increment></i> SETS <i><address></i> GETS <i><address></i> |

Defines a standby data-sequence consisting of memory modification commands that are automatically executed when TRACE32 leaves the **StandBy** mode and switches to **SYStem.Mode Up (StandBy)**.

| | |
|-------------|--|
| SET | Write <i><data></i> to <i><address></i> . |
| SETI | Write <i><data></i> to <i><address></i> . Then <i><data></i> is incremented by <i><increment></i> . |
| GETS | Save the data at <i><address></i> . |
| SETS | Write the data that was saved with a previous GETS back to <i><address></i> . |

Example: This script defines a standby data-sequence consisting of two SET sequences. The backslash \ is used as a line continuation character. No white space permitted after the backslash.

```
Data.STANDBY.SEquence SET D:0x70000004 %Long 0xAAAAAAAA \  
                      SET D:0x70000014 %Long 0BBBBBBBBB
```

See also

- [Data.STANDBY](#)
- [Data.STANDBY.state](#)


The screenshot shows the 'B:Data.STANDBY.state' dialog box. In the 'standby' section, the 'ON' radio button is selected, indicated by a red box with the letter 'A'. The 'CONDITION' field contains the expression `(Data.LONG(D:0xF003C124)&0x800)!=0x800`. The 'SEQUENCE' field contains the command `SET D:0x70000004 %Long 0xAAAAAAAA`. The 'count' field is set to 0. The 'CORE' and 'SEL' fields are set to 0 and 2, respectively, with navigation arrows below them.

Example: For information about **ON**, see [Data.STANDBY.ON](#).

- Data.STANDBY
- Data.STANDBY.CONDITION
- Data.STANDBY.CORE
- Data.STANDBY.OFF
- Data.STANDBY.ON
- Data.STANDBY.RESET
- Data.STANDBY.SELECT
- Data.STANDBY.SEQUENCE

The **Data.STARTUP** command group allows to define a sequence of **Data.Set** commands that are executed when the debugger is activated with **SYSem.Mode Up**.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.STARTUP.state** window:

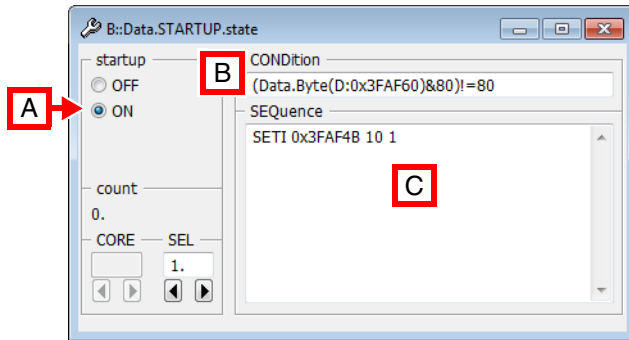

- A** For descriptions of the commands in the **Data.STARTUP.state** window, please refer to the **Data.STARTUP.*** commands in this chapter.
Example: For information about **ON**, see **Data.STARTUP.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEquence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

See also

- | | | | |
|--|---------------------------------------|---|--------------------------------------|
| ■ Data.STARTUP.CONDition | ■ Data.STARTUP.CORE | ■ Data.STARTUP.OFF | ■ Data.STARTUP.ON |
| ■ Data.STARTUP.RESet | ■ Data.STARTUP.SELect | ■ Data.STARTUP.SEquence | ■ Data.STARTUP.state |
| ■ Data.STANDBY | ■ Data.ATTACH | ■ Data.EPILOG | ■ Data.PROLOG |

| | |
|------------------|--|
| Format: | Data.STARTUP.CONDITION <condition> |
| <condition>: | <memory_access> & <mask> == <value> <memory_access> & <mask> != <value> |
| <memory_access>: | Data.Byte (<address>) Data.Word (<address>) Data.Long (<address>) |

Defines a condition on which the command sequence defined with **Data.STARTUP.SEQUENCE** will be executed periodically.

| | |
|-----------------|---|
| <memory_access> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|-----------------|---|

Examples:

```
; reads the long at address D:0x3faf30, proceeds a binary AND with
; a constant (here 0xffffffff). If the result is equal to 0x80000000 the
; condition is true and the defined sequence is executed.
Data.STARTUP.CONDITION (Data.Long(D:0x3faf30)&0xffffffff)==0x80000000
```

```
; read the word at address D:0x3faf30
Data.STARTUP.CONDITION (Data.Word(D:0x3faf30)&0xff00)!=0x8000
```

```
; reads the byte at address D:0x3faf30
Data.STARTUP.CONDITION (Data.Byte(D:0x3faf30)&0xf0)!=0x80
```

See also

- [Data.STARTUP](#)
- [Data.STARTUP.state](#)

Format: **Data.STARTUP.CORE** *<core_number>*

Selects the core for which you want to define one or more data startup sequences.

Prerequisite: You have successfully configured an SMP system with the [CORE.ASSIGN](#) command.

Example: This script shows how to define a startup sequence that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a startup sequence
Data.STARTUP.CORE 3.

;Define the startup sequence for core 3
Data.STARTUP.CONDITION <your_code>
Data.STARTUP.SEQUENCE <your_code>
```

For information on how to configure two different startup sequences, see [Data.STARTUP.SELECT](#).

See also

■ [Data.STARTUP](#)

■ [Data.STARTUP.state](#)

Format:

Data.STARTUP.OFF

Switches the **Data.STARTUP** feature off.

See also

- [Data.STARTUP](#)
- [Data.STARTUP.state](#)

Format:

Data.STARTUP.ON

Switches the **Data.STARTUP** feature on.

See also

- [Data.STARTUP](#)
- [Data.STARTUP.state](#)

Format:

Data.STARTUP.RESet

Switches the **Data.STARTUP** feature off and clears all settings.

See also

- [Data.STARTUP](#)
- [Data.STARTUP.state](#)

Format: **Data.STARTUP.SELect** *<serial_number>*

Increments the index number for each new startup sequence. This is useful, for example, if you need two separate startup sequences with each sequence having its own **Data.STARTUP.CONDITION**.

TRACE32 automatically assigns the index number 1. to the first **Data.STARTUP.SEQUENCE**. If you require a second, separate startup sequence, then increment the *<index_number>* to 2. Otherwise the second startup sequence will overwrite the first one. You can define a maximum of 10 startup sequences.

Example 1: Two startup sequences with the *same* **Data.STARTUP.CONDITION** may have the *same* index number. The backslash `\` is used as a line continuation character. No white space permitted after the backslash.

```
;Set the index number to 1.
Data.STARTUP.SELect 1.

;Startup sequences shall be executed only if this condition is true:
Data.STARTUP.CONDITION (Data.Word(D:0x4faf34)&0xff00)==0x4000

;Define the two startup sequences:
Data.STARTUP.SEQUENCE SET 0x4faf54 %Word 0xC0C0 \
                        SET 0x4faf64 %Word 0xD0D0
```

Example 2: Two startup sequences with *different* **Data.STARTUP.CONDITION** settings require two *different* index numbers.

```
;1st startup sequence - TRACE32 automatically sets the index number to 1.
Data.STARTUP.SELect 1.

;If this startup condition is true, ...
Data.STARTUP.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x2000

;... then the 1st startup sequence will be executed
Data.STARTUP.SEQUENCE SET 0x4faf58 %Word 0xE0E0

;Increment the index number to define the 2nd startup sequence
Data.STARTUP.SELect 2.

;If this data startup condition is true, ...
Data.STARTUP.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x3000

;... then the 2nd startup sequence will be executed
Data.STARTUP.SEQUENCE SET 0x4faf58 %Word 0xF0F0
```

See also

■ [Data.STARTUP](#)

■ [Data.STARTUP.state](#)

Format: **Data.STARTUP.SEquence** *<command>* ...

<command>: **SET** *<address>* %*<format>* *<data>*
 SETI *<address>* %*<format>* *<data>* *<increment>*
 SETS *<address>*
 GETS *<address>*

Defines a sequence of **Data.Set** commands that are executed when the emulation system is activated.

SET Write *<data>* to *<address>*.

SETI Write *<data>* to *<address>*.
 Then *<data>* is incremented by *<increment>*.

GETS Save the data at *<address>*.

SETS Write the data that was saved with a previous GETS back to *<address>*.

Examples:


```
Data.STARTUP.SEquence SET 0x3faf50 %Word 0xa0a0
Data.STARTUP.SEquence SETI 0x3faf50 %Word 0xa0a0 2
Data.STARTUP.SEquence SETS 0x3faf60
Data.STARTUP.SEquence GETS 0x3faf60
```

See also

■ [Data.STARTUP](#)

■ [Data.STARTUP.state](#)

Format: **Data.STARTUP.state**

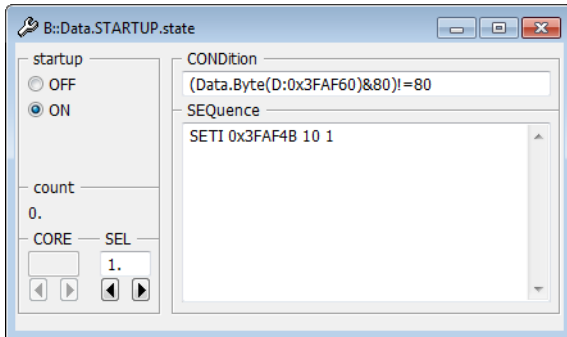

See also

- [Data.STARTUP](#)
 - [Data.STARTUP.CONDITION](#)
 - [Data.STARTUP.CORE](#)
 - [Data.STARTUP.OFF](#)
 - [Data.STARTUP.ON](#)
 - [Data.STARTUP.RESet](#)
 - [Data.STARTUP.SELect](#)
 - [Data.STARTUP.SEQuence](#)
- ▲ 'Release Information' in 'Release History'

Format: **Data.STRING** [%CONTinue] <addressrange>

Displays a string in the selected **AREA** window. The character set is host specific.

CONTinue

Adds the string to the current output line in the selected **AREA** window without inserting a newline character.

Example:

```
AREA.Create TERMINAL           ; create an area
AREA.Select TERMINAL          ; select it for output and input
AREA TERMINAL                  ; show the area in a window
Data.STRING SD:0x1000--0x1fff ; display data in the window
```

See also

■ [Data.dump](#)

■ [Data.WRITESTRING](#)

□ [Data.STRing\(\)](#)

▲ 'Release Information' in 'Release History'

Format: **Data.SUM** <range> [/<format>]

<format>: **Byte | Word | Long**
 RotByte | RotWord | RotLong
 XorWord9 | RotWord9
 CRC16 | CRC32 | CRC
 Even | Odd
 InvByte | InvWord | InvLong
 ByteSWAP

The *format* option allows to select an algorithm to determine the check sum. The default setting is **XorWord9**. The resulting checksum is available for PRACTICE by the **Data.SUM()** function.

| Checksum | Algorithms |
|----------------------------------|---|
| Byte | Sum bytes (returns a 32-bit checksum) |
| Word | Sum words (returns a 32-bit checksum) |
| Long | Sum longs (returns a 32-bit checksum) |
| RotByte | Sum byte and rotate byte left circular (returns a 8-bit checksum) |
| RotWord | Sum word and rotate word left circular (returns a 16-bit checksum) |
| RotLong | Sum long and rotate long left circular (returns a 32-bit checksum) |
| CRC16 | 16-bit CRC algorithm (ZMODEM variant) |
| CRC32 | 32-bit CRC algorithm (PKZIP variant) |
| CRC <i><params></i> | <p>Usage:</p> <pre>/CRC <checksum_width> <polynom> <input_reflection 0/1> <output_reflection 0/1> <CRC init> <output XOR value></pre> <p><i><polynom_width></i> : Size of CRC Checksum in bits <i><polynom></i> : Polynom (without MSB which has to be 1). <i><input_reflection></i> : if not zero, input will be reflected (LSB of a byte will be processed first) <i><output_reflection></i>: if not zero, output will be reflected (bit ordering will be reversed) <i><crc_init></i> : Initial value, which is XORed to input <i><output_xor></i> : Value which will be XORed to output</p> <p>/CRC16 is a synonym for /CRC 16. 0x1021 0 0 0x0 0x0</p> <p>The official CRC16 CCITT algorithm should be the same as /CRC 16. 0x1021 1 1 0x0 0x0</p> <p>/CRC32 is a synonym for /CRC 32. 0x04C11DB7 1 1 0xFFFFFFFF 0xFFFFFFFF This is the CRC used in the various "ZIP" utilities.</p> <p>The Unix "cksum" utility uses the same as /CRC 32. 0x04C11DB7 0 0 0x0 0xFFFFFFFF NOTE: The cksum utility adds the length of the text in little endian before calculating the CRC. If you want to get the same result you need to emulate this behavior by also adding the length of the text to the end of the text.</p> |
| Even | Sum even bytes (returns a 32-bit checksum) |

| | |
|-----------------|--|
| Odd | Sum odd bytes (returns a 32-bit checksum) |
| RotWord9 | Rotate words special (OS-9 compatible) (returns a 16-bit checksum) |
| XorWord9 | exor of all words, start-value = 0xffff (OS-9 compatible) (returns a 16-bit checksum) |
| InvByte | Sum bitwise inverted bytes (returns a 32-bit checksum) |
| InvWord | Sum bitwise inverted words (returns a 32-bit checksum) |
| InvLong | Sum bitwise inverted longs (returns a 32-bit checksum) |
| ByteSWAP | Swap the endianness before adding the bytes. This allow to calculate a little-endian checksum on a big-endian system and vice versa. |

Examples:

```
; checksum over EPROM
...
Data.SUM 0x0--0x0ffff
IF Data.SUM() != 3426
    STOP "Error Eprom"
...
```

```
; checksum across memory, OS-9 compatible
Data.SUM 0x1002--0x1bff /XorWord9
```

```
; calculate a 32-bit check sum, byte summarizing the memory contents
; bitwise
Data.SUM 0x0--0x1ffffb /Byte

; place resulting checksum in memory
Data.Set 0x1ffffc %Long Data.SUM()
```

See also

■ [Data.Test](#)

□ [Data.SUM\(\)](#)

| | |
|---------------|---|
| Format: | Data.TABLE <base> <range> <size> <element> [<element>...] [/<option> ...] |
| <element>: | [%<format>] [<offset> <offrange>] |
| <format>: | Decimal [.<width> [.<endianness> [.<bitorder>]]] DecimalU [.<width> [.<endianness> [.<bitorder>]]] Hex [.<width> [.<endianness> [.<bitorder>]]] HexS [.<width> [.<endianness> [.<bitorder>]]] OCTal [.<width> [.<endianness> [.<bitorder>]]] Ascii [.<width> [.<endianness> [.<bitorder>]]] Binary [.<width> [.<endianness> [.<bitorder>]]] Float [.<float_rep> [.<endianness>]] sYmbol [.<width> [.<endianness> [.<bitorder>]]] Var DUMP [.<width> [.<endianness> [.<bitorder>]]] Byte [.<endianness> [.<bitorder>]] Word [.<endianness> [.<bitorder>]] Long [.<endianness> [.<bitorder>]] Quad [.<endianness> [.<bitorder>]] TByte [.<endianness> [.<bitorder>]] PByte [.<endianness> [.<bitorder>]] HByte [.<endianness> [.<bitorder>]] SByte [.<endianness> [.<bitorder>]] |
| <width>: | Byte Word Long Quad TByte PByte HByte SByte |
| <endianness>: | DEFault LE BE |
| <bitorder>: | DEFault BitSwap |
| <option>: | CORE <core_number> COVerge CTS Track FLAG <flag> CFlag <cflag> Mark <break> |

| | |
|-----------------------|---|
| <flag>: | Read Write NoRead NoWrite |
| <cflag>: | OK NoOK NOTEXEC EXEC |
| <break>: | Program HII Spot Read Write Alpha Beta Charly Delta Echo |


Displays an array without high-level information. If an address is given, it will specify the base address of an array of unlimited size. A range specifies an array of limited size.

| | |
|--|---|
| <base>, <range> | Base address or address range of data structure |
| <size> | Size in bytes of a single element of the data structure |
| <offset> <offrange> | relative byte offset of the element |
| Decimal, DecimalU,... | Refer to “Keywords for <format>” , page 10 |
| Byte, Word, ... | Refer to “Keywords for <width>” , page 11 |
| DEFault, BE, LE | Define byte-order display direction: default target endianness, Big Endian or Litte Endian |
| DEFault, BitSwap | BitSwap allows to display data in reverse bit-order in each byte. If BitSwap is used together with BE or LE, the byte order will not change, otherwise BitSwap will also reverse the byte-order. |
| CORE <core> | Display memory from the perspective of the specified core /SMP debugging only). |
| COVerage | Highlight data memory locations that have never been read/written. |
| Track | Track the window to the reference address of other windows. |
| Mark <break> | Highlight memory locations for which the specified breakpoint is set. |
| CTS | Display CTS access information when CTS mode is active. |

```
; Displays an array starting at symbol 'xarray' with the size of 14 bytes
; for each element.
; The first two long-words are display in hexadecimal.
; The next two bytes as word in decimal and the last four bytes are
; assumed to be an IEEE floating point number.
```

```
Data.TABLE xarray 14. %Hex.Long 0x0--0x7 %Decimal.Word 0x8 %Float.Ieee
0x0a
```

Sample window for displaying an array.

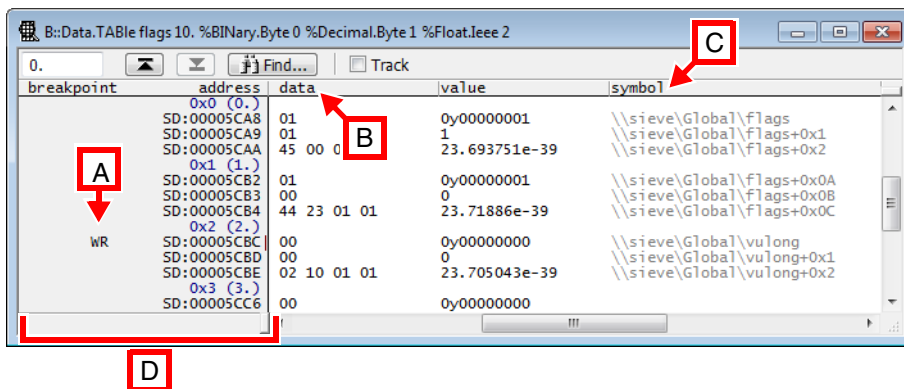

- A Read/Write breakpoint (created with [Break.Set](#)).
- B Hex data.
- C Symbolic address.
- D Scale area.

The scale area contains Flag and Breakpoint information, memory classes and addresses. The [state line](#) displays the currently selected address, both in hexadecimal and symbolic format. By double-clicking a data word, a [Data.Set](#) command can be executed on the current address.

By holding down the right mouse button, the most important memory functions can be executed via the **Data Address** pull-down menu. If the **Mark** option is on, the relevant bytes will be highlighted. For more information, see [Data.dump](#).

See also

- [Data.CHAIN](#)
- [Data.dump](#)
- [Data.Print](#)
- [Data.View](#)

| | |
|---------|---|
| Format: | Data.TAG <address> <patcharea> <tagarea> [/INTR] |
|---------|---|

The command patches binary code to generate one tag for statistical analysis. Similar to **Data.TAGFunc** command, but generates no symbols and no breakpoints.

See also

- [Data.TAGFunc](#)

Data.TAGFunc

Tag code for analysis

| | |
|------------|---|
| Format: | Data.TAGFunc [<group> <range>] <patch> [<tags>] [/<options>] |
| <tags>: | <tags_entry> [<tags_exit> [<tags_parameter>]] |
| <options>: | INTR Parameter |

The command patches binary code to generate the tags required for statistical performance analysis (e.g. **Analyzer.STATistic.Func**) or function parameter trace and trigger. The optional group argument defines which modules or programs should be modified. The extra code generated is placed within the range defined by patch area. The tags parameter define the placement of the tag variables. Without this argument the tags will be placed at the end of the patch area. On processors with data cache the tag variables must be placed in a not cached area. When a second tag range is defined, the exit point tags are placed in an extra memory area. The third tag range is used for the parameter tags (if used). The command generates also the required breakpoints and symbols for the analysis. Functions are only patched if there is enough space for the modification. Depending on the processor different strategies are used to jump from the program to the patch area. Placing the patch area at a location that can be reached by short branches or jumps can result in more possible patches. Functions which can't be patched are listed in the **AREA** window. The **INTR** option marks the functions as interrupt functions for the statistic analysis. The **Parameter** option generates tags to trace or trigger on function parameters and return values. The patches and symbols generated by this command can be removed by the **Data.UNTAGFunc** command.

This command can be used for the following features:

- Detailed performance analysis with pipelined CPUs. This avoids the prefetching problem.
- Performance analysis with instruction caches enabled. The tags must be placed into a non-cached area in this case.
- Function parameter trace and trigger. Traces all function parameters and return values. The tags can also be used to trigger on specific parameter values or return values. This also adds a system call parameter trace to procedure based operating systems (when the kernel routines are tagged).
- Function call and parameter history. The last parameters and return values for each function can be viewed. This feature is also possible with the low cost BDM/Monitor debuggers.

```
Data.LOAD.Ieee mcp.x /Puzzled
; load the application
Data.TAGFunc , 0x08000--0x0bfff /Parameter
; modify the whole program
Analyzer.ReProgram perf
; program the analyzer
Go
; start measurement
...

Break
; stop measurement
Analyzer.STATistic.TREE
; display results (call tree form)
Analyzer.List FUNCVar TIme.REF
; display parameters (nesting)
```

```
Data.TAGFunc int0--int10 0x8000--0x8fff 0x10000--0x100ff /INTR
; tag interrupts
Data.TAGFunc main--last 0x9000--0xffff 0x10100--0x1ffff
; tag regular funcs
```

See also

■ [Data.TAG](#)

■ [Data.UNTAGFunc](#)

| | |
|-----------|---|
| Format: | Data.Test <address_range> [/<option>] |
| <option>: | Toggle Prime RANDOM PRANDOM AddrBus Repeat [<count>] WriteOnly ReadOnly NoBreak Byte Word Long Quad TByte PByte HByte SByte |

Performs an integrity test of the memory in the specified <address_range> and prints a message indicating success or failure of the test.

Depending on the options, the test detects problems with:

- Read and/or write accesses
- Address line failures
- Aliases addresses (mapping addresses beyond the capacity of a memory to low addresses)

The memory test can be aborted at any time by pressing the **STOP** button on the TRACE32 [main toolbar](#).

| | |
|--------------|--|
| NOTE: | The Data.Test command is not meant to detect where the target system has implemented memory. Only use it as a pure integrity check. |
|--------------|--|

| | |
|-------------------------|---|
| Toggle (default) | Memory contents are read in one block at a time, and inverted twice, thereby not altering memory contents. NOTE: problems with aliases addresses are not detected by this test. |
| Prime | The defined range is completely filled with a test pattern and is subsequently verified. NOTE: The length of the test pattern is a prime, but not the data itself. Original memory contents are lost. This test detects address line failures or mirrored partitions within a memory. Can be combined with WriteOnly or ReadOnly . |
| RANDOM | Pattern is a random sequence. |

| | |
|------------------------|---|
| PRANDOM | Pattern is a pseudo random sequence. Can be combined with WriteOnly or ReadOnly . |
| Repeat | Memory test is repeated several times. If no parameter is used, the test continues to repeat until stopped manually. |
| WriteOnly | Memory write only. |
| ReadOnly | Memory read only. |
| NoBreak | Even in the case of memory error, the memory test does not abort. |
| Byte, Word, ... | Specify memory access size. See “ Keywords for <width> ”, page 11. If no access size is specified, the debugger uses the optimum size for the processor architecture. |

The options **WriteOnly** and **ReadOnly** are useful if there are additional operations to be performed between writing and reading (verification), e.g.

- Changing the configuration of a memory controller, e.g. for a different access timing
- Enabling the read access
- Programming the FLASH memory (see example below)

To ensure that the read data is verified with the corresponding write data, **WriteOnly** and **ReadOnly** can only be combined with options that generate predictable data, e.g. **Prime** and **PRANDOM**.

Examples:

```

Data.Test 0x0--0x0ffff /Prime           ; Memory test where the
                                         ; length of the test pattern
                                         ; is a prime.

Data.Test 0x0--0x0ffff /Repeat          ; Memory test until memory
                                         ; error occurs or abort by
                                         ; means of keyboard.

Data.Test 0x0--0x0ffff /Prime /Repeat 3. ; Memory test where the
                                         ; length of the test pattern
                                         ; is a prime.
                                         ; The memory test is
                                         ; repeated 3 times.

```

Test for FLASH memory (write and read-back identical pattern).

```

...                                     ; FLASH declaration

FLASH.ReProgram ALL

Data.Test 0x0--0x0ffff /WriteOnly /Prime ; make only write cycles

```

```
FLASH.ReProgram off
```

```
Data.Test 0x0--0x0ffff /ReadOnly /Prime ; make only read cycles
```

```
...
```

The **Data.Test** command affects the following functions:

| | |
|----------------|---|
| FOUND() | Returns TRUE if a memory error was found. |
|----------------|---|

| | |
|------------------------|---|
| TRACK.ADDRESS() | Returns the address of the first error. |
|------------------------|---|

```
...
```

```
Data.Test 0x0++0xffff /Prime
```

```
IF Found()
```

```
    PRINT "Error found at address " TRACK.ADDRESS()
```

```
...
```

See also

[■ Data.dump](#)[■ Data.Out](#)[■ Data.PATTERN](#)[■ Data.Set](#)[■ Data.SUM](#)[■ FLASHFILE.TEST](#)[■ SETUP.TIMEOUT](#)[□ FOUND\(\)](#)[▲ 'Release Information' in 'Release History'](#)

Format:


Data.TestList [*<address_range>*] [/*<option>* ...]

<option>:

64K | 1M

Data.TestList is non-destructive test to find out which memory type is at which address in your target. By default, the smallest resolution is 4K. By choosing an *<option>*, the specified overall *<address_range>* is divided into 64K or 1M sized ranges of which only the first 16K are tested.

The **Data.TestList** window displays one line per result for the specified *<address_range>*.

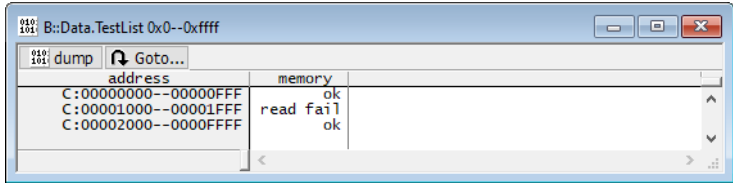


The following results are possible:

- ok

RAM
- read only

ROM/FLASH
- read fail

no memory
- write fail




The command **Data.TestList** may cause a “debug port fail” error if the peripherals are accessed.

The **Data.TIMER** command group allows to define a sequence of **Data.Set** commands that are executed periodically. This command group can be used e.g. to trigger a watchdog while the program execution is stopped.

The command is only active when the core is halted in debug mode.

For configuration, use the TRACE32 command line, a PRACTICE script (*.cmm), or the **Data.TIMER.state** window:

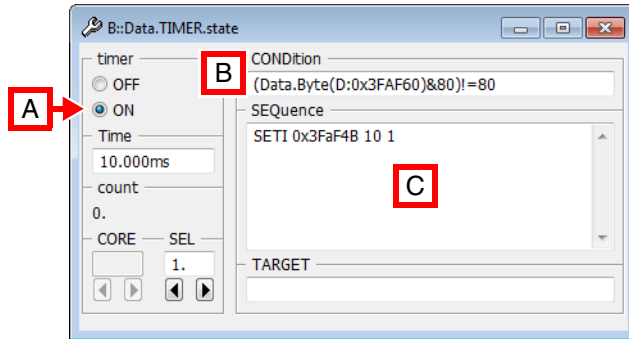

- A** For descriptions of the commands in the **Data.TIMER.state** window, please refer to the **Data.TIMER.*** commands in this chapter. Example: For information about **ON**, see **Data.TIMER.ON**.
- B** Conditions can be set up in the **CONDition** field using the functions **Data.Byte()**, **Data.Long()**, or **Data.Word()**.
- C** Access sequences can be set up in the **SEQuence** field using the *<data_set_commands>* **SET**, **SETI**, **GETS**, and **SETS**.

See also

- | | | | |
|--|-------------------------------------|--|---------------------------------------|
| ■ Data.TIMER.CONDition | ■ Data.TIMER.CORE | ■ Data.TIMER.ERRORSTOP | ■ Data.TIMER.OFF |
| ■ Data.TIMER.ON | ■ Data.TIMER.RESet | ■ Data.TIMER.SElect | ■ Data.TIMER.SEQuence |
| ■ Data.TIMER.state | ■ Data.TIMER.TARGET | ■ Data.TIMER.Time | ■ Data.ATTACH |
| ■ Data.EPILOG | ■ Data.PROLOG | | |

| | |
|------------------|--|
| Format: | Data.TIMER.CONDition <condition> |
| <condition>: | <memory_access> & <mask> == <value> <memory_access> & <mask> != <value> |
| <memory_access>: | Data.Byte (<address>) Data.Word (<address>) Data.Long (<address>) |

Defines a condition on which the command sequence defined with **Data.TIMER.SEquence** will be executed periodically.

| | |
|-----------------|---|
| <memory_access> | Supported Data.*() functions are: <ul style="list-style-type: none">• Data.Byte() and its short form D.B()• Data.Long() and its short form D.L()• Data.Word() and its short form D.W() |
|-----------------|---|

Examples:

```
; Data.TIMER is only active if most significant bit of
; 32-bit word at address 0x3fa30 is set.
Data.TIMER.CONDition (Data.Long(D:0x3fa30)&0x80000000)!=0
```

```
; Data.TIMER is only active if most significant bit of
; 16-bit word at address 0x3fa30 is set to value 0x3344.
Data.TIMER.CONDition Data.Word(D:0x3fa30)==0x3344
```

```
; Data.TIMER is only active if most significant bit of
; byte at address 0x3fa30 has most significant bits set to b'10.
Data.TIMER.CONDition Data.Byte(D:0x3fa30)==0y10xxXXXX
```

See also

- [Data.TIMER](#)
- [Data.TIMER.state](#)

Format: **Data.TIMER.CORE** *<core_number>*

Selects the core for which you want to define one or more data timer sequences.

Prerequisite: You have successfully configured an SMP system with the [CORE.ASSIGN](#) command.

Example: This script shows how to define a data timer sequence that is executed on core 3 of a multicore chip.

```
;Select the core for which you want to define a sequence
Data.TIMER.CORE 3.

;Define the sequence for core 3
Data.TIMER.CONDITION <your_code>
Data.TIMER.SEQUENCE <your_code>
```

For information on how to configure two different sequences, see [Data.TIMER.SELECT](#).

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Format:

Data.TIMER.ERRORSTOP [ON | OFF]

Default: ON.

If this command is set to OFF, the **Data.TIMER** sequence is not stopped on memory access errors.

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Data.TIMER.OFF

Switch timer off

Format:

Data.TIMER.OFF

Switches the **Data.TIMER** feature off.

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Data.TIMER.ON

Switch timer on

Format:

Data.TIMER.ON

Switches the **Data.TIMER** feature on.

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Format: **Data.TIMER.RESet**

Switches the **Data.TIMER** feature off and clears all settings.

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Data.TIMER.SELect

Increment the index number to the next sequence

Format: **Data.TIMER.SELect** *<serial_number>*

Increments the index number for each new sequence. This is useful, for example, if you need two separate sequences with each sequence having its own **Data.TIMER.CONDITION**.

TRACE32 automatically assigns the index number 1. to the first **Data.TIMER.SEquence**. If you require a second, separate sequence, then increment the *<index_number>* to 2. Otherwise the second sequence will overwrite the first one. You can define a maximum of 10 sequences.

Example 1: Two sequences with the *same* **Data.TIMER.CONDITION** may have the *same* index number. The backslash `\` is used as a line continuation character. No white space permitted after the backslash.

```
;Set the index number to 1.
Data.TIMER.SELect 1.

;Sequences shall be executed only if this condition is true:
Data.TIMER.CONDITION (Data.Word(D:0x4faf34)&0xff00)==0x4000

;Define the two sequences:
Data.TIMER.SEquence SET 0x4faf54 %Word 0xC0C0 \
                    SET 0x4faf64 %Word 0xD0D0
```

Example 2: Two sequences with *different* **Data.TIMER.CONDITION** settings require two *different* index numbers.

```
;1st sequence - TRACE32 automatically sets the index number to 1.
Data.TIMER.SELect 1.

;If this condition is true, ...
Data.TIMER.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x2000

;... then the 1st sequence will be executed
Data.TIMER.SEquence SET 0x4faf58 %Word 0xE0E0

;Increment the index number to define the 2nd sequence
Data.TIMER.SELect 2.

;If this condition is true, ...
Data.TIMER.CONDITION (Data.Word(D:0x4faf38)&0xff00)==0x3000

;... then the 2nd sequence will be executed
Data.TIMER.SEquence SET 0x4faf58 %Word 0xF0F0
```

See also

- [Data.TIMER](#)
- [Data.TIMER.state](#)

Data.TIMER.SEquence

Define timer sequence

| | |
|------------|---|
| Format: | Data.TIMER.SEquence <command> ... |
| <command>: | SET <address> %<format> <data> SETI <address> %<format> <data> <increment> SETS <address> GETS <address> |

Defines a sequence of **Data.Set** commands that are periodically executed by the TRACE32 software when the program execution is stopped. The period is defined by **Data.TIMER.Time**.

| | |
|-------------|--|
| SET | Write <data> periodically to <address> while the program execution is stopped. |
| SETI | Write <data> to <address> the first time after the program execution is stopped after Data.TIMER.ON . Then <data> is incremented by <increment> periodically while the program execution is stopped. |

| | |
|-------------|---|
| SETS | Write the data that was saved with a previous GETS back to <address>. |
| GETS | Save the data at <address> periodically while the program execution is stopped. |

Examples:

```
Data.TIMER.SEquence SET 0x3fa50 %Long 0x11223344

Data.TIMER.SEquence SETI 0x3fa50 %Word 0xa0a0 2

Data.TIMER.SEquence SETS 0x3fa60

Data.TIMER.SEquence GETS 0x3fa60
```


See also

- [Data.TIMER](#)
- [Data.TIMER.state](#)

Data.TIMER.state

Timer state display

Format:
Data.TIMER.state

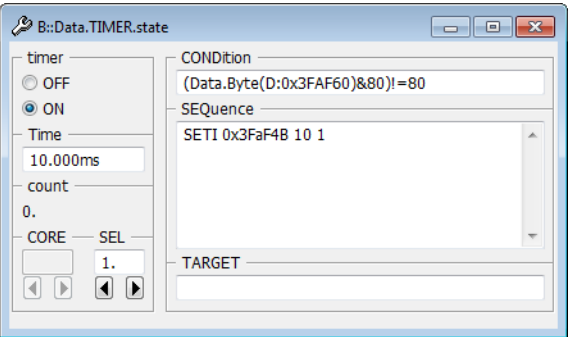

See also

- [Data.TIMER](#)
 - [Data.TIMER.CONDition](#)
 - [Data.TIMER.CORE](#)
 - [Data.TIMER.ERRORSTOP](#)
 - [Data.TIMER.OFF](#)
 - [Data.TIMER.ON](#)
 - [Data.TIMER.RESet](#)
 - [Data.TIMER.SELect](#)
 - [Data.TIMER.SEQuence](#)
 - [Data.TIMER.TARGET](#)
 - [Data.TIMER.Time](#)
- ▲ 'Release Information' in 'Release History'

Format: **Data.TIMER.TARGET** *<code_range>* *<data_range>*

Defines a target program that is periodically executed while the program execution is stopped.

<code_range> Defines the address range for the target program.

<data_range> Defines the address range used for the data of the target program.

Example:

```
Data.TIMER.TARGET 0x3fa948--0x3faa07 0x1000--0x11ff
```

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

Format: **Data.TIMER.Time** *<time>*

Defines the period for the [Data.TIMER](#) feature.

Example:

```
Data.TIMER.Time 10.ms
```

See also

■ [Data.TIMER](#)

■ [Data.TIMER.state](#)

| | |
|---------|-----------------------|
| Format: | Data.UNTAGFunc |
|---------|-----------------------|

Removes the tags generated by the [Data.TAGFunc](#) command.

See also

■ [Data.TAGFunc](#)

| | |
|---------|--------------------|
| Format: | Data.UPDATE |
|---------|--------------------|

Triggers and update of memory buffered by the debugger. Memory is only buffered when the address range is declared by [MAP.UpdateOnce](#) command.

| | |
|-----------|---|
| Format 1: | Data.USRACCESS <code_range> <data_range> [<bin_file> [/<option>]] |
| Format 2: | Data.USRACCESS <code_address> <data_address> <buffer_size> [<bin_file> [/<option>]] |
| <option>: | STACKSIZE <size> KEEP |

Targets may include memory that is not in the address space accessible by the debugger. An external access algorithm can be linked to TRACE32 to realize an access to this memory.

After the external access algorithm is linked to TRACE32 by the command **Data.USRACCESS** this memory can be displayed and modified like any other memory by using the access class **USR** and a command from the **Data** command group.

The external access algorithm is unlinked on every execution of **SYStem.Mode** (e.g. SYStem.Mode.Up) and when a error occurs. If no external access algorithm is linked, the access class **USR** is inaccessible.

| | |
|------------------|--|
| STACKSIZE | <data_range> includes 256 bytes for the stack. If your access algorithm requires a smaller/larger stack the default stack size can be changed by the option STACKSIZE <size>. |
| KEEP | TRACE32 loads <bin_file> to the target RAM before the memory is accessed and restores the saved <code_range> and <data_range> when the memory access is done. The option KEEP advises TRACE32 not to restore the saved <code_range> and <data_range>. This is useful for tests and for performance improvements. |

Example:

```
;           <code_range>      <data_range>      <bin_file>
Data.USRACCESS 0x10000000++0x3ff 0x10000400++0xbff usraccess.bin

Data.dump USR:0x9000

Data.Set USR:0x9005 %Long 0xaa74
```

Further examples: Scripts that demonstrate the usage of the command **Data.USRACCESS** can be found in ~/~/demo/<architecture>/etc/usraccess, e.g. ~/~/demo/arm/etc/usraccess

See also

- [Data.dump](#)
- ▲ ['Release Information' in 'Release History'](#)


| | |
|---------------|---|
| Format: | Data.VECTOR [%<format>] [<address> <range>] [/<option> ...] |
| <format>: | Decimal .[<width>[.<endianness>]] DecimalU .[<width>[.<endianness>]] Hex .[<width>[.<endianness>]] HexS .[<width>[.<endianness>]] OCTal .[<width>[.<endianness>]] Float .[<float_rep>[.<endianness>]] Byte [.<endianness>] Word [.<endianness>] Long [.<endianness>] Quad [.<endianness>] TByte [.<endianness>] PByte [.<endianness>] HByte [.<endianness>] SByte [.<endianness>] |
| <width>: | Byte Word Long Quad TByte PByte HByte SByte |
| <endianness>: | Default LE BE |
| <bitorder>: | Default BitSwap |
| <option>: | CORE <core_number> |

Displays memory contents from up to 10 addresses/address ranges as vectors side by side. If a single address is selected then this address defines the windows' initial position. Scrolling makes all memory contents visible. When selecting an address range only the defined data range is shown.

| | |
|------------------------------|--|
| Decimal, DecimalU,... | Refer to “ Keywords for <format> ”, page 10 |
| Byte, Word, ... | See “ Keywords for <width> ”, page 11. |
| BE, LE | Define byte-order display direction: Big Endian or Little Endian. |
| BitSwap | Display data with reverse bit-order in each byte. If BitSwap is used with BE or LE , the byte order will not changed, otherwise BitSwap will also reverse the byte-order. |
| CORE <number> | Displays memory from the perspective of the specified core (SMP debugging only). |

Example:

```
Data.VECTOR %Long 0x1000 0x2000 0x3000
```

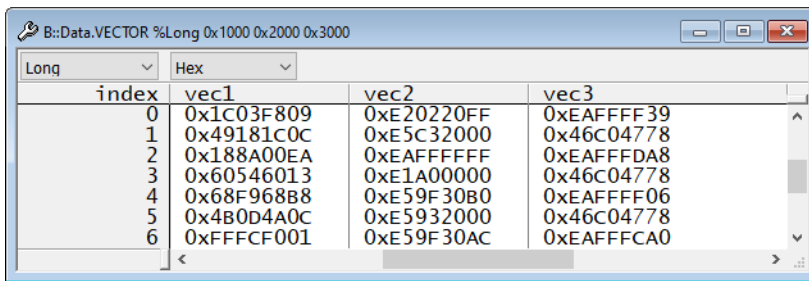

| index | vec1 | vec2 | vec3 |
|-------|------------|------------|------------|
| 0 | 0x1C03F809 | 0xE20220FF | 0xEAFF39 |
| 1 | 0x49181C0C | 0xE5C32000 | 0x46C04778 |
| 2 | 0x188A00EA | 0xEAFFFFF | 0xEAFFDA8 |
| 3 | 0x60546013 | 0xE1A00000 | 0x46C04778 |
| 4 | 0x68F968B8 | 0xE59F30B0 | 0xEAFF06 |
| 5 | 0x4B0D4A0C | 0xE5932000 | 0x46C04778 |
| 6 | 0xFFFCF001 | 0xE59F30AC | 0xEAFFCA0 |

Format: **Data.View** [%<format>] [<address> | <range>] [/<option> ...]

<format>: **Decimal** [.<width> [.<endianness> [.<bitorder>]]]
DecimalU [.<width> [.<endianness> [.<bitorder>]]]
Hex [.<width> [.<endianness> [.<bitorder>]]]
HexS [.<width> [.<endianness> [.<bitorder>]]]
OCTal [.<width> [.<endianness> [.<bitorder>]]]
Ascii [.<width> [.<endianness> [.<bitorder>]]]
Binary [.<width> [.<endianness> [.<bitorder>]]]
Float [.<float_rep> [.<endianness>]]
sYmbol [.<width> [.<endianness> [.<bitorder>]]]
Var
DUMP [.<width> [.<endianness> [.<bitorder>]]]
Byte [.<endianness> [.<bitorder>]]
Word [.<endianness> [.<bitorder>]]
Long [.<endianness> [.<bitorder>]]
Quad [.<endianness> [.<bitorder>]]
TByte [.<endianness> [.<bitorder>]]
PByte [.<endianness> [.<bitorder>]]
HByte [.<endianness> [.<bitorder>]]
SByte [.<endianness> [.<bitorder>]]

<width>: **Byte** | **Word** | **Long** | **Quad** | **TByte** | **PByte** | **HByte** | **SByte**

<endianness>: **DEFAult** | **LE** | **BE**

<bitorder>: **DEFAult** | **BitSwap**

<option>: **CORE** <core_number>
COVErage
CTS
Track
FLAG <flag>
CFlag <cflag>
Mark <break>

<flag>: **Read** | **Write** | **NoRead** | **NoWrite**

<cflag>: **OK** | **NoOK** | **NOTEXEC** | **EXEC**


<break>: **Program** | **Hll** | **Spot** | **Read** | **Write** | **Alpha** | **Beta** | **Charly** | **Delta** | **Echo**

Displays bare memory content as a list.

If a single address is selected then this address defines the windows' initial position. Scrolling makes all memory contents visible.

When selecting an address range only the defined data range is shown. A range definition is useful whenever addresses following the address range are read protected (e.g., in the case of I/O).

| | |
|------------------------------|--|
| Decimal, DecimalU,... | Refer to “Keywords for <format>” , page 10 |
| Byte, Word, ... | See “Keywords for <width>” , page 11. |
| BE, LE | Define byte-order display direction: Big Endian or Little Endian. |
| BitSwap | Display data with reverse bit-order in each byte. If BitSwap is used with BE or LE , the byte order will not changed, otherwise BitSwap will also reverse the byte-order. |
| CORE <core> | Display memory from the perspective of the specified core /SMP debugging only). |
| COVerge | Highlight data memory locations that have never been read/written. |
| Track | Track the window to the reference address of other windows. |
| Mark <break> | Highlight memory locations for which the specified breakpoint is set. |
| CTS | Display CTS access information when CTS mode is active. |

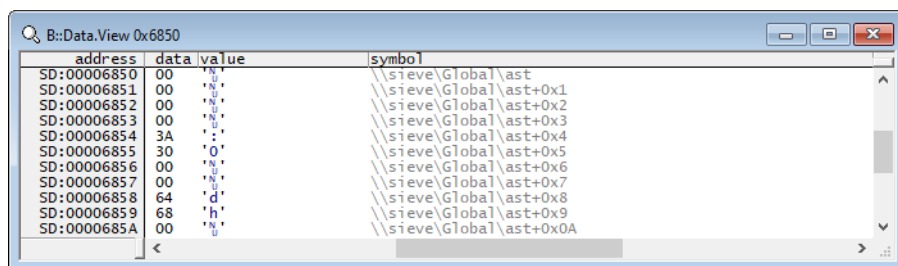

The scale area contains addresses and memory classes. The **state line** displays all current addresses, both in hexadecimal and symbolic format. By clicking on a data word, or by means of “Set”, a **Data.Set** command can be executed on the current address. By holding down the left mouse button the most important memory functions can be executed via softkeys. If the **Mark** option is on, the relevant bytes will be highlighted. For more information see **Data.dump** window.

See also

- | | | | |
|-------------------------------|---------------------------------|----------------------------------|-------------------------------|
| ■ Data.CHAIN | ■ Data.dump | ■ Data.In | ■ Data.Print |
| ■ Data.TABLE | □ Data.Byte() | □ Data.Float() | □ Data.Long() |
| □ Data.Quad() | □ Data.STRING() | □ Data.STRINGN() | □ Data.SUM() |

Data.WRITESTRING

Write string to PRACTICE file

Format:

Data.WRITESTRING #<file_number>

Writes a string from the target memory to a PRACTICE script file (*.cmm).

Example:

```
OPEN #1 testfile /Create
Data.WRITESTRING #1 100--1ff
CLOSE #1
```

See also

- Data.STRING

□ ADDRESS.SEGMENT()

□ Data.Float()

□ Data.STRINGN()
- CLOSE

□ ADDRESS.STRACCESS()

□ Data.Long()

□ Data.Word()
- OPEN

□ ADDRESS.WIDTH()

□ Data.Quad()

□ Data.WSTRING()
- ADDRESS.OFFSET()

□ Data.Byte()


□ Data.STRING()
- ▲ ['Release Information' in 'Release History'](#)

The Intel® Direct Connect Interface (DCI) allows debugging and tracing of Intel® targets using the USB3 port of the target system. The Intel® DCI trace handler is a hardware module of the implementation on the target system. This module is responsible for forwarding trace data coming from the Intel® Trace Hub to DCI.

The **DCI** command group allows expert control of this hardware module. If the Intel® Trace Hub commands are used, then this configuration is done automatically (see **ITH** commands in .

For more information about the direct connect interface (DCI), see **“Debugging via Intel® DCI User’s Guide”** (dci_intel_user.pdf).

The **DQMTrace** command group allows to display and analyze trace information exported by Data Acquisition Messaging of Nexus PowerArchitecture.

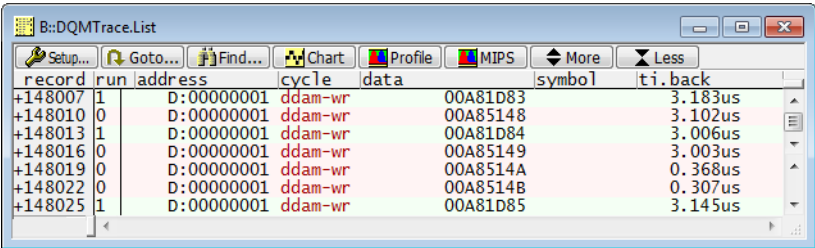

DQMTrace.List

| column layout | |
|---------------|--|
| address | Identification tag taken from DEVENT _{DQTAG} register field |
| cycle | Write access to DDAM (Debug Data Acquisition Message Register) |
| data | Exported data taken from DDAM register |

DTM

DTM

DTM trace sources (Data Trace Module)

DTM trace sources can show the contents of simple CoreSight trace sources in different formats. Trace sources are typically either internal signals, busses or instrumentation traces.

DTM.CLOCK

Set core clock frequency for timing measurements

Format:DTM.CLOCK <frequency>

Tells the debugger the core clock frequency of the traced ARM core.

DTM.CycleAccurate

Cycle accurate tracing

Format:DTM.CycleAccurate [ON | OFF]

Enables cycle accurate tracing if ON. Default is OFF. Refer for more information about cycle accurate tracing to [ETM.CycleAccurate](#).

DTM.Mode

Define DTM mode

Format:DTM.Mode [<mode>]

<mode>Byte | NibbleLE | WordLE | LongLE | QuadLE

Defines DTM mode.

Format:DTM.OFF

Disables DTM functionality.

Format:DTM.ON

Enables DTM functionality.

Format:DTM.Register [<file> /<option>]

<option>:SpotLight | DualPort | Track | AlternatingBackGround
CORE <core_number>

Display the DTM registers.

| | |
|----------|--|
| <option> | For a description of the options, see PER.view . |
|----------|--|

Format:DTM.RESet

Resets the DTM settings to default.

Format: **DTM.TraceID** <id>

By default TRACE32 automatically assigns a trace source ID to all cores with a CoreSight ETM, the first ITM, and the first HTM. The command **DTM.TraceID** allows to assign an ID to a trace source overriding the defaults.

Format: **DTM.TracePriority** <priority>

The CoreSight Trace Funnel combines 2 to 8 ATB input ports to a single ATB output. An arbiter determines the priority of the ATB input port. Port 0 has the highest priority (0) and port 7 the lowest priority (7) by default.

The command **DTM.TracePriority** allows to change the default priority of an ATB input port.

See also

- [DTMAnalyzer](#)
[DTMOnchip](#)
- [DTMCAAnalyzer](#)
[DTMTrace](#)
- [DTMHAnalyzer](#)
- [DTMLA](#)

Overview DTM<trace>

Using the **DTM<trace>** command groups, you can configure the trace recording as well as analyze and display the recorded DTM trace data. The command groups consist of the name of the trace source, here **DTM**, plus the TRACE32 trace method you have chosen for recording the DTM trace data.

For more information about the TRACE32 convention of combining *<trace_source>* and *<trace_method>* to a *<trace>* command group that is aimed at a specific trace source, see [“Replacing <trace> with Trace Source and Trace Method - Examples”](#) (general_ref_t.pdf).

Not any arbitrary combination of *<trace_source>* and *<trace_method>* is possible. For an overview of the available command groups [“Related Trace Command Groups”](#) (general_ref_t.pdf).

Example:

```
DTMTrace.state                ;optional step: open the window in which the
                              ;trace recording is configured.
DTMTrace.METHOD Analyzer    ;select the trace method Analyzer for
;<configuration>              ;recording trace data.

DTM.state                     ;optional step: open the window in which
                              ;the trace source DTM is configured.
DTM.ON                         ;switch the trace source DTM on.
;<configuration>

;trace data is recorded using the commands Go, WAIT, Break

DTMAnalyzer.List              ;display the DTM trace data recorded with the
                              ;trace method Analyzer as a trace listing.

DTMTrace.List                  ;this is the generic replacement for the above
                              ;DTMAnalyzer.List command.
```

Format:

DTMAnalyzer.<sub_cmd>

The **DTMAnalyzer** command group allows to display and analyze the information emitted by the **DTM**.

The DTM information emitted off-chip via the Trace Port Interface Unit (**TPIU**) is recorded by the TRACE32 PowerTrace.

| | |
|-----------|---|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMAnalyzer.List refer to <trace>.List</p> |
|-----------|---|

See also

■

DTM<trace>

▲

'Release Information' in 'Release History'

Format:

DTMCAnalyzer.<sub_cmd>

The **DTMCAnalyzer** command group allows to display and analyze the information emitted by the **DTM**.

The DTM information emitted off-chip via the Trace Port Interface Unit (**TPIU**) is recorded by the TRACE32 CombiProbe.

| | |
|-----------|--|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMCAnalyzer.List refer to <trace>.List</p> |
|-----------|--|

See also

■

DTM<trace>

Format:DTMAnalyzer.<sub_cmd>

The **DTMAnalyzer** command group allows to display and analyze the information emitted by the **DTM**. Trace data is transferred off-chip using fast protocols as USB or Ethernet and is recorded in the trace memory of the TRACE32 host analyzer. Please refer to the description of the **HAnalyzer** command group for more information.

| | |
|-----------|---|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMAnalyzer.List refer to <trace>.List</p> |
|-----------|---|

See also

- [DTM<trace>](#)

[build 135684 - DVD 09/2021]

Format:DTMLA.<sub_cmd>

The **DTMLAnalyzer** command group allows to display and analyze the information emitted by the **DTM**. Trace data is collected form Lauterbach’s Logic Analyzer or from a binary file.

| | |
|-----------|--|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMLAnalyzer.List refer to <trace>.List</p> |
|-----------|--|

See also

- [DTM<trace>](#)

Format:DTMOnchip.<sub_cmd>

The **DTMOnchip** command group allows to display and analyze the information emitted by the **DTM**.

| | |
|-----------|---|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMOnchip.List refer to <trace>.List</p> |
|-----------|---|

See also

- [DTM<trace>](#)

Format:DTMTrace.<sub_cmd>

The **DTMTrace** command group can be used as a generic replacement for the above **DTM<trace>** command groups.

| | |
|-----------|--|
| <sub_cmd> | <p>For descriptions of the subcommands, please refer to the general <trace> command descriptions in “General Commands Reference Guide T” (general_ref_t.pdf).</p> <p>Example: For a description of DTMTrace.List refer to <trace>.List</p> |
|-----------|--|

See also

- [DTM<trace>](#)