

BLUEPRINT**LAB**

REACH SYSTEM

INTEGRATION MANUAL

CONTENTS

1	BENCH SETUP AND ACCEPTANCE TEST.....	3
1.1	BENCH TEST.....	3
1.1.1	PHYSICAL INTERFACING	3
1.1.2	REACH CONTROL.....	4
1.2	ACCEPTANCE TESTs	6
1.2.1	RANGE OF MOTION TEST.....	6
1.2.2	MASTER ARM TEST (IF APPLICABLE)	8
2	PRODUCT OVERVIEW.....	11
2.1	PRODUCT FEATURES	11
2.2	REACH PRODUCT CODES	12
3	SINGLE & DUAL FUNCTION MANIPULATORS.....	13
3.1	SPECIFICATIONS	13
3.2	INTERFACING.....	14
4	REACH ALPHA 5	16
4.1	DIMENSIONS AND COORDINATES.....	16
4.2	SPECIFICATIONS	17
4.3	INTERFACING.....	18
5	PLATFORM INSTALLATION	20
5.1	Hardware Mounting Setup.....	20
5.2	ALPHA SERVICING OVERVIEW	22
5.3	MODULE REPLACEMENT	23
6	REVISION HISTORY	25

1 BENCH SETUP AND ACCEPTANCE TEST

1.1 BENCH TEST

Prior to vehicle integration activities, a bench level test is recommended. This builds familiarity from the ground up and assists with product acceptance. The following procedure walks through the bench setup procedure.


You Will Need

- ✓ Reach Alpha Product
- ✓ Supplied Break-Out Board, Power Cable and USB-MicroUSB Cable
- ✓ Reach Control Software
- ✓ PC or Laptop running Windows

1.1.1 PHYSICAL INTERFACING


STEP 1

Remove the manipulator and stand from the transport case and place on the bench. Loosen the mount locking nut, rotate the manipulator 90 degrees to the upright position, align the pins and retighten.

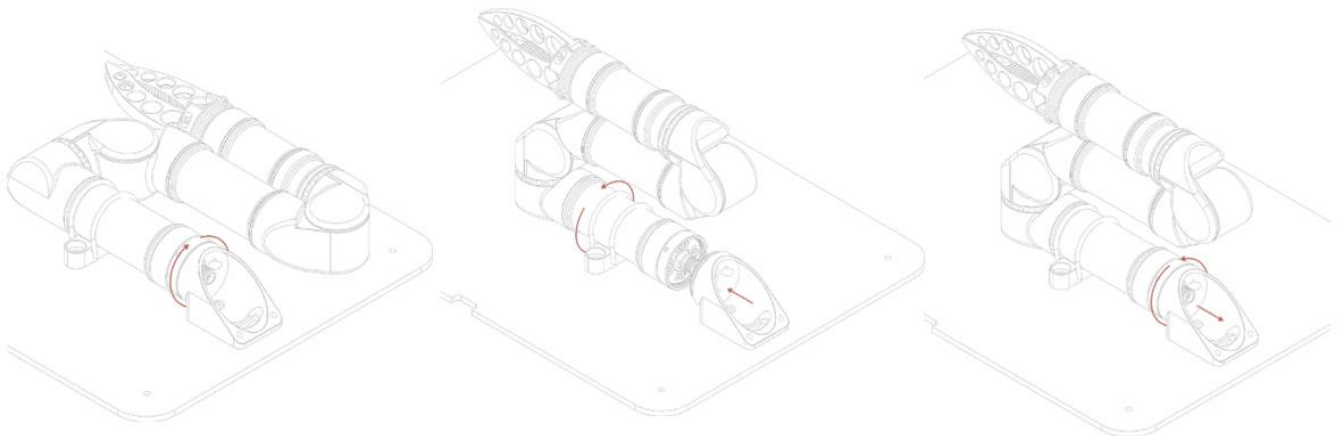


STEP 2

Connect the Impulse Connector to the base of the manipulator.
Screw to secure.

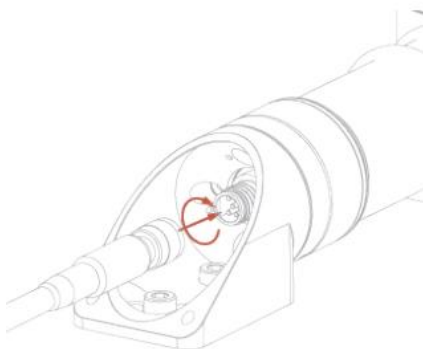


STEP 3

- 1) Plug the micro-USB into the Break-out board.
- 2) Attach power connection.

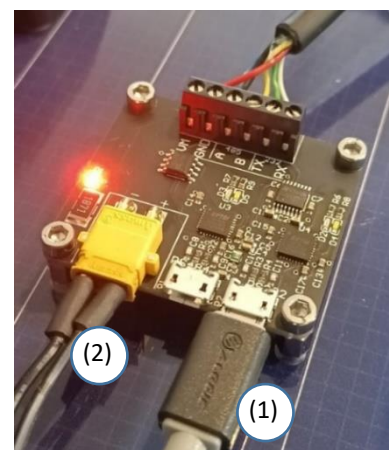


STEP 4

Plug the USB end into the computer.

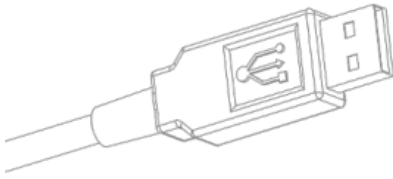

STEP 5

Turn on the power at the wall socket. The red LED on the breakout board will illuminate.

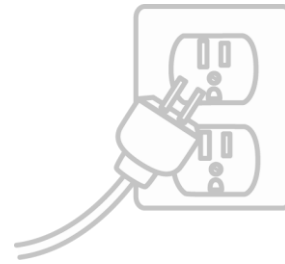


This completes the mechanical setup procedure.


1.1.2 REACH CONTROL

Reach Control will be provided to you digitally via email as well as on a USB within the Hard Carry Case.

- 1) Install Reach Control.
- 2) Open Reach Control > Settings (Cog Icon) > Ports > Add.
Click the new Port. Name your device. Select the Com Port (eg. COM48) that the arm is communicating on.

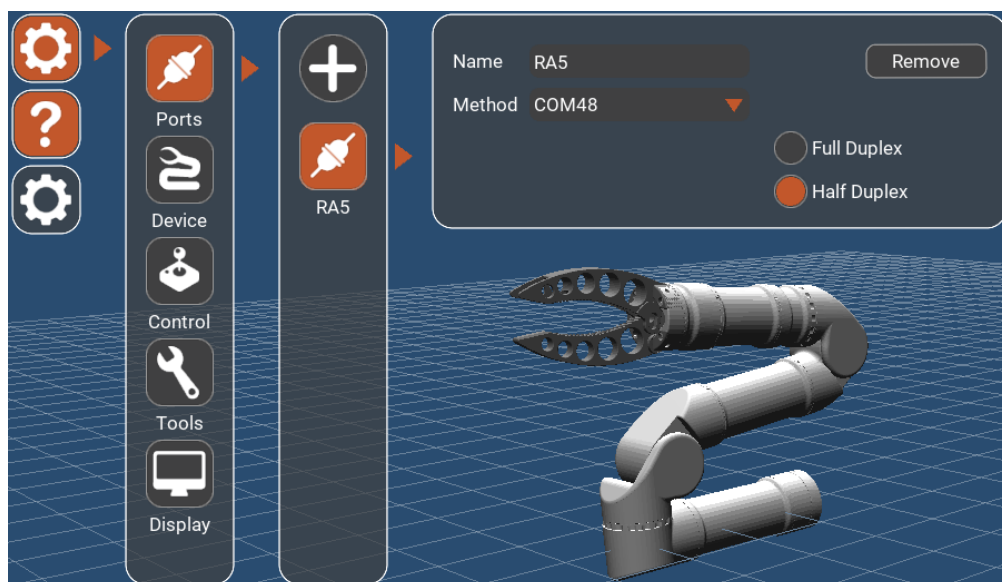

- 3) Click Settings (Cog Icon) > Device
Select the existing device (or click add if none exist). Select the name of the port just created. Select the type of manipulator (eg. Reach Alpha 5).

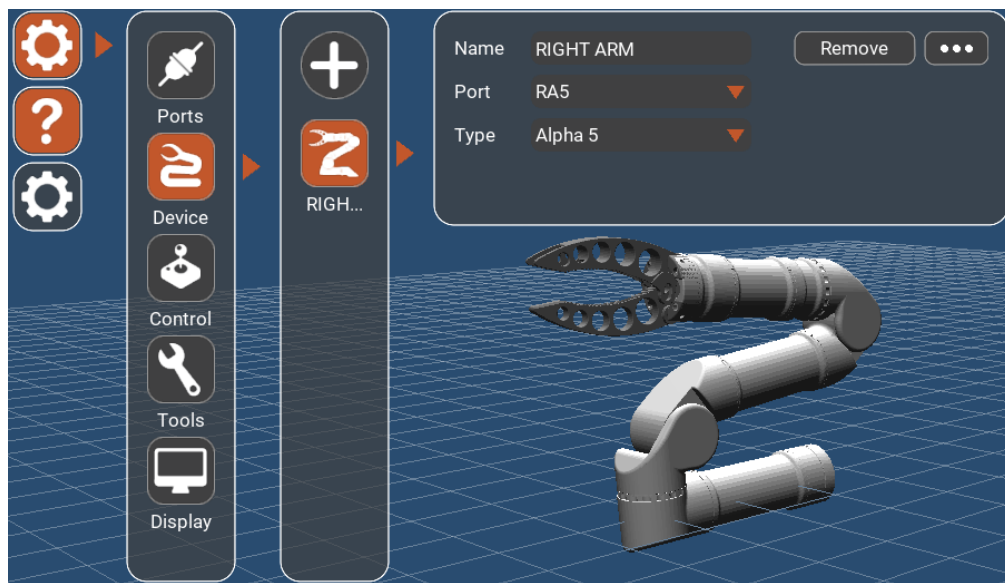

- 4) If the Alpha is setup correctly, the 3D model in the background will update to reflect the physical position of the manipulator.
- 5) Navigate the 3D model with the following mouse operations:
- Rotate View – Left mouse + Drag.
 - Translate View – Right mouse + Drag.
 - Zoom – Scroll wheel.
- 6) The Device is now connected. Continue to *1.2 Acceptance Test*.

1.2 ACCEPTANCE TESTs

1.2.1 RANGE OF MOTION TEST


- 1) On the control panel in the bottom right of Reach Control, click the velocity button. Directional arrows will appear on the 3D model.




- 2) Click Settings (Cog Icon) > Display > Feedback. The monitoring panel will open at the bottom of the screen. *Clicking on any of the graphs will bring up the numeric values for each joint.*



- 3) **Making sure it is safe to do so**, use the directional arrows in the 3D model of the arm to rotate each joint.

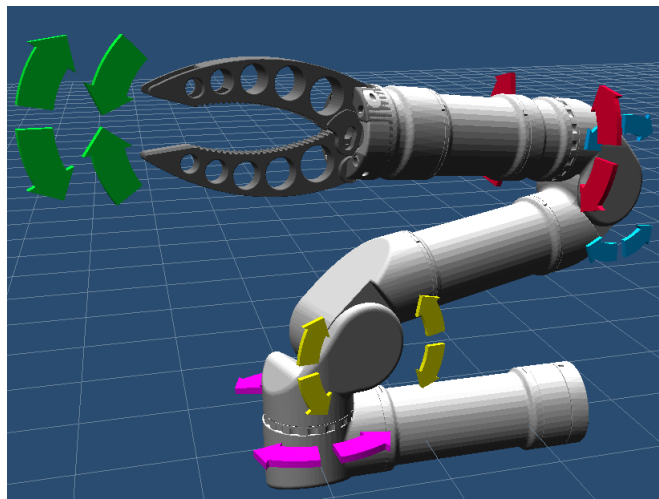

- 4) All Alpha products are shipped with a virtual obstacle to prevent collision with the 'floor' under the base of the manipulator.

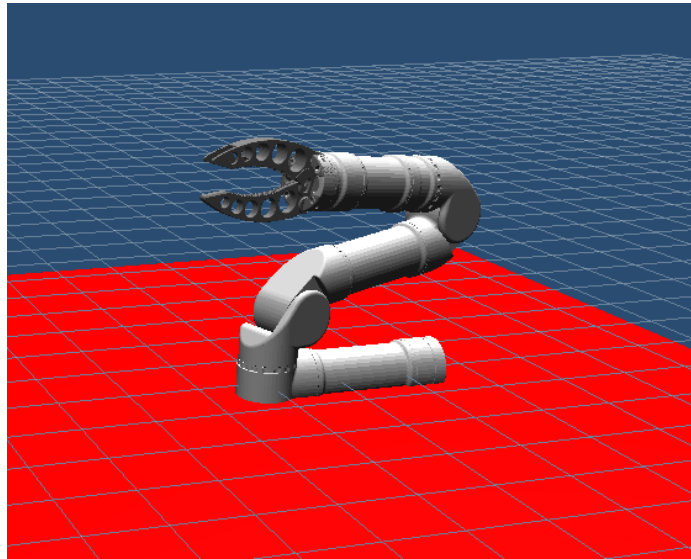


- 5) Move each joint for a few seconds in each direction. Ensure movement is as expected and corresponds with control input.


This completes the Range of Motion Test.

1.2.2 MASTER ARM TEST (IF APPLICABLE)


- 1) Set up the Master Arm with the stand provided.

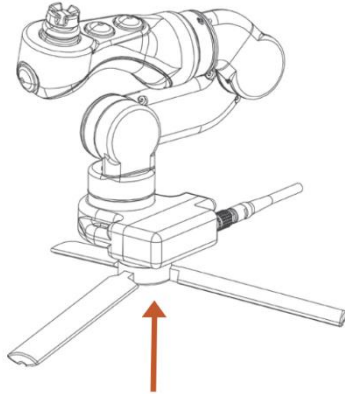

- 2) Connect Master Arm to the computer via USB.

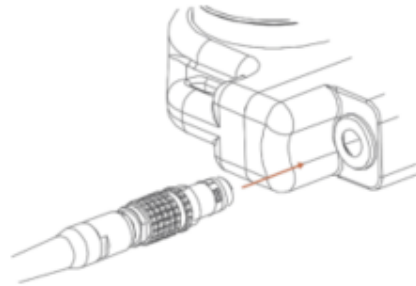


- 3) Once powered, the Master Arm buttons will flash blue.
- 4) Open Reach Control, Settings (Cog Icon) > Ports > Add.
Assign the new port a Name and select the comm port the Master Arm is communicating on. Ensure half duplex is selected.

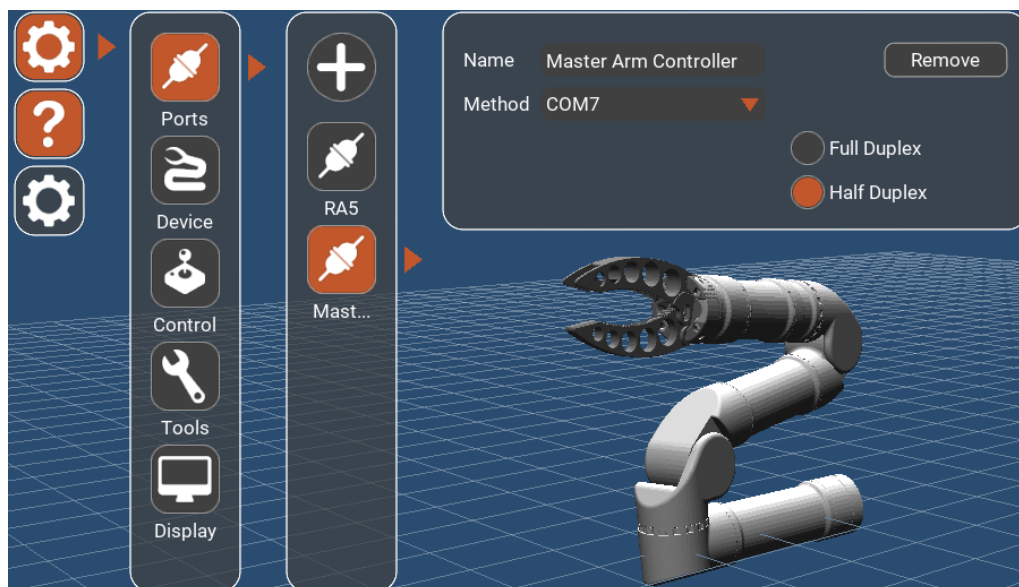

- 5) Settings (Cog Icon) > Control.

If there is no Master Arm option underneath Spacemouse, click Add.


Assign the new Control port a name. Set 'Port' to the name of your Master Arm port. Set 'Device' to the name of the Slave arm you wish to control.

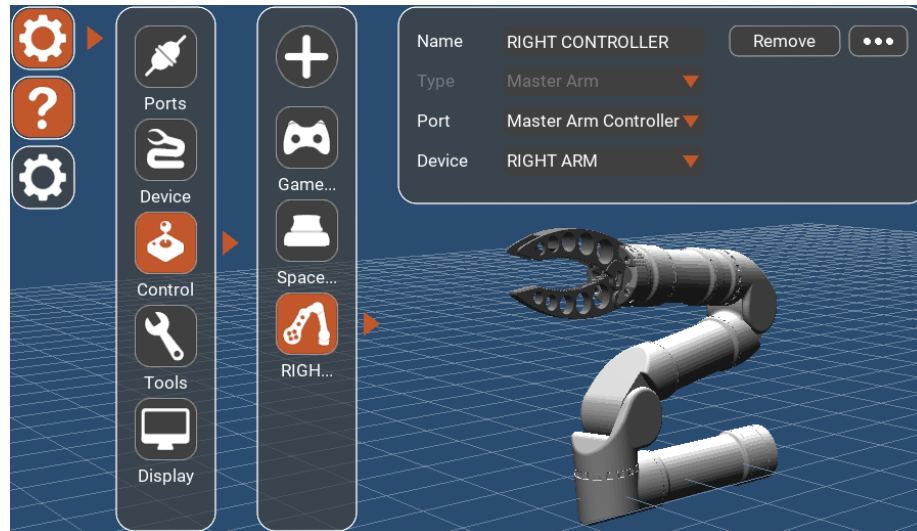

- 6) The Master Arm is now ready to control the slave manipulator.

Making sure it is safe to do so, press the Master Arm Pause Button to activate the Master Arm. Blue lights should become solid.


Double tap the Pause Button to deactivate.

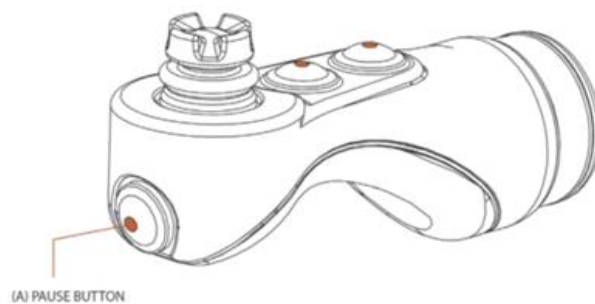


- 7) Move each Master Arm joint through its full range of motion. *Note: Axes A & B are controllable from the Master Arm Joystick.*

Check that:

- The corresponding joint on the slave arm responds.
- The joint moves in the correct direction.
- The motion of slave to master is a 1-to-1 ratio.
- The motion is smooth and complete.

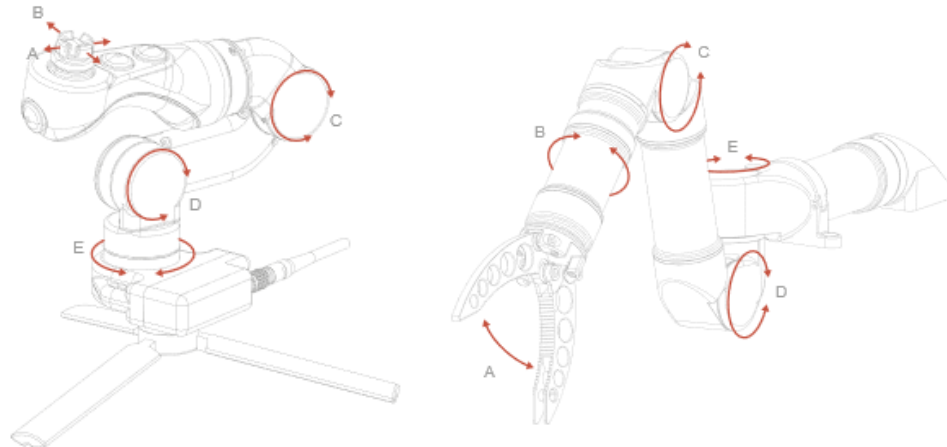

- 8) Press and hold the stow button, ensure the arms stows completely. Release the button to stop the movement.
Repeat for the deploy button.

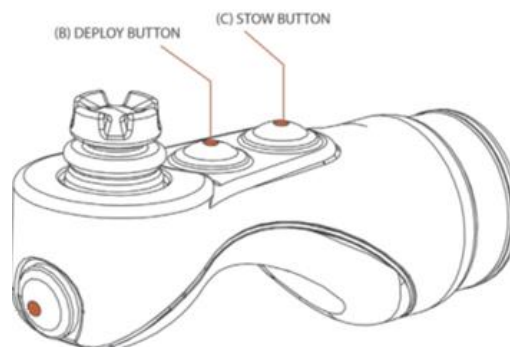

- 9) Whilst moving the arm, press and hold the pause button, ensuring the arm stops responding whilst the button is held down. Releasing the button will engage movement again.


This completes the acceptance test for the Alpha and Master Arm.

2 PRODUCT OVERVIEW

The Reach System is the world's smallest, lightest subsea manipulator system. We designed this advanced manipulator to open new possibilities for remote intervention and inspection in harsh environments. This manual predominantly applies to the Reach 5 Mini (often termed 'manipulator' in this document) but applies more generally to other Reach Mini actuators (eg. 3 or 4-Function variants) as well.


2.1 PRODUCT FEATURES

Modular by Design

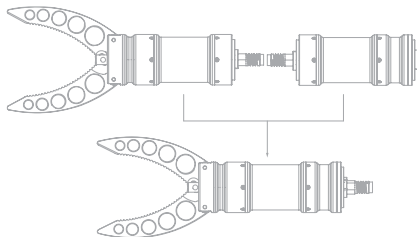


The modular design allows for rapid OEM upgrades and repairs. Compatibility between modules increases reliability across the entire range and allows for ease of customization. Interchangeable end-effectors allow for quick mission-specific fit outs.

Underwater Ready

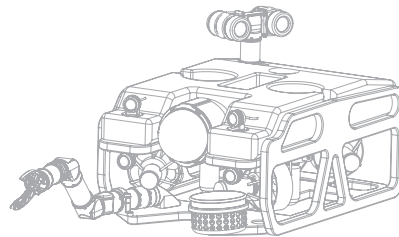


The Reach 5 Mini is capable of operating at depths of 300m for extended periods of time. Each unit undergoes rigorous testing prior to shipping to ensure seal and structural integrity when operating in harsh environments. Our products have been validated by customers around the world and have logged over 1000 hours at depth.

Full Control

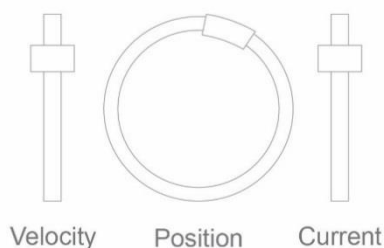

Position, speed, and current feedback extends the Reach Mini manipulator abilities to performing delicate tasks. Proprietary control algorithms ensure accurate response and enhanced control through multiple human machine interfaces.

Small Size

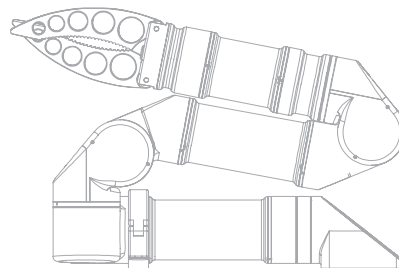

A standard external diameter of 40mm and weight of less than 900g in water, the Reach 5 Mini provides unparalleled functionality for unmanned remotely operated vehicles where size and weight are critical.

2.2 REACH PRODUCT CODES

Throughout this manual, actuators will be referred to by their product codes as listed below.

RS1-1100	Single Function Rotate Stage
RS1-1400	Single Function Bend Stage
RS1-1300	Single Function Linear Stage
RS1-2140	Dual Function Rotate/Bend Stage
RS1-2130	Dual Function Rotate/Linear Stage
RS1-5001	5 Function Manipulator

3 SINGLE & DUAL FUNCTION MANIPULATORS

3.1 SPECIFICATIONS

Mechanical

Specification	RS1-1100	RS1-1400	RS1-1300	RS1-2140	RS1-2130
Weight Air	200g	320g	220g	360g	360g
Weight Water	100g	220g	130g	220g	250g
Dimensions	98xΦ40mm	140xΦ40mm	103xΦ40mm	165xΦ40mm	117xΦ40mm
Torque/Force ¹	0.6Nm	10Nm	600N	10Nm/1Nm	0.6Nm/600N
Rate ¹	90-20°/s	60°/s	2.5mm/s	60°/s	60°/s / 2.5mm/s
Travel	360° Cont	360° Cont	22mm	330° x 360° Cont	330° x 22mm

¹The rate and torque relationship can be configured to suit a specific application. Please contact us to discuss your solution.

Environmental

Specification	RS1-1100	RS1-1400	RS1-1300	RS1-2140	RS1-2130
Depth	300m Below Sea Level				
Temperature	-30°c to +45°C	-30°c to +45°C	-30°c to +35°C	-30°c to +35°C	-30°c to +35°C
Shock	200Gs/1ms				
Housing Material	Hard Anodised 6061 Aluminium				

Electrical

Specification	RS1-1100	RS1-1400	RS1-1300	RS1-2140	RS1-2130
Voltage Range ²	18-30V DC				
Power(max)	6W	11W	6W	11W	11W
Communication	Full Duplex RS232 or Half Duplex RS485				

²The RS1 Series can operate as low as 10V. However, voltages below 18V will result in a decrease in max rate.

3.2 INTERFACING

Mechanical

All actuators have the same mounting flange. This is to allow for easy integration of the entire range. Our tailormade mounting kit allows for the quick swap out between various components or the simple rotation of a single axis unit.

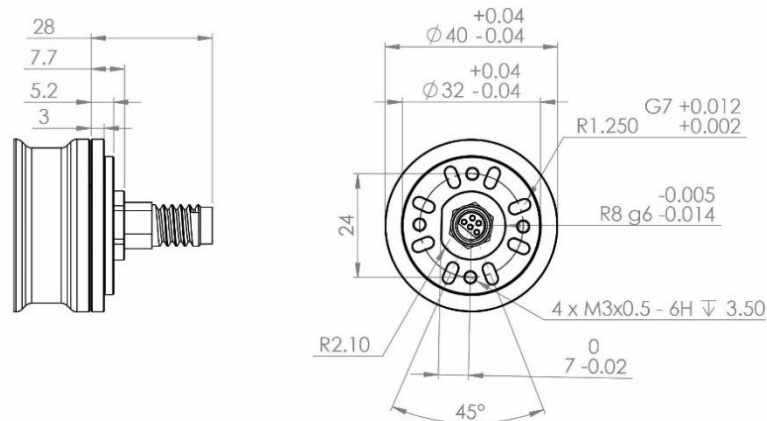


Figure 1: Mounting Flange Dimensions

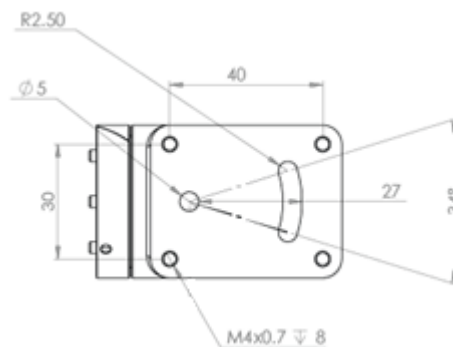


Figure 2: Mounting Kit Dimensions (Optional)

Electrical

The standard connector interface for RS1 range is a 5-PIN HUMG SeaConn Connector. The mating connector is a 5 Pin HUMG CCP. It is important that the serial device and the RS1 Actuator share a common ground. Failing to do so could damage the device.

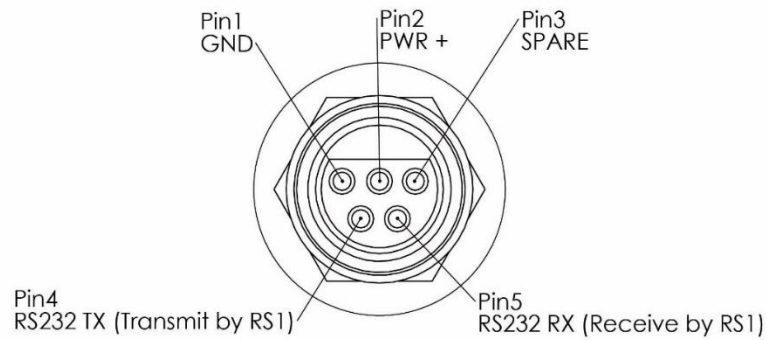


Figure 3: 5 Pin HUMG SeaConn Connector RS232 - Male Face View

When using a RS485 version Pin 4 is A and Pin5 is B.

4 REACH ALPHA 5

4.1 DIMENSIONS AND COORDINATES

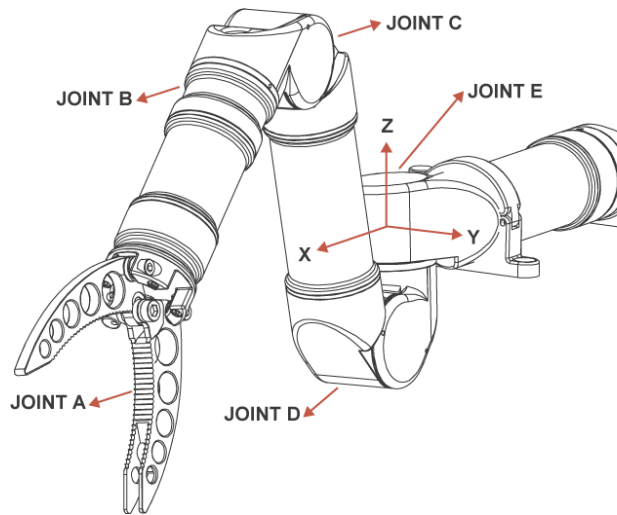


Figure 4: Joints and Origin

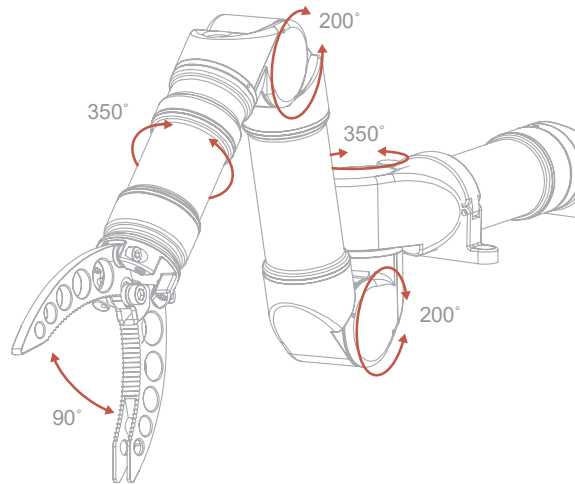


Figure 5: Joint Limits

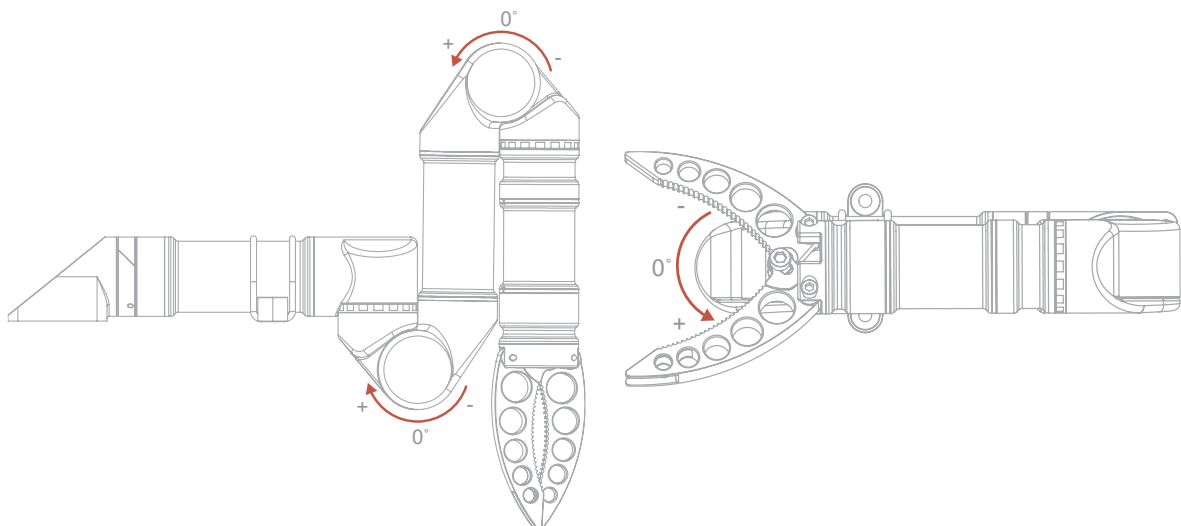


Figure 6: Zero Point/ Travel/Direction & Zero Point

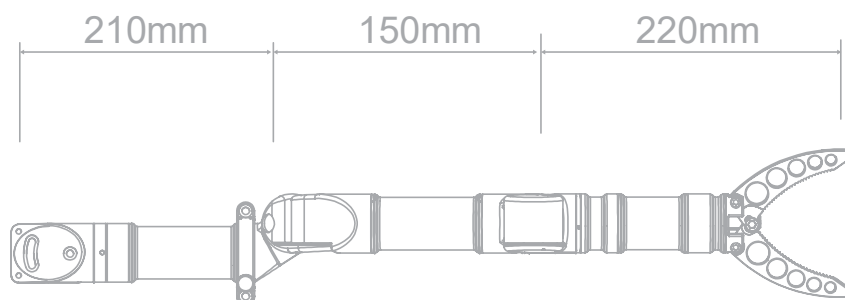


Figure 7: Axis Length

4.2 SPECIFICATIONS

Mechanical

Specification	Joint A	Joint B	Joint C	Joint D	Joint E
Weight Air	1250g				
Weight Water	880g				
Dimensions	570xΦ40mm (Mounting Base to Jaw Tip)				
Max Lift (Full Reach)	2Kg				
Torque/Force	600N	0.6Nm	10Nm	10Nm	10Nm
Rate	3mm/s	50°/s	30°/s	30°/s	30°/s
Travel	22mm	330°	200°	200°	350°

Environmental

Depth	300m Below Sea Level				
Temperature	-10°C to +45°C				
Shock	200Gs/1ms				
Housing Material	Hard Anodised 6061 Aluminium				

Electrical

Voltage Range	18-30V DC (Lower voltage is allowed, but will limit speed)				
Power(max)	35W				
Communication	Full Duplex RS232 or Half Duplex RS485				
Connector	Teledyne 6 Pin IE(W)-55 Impulse				

Kinematic, Dynamic, and Other Properties

The Blueprint Lab Github repository contains documents regarding the Kinematic and Dynamic properties of Reach System manipulators.

Available at: <https://github.com/blueprint-lab>

4.3 INTERFACING

Mechanical

The Reach 5 Mini offers a variety of mounting configurations. These are easily implemented using the supplied two-part mounting kit. This kit is designed to absorb moderate shock to help protect the Reach 5 Mini from external impact.

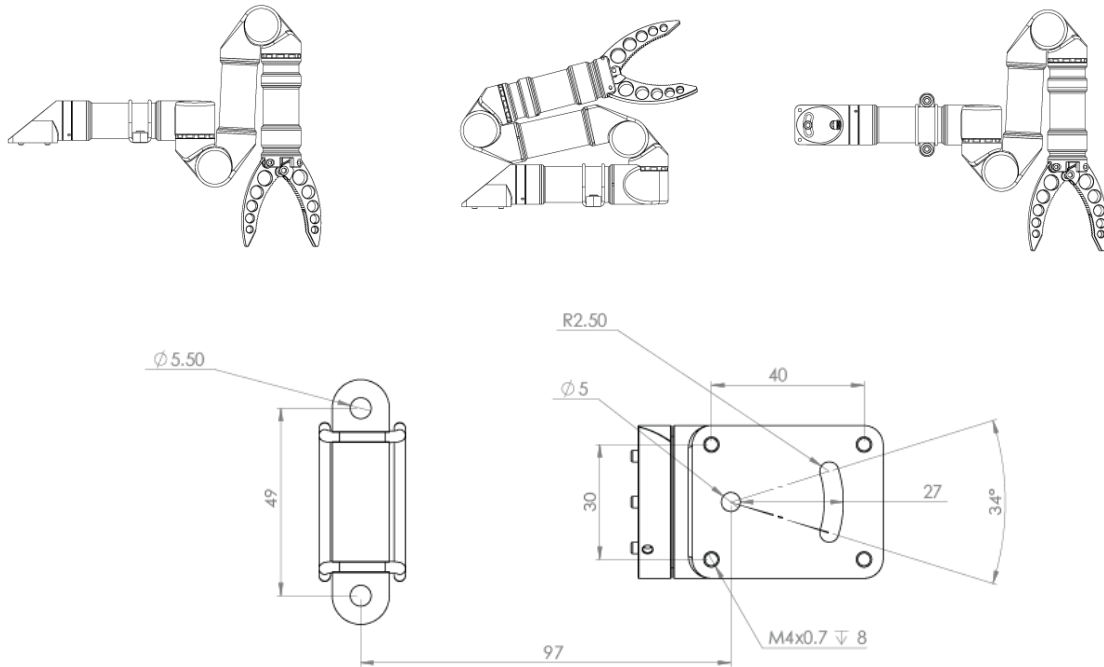


Figure 8: Mounting Dimensions of Mounting Kit

Electrical

The standard interface for the Reach 5 Mini is a Teledyne 6 Pin IE(W)-55 Impulse Connector. The mating connector is a Teledyne 6 Pin IE(W)-55 Impulse CCP Connector. It is important that the serial device and the Reach 5 Mini share a common ground. Failing to do so could damage the device.

(NOTE: If your whip has a **Brown cable this is a legacy configuration. Please contact Blueprint Lab for the interface information.**

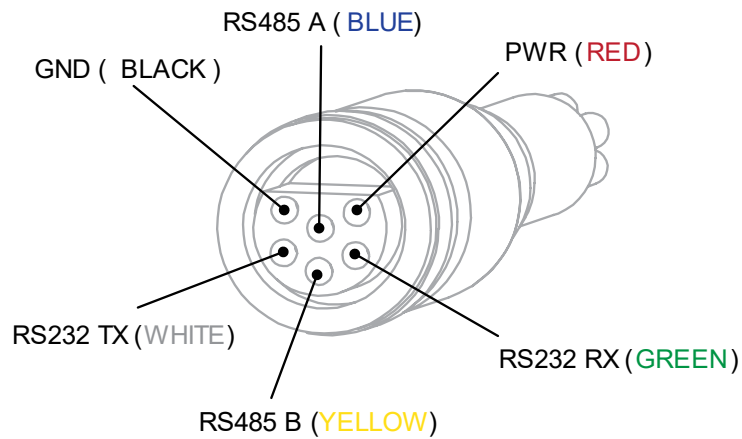


Figure 9: IMPULSE IE55 FEMALE Whip – Female Face View

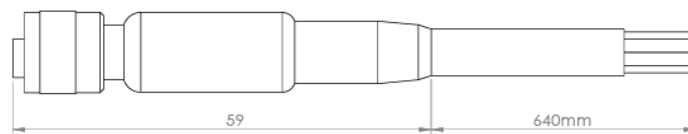


Figure 10: IMPULSE IE55 CCP Dimensions (mm)

Communication

The Reach 5 Mini communicates via a serial RS232 or RS485 interface. The serial connection should be configured via the Reach Control software suite or manually using the following specification.

Serial Specifications

Baud	115200 bits/s
Word Length	8 bits (including parity)
Parity	None
Stop Bits	1

When using an RS232 device, the connection is full duplex whilst when using RS485 it is half duplex. The Reach 5 Mini will respond to demands on either RS232 or 485 without needing to be configured. Data being transmitted from the R5M will be done via both COM ports. For more information on the serial protocol please refer to the Serial Protocol Document at <https://github.com/blueprint-lab>.

5 PLATFORM INSTALLATION

The manipulator is designed to be integrated onto different vehicle platforms. The following steps will ensure a safe and reliable installation on most unmanned vehicles. For information regarding the installation on common ROV platforms specific instructions may be available. Please contact Blueprint Lab regarding your vehicle integration requirements for more information.

5.1 Hardware Mounting Setup

Step 1

Select whether the manipulator is to be mounted upright or inverted. The mounting kit can rotate through 360 degrees to allow for attachment to surfaces at different orientations.

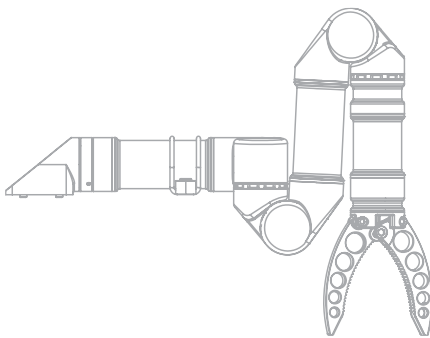


Figure 12: Inverted

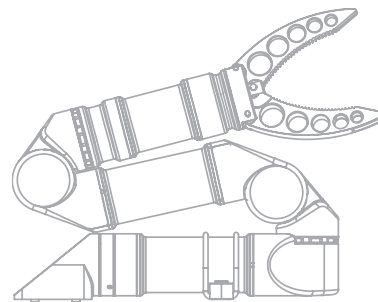


Figure 13: Upright

Step 2

Using the mounting kit hole dimensions (see mounting kit diagram on Page 18), secure the rear mounting bracket and the forward mounting bracket to the host platform surface. The rear mounting bracket can either be secured with 2 x M5 bolts from the top or with 4 x M4 bolts into the tapped holes on the bottom.

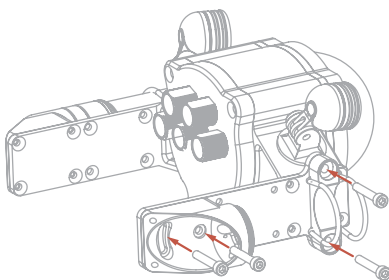


Figure 14: M5 from Top

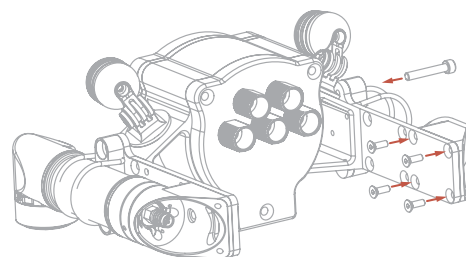


Figure 15: M4 From Bottom

Step 3

Attach the manipulator by feeding the base through the O-ring and securing it with locking nut at the desired orientation.

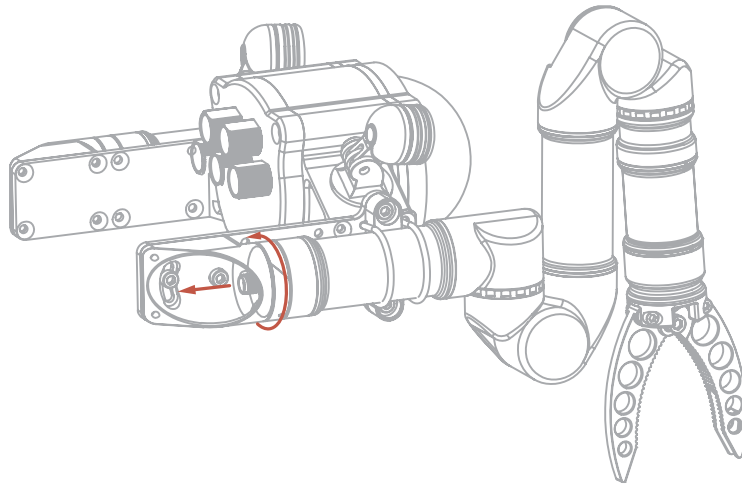


Figure 16: Insert through O-ring and Tighten Locking Nut

Step 4

Connect the manipulator cable by inserting the female Impulse connector and rotating the locking nut. Connect the manipulator to the host PC running Reach Control using the same steps given in Section 1, per your specific communication and power setup.

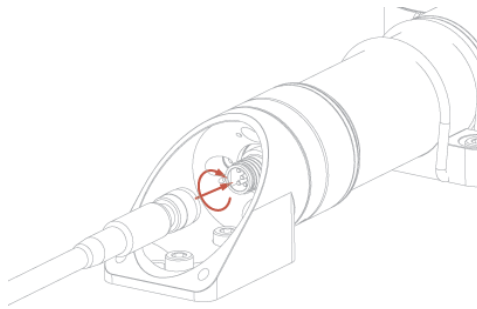


Figure 17: Insert Connector and Rotate Nut

5.2 ALPHA SERVICING OVERVIEW

The Reach Alpha system is recommended for an OEM Servicing every one (1) year or 200 operational hours, whichever occurs first. Blueprint Lab offer a capped price service with each new Reach Alpha system. The coverage period of the capped price service program is for a period of two (2) years, or 200 operational hours, whichever occurs first. For details on the Blueprint Lab Service Program please contact Blueprint Lab.


System Item Procedure Description

<u>System</u>	<u>Item</u>	<u>Procedure Description</u>
<i>Subassembly Mechanical</i>	O-rings	Replace
	Gears	Clean and re-lubricate
	Keyway systems	Check backlash and tune
	Crimps, connectors, and wire harness	Visually Inspect
	Internal Fasteners	Replace and apply Loctite
<i>Subassembly Electrical</i>	Motors	Check output torque
	Electrical Board	Check indicators and functionality
	Encoders	Visually Inspect and recalibrate if required.
	Encoder boards	Check indicators and functionality
<i>Subassembly Software</i>	Software Revision	Upgrade to latest software
	Configuration Settings	Check and update if required
	Kinematics	Check and update if required
<i>Whole</i>	Anodising	Visually Inspect
	External fasteners	Replace
	Quality Control	Perform Outgoing quality control and provide


Any additional rectification work required will be assessed and quoted during the servicing process.

5.3 MODULE REPLACEMENT


In the instance a module needs to be replaced (such as swapping an end-effector between a grabber and a pan-tilt unit), please carefully follow the steps laid out below. It is recommended that you contact your supplier prior to performing this procedure if it is your first time.

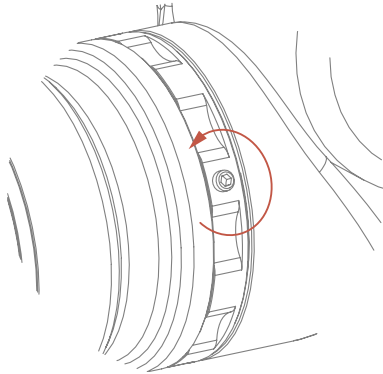


1. Loosen the M2.5 Grubscrew securing the locking nut at the base of the module you are replacing.

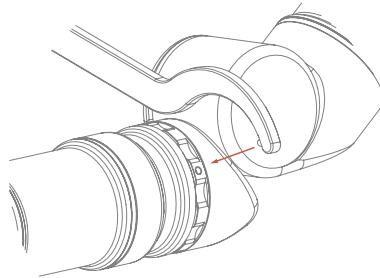


2. Insert the supplied spanner into one of the holes on the locking nut at the base of the module you are replacing.

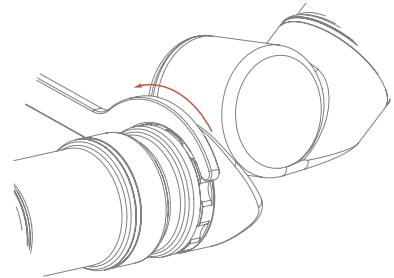


3. Rotate the spanner to loosen the nut.

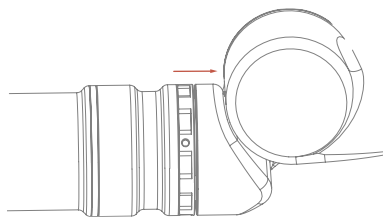


4. Push the male module into the female.

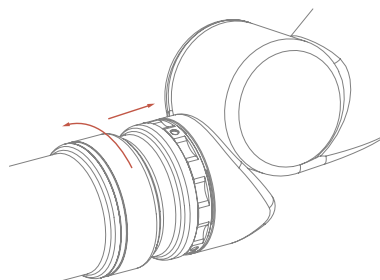


5. While pushing rotate 45 degrees. At 45 degrees carefully pull to remove.

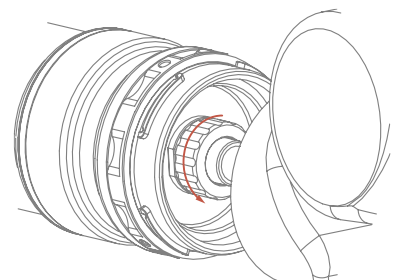


6. Loosen nut securing connector.

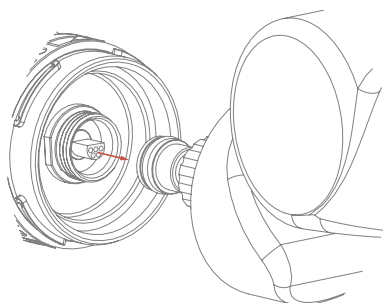


7. Remove connector plug by gently pulling on the cable.

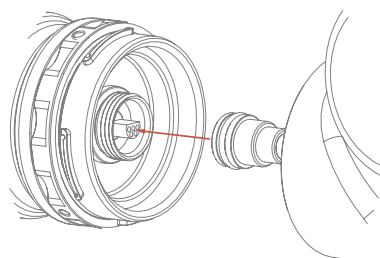


8. Apply grease to internal O-ring and male insert. Insert connector into new module by lining up the flat and pushing.

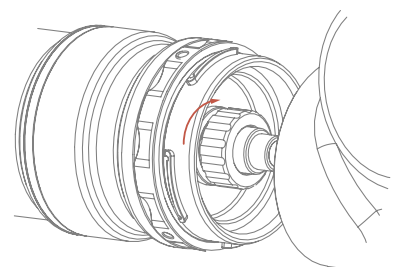


9. Tighten nut with fingers.

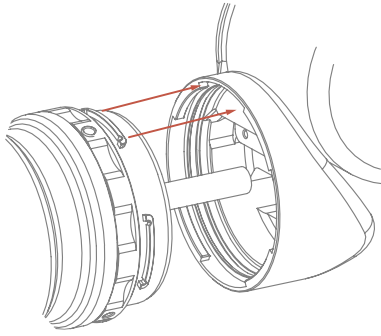


10. Line up bayonet teeth with female. Ensure the Red dots are offset by 45 degrees and not their direction. Insert male module into female. Ensure grease is applied to both surfaces.

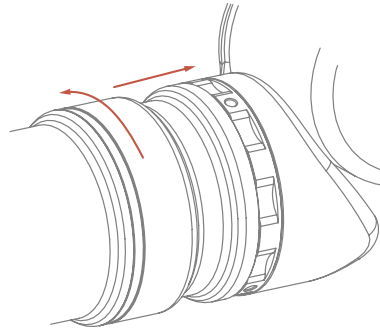

11. Rotate module to 45 degrees to align the red dots. Pull apart to feel teeth engage.

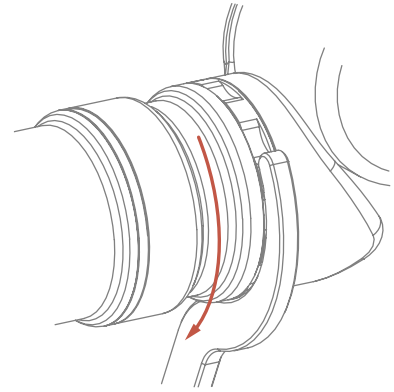

12. Tighten looking nut.

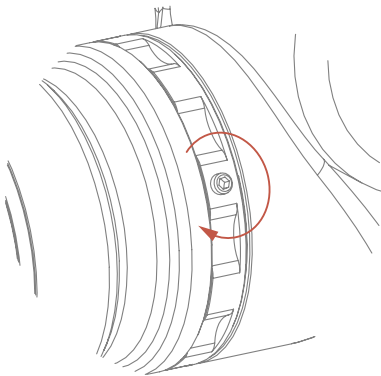

13. Tighten Grubscrew.