


apsDVS USB event

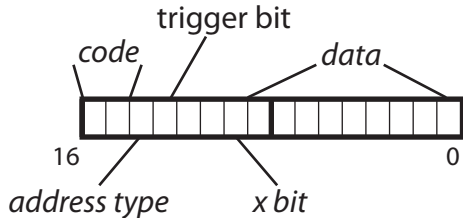

code: 00 = address, 01 = timestamp,
10 = wrap event, 11 = reset timestamps

address type: 0 = DVS, 1 = APS

trigger bit: 0 = no trigger, 1 = trigger event