


apsDVS raw event

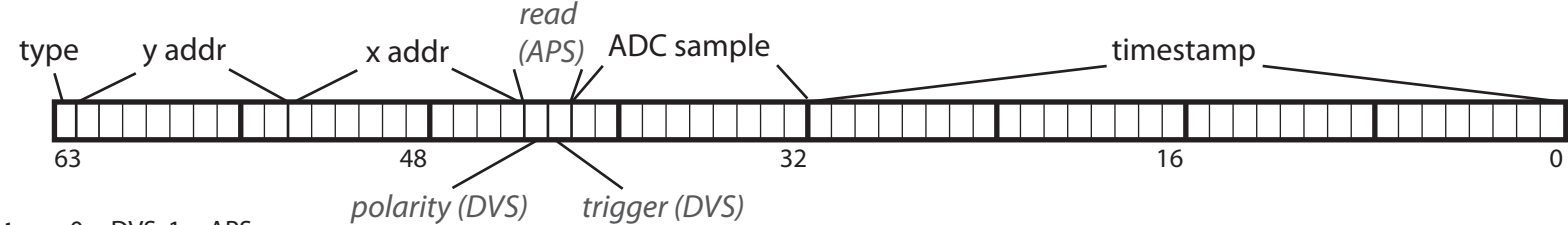

type: 0 = DVS, 1 = APS

read: 00 = reset read, 01 = signal read, 11 = IMU read