



Click on Libraries.zip

Download using the link here

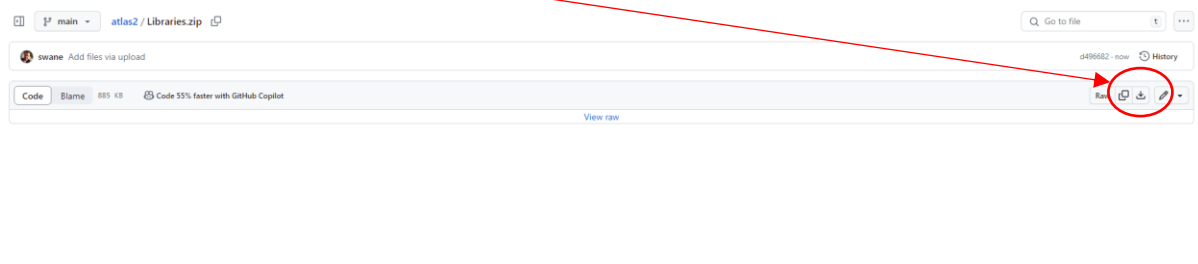


This will be in your downloads folder.

Extract this to show:

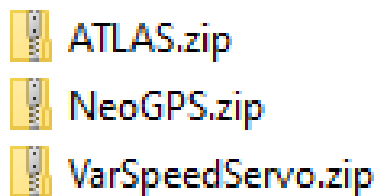

Open the Arduino IDE.

Select Sketch→Include Library→ Add .ZIP Library... as below:

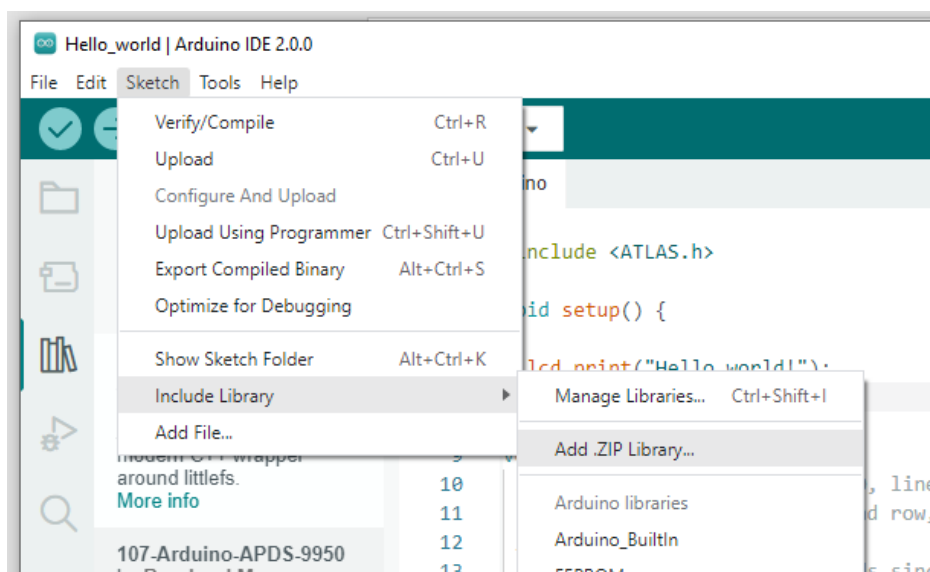

Select the 'ATLAS.ZIP'.

Repeat for 'NeoGPS.zip', 'VarSpeedServo.zip'.

Go to File→Examples, scroll down to ATLAS (or it may look blank), then select 'Hello_world', see over:

