



Connect R18 to VM for one supply or
Connect R19 to VBUCK for split rail (DEFAULT)


DRV8353RX

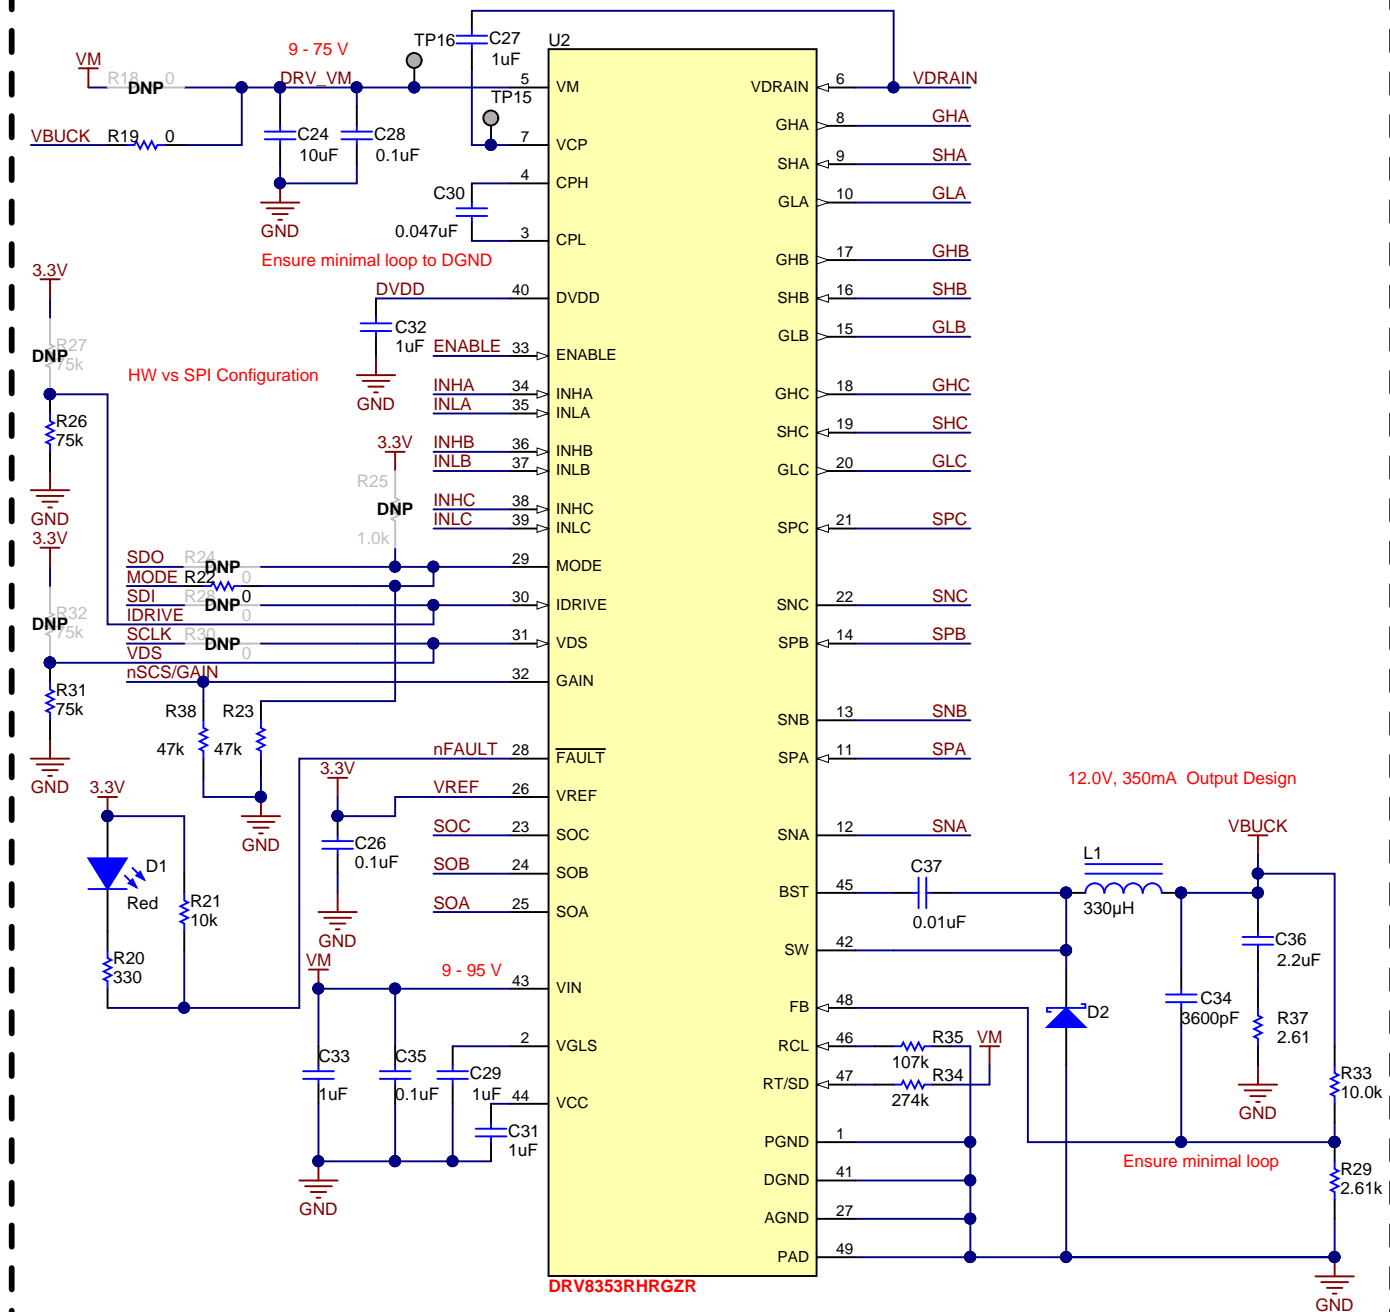

HALF-BRIDGES & SENSE

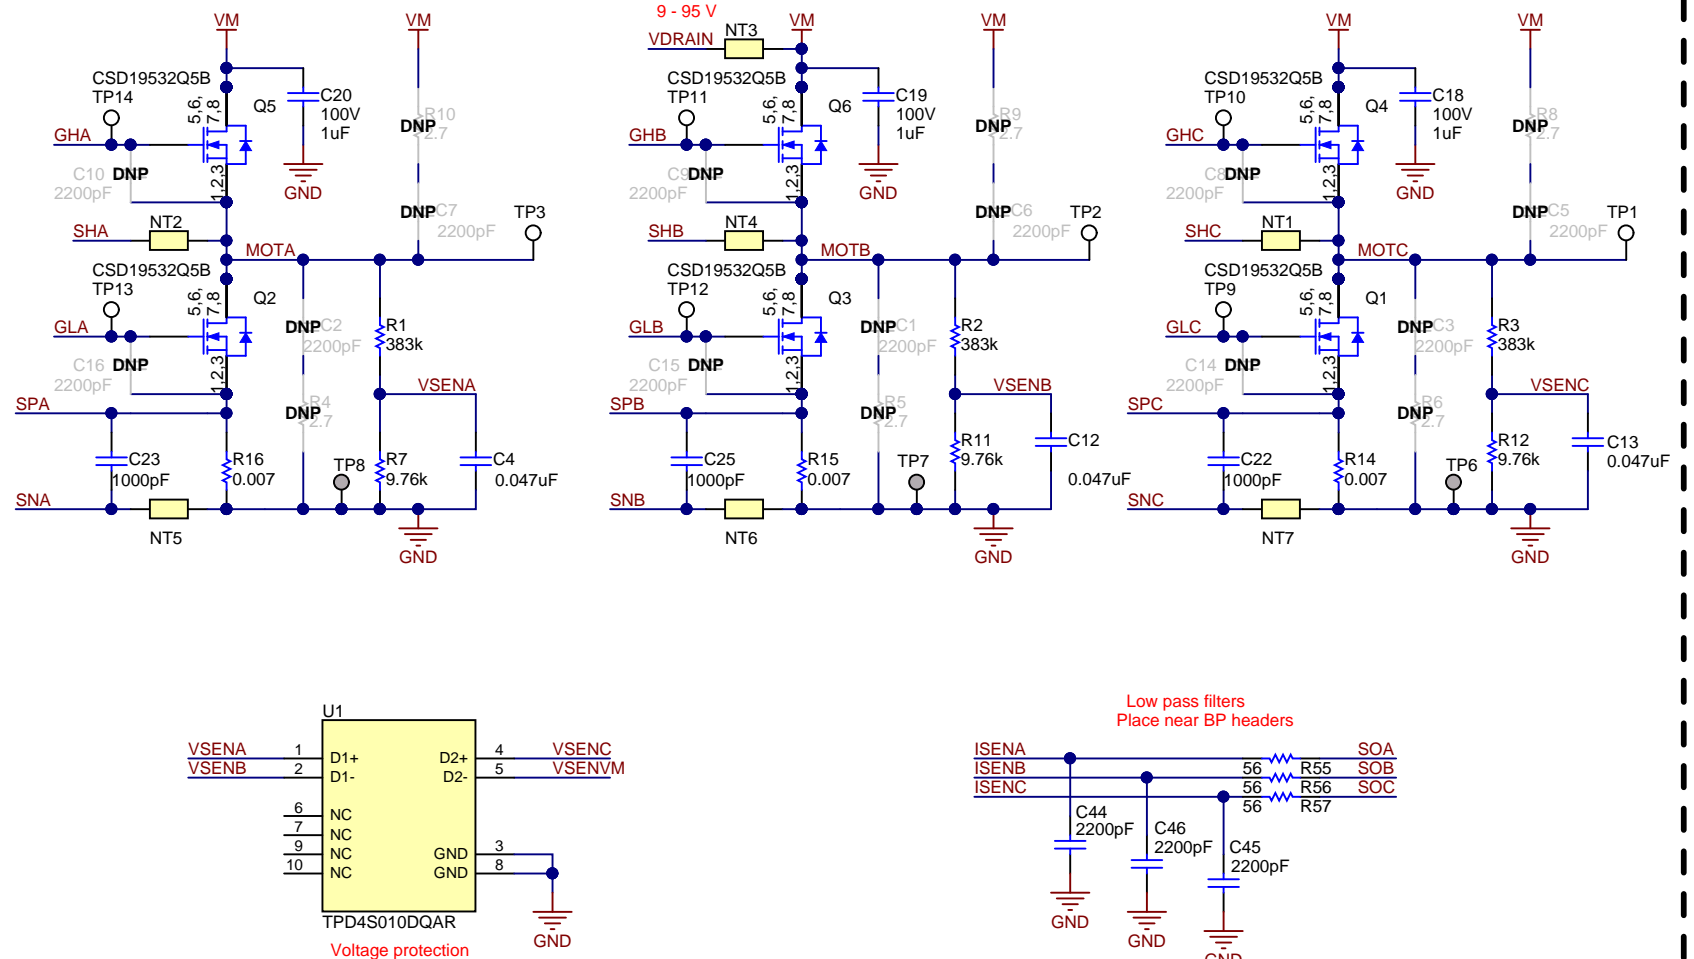

CONNECTORS & INTERFACE

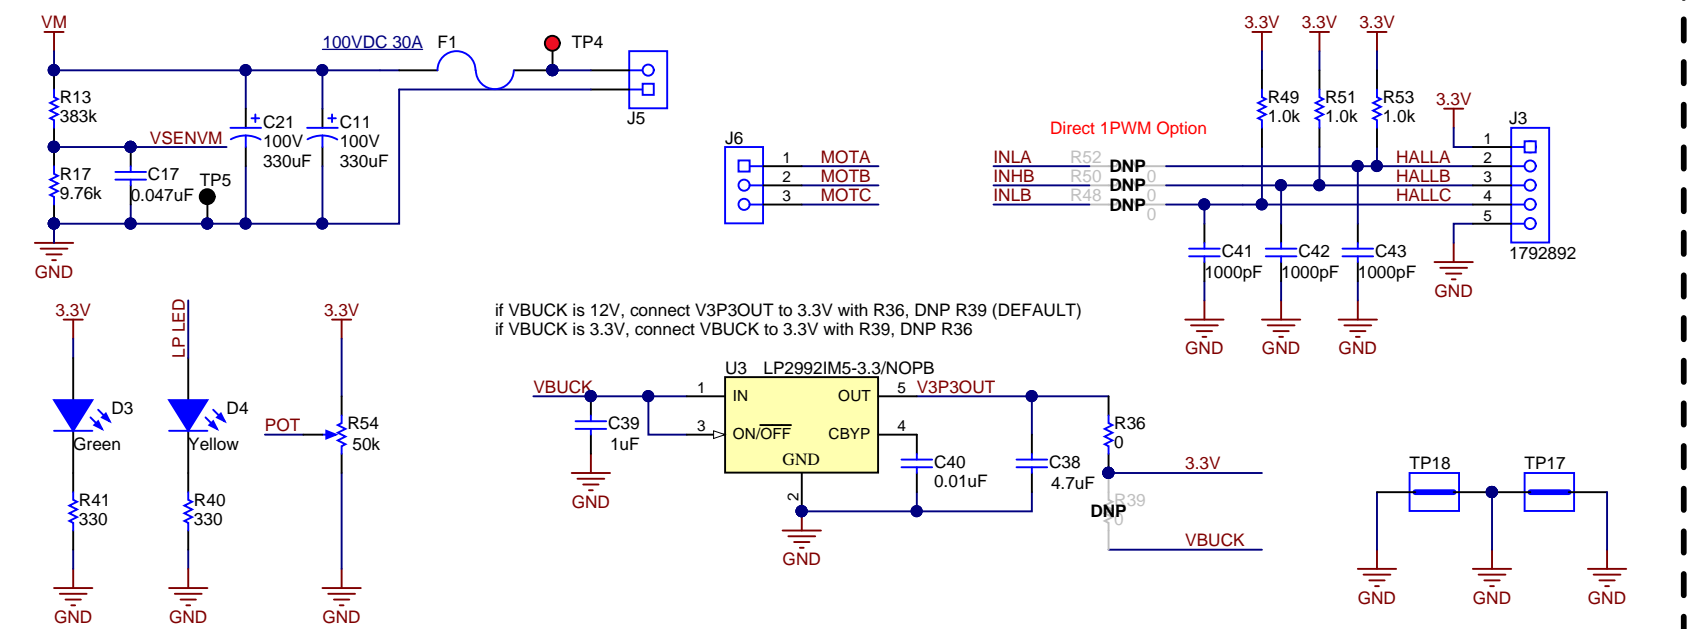

BOARD -> LAUNCHPAD

