

---

## Getting started with MotionFX sensor fusion library in X-CUBE-MEMS1 expansion for STM32Cube

### Introduction

The MotionFX is a middleware library component of the [X-CUBE-MEMS1](#) software and runs on STM32. It provides real-time motion-sensor data fusion. It also performs gyroscope bias and magnetometer hard iron calibration.

This library is intended to work with ST MEMS only.

The algorithm is provided in static library format and is designed to be used on STM32 microcontrollers based on the ARM® Cortex® -M0+, ARM® Cortex®-M3 or ARM® Cortex®-M4 architectures.

It is built on top of [STM32Cube](#) software technology to ease portability across different STM32 microcontrollers.

The software comes with sample implementation running on [X-NUCLEO-IKS01A2](#) expansion board on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#), [NUCLEO-L152RE](#) or [NUCLEO-L073RZ](#) development board.

# 1 Acronyms and abbreviations

**Table 1. List of acronyms**

Acronym	Description
API	Application programming interface
BSP	Board support package
GUI	Graphical user interface
HAL	Hardware abstraction layer
IDE	Integrated development environment

## 2 MotionFX middleware library in X-CUBE-MEMS1 software expansion for STM32Cube

### 2.1 MotionFX overview

The MotionFX library expands the functionality of the [X-CUBE-MEMS1](#) software.

The library acquires data from the accelerometer, gyroscope (6-axis fusion) and magnetometer (9-axis fusion) and provides real-time motion-sensor data fusion.

The MotionFX filtering and predictive software uses advanced algorithms to intelligently integrate outputs from multiple MEMS sensors, regardless of environmental conditions, for an optimum performance.

The library is designed for ST MEMS only. Functionality and performance when using other MEMS sensors are not analyzed and can be significantly different from what described in the document.

The complexity of the library dedicated to the Cortex-M0+ core is reduced due to the performance limitation of Cortex-M0+ architecture. This library use different APIs and has less features in comparison with the version for Cortex-M3 and Cortex-M4 (for further details, see the following chapters).

A sample implementation is available on [X-NUCLEO-IKS01A2](#) expansion board, mounted on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#), [NUCLEO-L152RE](#) or [NUCLEO-L073RZ](#) development board.

### 2.2 MotionFX library

Technical information fully describing the functions and parameters of the MotionFX APIs can be found in the MotionFX\_Package.chm compiled HTML file located in the Documentation folder.

#### 2.2.1 MotionFX library description

The MotionFX sensor fusion library manages data acquired from accelerometer, gyroscope and magnetometer sensor; it features:

- real-time 9-axis motion-sensor data fusion (accelerometer, gyroscope, magnetometer)
- real-time 6-axis motion-sensor data fusion (accelerometer, gyroscope)
- computation of rotation, quaternions, gravity and linear acceleration data
- gyroscope bias calibration
- magnetometer hard iron calibration
- recommended sensor data sampling frequency of 100 Hz
- resources requirements:
  - Cortex-M3, Cortex-M4: 45 kB of code and 8 kB of data memory
  - Cortex-M0+: 12 kB of code and 0.4 kB of data memory

*Note: Real size might differ for different IDEs (toolchain)*

- available for ARM Cortex-M0+, Cortex-M3 and Cortex-M4 architecture

#### 2.2.2 MotionFX 6-axis and 9-axis sensor fusion modes

The MotionFX library implements a sensor fusion algorithm for the estimation of 3D orientation in space. It uses a digital filter based on the Kalman theory to fuse data from several sensors and compensate for limitations of single sensors. For instance, gyroscope data can drift and this impacts the orientation estimation; this issue can be fixed by using the magnetometer to provide absolute orientation information.

Similarly, the magnetometer does not have a very high bandwidth and suffers from magnetic disturbance, but these weaknesses can be compensated with a gyroscope.

9-axis sensor fusion uses data from the accelerometer, gyroscope and magnetometer and provides absolute orientation in 3D space including heading (i.e., the magnetic North direction).

6-axis sensor fusion uses the accelerometer and gyroscope data only. It has lower computational requirements, but does not provide information about the device absolute orientation.

6-axis sensor fusion is fit for fast movements (e.g., for gaming) and when absolute orientation is not necessary.

### 2.2.3 MotionFX library operation

The MotionFX library integrates 6- and 9-axis sensor fusion algorithms in one library; they can even run simultaneously.

#### Cortex-M3 and Cortex-M4

The library implements the following critical internal functions associated with sensor fusion computation:

1. the `MotionFX_propagate` is a prediction function used to estimate the orientation in 3D space; gyroscope data is given more weight in this phase.
2. the `MotionFX_update` is the corrective function which adjusts the predicted value when necessary; accelerometer and magnetometer data are given more weight in this phase.

The `MotionFX_update` function can be called whenever the `MotionFX_propagate` is invoked, or less often in systems that have less computation power.

The `MotionFX_update` function takes approximately three times more MCU computation time than the `MotionFX_propagate` function.

#### Cortex-M0+

The sensor fusion computation is concentrated in only one function `MotionFX_CM0P_update`.

### 2.2.4 MotionFX library parameters

#### Cortex-M3 and Cortex-M4

The library is "parameterized" using an `MFx_knobs_t` structure.

The parameters for the structure are:


- `ATime`, `MTime`, `FrTime` represent the weighting stability of sensors for prediction (trust factor), from 0 to 1. Default values are recommended.
- `LMode` represents the gyroscope bias learning mode; the library automatically tracks and calibrates gyro zero-rate bias drift.

This possible parameter values are:

- `LMode = 0` – learning off; use this mode if the gyro is already calibrated
- `LMode = 1` – static learning; learning is performed only when the system is not moving
- `LMode = 2` – dynamic learning; learning is also performed when the system is moving
- `gbias_acc/gyro/mag_th_sc_6X`, `gbias_acc/gyro/mag_th_sc_9X` represent the thresholds below which the `gbias` algorithm automatically starts. These values should be established through testing (they are different for different part numbers). The values in the example project are usually correct
  - `modx` represents the decimation of `MotionFX_update` call frequency
  - `output_type` represents the sensor fusion library output orientation: 0 = NED, 1 = ENU
  - `start_automatic_gbias_calculation` represents a flag that restarts gyroscope bias calibration when set to 1
  - `acc/gyro/mag_orientation` is the `acc/gyro/mag` data orientation string of three characters indicating the direction of each positive orientation of the reference frame used for the accelerometer data output, in the sequence x, y, z. Valid values are: n (north) or s (south), w (west) or e (east), u (up) or d (down).

As shown in the figure below, the X-NUCLEO-IKS01A1 accelerometer sensor has an ENU orientation (x - East, y - North, z - Up), so the string is: "enu", while the accelerometer sensor in STEVAL-MKI160V1 is NWU (x-North, y-West, z-Up): "nwu".

Figure 1. Example of sensor orientations

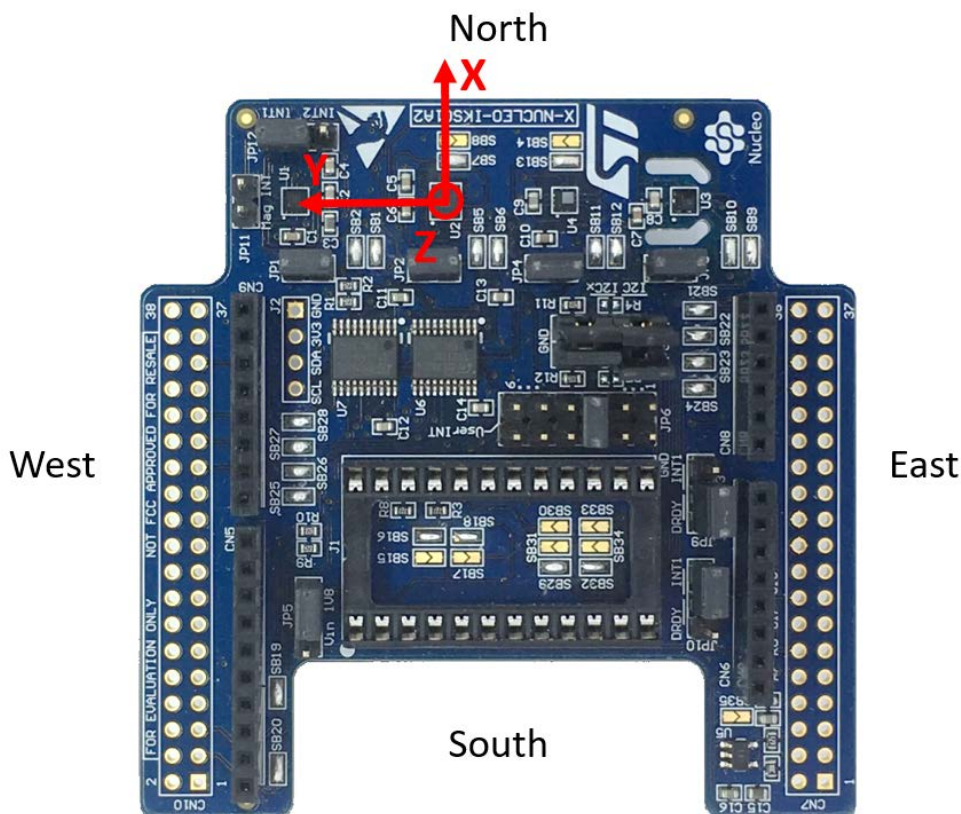

### Cortex-M0+

Only the sensor orientation must be set using `MotionFX_CM0P_setOrientation` function. The parameters of this function are orientation strings which are composed in the same manner as for Cortex-M3 and Cortex-M4 (see above).

The `MotionFX_propagate` and the `MotionFX_update` (`MotionFX_CM0P_update`) functions receive input from sensors in the `MFX_input_t` (`MFX_CM0P_input_t`) structure:

- `mag` represents magnetometer data after calibration in  $\mu T/50$
- `acc` represents accelerometer data in  $g$
- `gyro` represents gyroscope data in  $dps$

The `MotionFX_propagate` and the `MotionFX_update` (`MotionFX_CM0P_update`) functions provide the sensor fusion output in the `MFX_output_t` (`MFX_CM0P_output_t`) structure:

- `rotation_6/9X` represents the system orientation in three-angle format: yaw, pitch and roll
- `quaternion_6/9X` represents the system orientation in four-number format; this format gives the same information as `rotation_6/9X` but it has advantages for computation and is therefore usually used by other algorithms (based on the sensor fusion)
- `gravity_6/9X` represents the static acceleration (i.e., Earth gravity) vector extracted from the acceleration data
- `linear_acceleration_6/9X` represents the dynamic acceleration (i.e., movement) vector extracted from the acceleration data.

- `heading_6/9X` represents the heading of the device in degrees. Heading 0 degree represents the magnetic North direction for 9-axis sensor fusion, while, for 6-axis sensor fusion, it represents heading of device at the algorithm start.
- `headingErr_6/9X` represents the heading error of the device in degrees.

### 2.2.5 MotionFX library output data rate

It is important to set up the sensor fusion library output data rate properly; 100 Hz is recommended.

The output data rate for:

- the gyroscope and the accelerometer should be equal to or greater than 100 Hz;
- the magnetometer can be lower - 20/40 Hz is typically good for a magnetic field sensor.

#### Cortex-M3 and Cortex-M4

It is possible to scale the library system requirements in terms of MCU/MPU load. As the `MotionFX_update` function requires approximately three times more computation power than the `MotionFX_propagate` function, it can be called at a lower frequency than the library output data rate if the system resources are limited (e.g., in embedded systems).

Use the `modx` parameter in `MFX_knobs_t` structure to decrease the frequency of `MotionFX_update` function calls. For example, setting `modx` to 2 calls the `MotionFX_update` function once every two `MotionFX_propagate` function calls.

The recommended settings are:

- `modx` = 1, for tablets or other systems with MCU/MPU and for STM32F4;
- `modx` = 2, for STM32F1.

### 2.2.6 Sensor calibration in the MotionFX library

#### Gyroscope and accelerometer calibration

Accelerometer calibration is not necessary for sensor fusion except for applications demanding very high orientation precision; it involves aligning the system in several positions according to the gravity direction.

Gyroscope calibration is handled automatically by the MotionFX library by continuously compensating the zero-rate offset effect.

#### Magnetometer calibration

The MotionFX library contains routines for magnetometer hard iron calibration.

The magnetometer is affected by the hard-iron and soft-iron phenomena described below.

#### Hard-iron distortion

Hard-iron distortion is normally generated by ferromagnetic material with permanent magnetic fields that are part of the object (e.g., a tablet) in use. These materials can be permanent magnets or magnetized iron or steel. They are time invariant and deform the local geomagnetic field with different offsets in different directions.

As each board can be magnetized differently, the hard iron effect is specific to the individual board.

If you move the board around a space approximating (as much as possible) a 3D sphere in an ideal environment (no hard-iron/soft-iron distortion) and plot the collected magnetic sensor raw data, the result is a perfect sphere with no offset.

The hard-iron distortion effect offsets the sphere along the x, y and z axes; in the x-y plane, the hard-iron distortion is identified by an offset of the origin of the ideal circle from (0, 0), scatter plots for XY and XZ axes are sufficient to determine if there is an offset.

#### Soft-iron distortion

Soft-iron distortion is generated by magnetically soft materials or current carrying PCB traces. While hard-iron distortion is constant regardless of the orientation, the soft-iron distortion changes with the orientation of the object in the Earth's field (soft magnetic materials change their magnetization direction).

The local geomagnetic field is deformed with different gain on different directions. The effect of the soft-iron to distort the ideal full round sphere into a tilted ellipsoid; in the x-y plane, the soft-iron distortion is identified by a tilted ellipse with the origin at (0,0) for the XY axis (XZ).

The soft iron effect is the same across all boards of the same design, which is why a good PCB design which takes magnetometer placement (high current traces/other component clearance) into account can generally avoid any soft iron effects (valid for X-NUCLEO-IKS01A2 expansion board).

### Calibration procedure

The MotionFX library magnetometer calibration library compensates for hard-iron distortions.


The magnetometer calibration can be performed at a slower frequency than the sensor fusion output data rate (e.g., 25 Hz).

To run the calibration:

1. initialize magnetometer calibration library (`MotionFX_MagCal_init` or `MotionFX_CM0P_MagCal_init`)
2. call periodically calibration function (`MotionFX_MagCal_run` or `MotionFX_CM0P_MagCal_run`) until the calibration is successfully performed
3. check if calibration was successful (`MotionFX_MagCal_getParams` or `MotionFX_CM0P_MagCal_getParams`); if the function returns `mag_data_out.cal_quality = MFX_MAGCALGOOD` or `MFX_CM0P_MAGCALGOOD`, the calibration was successfully performed
4. apply calibration results:
  - `MAG_Calibrated.AXIS_X = MAG_Value.AXIS_X - MAG_Offset.AXIS_X`
  - `MAG_Calibrated.AXIS_Y = MAG_Value.AXIS_Y - MAG_Offset.AXIS_Y`
  - `MAG_Calibrated.AXIS_Z = MAG_Value.AXIS_Z - MAG_Offset.AXIS_Z`

After calibration routine initialization, slowly rotate the device in a figure 8 pattern in space. While performing this movement, keep the device clear of other magnetic objects such as cell phones, computers and other steel objects.

**Figure 2. STM32 Nucleo board rotation during calibration**

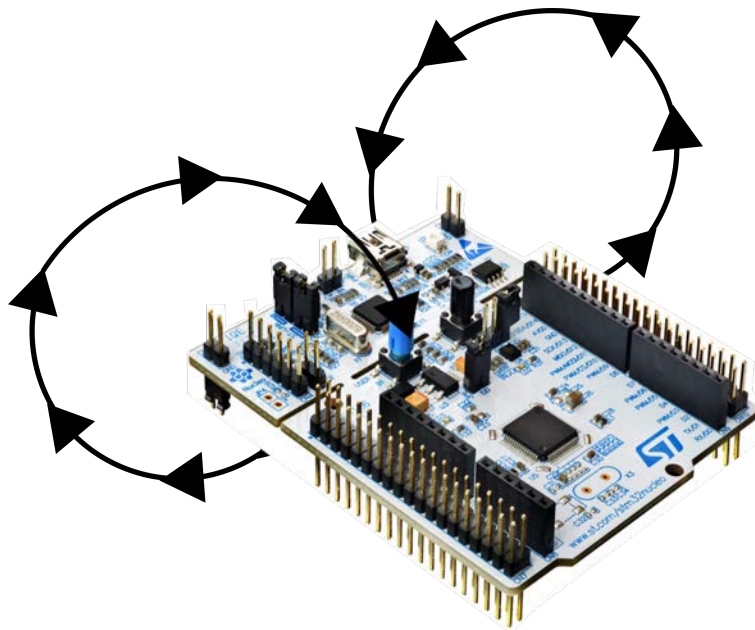

To check that the calibration was performed correctly, check magnetometer data (after applying calibration results) using the scatter plot.

### 2.2.7

#### MotionFX APIs

The MotionFX APIs are:

- **Cortex-M3 and Cortex-M4**
  - `uint8_t MotionFX_GetLibVersion(char *version)`
    - retrieves the version of the library
    - `*version` is a pointer to an array of 35 characters
    - returns the number of characters in the version string
  - `void MotionFX_Initialize(void)`
    - performs MotionFX library initialization and setup of the internal mechanism.



- the CRC module in STM32 microcontroller (in RCC peripheral clock enable register) has to be enabled before using the library
- Note: This function must be called before using the sensor fusion library.*
- `void MotionFX_setKnobs(MFX_knobs_t *knobs)`
  - sets the internal knobs
  - `*knobs` parameter is a pointer to a structure with knobs
- `void MotionFX_getKnobs(MFX_knobs_t *knobs)`
  - gets the current internal knobs
  - `*knobs` parameter is a pointer to a structure with knobs
- `MFX_engine_state_t MotionFX_getStatus_6X(void)`
  - gets the 6 axes library status
  - returns 1 if enabled, 0 if disabled
- `MFX_engine_state_t MotionFX_getStatus_9X(void)`
  - gets the 9 axes library status
  - returns 1 if enabled, 0 if disabled
- `void MotionFX_enable_6X(MFX_engine_state_t enable)`
  - enables or disables the 6 axes function (ACC + GYRO)
  - `enable` parameter is 1 to enable, 0 to disable
- `void MotionFX_enable_9X(MFX_engine_state_t enable)`
  - enables or disables the 9 axes function (ACC + GYRO+MAG)
  - `enable` parameter is 1 to enable, 0 to disable
- `void MotionFX_setGbias(float *gbias)`
  - sets the initial gbias
  - `*gbias` parameter is a pointer to a float array containing the gyro bias value for each axis
- `void MotionFX_getGbias(float *gbias)`
  - gets the initial gbias
  - `*gbias` parameter is a pointer to a float array containing the gyro bias value for each axis
- `void MotionFX_update(MFX_output_t *data_out, MFX_input_t *data_in, float eml_deltatime, float *eml_q_update)`
  - runs the Kalman filter update
  - `*data_out` parameter is a pointer to output data structure
  - `*data_in` parameter is a pointer to input data structure
  - `eml_deltatime` parameter is a delta time between two propagate calls [sec]
  - `*eml_q_update` parameter is a pointer set to NULL
- `void MotionFX_propagate(MFX_output_t *data_out, MFX_input_t *data_in, float eml_deltatime)`
  - runs the Kalman filter propagate
  - `*data_out` parameter is a pointer to output data structure
  - `*data_in` parameter is a pointer to input data structure
  - `eml_deltatime` parameter is a delta time between two propagate calls [sec]
- `void MotionFX_MagCal_init(int sampletime, unsigned short int enable)`
  - initializes the magnetometer calibration library
  - `sampletime` parameter is a period in milliseconds [ms] between the update function calls
  - `enable` parameter is to enable (1) or disable (0) library



- `void MotionFX_MagCal_run(MFX_MagCal_input_t *data_in)`
  - runs the magnetometer calibration algorithm
  - `*data_in` parameter is a pointer to input data structure
  - the parameters for the structure type `MFX_MagCal_input_t` are:
    - `mag` is uncalibrated magnetometer data [ $\mu$ T]/50
    - `time_stamp` is the timestamp [ms]
- `void MotionFX_MagCal_getParams(MFX_MagCal_output_t *data_out)`
  - gets magnetometer calibration parameters
  - `*data_out` parameter is a pointer to output data structure
  - the parameters for the structure type `MFX_MagCal_output_t` are:
    - `hi_bias` is the hard iron offset array [ $\mu$ T]/50
    - `cal_quality` is the calibration quality factor:
      - `MFX_MAGCALUNKNOWN = 0`; accuracy of the calibration parameters is unknown
      - `MFX_MAGCALPOOR = 1`; accuracy of the calibration parameters is poor, cannot be trusted
      - `MFX_MAGCALOK = 2`; accuracy of the calibration parameters is OK
      - `MFX_MAGCALGOOD = 3`; accuracy of the calibration parameters is good

### Storing and loading magnetometer calibration parameters

The following functions have to be implemented specifically for each target platform:

- `char MotionFX_LoadMagCalFromNVM(unsigned short int dataSize, unsigned int *data)`
  - the function is used to retrieve the calibration parameters from storage, the function is called when magnetometer calibration library is enabled
  - `dataSize` is the size of the data in bytes
  - `*data` is the data location pointer
  - returns 0 for correct loading, 1 otherwise
- `char MotionFX_SaveMagCalInNVM(unsigned short int dataSize, unsigned int *data)`
  - the function is used to store the calibration parameters and is called when the magnetometer calibration library is disabled
  - `dataSize` is the size of the data in bytes
  - `*data` is the data location pointer
  - returns 0 for correct saving, 1 otherwise
- **Cortex-M0+**
  - `uint8_t MotionFX_CM0P_GetLibVersion(char *version)`
    - retrieves the version of the library
    - `*version` is a pointer to an array of 35 characters
    - returns the number of characters in the version string
  - `void MotionFX_CM0P_Initialize(void)`
    - performs MotionFX library initialization and setup of the internal mechanism
    - the CRC module in STM32 microcontroller (in RCC peripheral clock enable register) has to be enabled before using the library


*Note: This function must be called before using the sensor fusion library.*
  - `void MotionFX_CM0P_setOrientation(const char acc_orientation[4], const char gyro_orientation[4], const char mag_orientation[4])`
    - sets sensors orientation
    - `acc_orienation/gyro_orientation/mag_orientation` orientation strings

- `MFX_CM0P_engine_state_t MotionFX_CM0P_getStatus_6X(void)`
  - gets the 6 axes library status
  - returns 1 if enabled, 0 if disabled
- `MFX_CM0P_engine_state_t MotionFX_CM0P__getStatus_9X(void)`
  - gets the 9 axes library status
  - returns 1 if enabled, 0 if disabled
- `MFX_CM0P_engine_state_t MotionFX_CM0P__getStatus_euler(void)`
  - gets the status of euler angles calculation
  - returns 1 if enabled, 0 if disabled
- `MFX_CM0P_engine_state_t MotionFX_CM0P__getStatus_gbias(void)`
  - gets the status of gyroscope calibration
  - returns 1 if enabled, 0 if disabled
- `void MotionFX_CM0P_enable_6X(MFX_CM0P_engine_state_t enable)`
  - enables or disables the 6 axes function (ACC + GYRO)
  - enable parameter is 1 to enable, 0 to disable
- `void MotionFX_CM0P_enable_9X(MFX_CM0P_engine_state_t enable)`
  - enables or disables the 9 axes function (ACC + GYRO+MAG)
  - enable parameter is 1 to enable, 0 to disable
- `void MotionFX_CM0P_enable_euler(MFX_CM0P_engine_state_t enable)`
  - enables or disables the euler angles calculation
  - enable parameter is 1 to enable, 0 to disable
- `void MotionFX_CM0P_enable_gbias(MFX_CM0P_engine_state_t enable)`
  - enables or disables the gyroscope calibration
  - enable parameter is 1 to enable, 0 to disable
- `void MotionFX_CM0P_setGbias(float *gbias)`
  - sets the initial gbias
  - \*gbias parameter is a pointer to a float array containing the gyro bias value for each axis
- `void MotionFX_CM0P_getGbias(float *gbias)`
  - gets the initial gbias
  - \*gbias parameter is a pointer to a float array containing the gyro bias value for each axis
- `void MotionFX_CM0P_update(MFX_CM0P_output_t *data_out, MFX_CM0P_input_t *data_in, float deltetime)`
  - runs the sensor fusion algorithm
  - \*data\_out parameter is a pointer to output data structure
  - \*data\_in parameter is a pointer to input data structure
  - deltetime parameter is a delta time between two propagate calls [sec]
- `void MotionFX_CM0P_MagCal_init(int sampletime, unsigned short int enable)`
  - initializes the magnetometer calibration library
  - sampletime parameter is a period in milliseconds [ms] between the update function calls
  - enable parameter is to enable (1) or disable (0) library
- `void MotionFX_CM0P_MagCal_run(MFX_MagCal_CM0P_input_t *data_in)`
  - runs the magnetometer calibration algorithm
  - \*data\_in parameter is a pointer to input data structure
  - the parameters for the structure type `MFX_MagCal_CM0P_input_t` are:
    - mag is uncalibrated magnetometer data [ $\mu$ T]/50

- `void MotionFX_CM0P_MagCal_getParams(MFX_CM0P_MagCal_output_t *data_out)`
  - gets magnetometer calibration parameters
  - `*data_out` parameter is a pointer to output data structure
  - the parameters for the structure type `MFX__CM0P_MagCal_output_t` are:
    - `hi_bias` is the hard iron offset array [ $\mu$ T]/50
    - `cal_quality` is the calibration quality factor:
      - `MFX_CM0P_MAGCALUNKNOWN = 0`; accuracy of the calibration parameters is unknown
      - `MFX_CM0P_MAGCALPOOR = 1`; accuracy of the calibration parameters is poor, cannot be trusted
      - `MFX_CM0P_MAGCALOK = 2`; accuracy of the calibration parameters is OK
      - `MFX_CM0P_MAGCALGOOD = 3`; accuracy of the calibration parameters is good

## 2.2.8 API flow chart

Figure 3. MotionFX API logic sequence

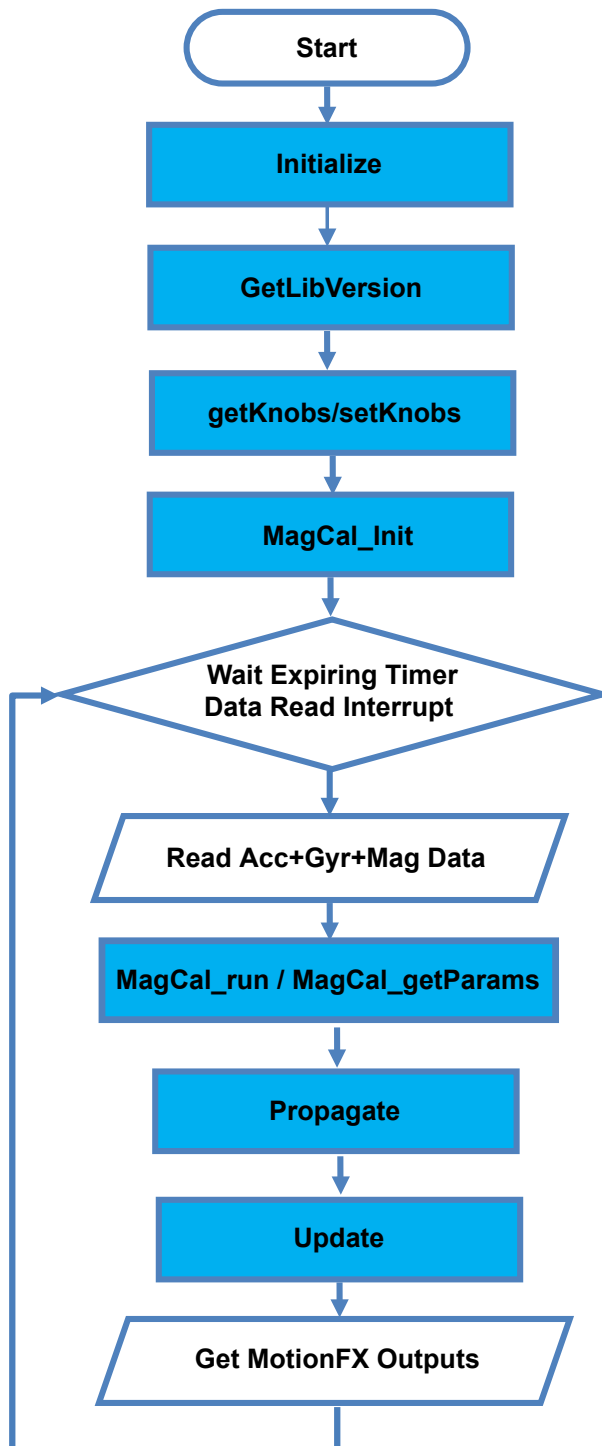

## 2.2.9 Demo code

The following demonstration code reads data from the accelerometer, gyroscope and magnetometer sensors and gets the rotation, quaternions, gravity and linear acceleration.

```
[...]  
#define VERSION_STR LENG 35
```

```
#define MFX_DELTATIME 10
[...]
```

```
/** Initialization **/
char lib_version[VERSION_STR LENG];
char acc_orientation[3];
MFX_knobs_t iKnobs;

/* Sensor Fusion API initialization function */
MotionFX_initialize();

/* Optional: Get version */
MotionFX_GetLibVersion(lib_version);

MotionFX_getKnobs(&iKnobs);
/* Modify knobs settings */
MotionFX_setKnobs(&iKnobs);

/* Enable 9-axis sensor fusion */
MotionFX_enable_9X(MFX_ENGINE_ENABLE);

[...]
```

```
/** Using Sensor Fusion algorithm **/
Timer_OR_DataRate_Interrupt_Handler()
{
  MFX_input_t data_in;
  MFX_output_t data_out;

  /* Get acceleration X/Y/Z in g */
  MEMS_Read_AccValue(data_in.acc[0], data_in.acc[1], data_in.acc[2]);

  /* Get angular rate X/Y/Z in dps */
  MEMS_Read_GyroValue(data_in.gyro[0], data_in.gyro[1], data_in.gyro[2]);

  /* Get magnetic field X/Y/Z in uT/50 */
  MEMS_Read_MagValue(data_in.mag[0], data_in.mag[1], &data_in.mag[2]);

  /* Run Sensor Fusion algorithm */
  MotionFX_propagate(&data_out, &data_in, MFX_DELTATIME);
  MotionFX_update(&data_out, &data_in, MFX_DELTATIME, NULL);
}
```

### 2.2.10 Algorithm performance

**Table 2. Cortex-M4 and Cortex-M3: elapsed time (μs) algorithm**

Cortex-M4 STM32F401RE at 84 MHz									Cortex-M3 STM32L152RE at 32 MHz								
SW4STM32 1.13.1 (GCC 5.4.1)			IAR EWARM 7.80.4			Keil μVision 5.22			SW4STM32 1.13.1 (GCC 5.4.1)			IAR EWARM 7.80.4			Keil μVision 5.22		
Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max
<1	2396	2899	<1	2224	2373	<1	3218	3450	3	8763	31389	3	5000	31075	2	5046	16556

**Table 3. Cortex-M0+: elapsed time (μs) algorithm**

Cortex-M0+ STM32L073RZ at 32 MHz								
SW4STM32 1.13.1 (GCC 5.4.1)			IAR EWARM 7.80.4			Keil μVision 5.22		
Min	Avg	Max	Min	Avg	Max	Min	Avg	Max
2	3462	3693	2	1477	3586	2	1657	1753


### 3 Sample application

The MotionFX middleware can be easily manipulated to build user applications. A sample application is provided in the Application folder.

It is designed to run on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#), [NUCLEO-L152RE](#) or [NUCLEO-L073RZ](#) development board connected to an [X-NUCLEO-IKS01A2](#) (based on LSM6DSL) expansion board, with optional [STEVAL-MKI160V1](#) board (based on LSM6DS3).

The application provides real-time motion-sensor data fusion and returns rotation, quaternions, gravity, linear acceleration, heading and heading error.

Figure 4. STM32 Nucleo: LEDs, button, jumper

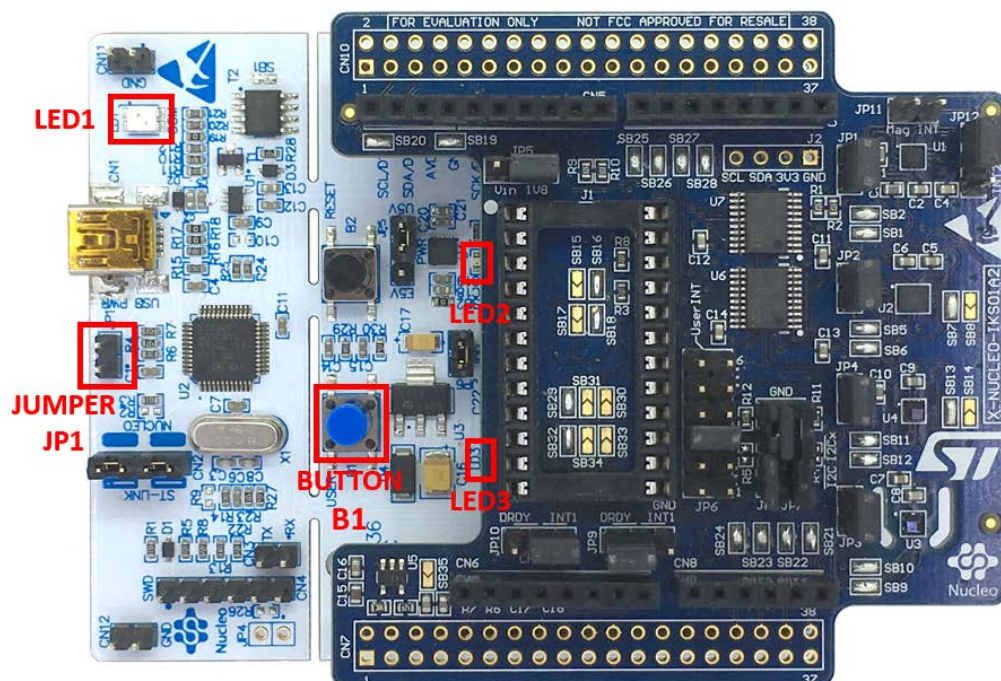

The above figure shows the user button B1 and the three LEDs of the NUCLEO-F401RE board. Once the board is powered, LED LD3 (PWR) turns ON.

**Note:** After powering the board, LED LD2 blinks once indicating the application is ready.

Initially, the magnetometer calibration data are loaded from the MCU internal flash memory and checked for data validation and good calibration quality.

If the data are valid and the calibration quality is good the LED2 is switched ON, if not the magnetometer needs calibration and LED2 is turned OFF; in this case the calibration routine is initialized (only for NUCLEO-F401RE, NUCLEO-L476RG, NUCLEO-L152RE).

To calibrate the magnetometer, perform the figure 8 calibration movement.

**Note:** You can calibrate the magnetometer only when the sensor fusion is activated.

When user button B1 is pressed, the system clears old magnetometer calibration data stored in the flash memory and starts the calibration routine again.

As soon as the magnetometer calibration finishes, after acquiring enough data, LED2 turns ON indicating that the calibration quality is good and calibration data are stored in the flash memory.

### 3.1 Unicleo-GUI application


The sample application uses the Windows Unicleo-GUI utility, which can be downloaded from [www.st.com](http://www.st.com).

**Step 1.** Ensure that the necessary drivers are installed and the STM32 Nucleo board with appropriate expansion board is connected to the PC.

**Step 2.** Launch the Unicleo-GUI application to open the main application window.


If an STM32 Nucleo board with supported firmware is connected to the PC, it is automatically detected and the appropriate COM port is opened.

Figure 5. Unicleo main window

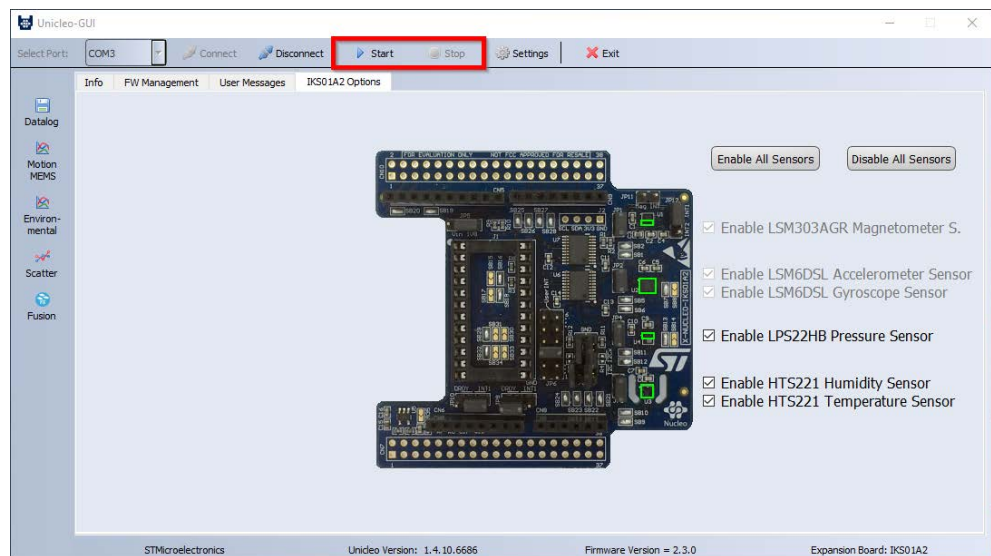

**Step 3.** Start and stop data streaming by using the appropriate buttons on the vertical tool bar. The data coming from the connected sensor can be viewed in the User Messages tab.


Figure 6. User Messages tab

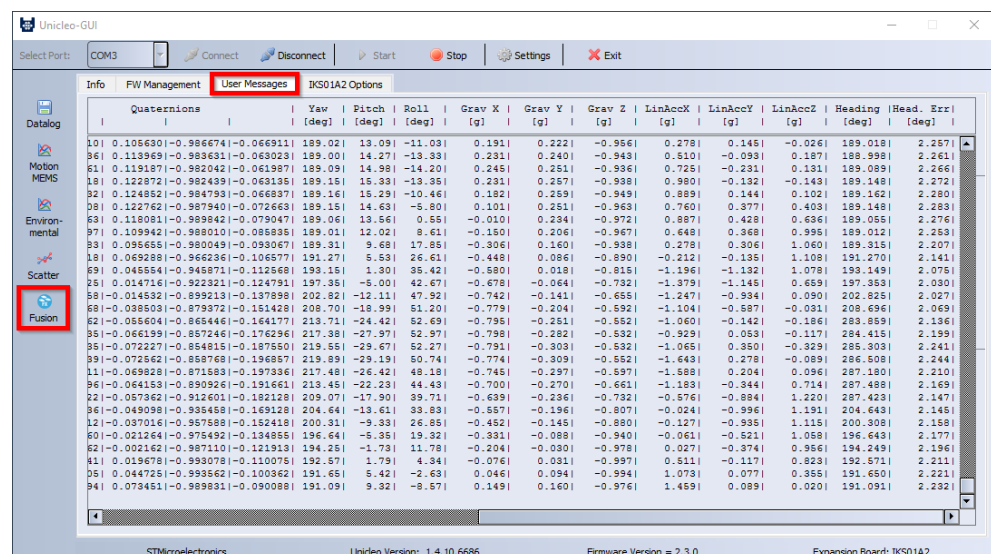

**Step 4.** Click on the **Fusion** icon in the vertical toolbar to open the dedicated application window. To switch between 9-axes and 6-axes sensor fusion click on the appropriate button. To align the tea pot position point the Nucleo board towards the screen and press **Reset** model button.




Figure 7. Fusion window

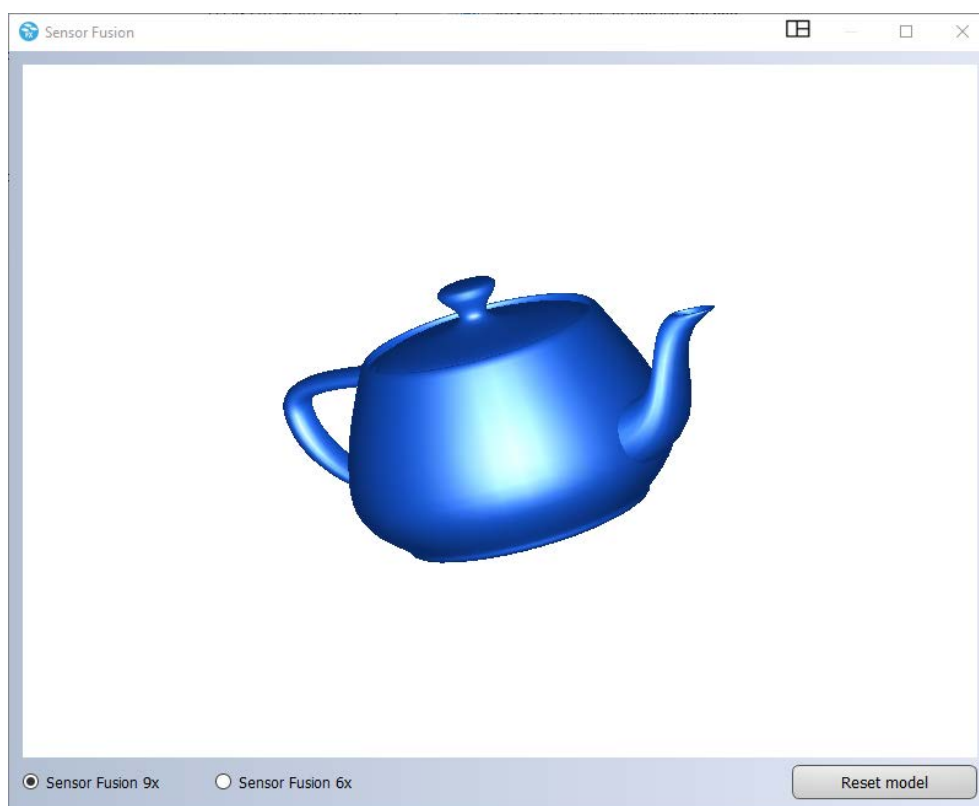


**Step 5.** Click on the **Scatter Plot** icon to check the magnetometer calibration quality.

Figure 8. Magnetometer scatter plot (properly calibrated magnetometer)

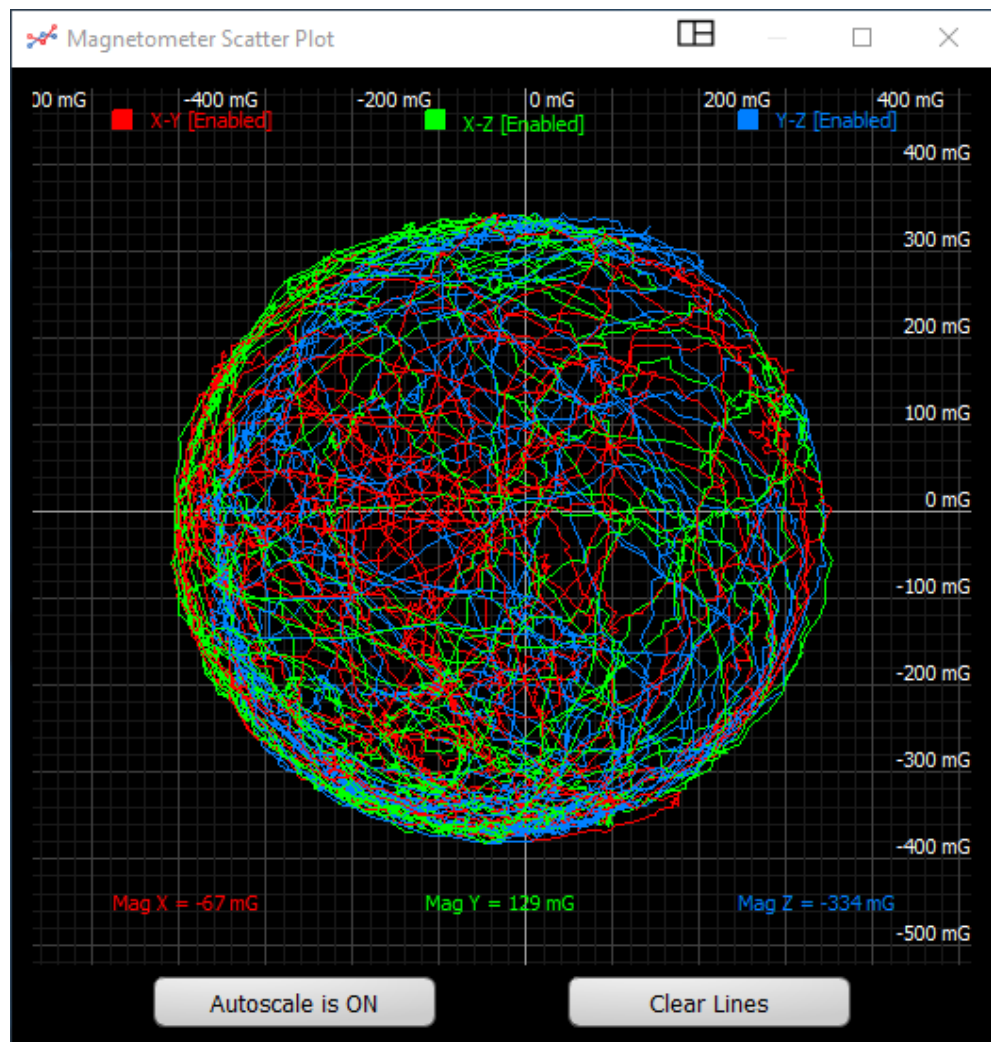

- Step 6.** Click on the **Datalog** icon in the vertical toolbar to open the datalog configuration window: you can select the sensor and fusion data to be saved in the files. You can start or stop saving by clicking on the corresponding button.

Figure 9. Datalog window

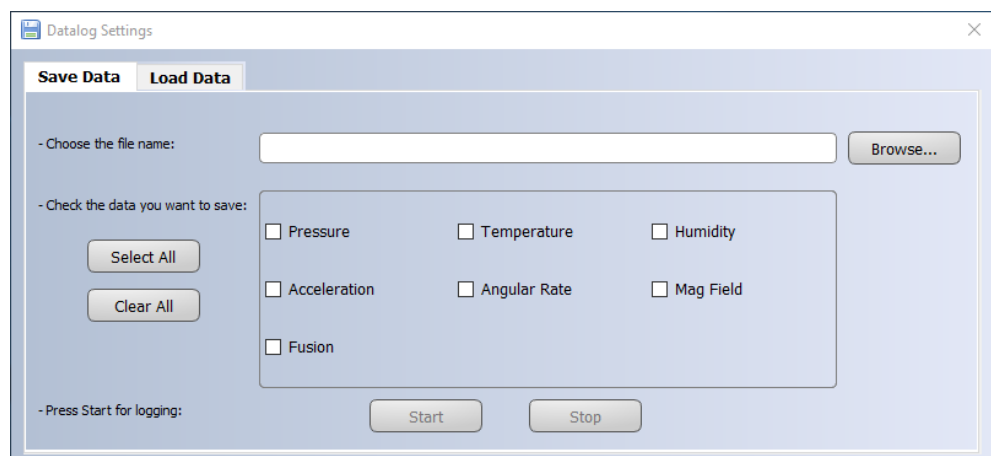

## 4 References

---

All of the following resources are freely available on [www.st.com](http://www.st.com).

1. UM1859: Getting started with the X-CUBE-MEMS1 motion MEMS and environmental sensor software expansion for STM32Cube
2. UM1724: STM32 Nucleo-64 board
3. UM2128: Getting started with Unicleo-GUI for motion MEMS and environmental sensor software expansion for STM32Cube

## Revision history

**Table 4. Document revision history**

Date	Version	Changes
12-May-2017	1	Initial release.
26-Jan-2018	2	Added references to NUCLEO-L152RE development board and Section 2.2.10 Algorithm performance.
20-Mar-2018	3	Updated Introduction, Section 2.1: "MotionFX overview" and Section 2.2.9: "Demo code".
02-May-2018	4	Updated <a href="#">Section 2.2.7 MotionFX APIs</a> and <a href="#">Figure 3. MotionFX API logic sequence</a> . Added <a href="#">Table 3. Cortex-M0+: elapsed time (μs) algorithm</a> . Added references to NUCLEO-L073RZ and ARM® Cortex®-M0+.
01-Oct-2018	5	Removed references to X-NUCLEO-IKS01A1 throughout document. Updated <a href="#">Section 2.2.4 MotionFX library parameters</a> , <a href="#">Table 2. Cortex-M4 and Cortex-M3: elapsed time (μs) algorithm</a> , <a href="#">Figure 4. STM32 Nucleo: LEDs, button, jumper</a> and <a href="#">Section 3.1 Unicleo-GUI application</a> .

## Contents

<b>1</b>	<b>Acronyms and abbreviations</b>	<b>2</b>
<b>2</b>	<b>MotionFX middleware library in X-CUBE-MEMS1 software expansion for STM32Cube</b>	<b>3</b>
2.1	MotionFX overview	3
2.2	MotionFX library	3
2.2.1	MotionFX library description	3
2.2.2	MotionFX 6-axis and 9-axis sensor fusion modes	3
2.2.3	MotionFX library operation	3
2.2.4	MotionFX library parameters	4
2.2.5	MotionFX library output data rate	6
2.2.6	Sensor calibration in the MotionFX library	6
2.2.7	MotionFX APIs	7
2.2.8	API flow chart	11
2.2.9	Demo code	12
2.2.10	Algorithm performance	13
<b>3</b>	<b>Sample application</b>	<b>14</b>
3.1	Unicleo-GUI application	14
<b>4</b>	<b>References</b>	<b>18</b>
	<b>Revision history</b>	<b>19</b>

## List of tables

<b>Table 1.</b>	List of acronyms . . . . .	2
<b>Table 2.</b>	Cortex-M4 and Cortex-M3: elapsed time ( $\mu$ s) algorithm. . . . .	13
<b>Table 3.</b>	Cortex-M0+: elapsed time ( $\mu$ s) algorithm. . . . .	13
<b>Table 4.</b>	Document revision history . . . . .	19

## List of figures

<b>Figure 1.</b>	Example of sensor orientations . . . . .	5
<b>Figure 2.</b>	STM32 Nucleo board rotation during calibration . . . . .	7
<b>Figure 3.</b>	MotionFX API logic sequence . . . . .	12
<b>Figure 4.</b>	STM32 Nucleo: LEDs, button, jumper . . . . .	14
<b>Figure 5.</b>	Unicleo main window . . . . .	15
<b>Figure 6.</b>	User Messages tab . . . . .	15
<b>Figure 7.</b>	Fusion window . . . . .	16
<b>Figure 8.</b>	Magnetometer scatter plot (properly calibrated magnetometer) . . . . .	17
<b>Figure 9.</b>	Datalog window . . . . .	17



**IMPORTANT NOTICE – PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2018 STMicroelectronics – All rights reserved