

MODEL BD AIR BRUSH

■ SPECIFICATIONS

BD-207

Nozzle diameter: 0.2/0.25/0.3/0.4/0.5mm

Fluid Cup capacity: 2cc

■ APPLICATIONS

Commercial arts, illustrations, photo retouching, hobby and crafts


■ HOW TO SPRAY

1. Fill fluid in the cup after thinning appropriately.
2. Hold the airbrush lightly in your hand.
3. By pressing the main lever, a stream of air emerges. Then draw it backward gradually for Color atomization.
4. The spray pattern is in accordance with the distance between a work surface and an airbrush.
5. For fine line spray, remove the needle cover and hold the airbrush near a work surface.

■ MAINTENANCE

1. Empty the fluid cup and wash with water or solvent with a brush.
2. Refill cup with water or solvent, then block the needle cover with a finger and spray. The air flows backward into nozzle to clean the paints remained the airbrush.

PARTS DETAILS

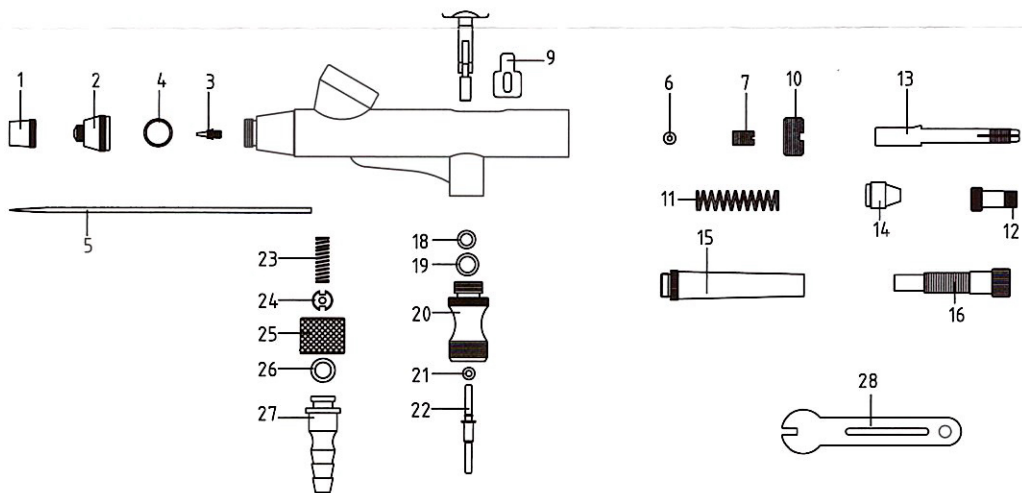

Parts Name

- | | | |
|----------------------------|-------------------------------|-------------------------------|
| 1. Needle Cap | 11. Spring | 21. Valve Rod O-Ring |
| 2. Nozzle Cap | 12. Spring Case | 22. Valve Rod |
| 3. Nozzle | 13. Needle Chucking Guide | 23. Valve Spring |
| 4. O-Ring for Nozzle Cap | 14. Needle Chucking Net | 24. Valve Screw |
| 5. Needle | 15. Standard-Handle Adjusting | 25. Hose Connector Nut |
| 6. O-Ring for Needle Guide | 16. Adjusting Screw | 26. O-Ring for Hose Connector |
| 7. Needle Guide | 17. | 27. Hose Connector |
| 8. Operation Lever | 18. Lever Guide O-Ring | 28. Nozzle Spanner |
| 9. Lever Guide | 19. Valve O-Ring | |
| 10. Stopper | 20. Valve Body | |