

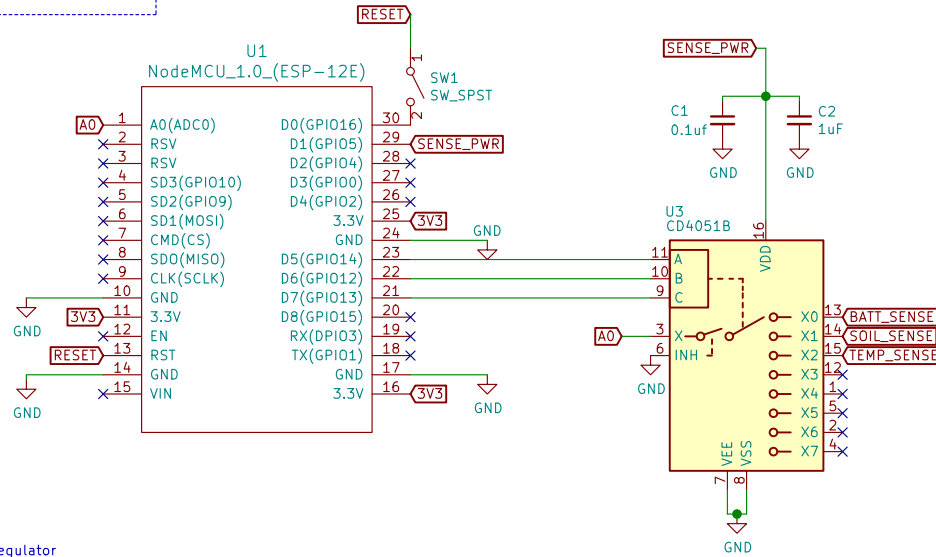




Power

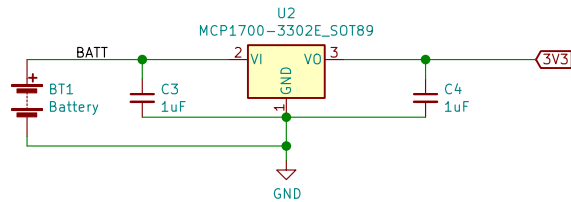

Sensors

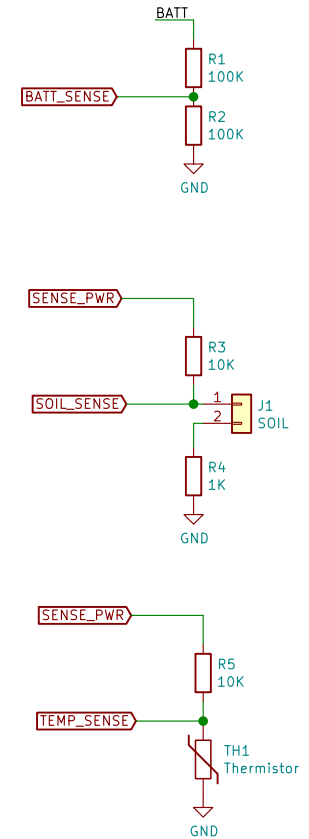

Remove the voltage regulator that is on the NodeMCU and disconnect the USB to UART chip.

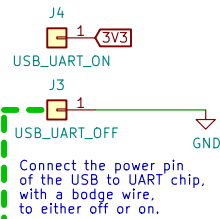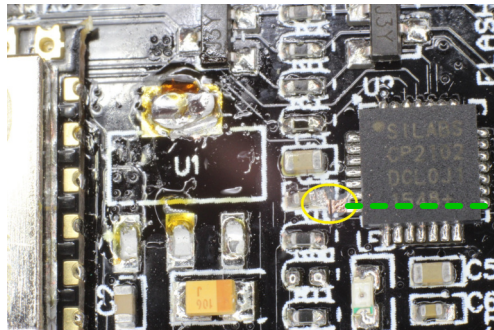

Sheet: /
File: transmitter.sch

Title: ESP8266 Sensor

Size: A4
KiCad E.D.A. kicad 5.0.2-bee76a070ubuntu16.04.1

Date:
Rev:
Id: 1/1