

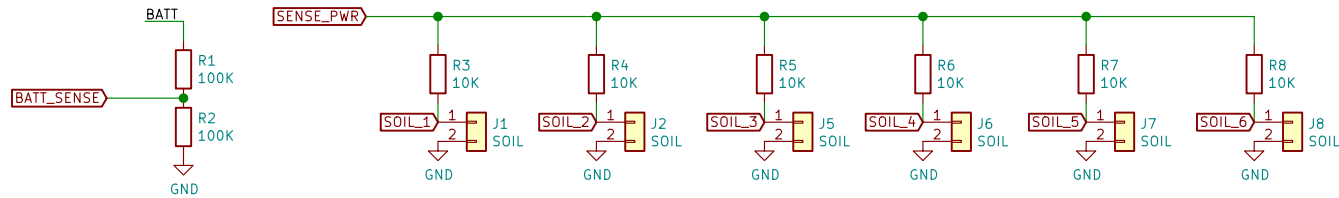


## Sensors






## Power

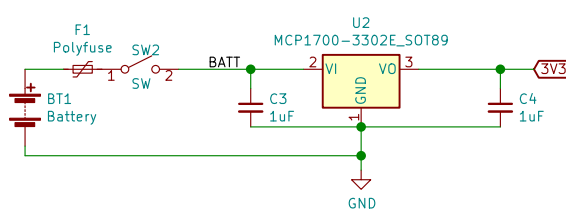

## Mods

Remove the voltage regulator that is on the NodeMCU and disconnect the USB to UART chip.

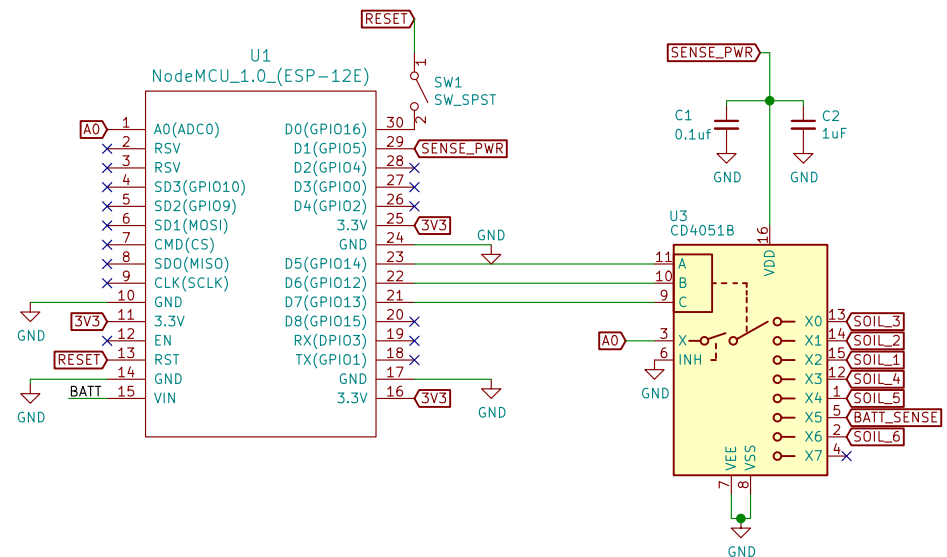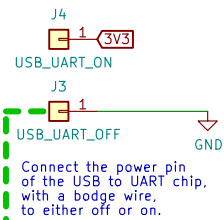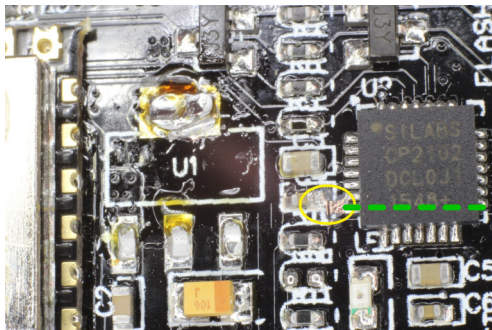

Sheet: /

File: transmitter.sch

**Title: ESP8266 Sensor**

Size: A4

Date:

KiCad E.D.A. kicad 5.0.2-bee76a070ubuntu16.04.1

Rev:

Id: 1/1