

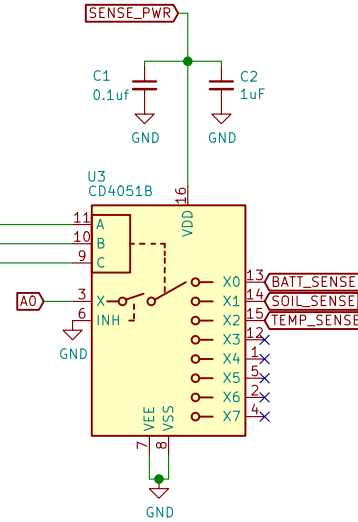
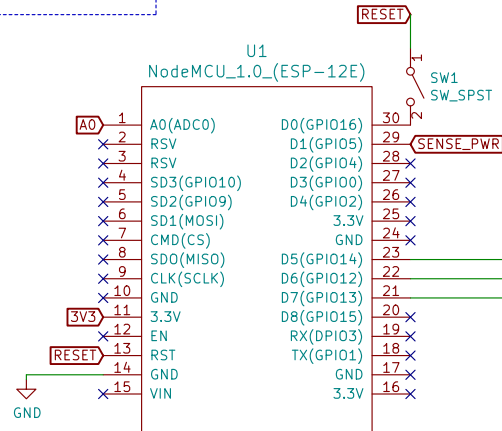




## Power

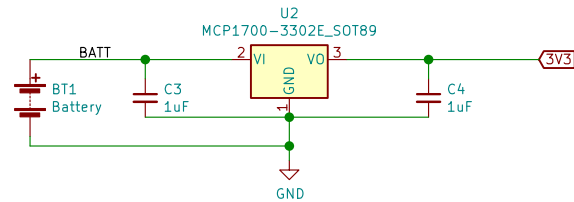

## Sensors

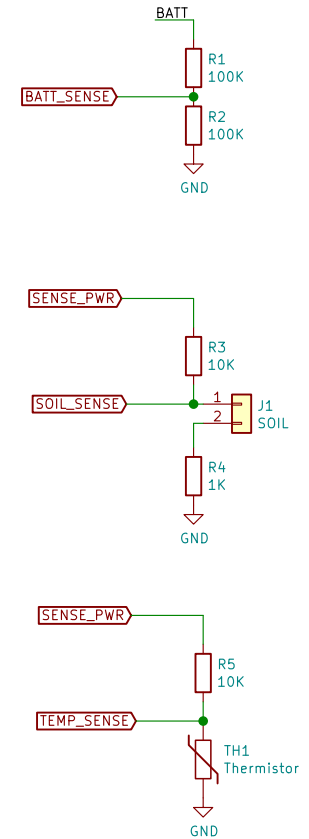

Remove the voltage regulator that is on the NodeMCU and disconnect the USB to UART chip.

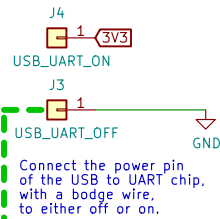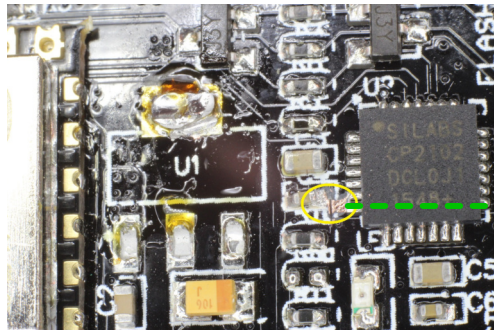

Sheet: /  
File: transmitter.sch

**Title: ESP8266 Sensor**

Size: A4 Date:  
KiCad E.D.A. kicad 5.0.2-bee76a070ubuntu16.04.1

Rev:  
Id: 1/1