


LE Pump Failure Notifier V02

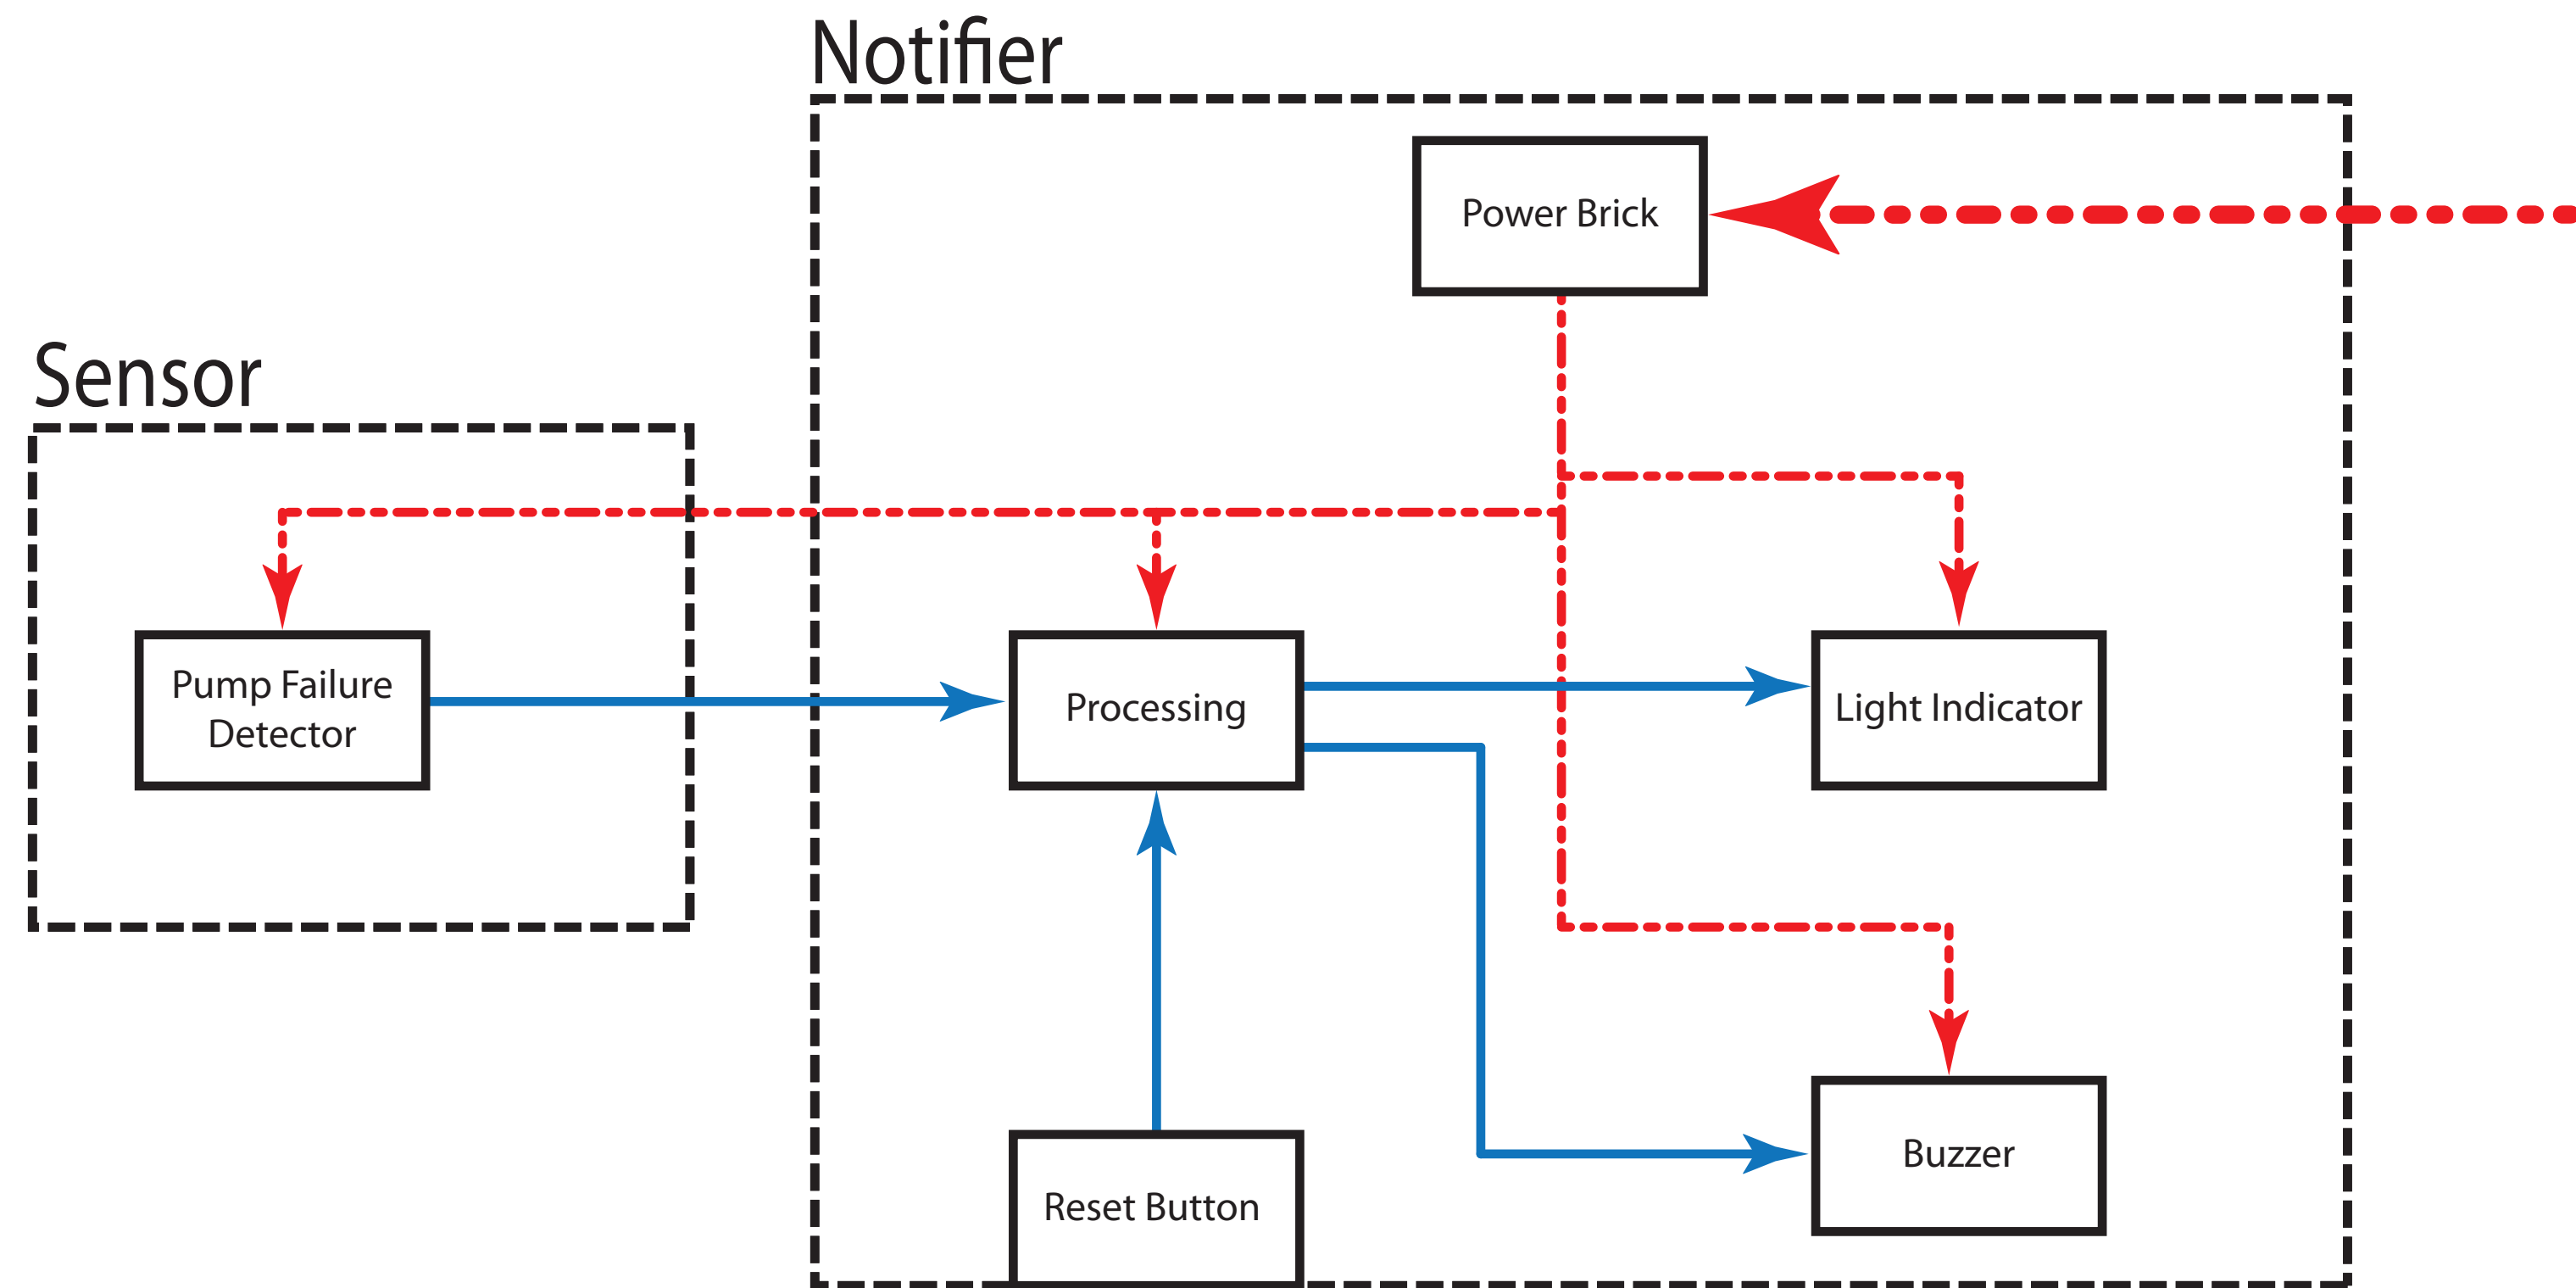

Key

- External Power
- Power
- Wireless Signal
- Wired Signal

Introduction:

This diagram shows the relationship between the different blocks that appear in the Feature List. The dashed line represents a device boundary. An interface will need to be defined for any signal that crossed the boundary. Blocks that touch the boundary are accessible from the outside of the device.