


## Remarks

- The parameters `edge_count` and `inc_count` are optional. If not needed, these parameters can be set to `NULL` to ignore them.

## 7.19 IO\_PWM.h File Reference

IO Driver functions for PWM channels.

Include dependency graph for IO\_PWM.h:

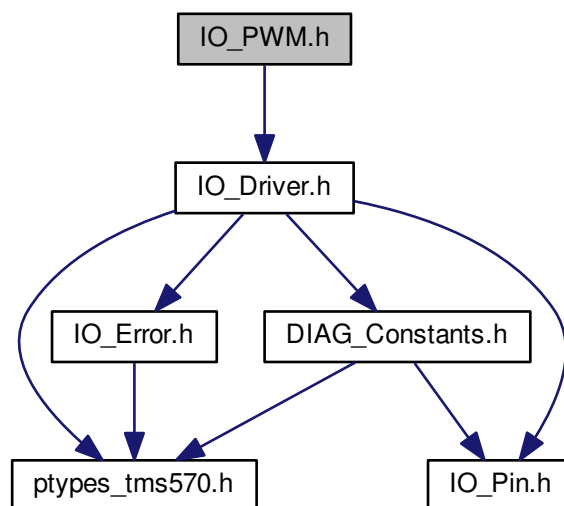

## Data Structures

- struct `io_pwm_current_queue_`  
*PWM current measurement queue.*
- struct `io_pwm_safety_conf_`  
*Safety configuration for the PWM outputs.*

## Typedefs

- typedef struct `io_pwm_current_queue_` `IO_PWM_CURRENT_QUEUE`  
*PWM current measurement queue.*
- typedef struct `io_pwm_safety_conf_` `IO_PWM_SAFETY_CONF`  
*Safety configuration for the PWM outputs.*