


Remarks

- The parameters `edge_count` and `inc_count` are optional. If not needed, these parameters can be set to `NULL` to ignore them.

7.19 IO_PWM.h File Reference

IO Driver functions for PWM channels.

Include dependency graph for IO_PWM.h:

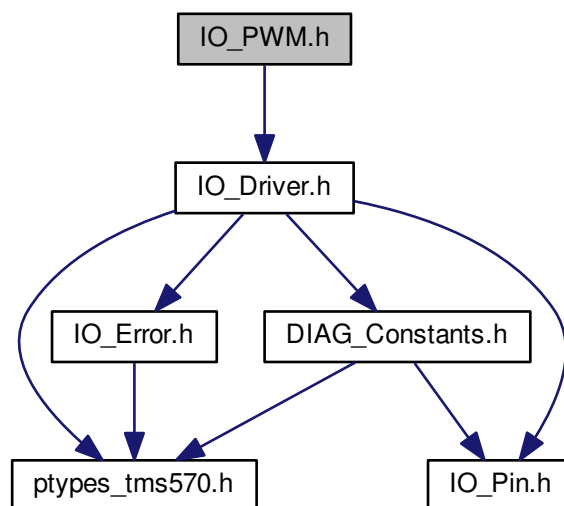

Data Structures

- struct `io_pwm_current_queue_`
PWM current measurement queue.
- struct `io_pwm_safety_conf_`
Safety configuration for the PWM outputs.

Typedefs

- typedef struct `io_pwm_current_queue_` `IO_PWM_CURRENT_QUEUE`
PWM current measurement queue.
- typedef struct `io_pwm_safety_conf_` `IO_PWM_SAFETY_CONF`
Safety configuration for the PWM outputs.