


GUI for Illuminated Steering Wheel



Illuminated Steering Wheel

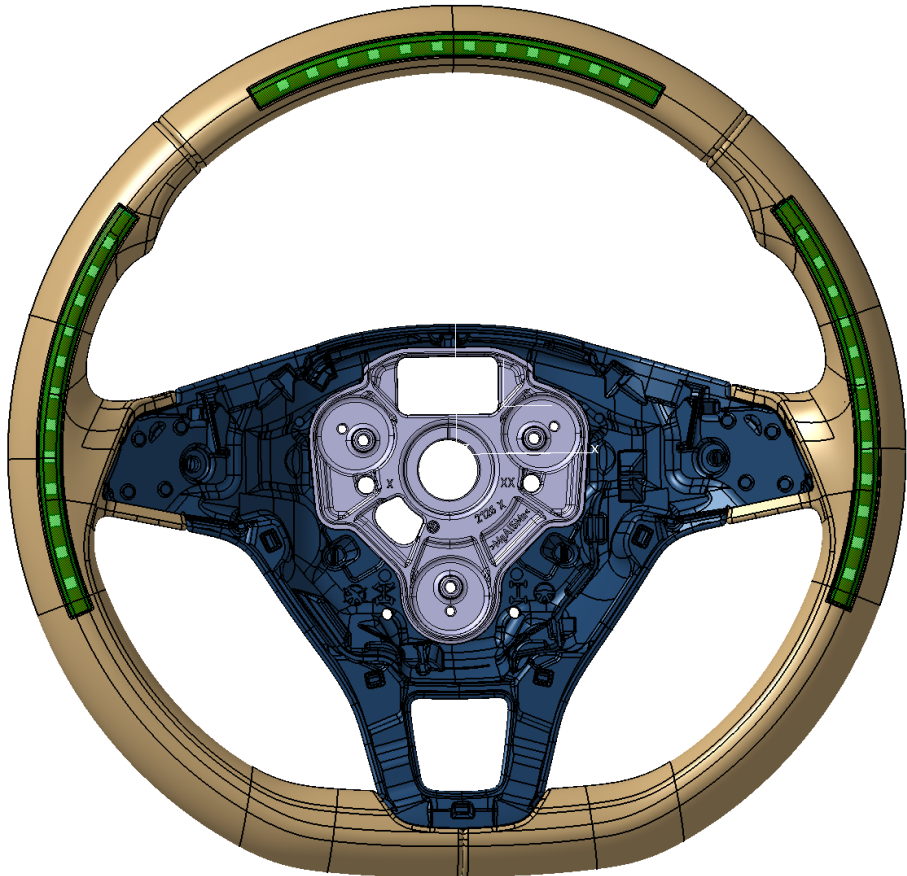

Global luminance

☐ High ☐ Middle ☐ Low

Vehicle State

State Name

Free Mode

L-Zone

T-Zone

R-Zone


Color

Color

Color

Send Command

GUI界面解释说明

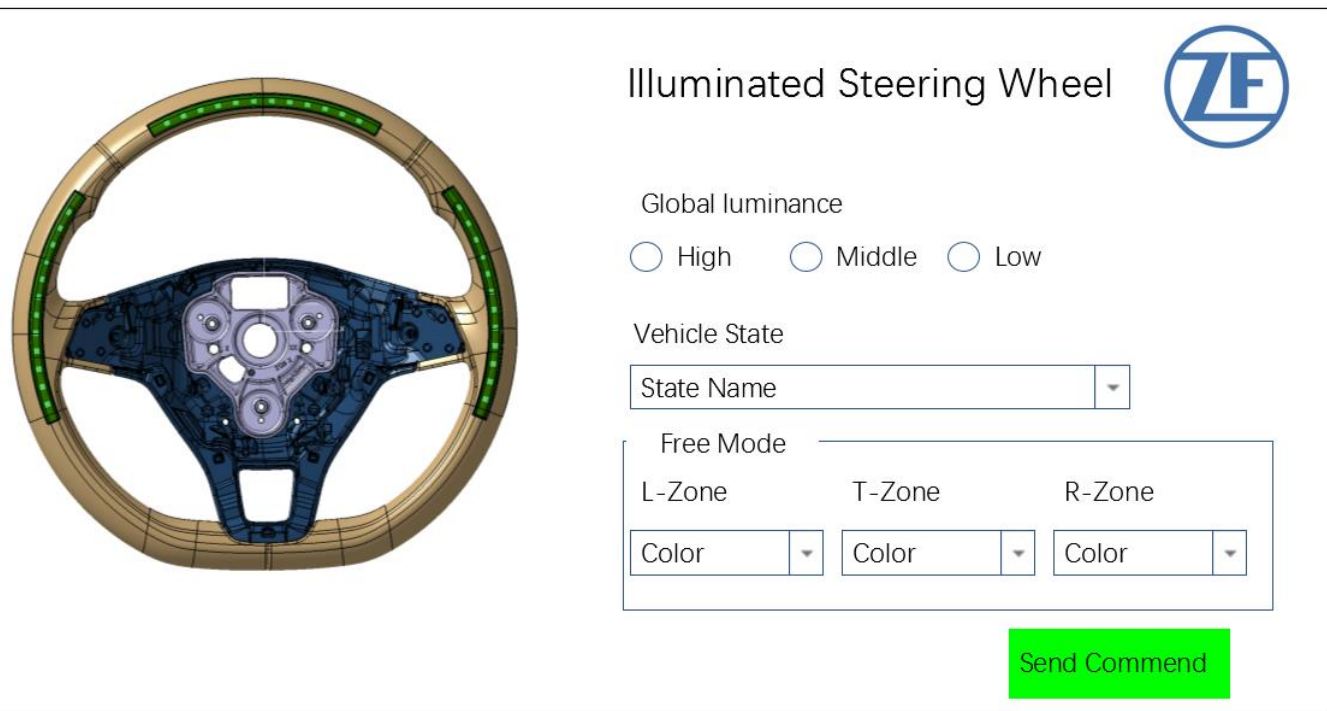

1. UI内只包含框内内容；
2. Global luminance 为全局亮度，主要影响绿色蓝色等提示性命令，High为高亮度对应绿（蓝）色255（100%）、Middle为中亮度对应绿（蓝）色190（75%）、Low为低亮度对应绿（蓝）色125（50%）；
3. 车况下拉列表为对应的18条表现形式（内容见附表）；
4. Free Mode情况下勾选Free mode框内颜色才可控制，颜色包括红，黄，绿，蓝四色，亮度跟随全局亮度；
5. 上方框体设置好后点击Send Command即发送命令至灯带；
6. 硬件连接按键（connect）仍按照之前UI布置于上方选项窗，同时请将信号发送记录显示在另一个可隐藏窗口（在connect按键旁增加一个diagnosis按键调出窗口）。

Vehicle State 下拉列表内容

Start Engine, or Allow to Auto-drive under human control, or shift Auto-drive to human control

Hands off during manual control in short time

Hands back, and allow to Auto-driving

Hands off for long time, shift to Auto-driving

Under Auto-driving, Auto-driving may lose control, notice driver

Under manual control, lose environment for Auto-driving

Under manual control, not allow to Auto-driving

Overtake from left

Overtake from right

Under manual control and not allow to Auto-driving but hands off

Driver is fatigue or not focus on road

Manual control in high road, allow to overtake

Manual control in traffic jam, allow to overtake from left

Manual control in traffic jam, allow to overtake from right

Overtake from left (second design)

Overtake from right (second design)

Free Mode