



Careful with the laser beam. Set power on lowest with Attenuated

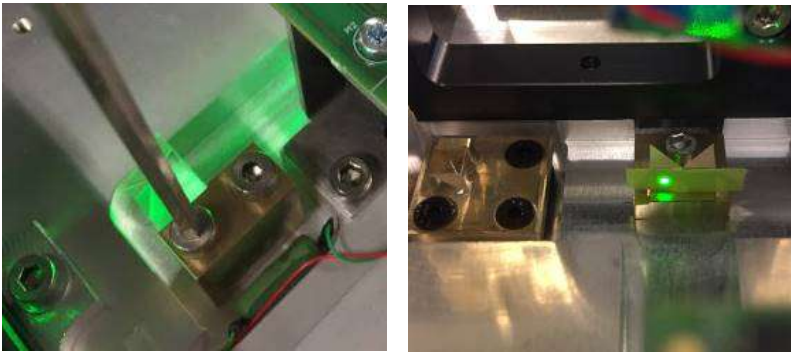


Out of alignment horizontal :

Loosen prism holder 12X12 twist, so the beam is in the middle of the double holder 5X5 prism to the left.

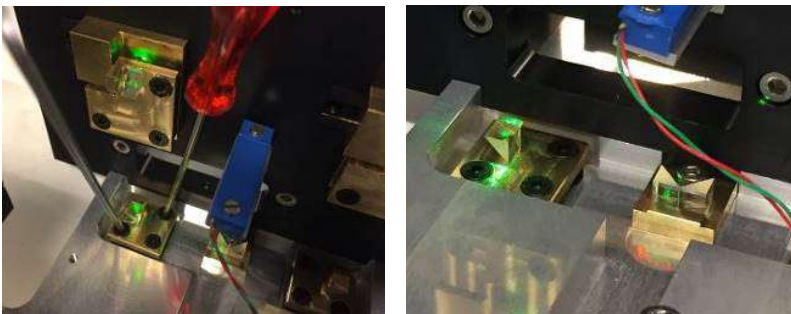


Adjust the prism at the bottom after double holding to the left so that the beam hits in the middle of the last prism

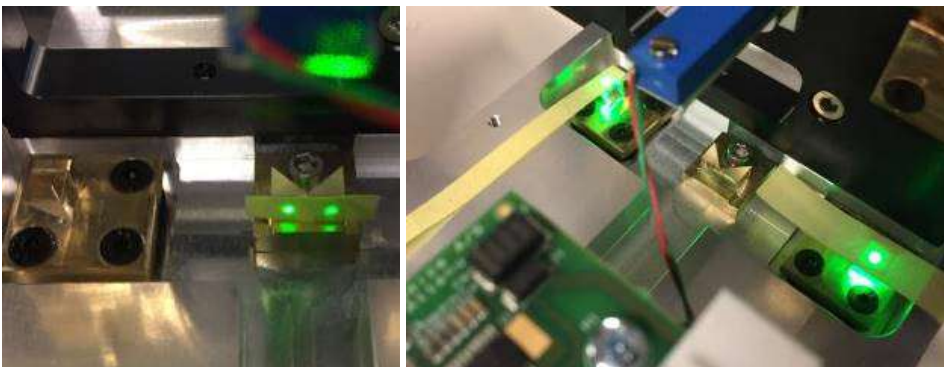

Turn on the Bragg-Cell:

Now both beams should be in the middle of double holder 5X5 prism.

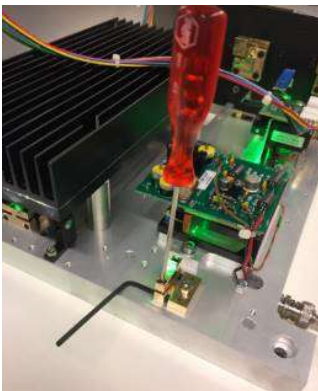

Out of alignment vertical

Remove the Bragg cell cover, adjusting as shown red key vertically  
So the beam is in the middle of the double holder 5X5 prism to the left

Blue Trimpot Bragg-Cell Adjust to balance