

How to Take and set Auction Photos

Take the Photos

Please take Photos of all the section of your Equipment (Maximum number 70 Photos).

Section	Details	Standard Number of Photos
Appearance	Diagonally take photo from right front, left front, right back and left back. Also take features if you have.	5~
Engine	Full photo of Radiator, Oil leak, Water leak, and Blow-by etc.	~15
Upper Structure	Working-units, Operation-Device, Mater, Hydraulic-system	~20
Swing Device	Swing-table	~5
Under Structure, under-carriage	Track-frame, Travel-device, Shoe, Roller etc.	~15
Extra Parts/Attachment	Parts, Attachment etc.	5~
Plate, Engraved		~5

Arranging the Photos

1. Take Photos by Camera and Transfer Photos to PC and Reduce it.

- Make folders for each auction product in your PC
- Import photos in the folder
- Reduce photos size by a software


To reduce photo there are so many online software. One of them is <https://freesoft-100.com/review/shukusen.php>




2. Select the Photos from the folder

To select Photos by using mouse click (press Cntl Key to select multiple).

3. Rename Photos file name by "a.jpg", "b.jpg", "c.jpg" or "1.jpg", "2.jpg", "3.jpg" and so on.

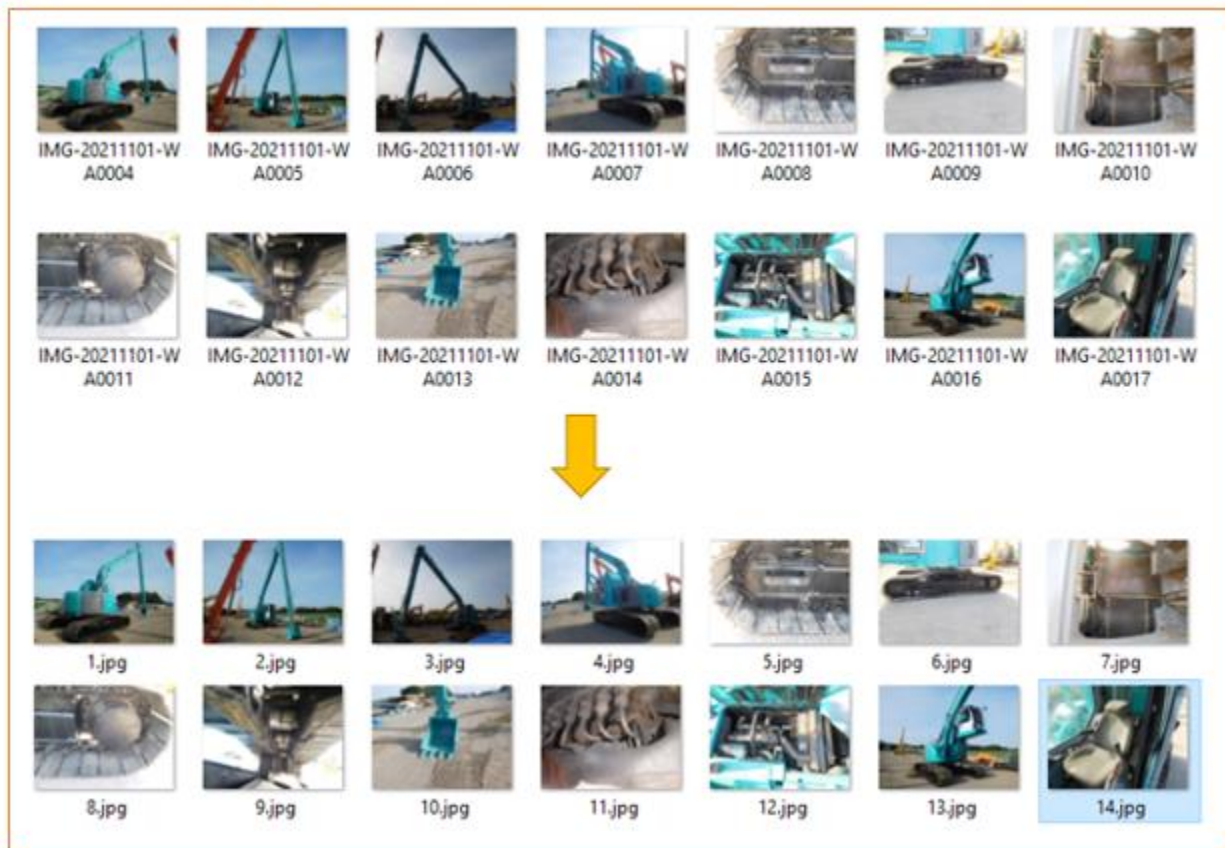

4. Compress Photos of folder. (right-click)

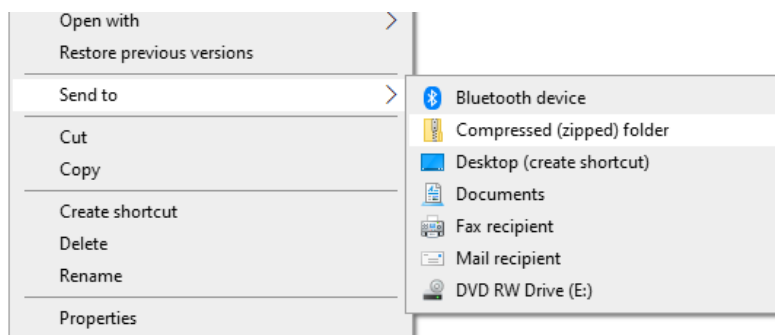

5. Send the compressed file by attaching it to E-mail to Woody.co.ltd. with Application