


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

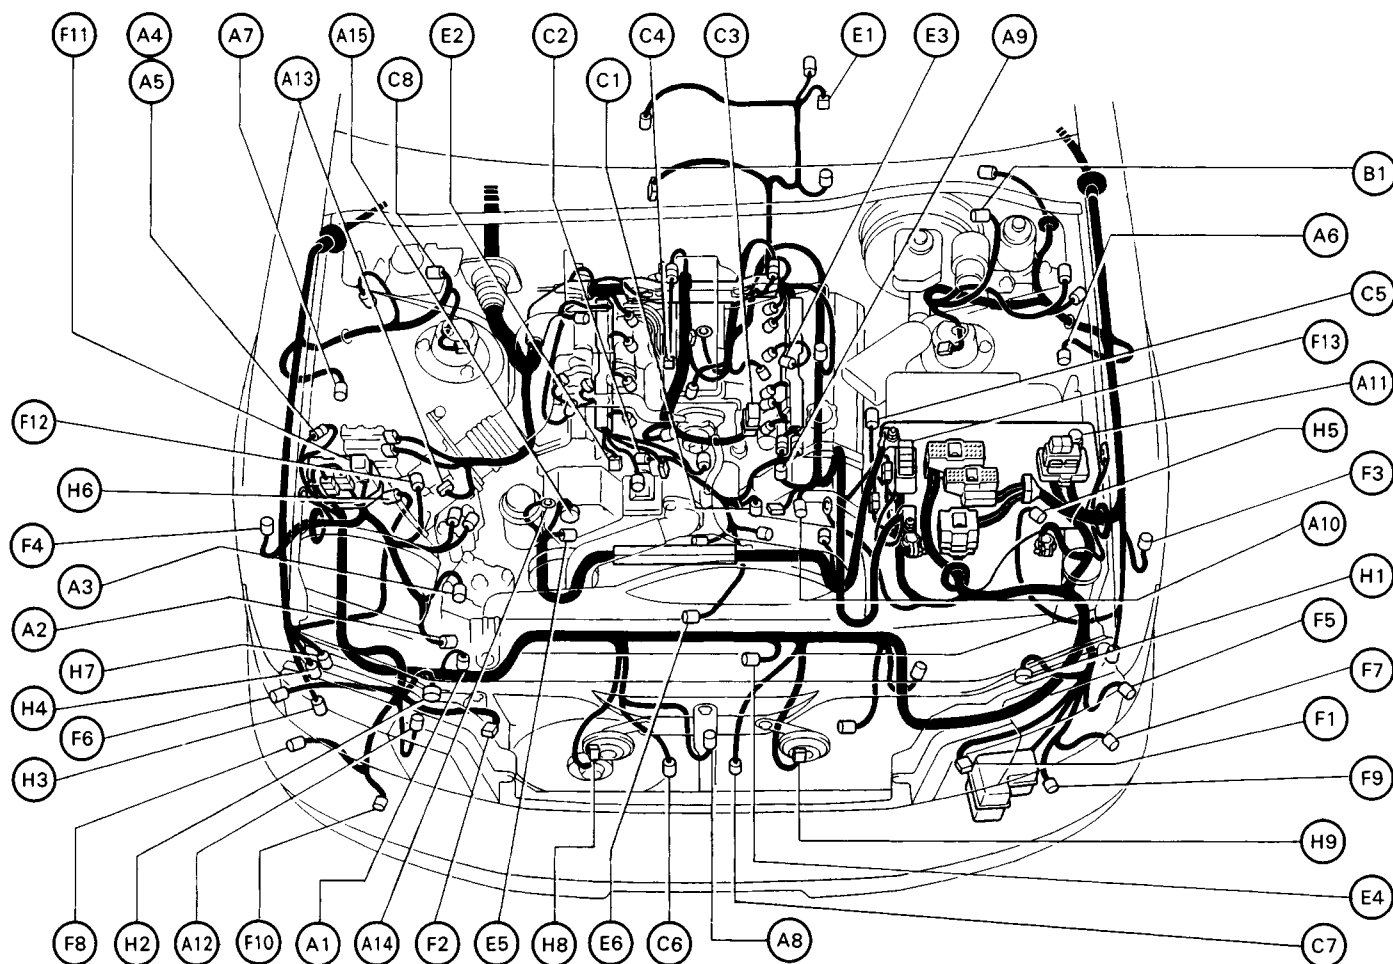

- A 1 A.B.S. Actuator
- A 2 A.B.S. Actuator
- A 3 A.B.S. Actuator
- A 4 A.B.S. Check Connector
- A 5 A.B.S. Check Connector
- A 6 A.B.S. Speed Sensor Front LH
- A 7 A.B.S. Speed Sensor Front RH
- A 8 A/C Ambient Temp. Sensor
- A 9 A/C Compressor Sensor
- A 10 A/C Magnet Clutch
- A 11 A/C magnet Clutch Relay
- A 12 A/C Pressure SW
- A 13 Air Flow Meter
- A 14 Alternator
- A 15 Alternator

- B 1 Brake Fluid Level SW

- C 1 Cam Position Sensor (on Left Bank)
- C 2 Cam Position Sensor (on Right Bank)
- C 3 Check Connector
- C 4 Cold Start Injector
- C 5 Coolant Level Warning SW
- C 6 Cooling Fan Motor No. 1
- C 7 Cooling Fan Motor No. 2
- C 8 Cruise Control Actuator


- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor

- E 3 EGR Gas Temp. Sensor (for California)
- E 4 Engine Hood Courtesy SW
- E 5 Engine Oil Level Warning SW
- E 6 Engine Speed Sensor

- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Clearance Light LH
- F 6 Front Clearance Light RH
- F 7 Front Side Marker Light LH
- F 8 Front Side Marker Light RH
- F 9 Front Turn Signal Light LH
- F 10 Front Turn Signal Light RH
- F 11 Fuel Pump Control Relay
- F 12 Fuel Pump Resistor
- F 13 Fusible Link Box

- H 1 Headlight LH
- H 2 Headlight RH
- H 3 Height Control Compressor
- H 4 Height Control Exhaust Valve
- H 5 Height Control Sensor Front LH
- H 6 Height Control Sensor Front RH
- H 7 Height Control Valve No. 1
- H 8 Horn
- H 9 Horn

Position of Parts in Engine Compartment

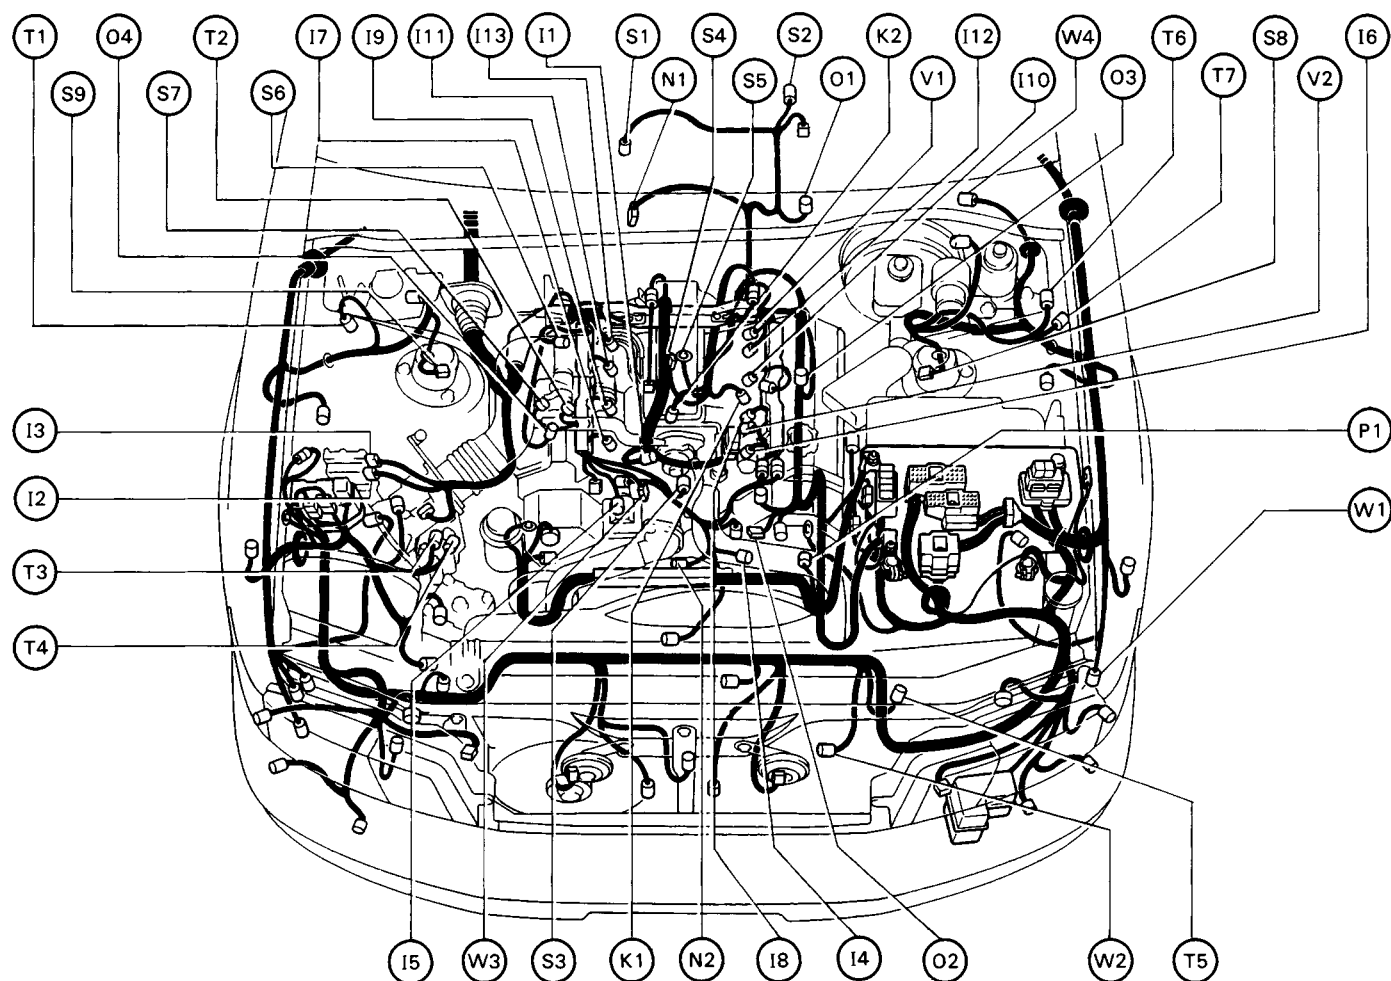

- I 1 ISC Valve
- I 2 Igniter No. 1
- I 3 Igniter No. 2
- I 4 Ignition Coil No. 1
- I 5 Ignition Coil No. 2
- I 6 Injector No. 1
- I 7 Injector No. 2
- I 8 Injector No. 3
- I 9 Injector No. 4
- I 10 Injector No. 5
- I 11 Injector No. 6
- I 12 Injector No. 7
- I 13 Injector No. 8

- K 1 Knock Sensor No. 1
- K 2 Knock Sensor No. 2

- N 1 Neutral Start SW, Back-Up Light SW and A/T Indicator SW
- N 2 Noise Filter (for Ignition System)

- O 1 O/D Direct Clutch Speed Sensor
- O 2 Oil Pressure SW
- O 3 Oxygen Sensor Main (on Left Bank)
- O 4 Oxygen Sensor Main (on Right bank)

- P 1 PPS Solenoid

- S 1 Speed Sensor No. 1
- S 2 Speed Sensor No. 2 (for ECT)
- S 3 Start Injector Time SW
- S 4 Starter
- S 5 Starter
- S 6 Sub Throttle Actuator
- S 7 Sub Throttle Position Sensor
- S 8 Suspension Control Actuator Front LH
- S 9 Suspension Control Actuator Front RH


- T 1 Theft Deterrent Horn
- T 2 Throttle Position Sensor
- T 3 Traction Brake Actuator
- T 4 Traction Brake Actuator
- T 5 Traction Brake Main Relay
- T 6 Traction Motor Relay
- T 7 Traction Pump and Motor

- V 1 VSV (for EGR)
- V 2 VSV (for Fuel Pressure Up)

- W 1 Washer Motor
- W 2 Water Temp. SW (for Cooling Fan)
- W 3 Water Temp. Sender
- W 4 Wiper Motor

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

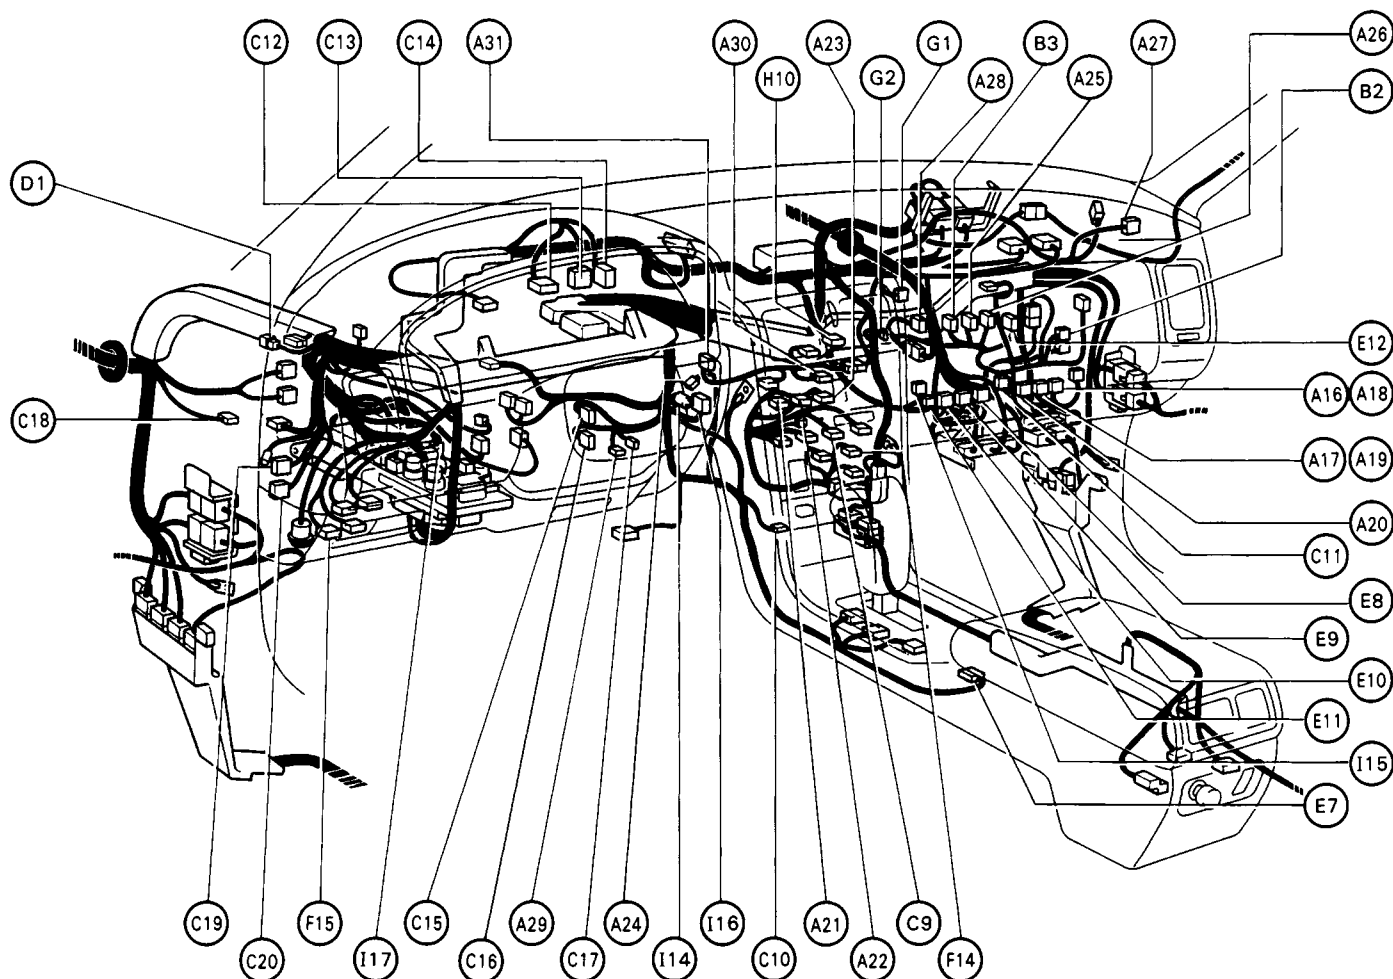

A 16 A.B.S. ECU (w/o Traction Control)
 A 17 A.B.S. ECU (w/o Traction Control)
 A 18 A.B.S. and Traction ECU
 A 19 A.B.S. and Traction ECU
 A 20 A.B.S. and Traction ECU
 A 21 A/C Control Assembly
 A 22 A/C Control Assembly
 A 23 A/C Control Assembly
 A 24 A/C Room Temp. Sensor
 A 25 A/C Power Transistor
 A 26 A/C Power Transistor
 A 27 A/C Solar Sensor
 A 28 A/C Evaporator Temp. Sensor
 A 29 Airbag Squib
 A 30 Air Mix Control Servo Motor
 A 31 Air Vent Mode Control Servo Motor

B 2 Blower Motor
 B 3 Blower Resistor (for Low Speed)

C 9 CD Player
 C 10 Center Airbag Sensor Assembly
 C 11 Circuit Opening Relay
 C 12 Combination Meter
 C 13 Combination Meter
 C 14 Combination Meter

C 15 Combination SW
 C 16 Combination SW
 C 17 Combination SW
 C 18 Coolant Level Warning SW
 C 19 Cruise Control ECU
 C 20 Cruise Control ECU

D 1 Diode (for Brake Fluid Level)

E 7 ECT Pattern Select SW
 E 8 Engine and ECT ECU
 E 9 Engine and ECT ECU
 E 10 Engine and ECT ECU
 E 11 Engine and ECT ECU
 E 12 Extra High Speed Relay (for Blower Motor)


F 14 Front Cigarette Lighter
 F 15 Fuel Lid Opener SW

G 1 Glove Box Light
 G 2 Glove Box Light SW

H 10 Hazard SW

I 14 Ignition Key Cylinder Light
 I 15 Ignition Main Relay
 I 16 Ignition SW, Unlock Warning SW and Key Interlock Solenoid
 I 17 Integration Relay


Position of Parts in Instrument Panel

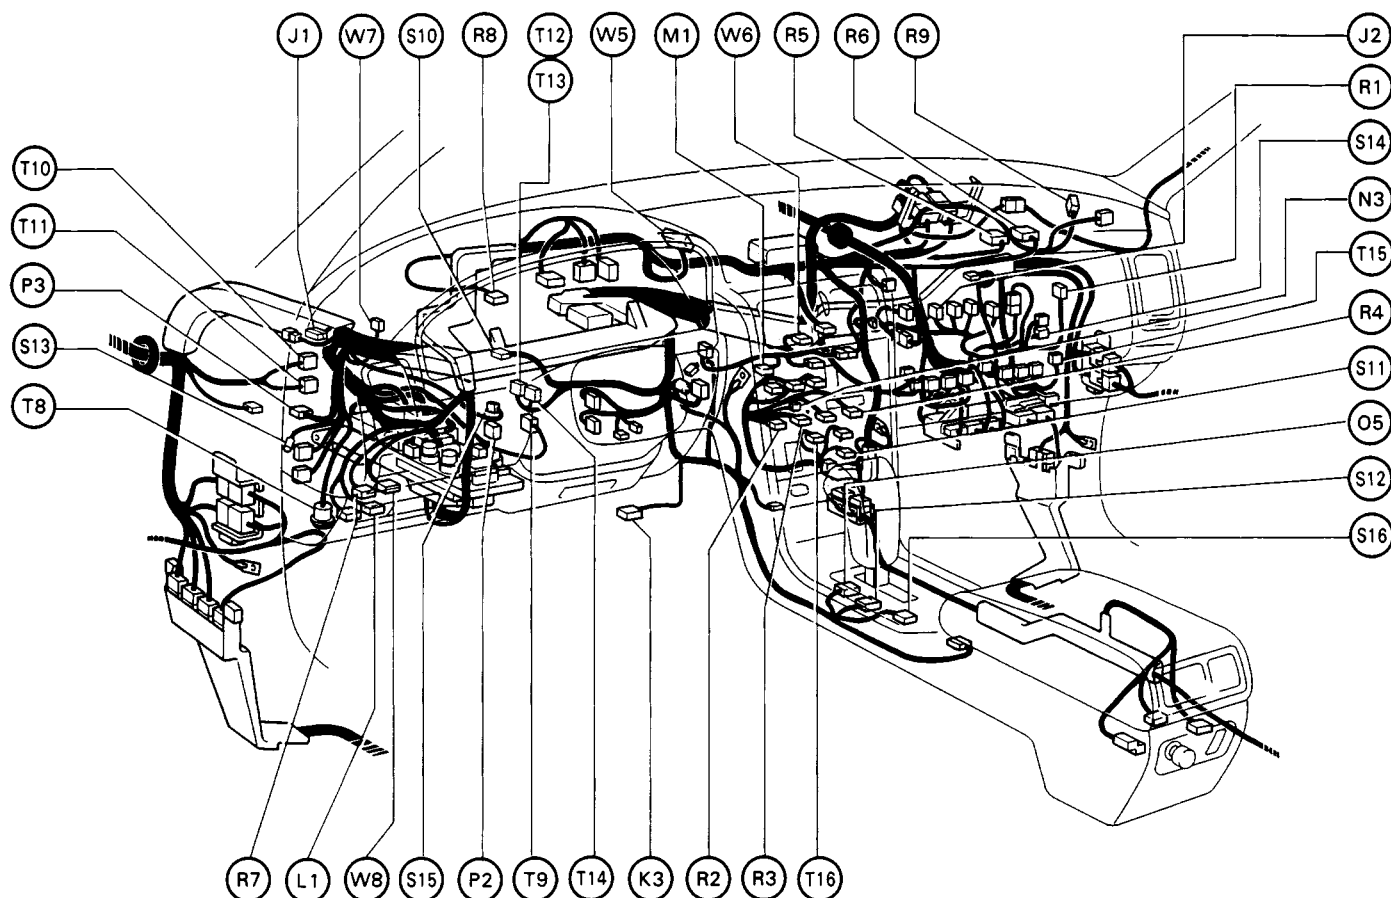

J 1	Junction Connector	S 10	Seat Belt Warning Relay
J 2	Junction Connector	S 11	Seat Heater SW
K 3	Kick Down SW	S 12	Shift Lock ECU
L 1	Luggage Compartment Door Opener SW	S 13	Step Light LH
M 1	Max Cool Servo Motor	S 14	Step Light RH
N 3	Noise Filter	S 15	Stop Light SW
O 5	O/D Main SW	S 16	Suspension Control SW
P 2	PPS ECU	T 8	TDCL (Total Diagnostic Communication Link)
P 3	Parking Brake SW	T 9	Telescopic Position Sensor
R 1	RECIRC/FRESH Control Servo Motor	T 10	Theft Deterrent and Door Lock Control ECU
R 2	Radio and Tape Player	T 11	Theft Deterrent and Door Lock Control ECU
R 3	Radio and Tape Player	T 12	Tilt ECU (w/o Power Telescope)
R 4	Radio and Tape Player	T 13	Tilt and Power Telescopic ECU
R 5	Remote Control Mirror ECU	T 14	Tilt and Power Telescopic ECU
R 6	Remote Control Mirror ECU	T 15	Traction Throttle Relay
R 7	Remote Control Mirror SW	T 16	Traction Cut SW
R 8	Rheostat Volume and Theft Deterrent Indicator Light	W 5	Warning and Indicator Lights
R 9	Rheostat (w/o Power Shoulder Belt Anchor) or, Rheostat and Power Shoulder Belt Anchor Relay	W 6	Water Temp. Sensor (for A/C System)
		W 7	Wiper Control Relay
		W 8	Wireless Door Lock Main SW

ELECTRICAL WIRING ROUTING

Position of Parts in Body

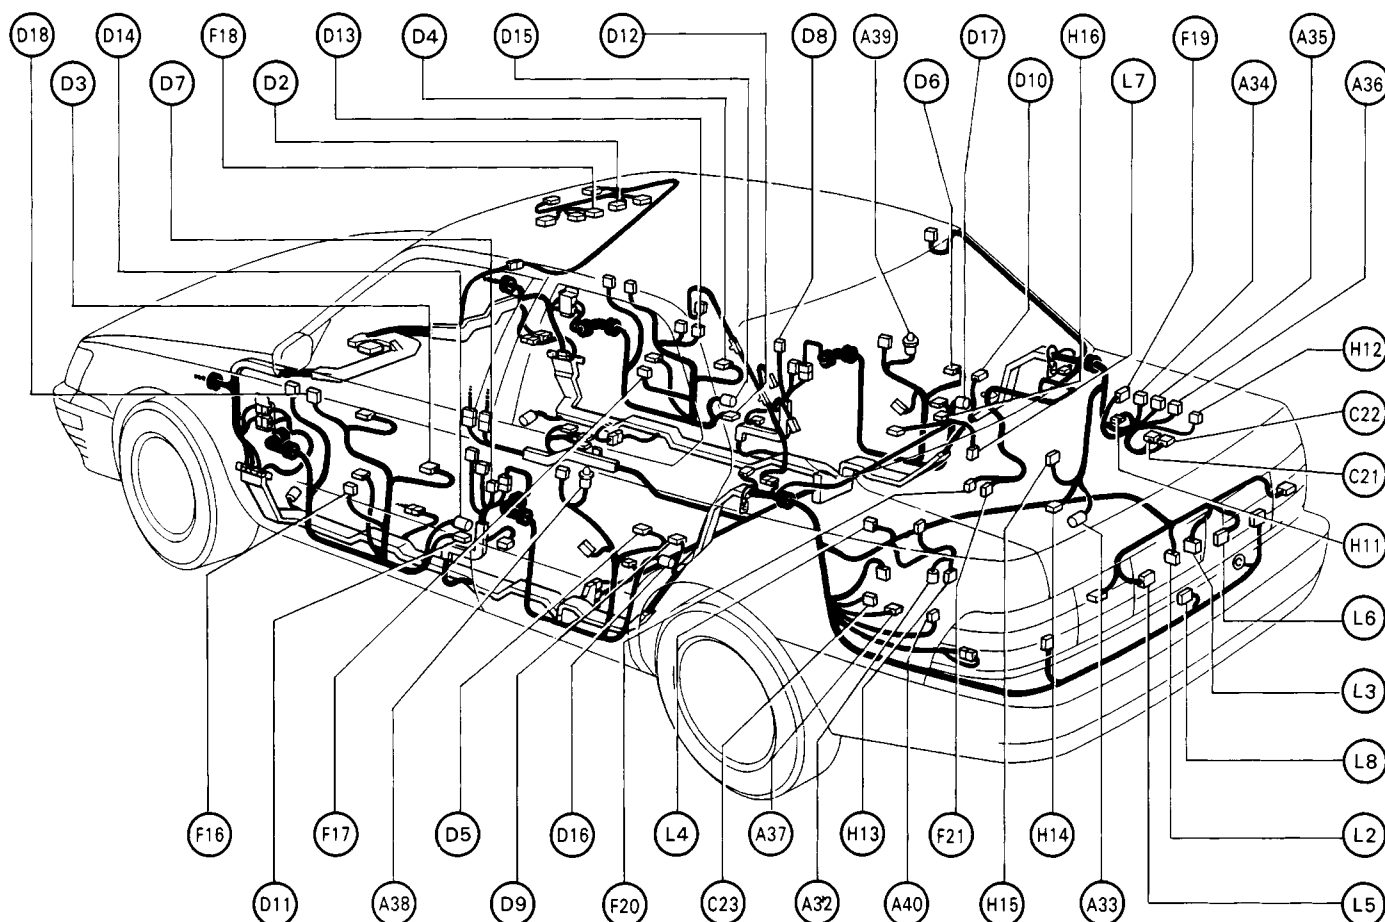

- | | | |
|---|----|------------------------------------|
| A | 32 | A.B.S. Speed Sensor Rear LH |
| A | 33 | A.B.S. Speed Sensor Rear RH |
| A | 34 | Air Suspension ECU |
| A | 35 | Air Suspension ECU |
| A | 36 | Air Suspension ECU |
| A | 37 | Air Suspension ON/OFF SW |
| A | 38 | Ash Tray Illumination Rear Door LH |
| A | 39 | Ash Tray Illumination Rear Door RH |
| A | 40 | Auto Antenna Motor and Relay |

- | | | |
|---|----|----------------------|
| C | 21 | CD Automatic Changer |
| C | 22 | CD Automatic Changer |
| C | 23 | Choke Coil |

- | | | |
|---|----|--------------------------------|
| D | 2 | DAY/NIGHT Shift SW |
| D | 3 | Door Courtesy Light Front LH |
| D | 4 | Door Courtesy Light Front RH |
| D | 5 | Door Courtesy Light Rear LH |
| D | 6 | Door Courtesy Light Rear RH |
| D | 7 | Door Courtesy SW Front LH |
| D | 8 | Door Courtesy SW Front RH |
| D | 9 | Door Courtesy SW Rear LH |
| D | 10 | Door Courtesy SW Rear RH |
| D | 11 | Door Key Lock and Unlock SW LH |
| D | 12 | Door Key Lock and Unlock SW RH |
| D | 13 | Door Lock Control SW RH |


- D 14 Door Lock Motor Front LH
D 15 Door Lock Motor Front RH
D 16 Door Lock Motor Rear LH
D 17 Door Lock Motor Rear RH
D 18 Driving Position Memory and Return SW

- | | |
|------|--------------------------|
| F 16 | Front Door Speaker LH |
| F 17 | Front Door Speaker RH |
| F 18 | Front Personal Light |
| F 19 | Fuel Lid Opener Solenoid |
| F 20 | Fuel Pump |
| F 21 | Fuel Sender |

- | | | |
|---|----|-------------------------------|
| H | 11 | Height Control Connector |
| H | 12 | Height Control Relay No. 2 |
| H | 13 | Height Control Sensor Rear LH |
| H | 14 | Height Control Sensor Rear RH |
| H | 15 | Height Control Valve No. 2 |
| H | 16 | High Mount Stop Light |

- | | | |
|---|---|--|
| L | 2 | License Plate Light LH |
| L | 3 | License Plate Light RH |
| L | 4 | Light Failure Sensor |
| L | 5 | Luggage Compartment Door Lock Solenoid |
| L | 6 | Luggage Compartment Key Unlock SW |
| L | 7 | Luggage Compartment Light |
| L | 8 | Luggage Compartment Light SW |

Position of Parts in Body

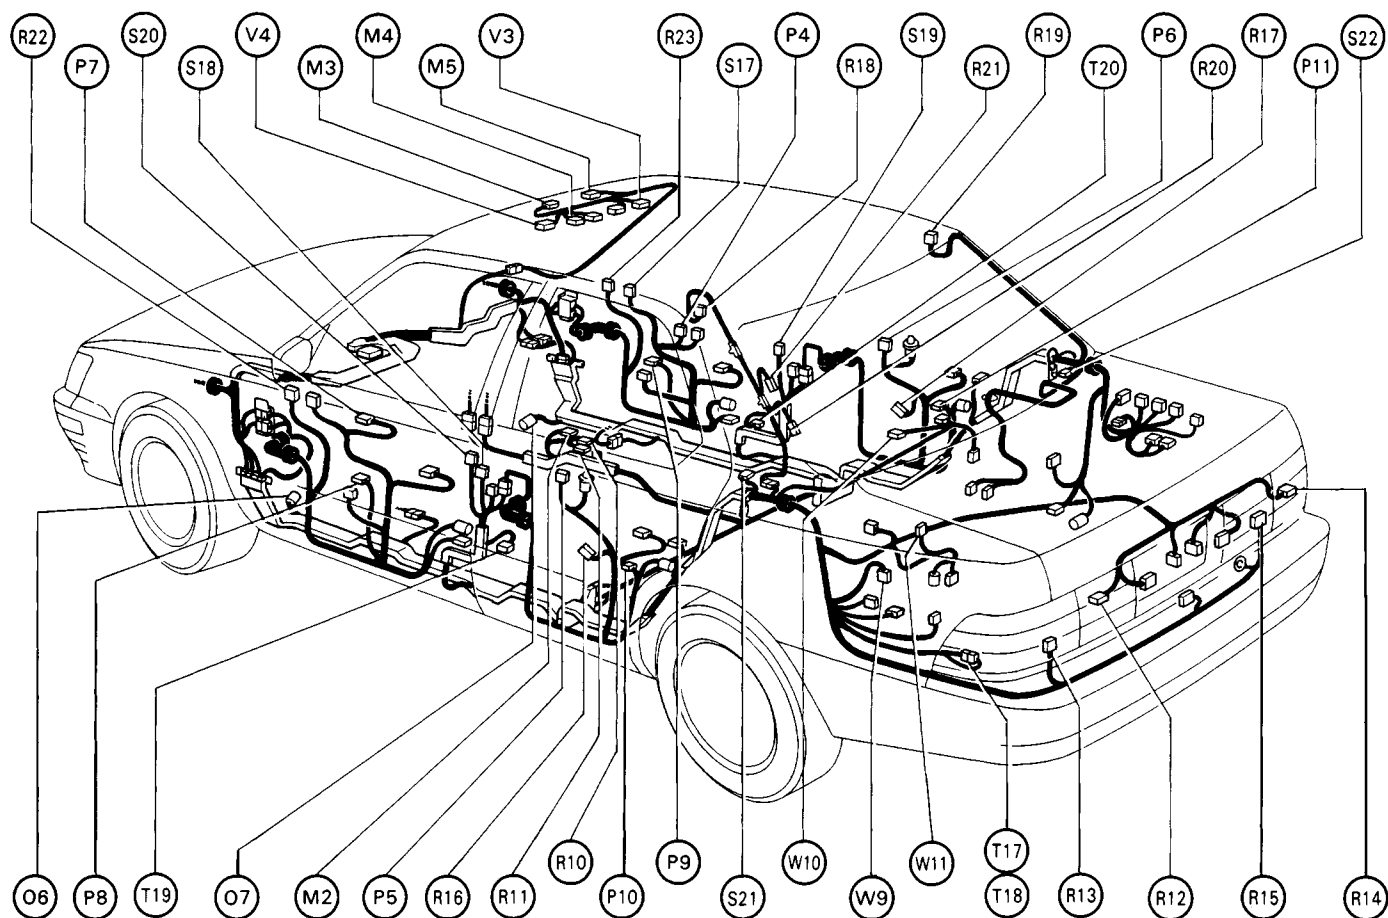

- M 2 Mobilephone
- M 3 Moon Roof Control Relay
- M 4 Moon Roof Control SW
- M 5 Moon Roof Motor and Limit SW

- O 6 Oxygen Sensor Sub (on Left Bank)
- O 7 Oxygen Sensor Sub (on Right Bank)

- P 4 Power Window Control SW Front RH
- P 5 Power Window Control SW Rear LH
- P 6 Power Window Control SW Rear RH
- P 7 Power Window Master SW and Door Lock Control SW LH
- P 8 Power Window Motor Front LH
- P 9 Power Window Motor Front RH
- P 10 Power Window Motor Rear LH
- P 11 Power Window Motor Rear RH

- R 10 Rear Cigarette Lighter
- R 11 Rear Cigarette Lighter Illumination
- R 12 Rear Combination Light LH
- R 13 Rear Combination Light LH
- R 14 Rear Combination Light RH
- R 15 Rear Combination Light RH
- R 16 Rear Door Speaker LH
- R 17 Rear Door Speaker RH

- R 18 Rear Personal Light LH
- R 19 Rear Personal Light RH
- R 20 Rear Window Defogger (+)
- R 21 Rear Window Defogger (-)
- R 22 Remote Control Mirror LH
- R 23 Remote Control Mirror RH

- S 17 Shoulder Belt Anchorage Adjusting SW RH
- S 18 Shoulder Belt Anchor Motor LH
- S 19 Shoulder Belt Anchor Motor RH
- S 20 Shoulder Belt Anchor Sensor
- S 21 Suspension Control Actuator Rear LH
- S 22 Suspension Control Actuator Rear RH


- T 17 Telephone Transceiver and Speaker Relay
- T 18 Telephone Transceiver and Speaker Relay
- T 19 Tension Reducer Solenoid LH
- T 20 Tension Reducer Solenoid RH

- V 3 Vanity Light LH
- V 4 Vanity Light RH

- W 9 Wireless Door Lock ECU
- W 10 Woofer Speaker
- W 11 Woofer Speaker Amplifier

ELECTRICAL WIRING ROUTING

Position of Parts in Seat

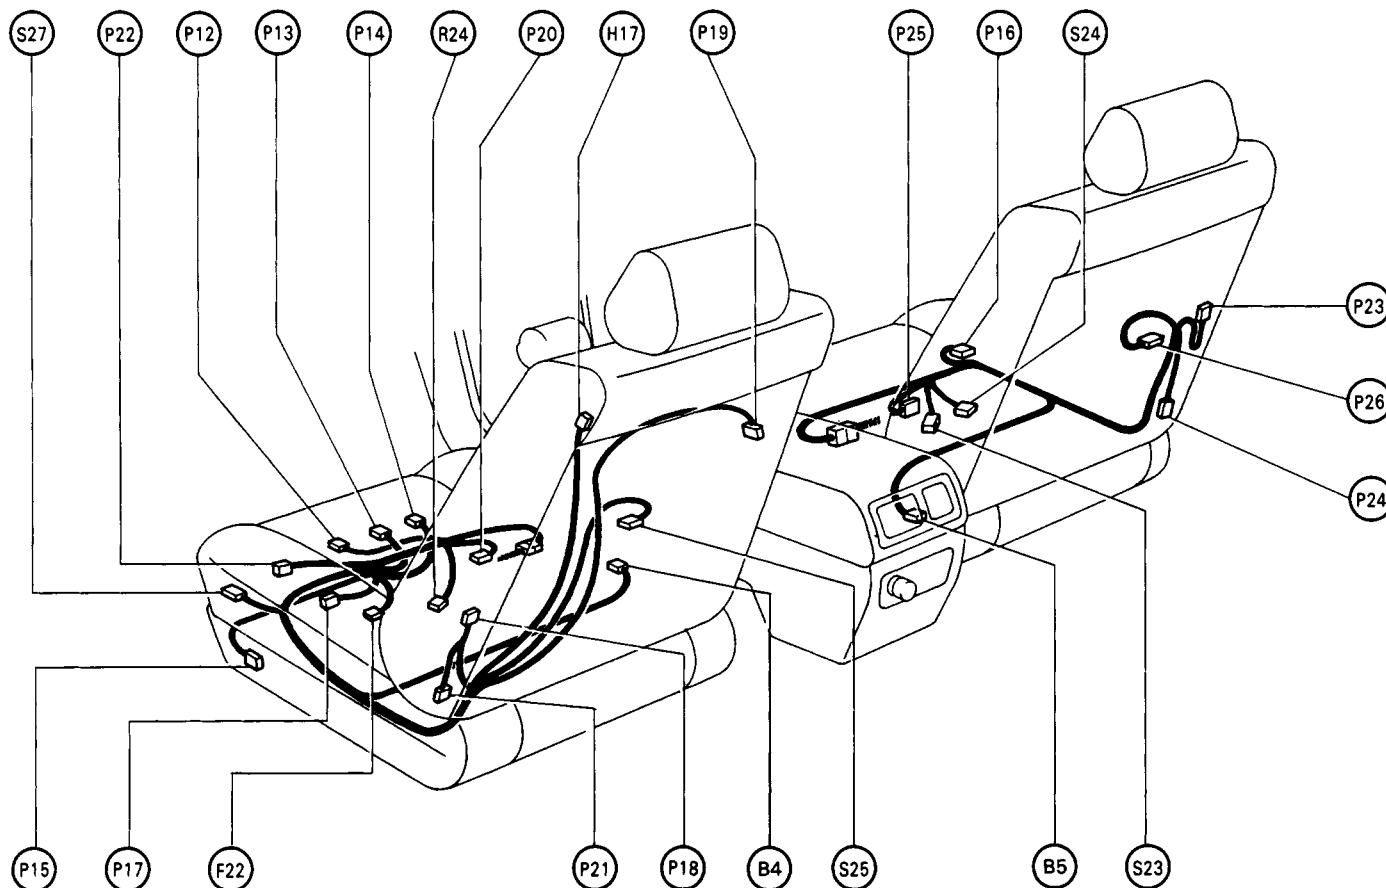

- B 4 Buckle SW LH
- B 5 Buckle SW RH
- F 22 Front Vertical Position Sensor
- H 17 Head Rest Position Sensor

- P 12 Power Seat ECU
- P 13 Power Seat ECU
- P 14 Power Seat ECU
- P 15 Power Seat Control SW (for Driver's Seat)
- P 16 Power Seat Control SW (for Passenger's Seat)
- P 17 Power Seat Motor (for Driver's Seat Front Vertical Control)
- P 18 Power Seat Motor (for Driver's Seat Head Rest Control)
- P 19 Power Seat Motor (for Driver's Seat Lumbar Support Control)

- P 20 Power Seat Motor (for Driver's Seat Rear Vertical Control)
- P 21 Power Seat Motor (for Driver's Reclining Motor Control)
- P 22 Power Seat Motor (for Driver's Seat Slide Control)
- P 23 Power Seat Motor (for Passenger's Seat Head Rest Control)
- P 24 Power Seat Motor (for Passenger's Seat Reclining Control)
- P 25 Power Seat Motor (for Passenger's Seat Slide Control)

- R 24 Rear Vertical Position Sensor
- S 23 Seat Heater Relay (for Driver's Seat)
- S 24 Seat Heater Relay (for Passengers Seat)
- S 25 Seat Heater (for Driver's Seat)
- S 26 Seat Heater (for Passenger's Seat)
- S 27 Slide Position Sensor