


# CIGARETTE LIGHTER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

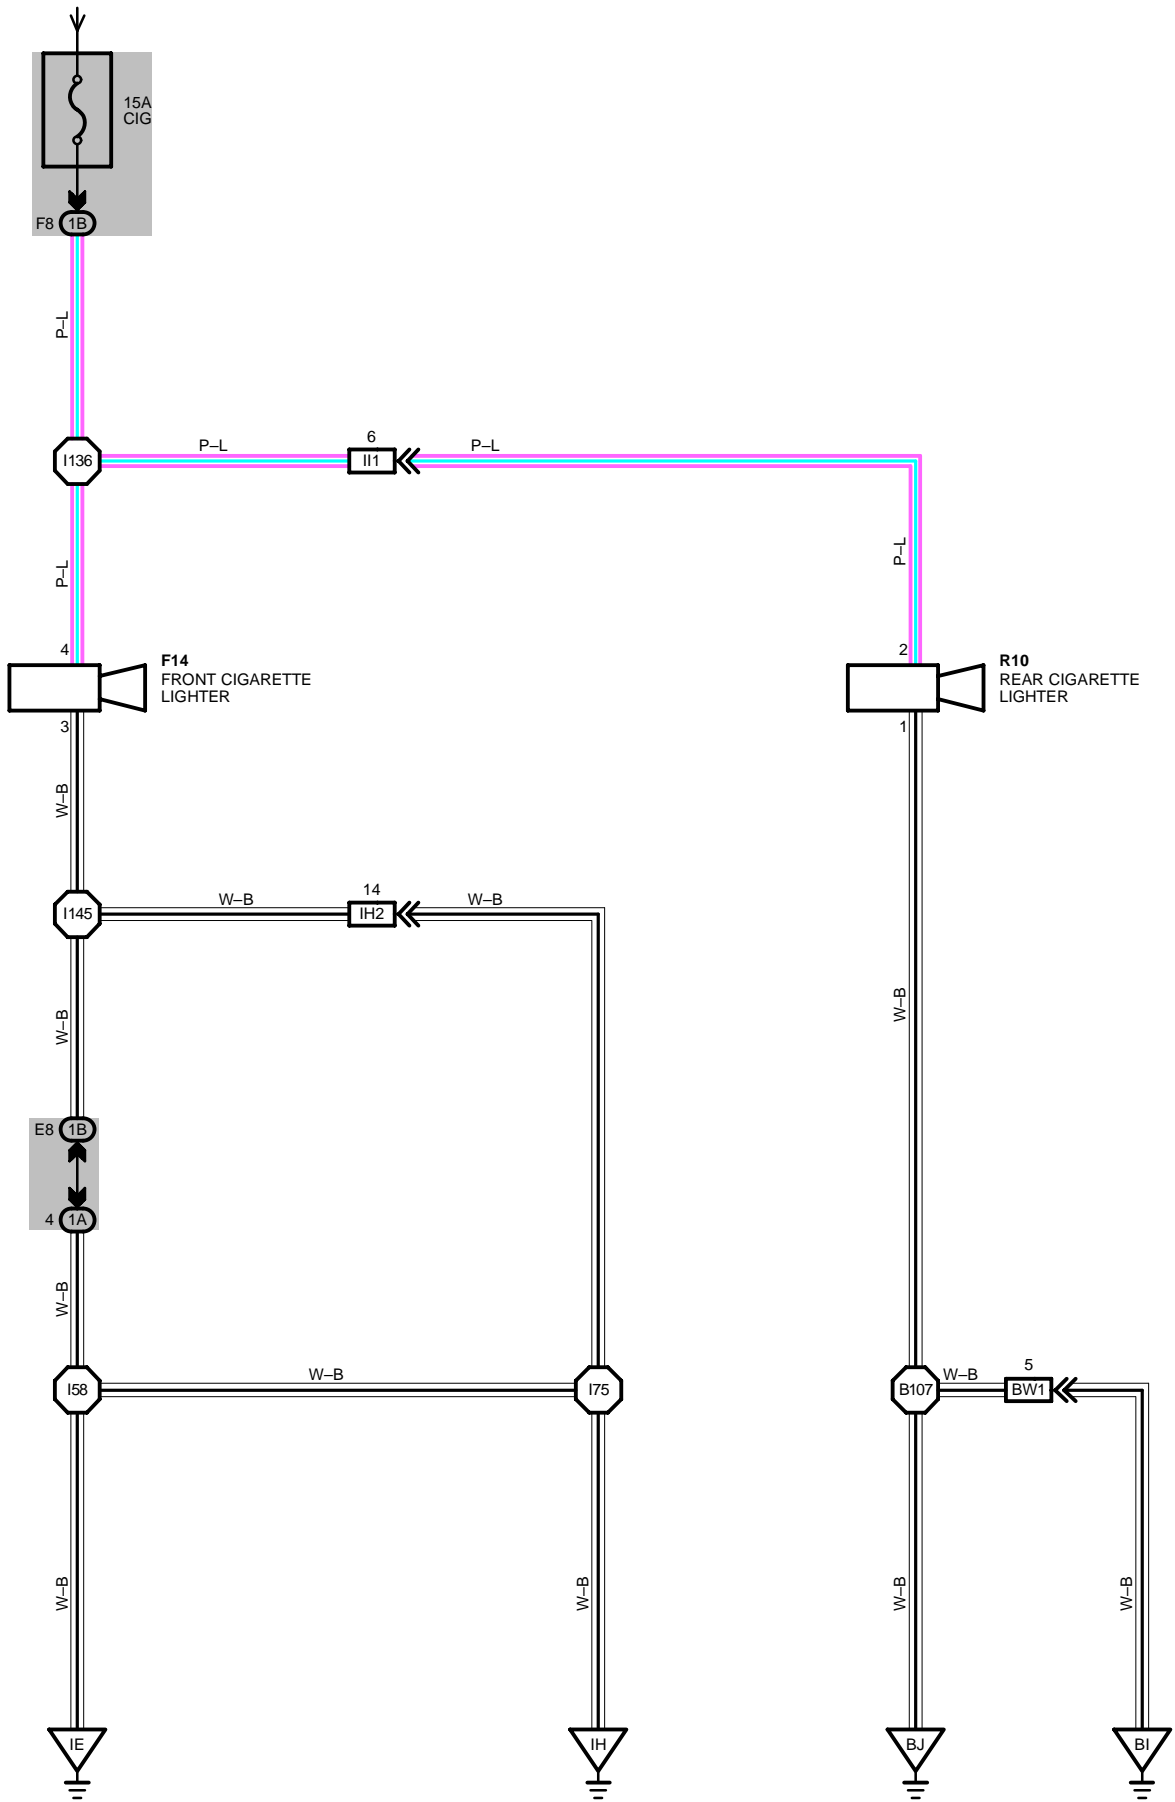

## SERVICE HINTS

### F14 FRONT CIGARETTE LIGHTER

4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

3-GROUND : ALWAYS CONTINUITY

### R10 REAR CIGARETTE LIGHTER

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

1-GROUND : ALWAYS CONTINUITY

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>F14</b>	<a href="#">26</a>	<b>R10</b>	<a href="#">29</a>		

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>1A</b>	<a href="#">18</a>	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
<b>1B</b>	<a href="#">18</a>	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IH2</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
<b>II1</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
<b>BW1</b>	<a href="#">38</a>	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>IE</b>	<a href="#">34</a>	LEFT KICK PANEL
<b>IH</b>	<a href="#">34</a>	RIGHT KICK PANEL
<b>BI</b>	<a href="#">38</a>	UNDER THE LEFT REAR PILLAR
<b>BJ</b>	<a href="#">38</a>	UNDER THE RIGHT REAR PILLAR

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>I 58</b>	<a href="#">36</a>	COWL WIRE	<b>I145</b>	<a href="#">36</a>	INSTRUMENT PANEL WIRE
<b>I 75</b>			<b>B107</b>	<a href="#">38</a>	FLOOR NO.2 WIRE
<b>I136</b>	<a href="#">36</a>	INSTRUMENT PANEL WIRE			

F 1 4

R 1 0

