


# ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

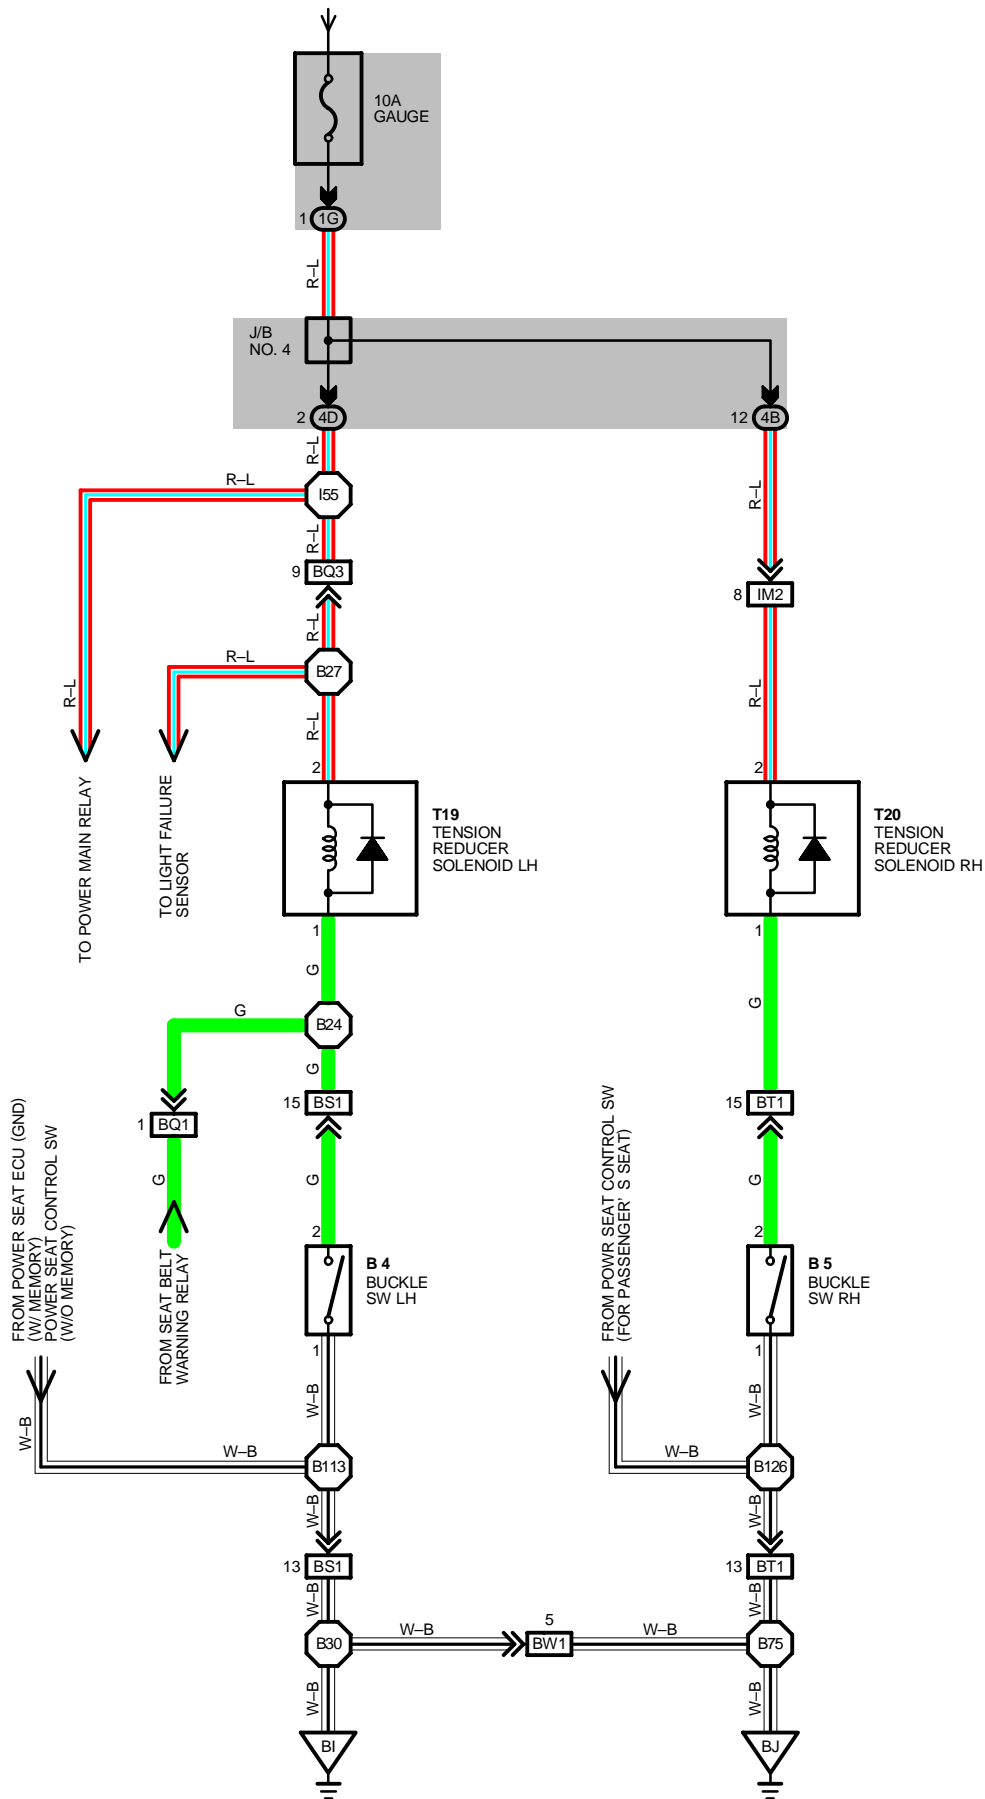

## SERVICE HINTS

### B 4 BUCKLE SW LH

1-2 : CLOSED WITH DRIVER'S LAP BELT IN USE

### B 5 BUCKLE SW RH

1-2 : CLOSED WITH PASSENGER'S LAP BELT IN USE

### T19, T20 TENSION REDUCER SOLENOID LH, RH

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 4	30	T19	29		
B 5	30	T20	29		

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1G	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
4B	23	COWL WIRE AND J/B NO.4 (BEHIND THE COMBINATION METER)
4D		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IM2	36	FLOOR NO.1 WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
BQ1	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BQ3		
BS1	40	FLOOR NO.2 WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
BT1	40	FLOOR NO.1 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 55	36	COWL WIRE	B 75	38	FLOOR NO.1 WIRE
B 24	38	FLOOR NO.2 WIRE	B113	40	FRONT SEAT LH WIRE
B 27			B126	40	FRONT SEAT RH WIRE
B 30					

