




## POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

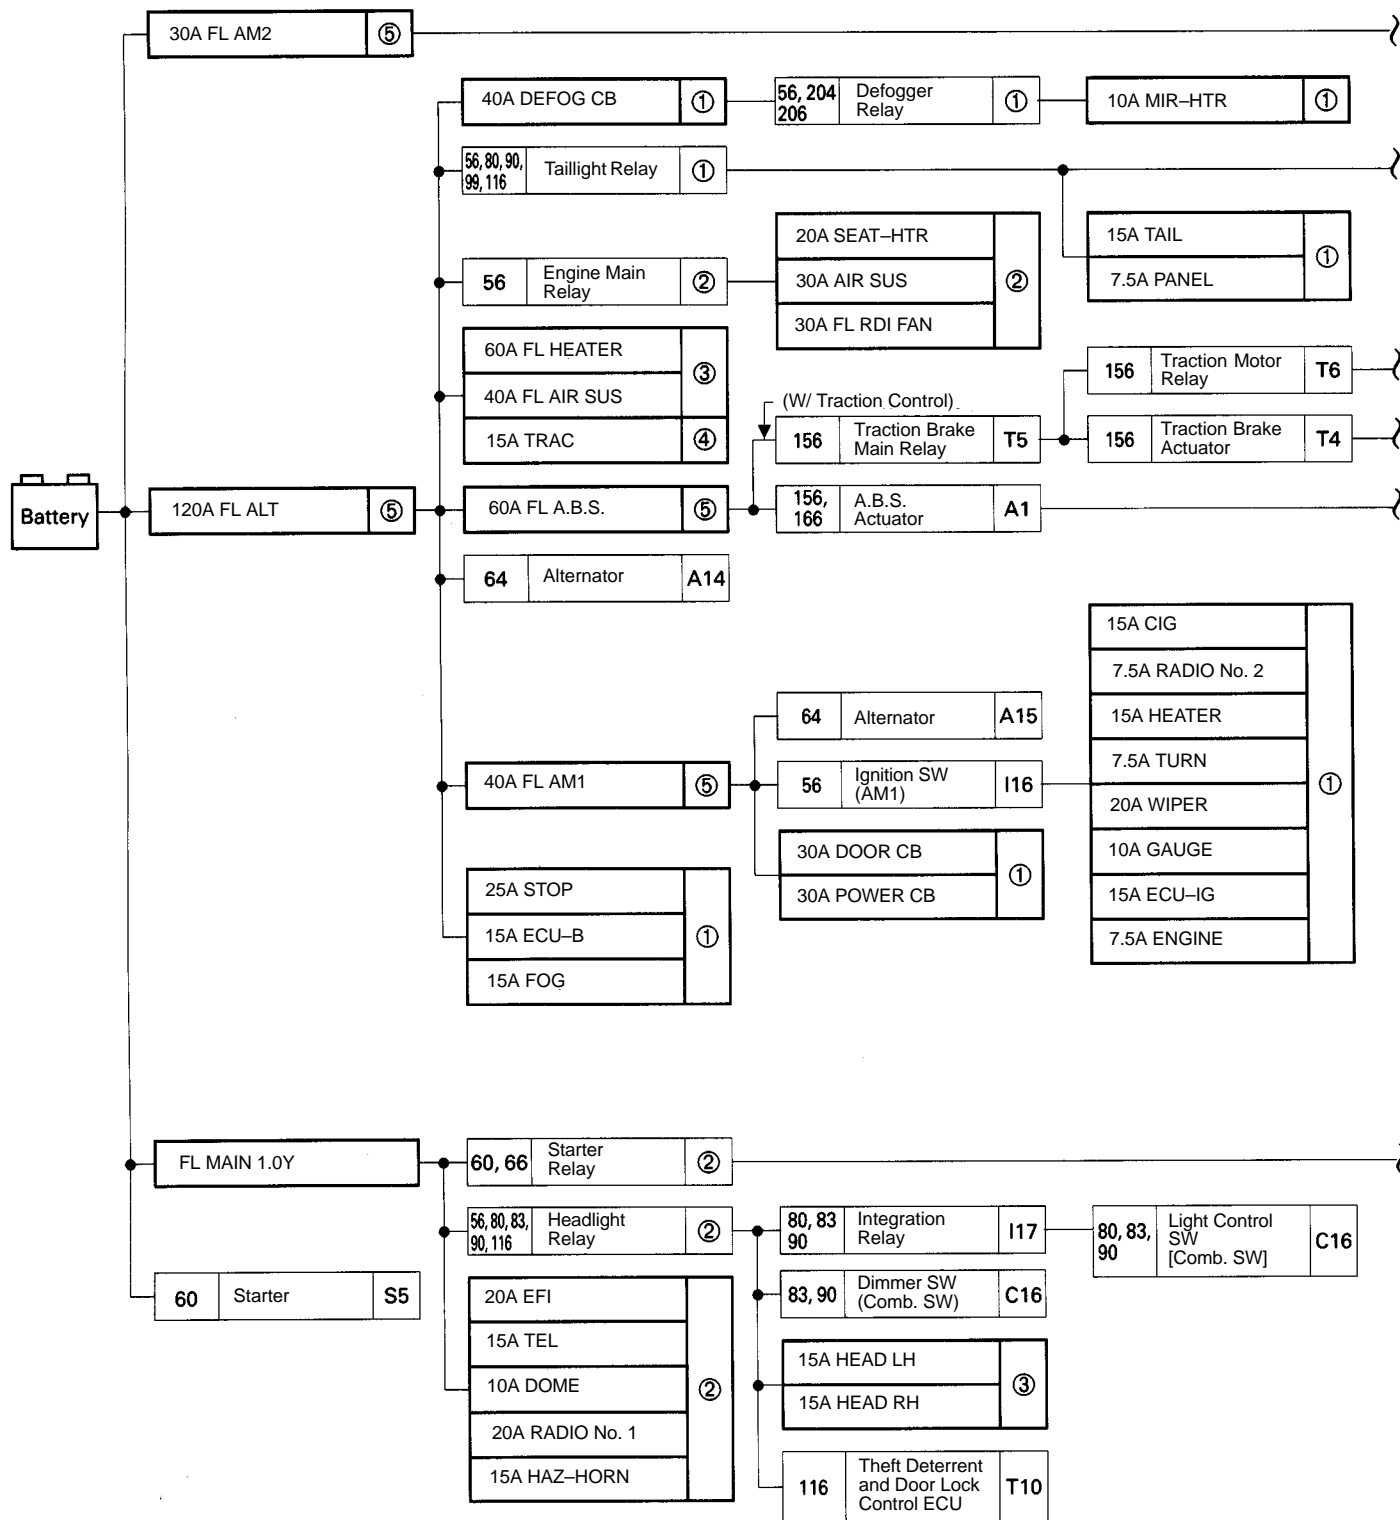

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

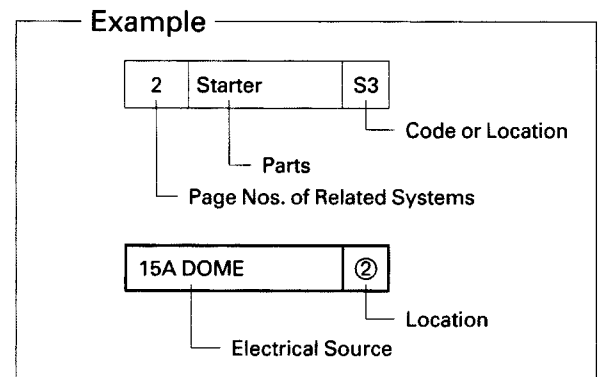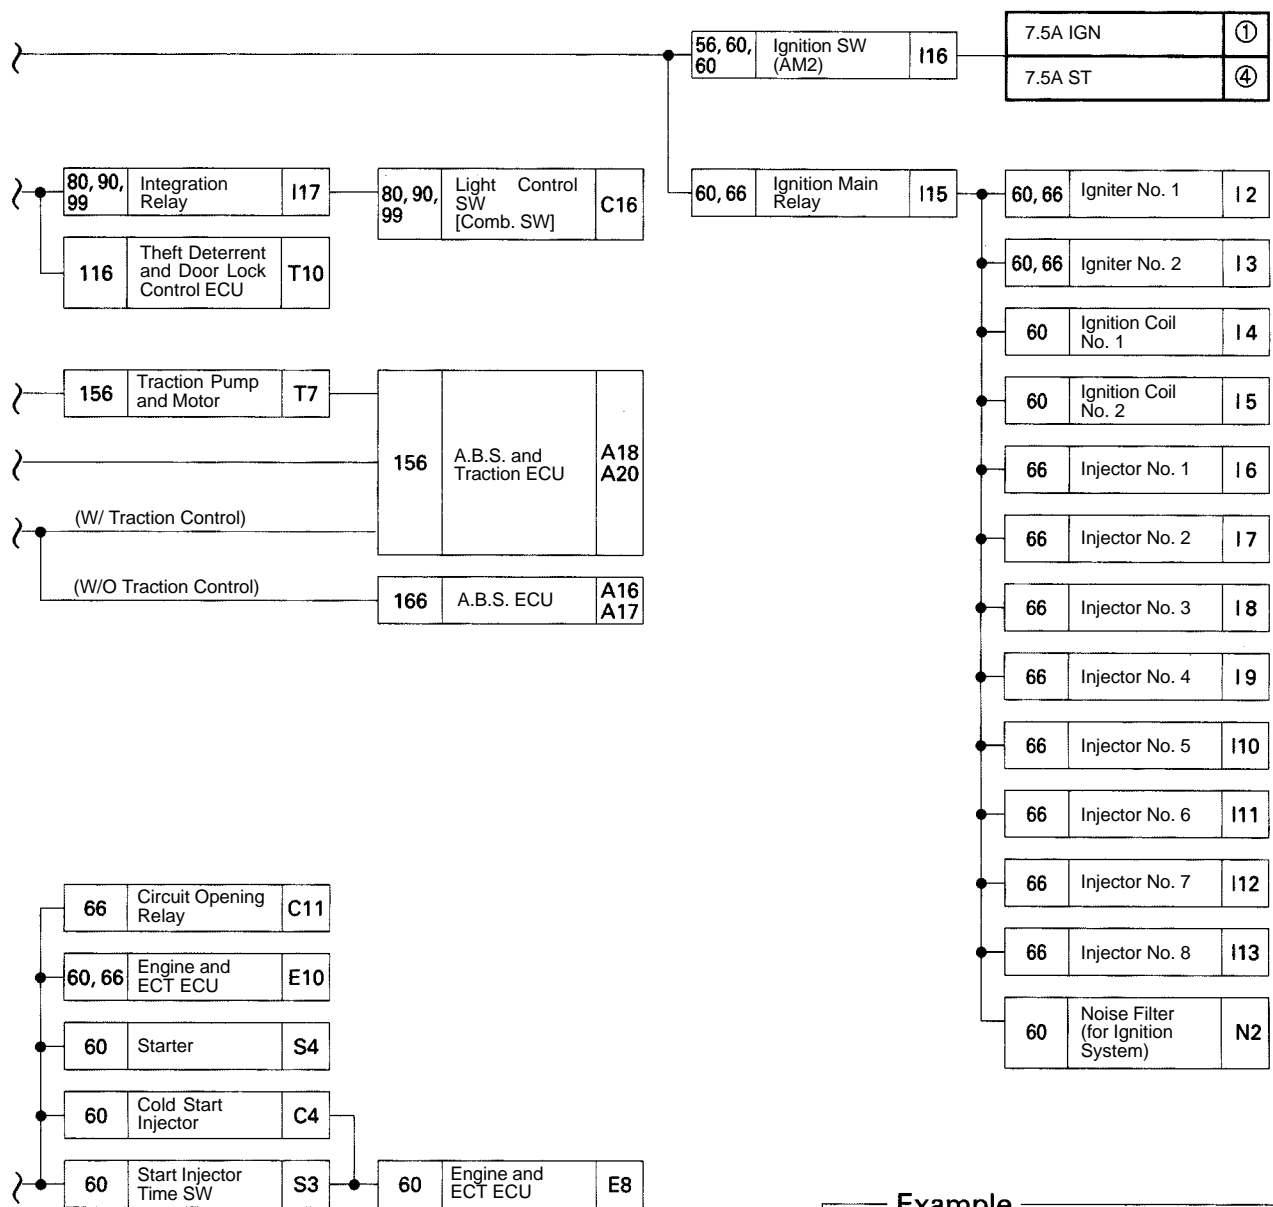

(4) : R/B No. 7 (See page 18 ) (5) : Fusible Link Box (F13 See page 24 )

## POWER SOURCE (Current Flow Chart)

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]

# POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems		94																	112 116		170	99 170	66	66 170	66 156 170 236	236	86	90					
					Parts																	Code or Location														
			CB or Fuse		Door Courtesy Light Front LH	Door Courtesy Light Front RH	Door Courtesy Light Rear LH	Door Courtesy Light Rear RH	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	Door Key Cylinder Light and Outside Handle SW	Door Lock Motor Front LH	Door Lock Motor Front RH	Door Lock Motor Rear LH	Door Lock Motor Rear RH	ECT Solenoid	ECT Pattern Select SW	Engine and ECT ECU			Extra High Speed Relay (For Blower Motor)	Fog Light LH	Fog Light RH	Front Clearance Light LH										
			D3	D4	D5	D6	D7	D8	D9	D10	D11	D14	D15	D16	D17	E1	E7	E8	E10	E11	E12	F1	F2	F5												
①	40A	DEFOG CB																																		
	30A	DOOR CB										●	●	●	●																					
	30A	POWER CB																																		
	25A	STOP																		●																
	15A	ECU-B																																		
	15A	FOG																				●	●													
	10A	MIR-HTR																																		
	15A	HEATER																		●	●															
	7.5A	TURN																																		
	20A	WIPER																																		
	10A	GAUGE															●			●																
	15A	ECU-IG																		●																
	7.5A	ENGINE																																		
	7.5A	IGN																	●	●																
	15A	CIG																																		
	7.5A	RADIO No.2																																		
	15A	TAIL																						●												
	7.5A	PANEL															●																			
②	15A	TEL																																		
	10A	DOME	●	●	●	●	●	●	●	●																										
	20A	RADIO No.1																																		
	15A	HAZ-HORN																																		
	20A	EFI														●		●	●	●																
	20A	SEAT-HTR																																		
	20A	AIR SUS																																		
	30A	FL RDI FAN																																		
③	15A	HEAD LH																																		
	15A	HEAD RH																																		
	40A	FL AIR SUS																																		
	60A	FL HEATER																			●															
④	7.5A	ST																	●																	
	15A	TRAC																																		

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]

# POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse																			
									60 66	178	133 206	86 133 200	127	90	90 104	94	236	124	116 147 170	142 156 206	106	60 66 150 230	236	66	99	191		
			Ignition Main Relay	Key Inter Lock Solenoid	Unlock Warning SW [Ignition SW]	Junction Connector	Junction Connector (for Airbag)	Licence Plate Light LH	Licence Plate Light RH	Light Failure Sensor	Luggage Compartment Light	Luggage Compartment Light SW	Max Cool Servo Motor	Moon Roof Control Relay	Moon Roof Motor	A/T Indicator SW	Back-Up Light SW	Neutral Start SW	Noise Filter	Oxygen Sensor Main (on Left Bank)	Oxygen Sensor Main (on Right Bank)	O/D Main SW	PPS Solenoid					
			I15	I16	J1	J2	L2	L3	L4	L7	L8	M1	M3	M5	N1			N3	O3	O4	O5	P1						
①	40A	DEFOG CB																										
	30A	DOOR CB																										
	30A	POWER CB												●														
	25A	STOP							●																			
	15A	ECU-B				●																						
	15A	FOG								●																		
	10A	MIR-HTR																										
	15A	HEATER											●					●										
	7.5A	TURN				●																						
	20A	WIPER																										
	10A	GAUGE								●						●	●											
	15A	ECU-IG				●																	●					
	7.5A	ENGINE																										
	7.5A	IGN	●																									
	15A	CIG		●																								
	7.5A	RADIO No.2																										
	15A	TAIL					●	●	●																			
	7.5A	PANEL																				●						
②	15A	TEL																										
	10A	DOME			●	●					●	●		●	●													
	20A	RADIO No.1																										
	15A	HAZ-HORN				●																						
	20A	EFI																		●	●							
	20A	SEAT-HTR																										
	20A	AIR SUS																										
	30A	FL RDI FAN																										
③	15A	HEAD LH				●																						
	15A	HEAD RH				●																						
	40A	FL AIR SUS																										
	60A	FL HEATER																										
④	7.5A	ST	●															●										
	15A	TRAC																										

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]



# POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems	Parts																		Code or Location					
				CB or Fuse																							
				Rear Cigarette Lighter Illumination	Back-Up Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Personal Light LH	Rear Personal Light RH	Rear Window Defogger	Mirror Heater LH	Remote Control Mirror LH	Mirror Heater RH	Remote Control Mirror RH	Speed Sensor No. 1	Seat Belt Warning Relay		
				R11	R12				R13				R14				R15		R18	R19	R20	R22		R23		S1	S10
①	40A	DEFOG CB																		●							
	30A	DOOR CB																									
	30A	POWER CB																									
	25A	STOP			●				●			●			●												
	15A	ECU-B																									
	15A	FOG																									
	10A	MIR-HTR																		●		●					
	15A	HEATER																									
	7.5A	TURN						●							●												
	20A	WIPER																									
	10A	GAUGE		●							●													●	●		
	15A	ECU-IG																									
	7.5A	ENGINE																									
	7.5A	IGN																									
	15A	CIG																									
	7.5A	RADIO No.2																				●		●			
	15A	TAIL				●				●				●			●										
	7.5A	PANEL		●																							
②	15A	TEL																									
	10A	DOME															●	●							●		
	20A	RADIO No.1																									
	15A	HAZ-HORN						●						●													
	20A	EFI																									
	20A	SEAT-HTR																									
	20A	AIR SUS																									
	30A	FL RDI FAN																									
③	15A	HEAD LH																									
	15A	HEAD RH																									
	40A	FL AIR SUS																									
	60A	FL HEATER																									
④	7.5A	ST																									
	15A	TRAC																									

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]

## POWER SOURCE (Current Flow Chart)

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

60 66 116 170 230	88	236			180
Starter Relay	Turn Signal Flasher	Cooling Fan Relay No. 1	Cooling Fan Relay No. 2	Cooling Fan Relay No. 3	Height Control Relay No. 1
②	④	⑤			
	●				
		●	●	●	
	●				
		●	●	●	
					●
●					

(4) : R/B No. 7 (See page18 )    (5) : R/B No. 6 (See page17 )