



# RADIO AND TAPE PLAYER

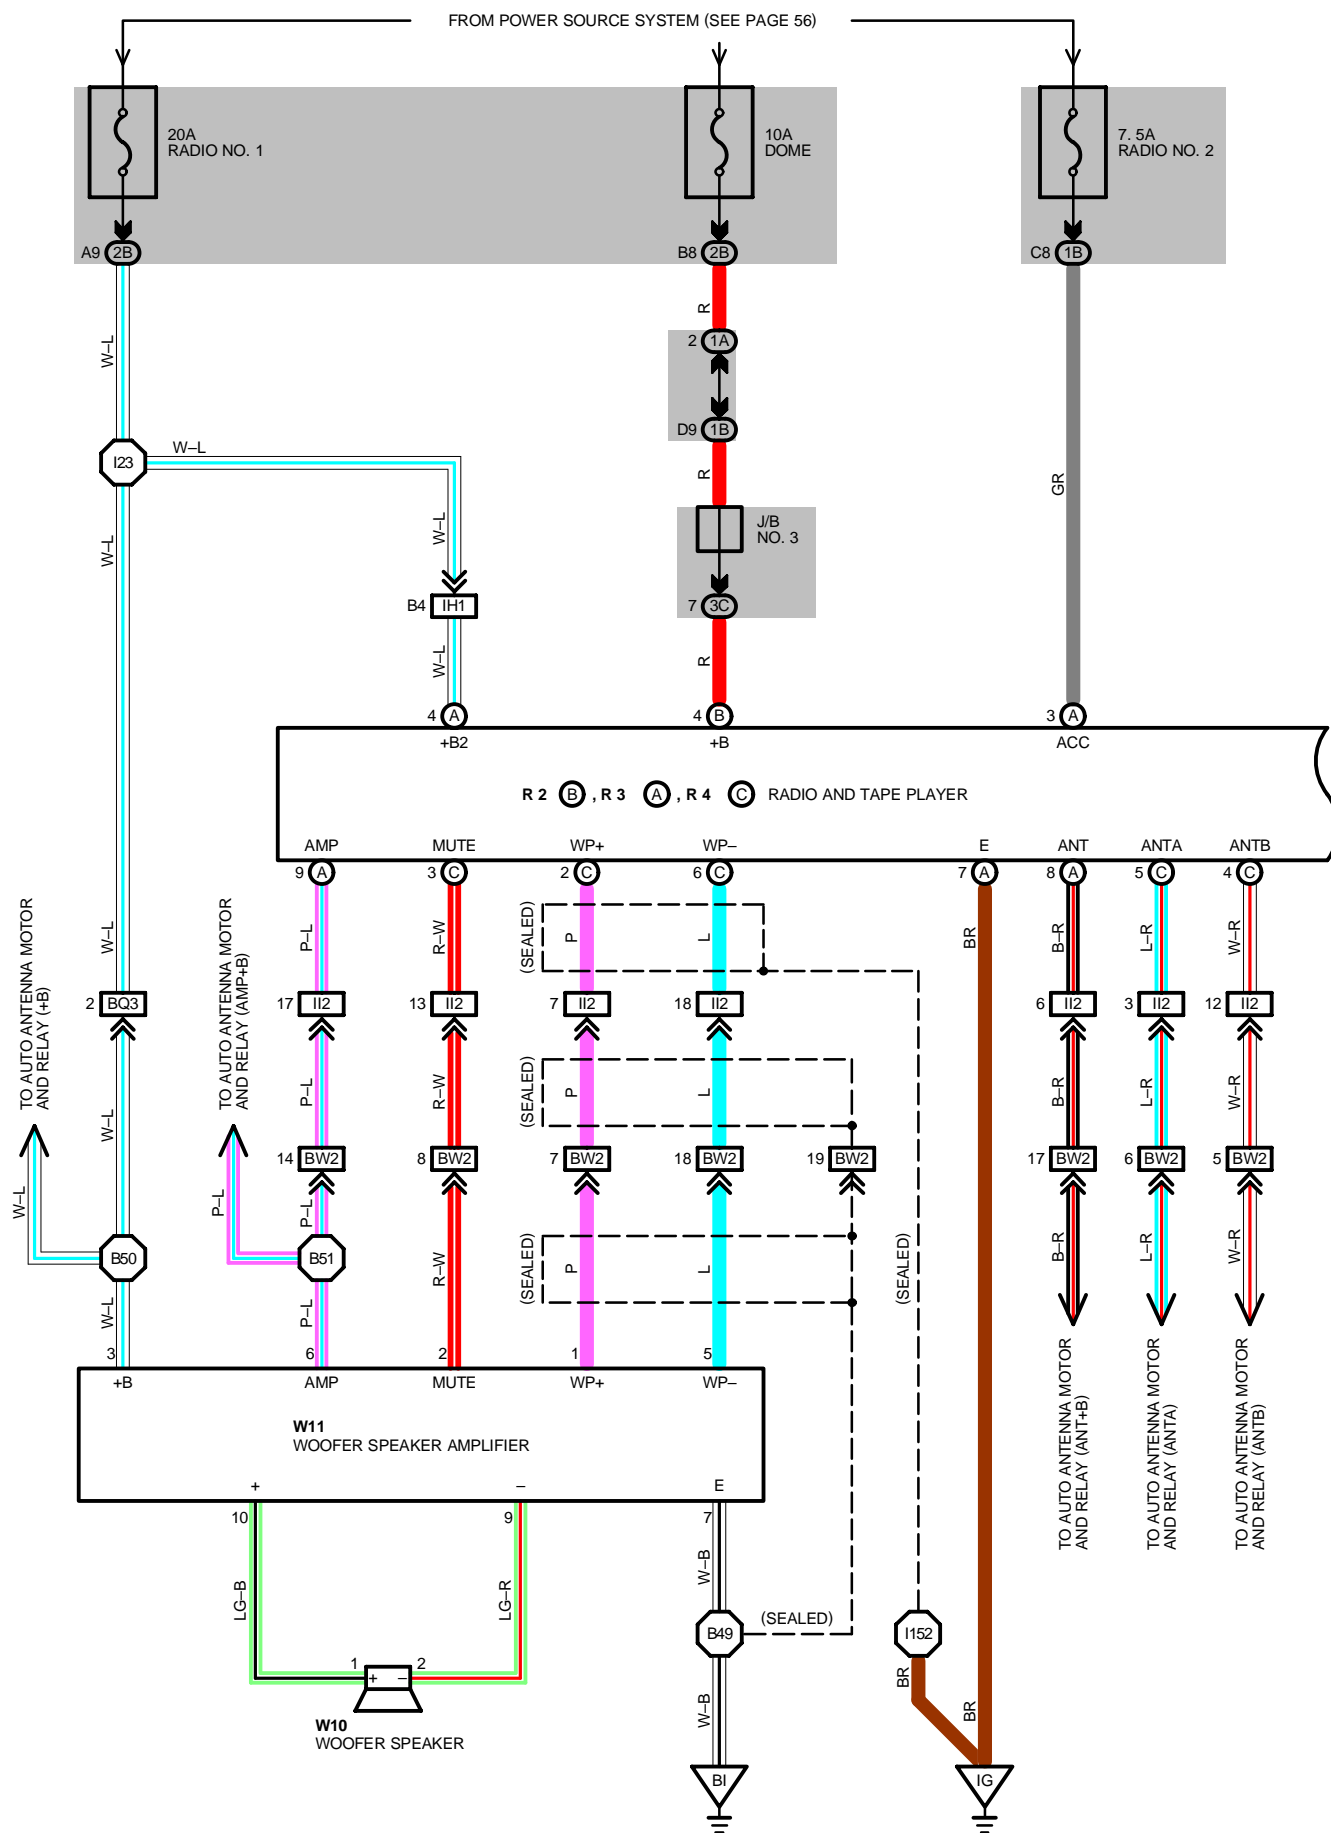

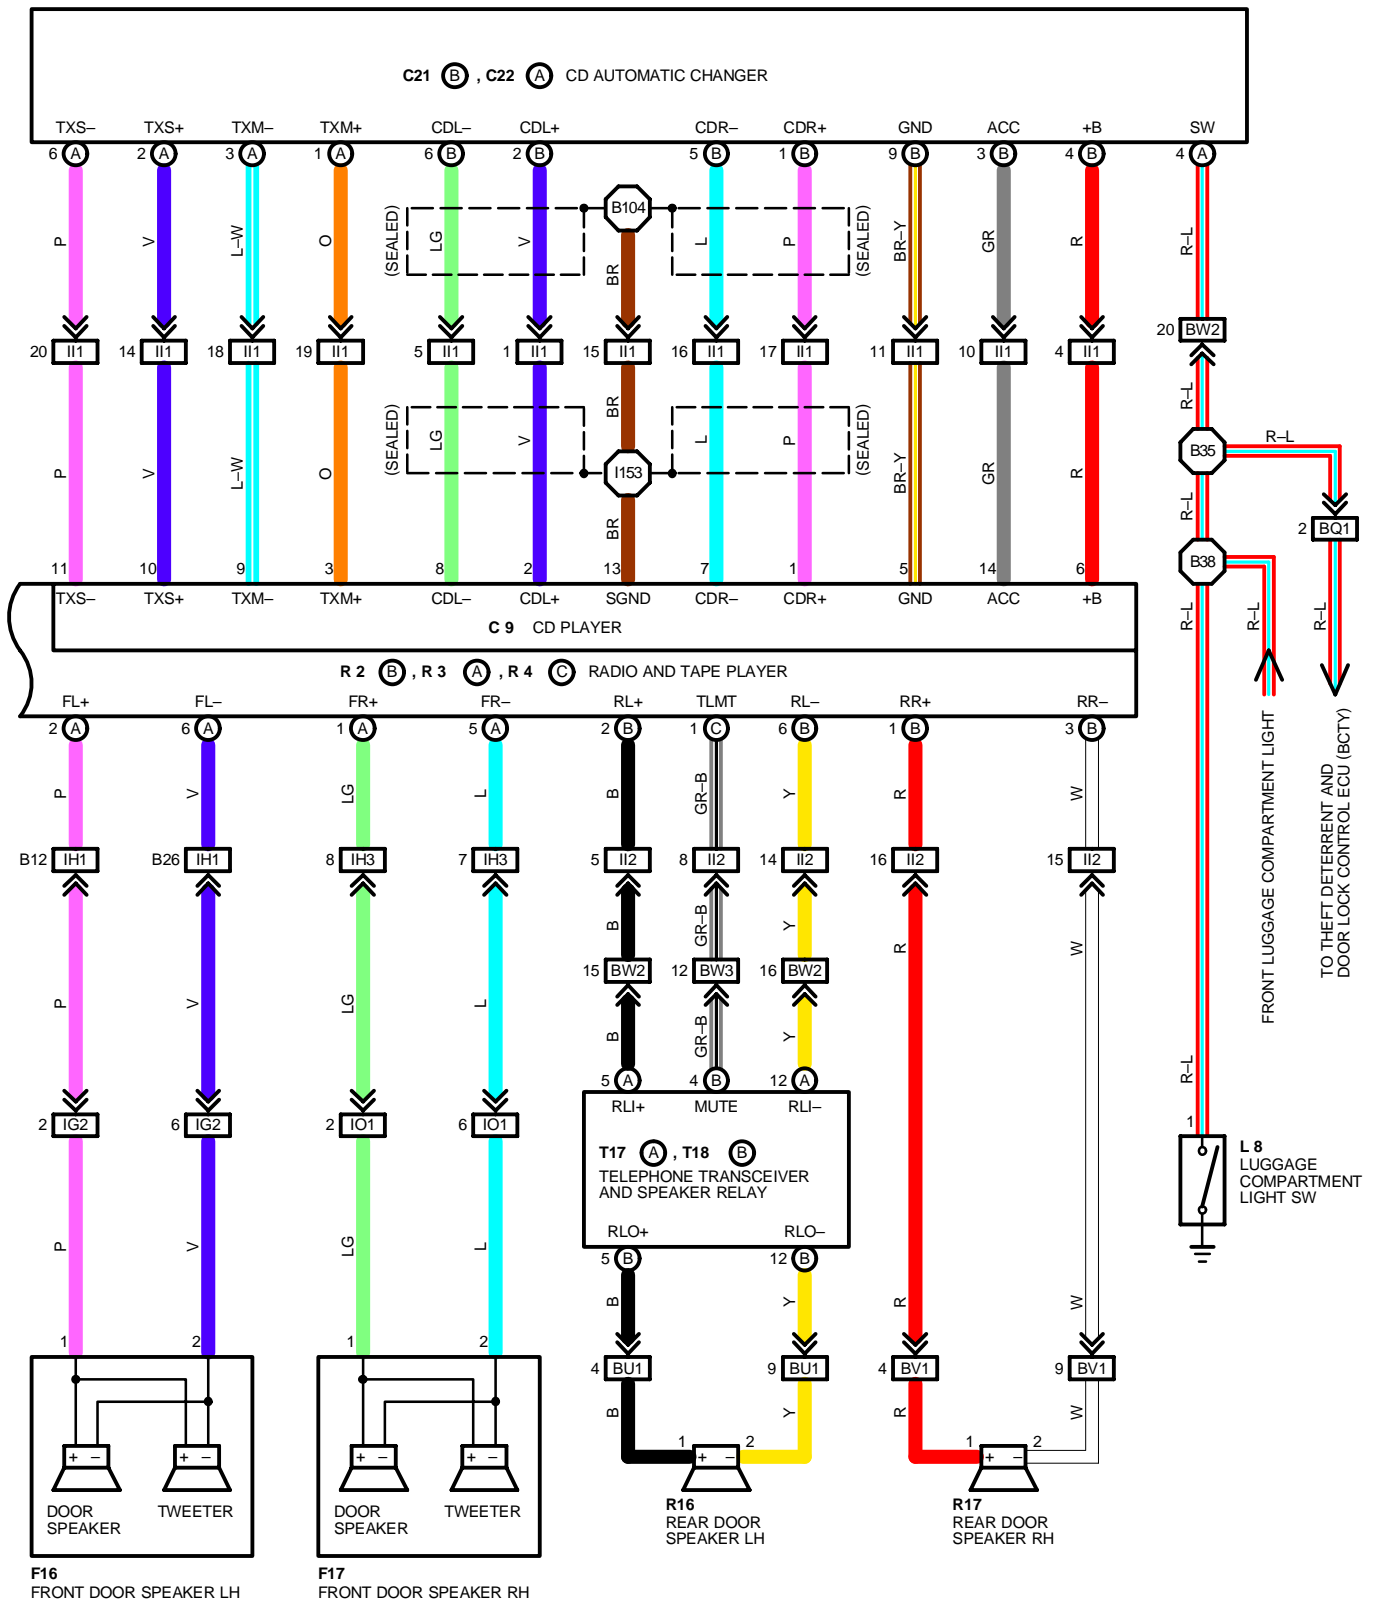

# RADIO AND TAPE PLAYER

## SERVICE HINTS

### R 3 (A) RADIO AND TAPE PLAYER

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 7-GROUND : ALWAYS CONTINUITY

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>C 9</b>	<a href="#">25</a>	<b>L 8</b>	<a href="#">28</a>	<b>R17</b>	<a href="#">29</a>
<b>C21</b> B	<a href="#">28</a>	<b>R 2</b> B	<a href="#">27</a>	<b>T17</b> A	<a href="#">29</a>
<b>C22</b> A	<a href="#">28</a>	<b>R 3</b> A	<a href="#">27</a>	<b>T18</b> B	<a href="#">29</a>
<b>F16</b>	<a href="#">28</a>	<b>R 4</b> C	<a href="#">27</a>	<b>W10</b>	<a href="#">29</a>
<b>F17</b>	<a href="#">28</a>	<b>R16</b>	<a href="#">29</a>	<b>W11</b>	<a href="#">29</a>

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>1A</b>	<a href="#">18</a>	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
<b>1B</b>	<a href="#">18</a>	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
<b>2B</b>	<a href="#">20</a>	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
<b>3C</b>	<a href="#">22</a>	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IG1</b>	<a href="#">34</a>	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
<b>IH1</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO.1)
<b>IH3</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
<b>II1</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
<b>II2</b>		
<b>IO1</b>	<a href="#">36</a>	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
<b>BQ1</b>	<a href="#">38</a>	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
<b>BQ3</b>		
<b>BU1</b>	<a href="#">38</a>	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
<b>BV1</b>	<a href="#">38</a>	REAR DOOR RH WIRE AND FLOOR NO.1 WIRE (RIGHT CENTER PILLAR)
<b>BW2</b>	<a href="#">38</a>	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
<b>BW3</b>		


## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>IG</b>	<a href="#">34</a>	INSTRUMENT PANEL BRACE RH
<b>BI</b>	<a href="#">38</a>	UNDER THE LEFT REAR PILLAR


## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>I 23</b>	<a href="#">36</a>	COWL WIRE	<b>B 49</b>	<a href="#">38</a>	FLOOR NO.2 WIRE
<b>I152</b>	<a href="#">36</a>	INSTRUMENT PANEL WIRE	<b>B 50</b>		
<b>I153</b>			<b>B 51</b>		
<b>B 35</b>	<a href="#">38</a>	FLOOR NO.2 WIRE	<b>B104</b>		
<b>B 38</b>					


C 9 BLUE



C21 (B) BLUE



C22 (A) BLUE



F16




F17




L 8 GRAY



R 2 (B)



R 3 (A)



R 4 (C) BLUE




R16




R17



T17 (A)

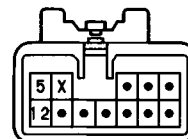

T18 (B)



W10



W11

