

A21 ORANGE




A38 BLACK




A39 BLACK




C12 (A)



C14 (B)

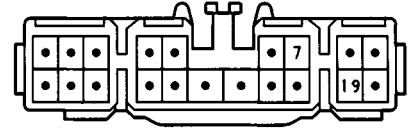


C16 BLACK

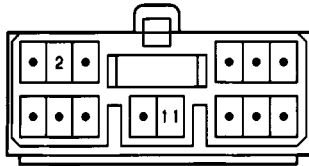

E 7



F13

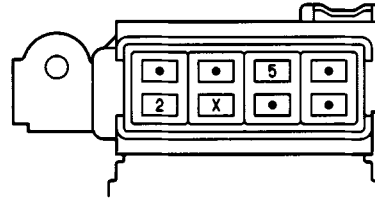

F14




G 1 GRAY




G 2




H10



I17




J 1

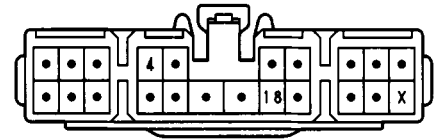

O 5 BLUE




S11




S16




T16 BLUE



R 2 (B)

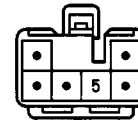

R 3 (A)



R 8 BLACK



R 9 BLACK (W/ POWER SHOULDER
BELT ANCHOR)




R 9 (W/O POWER SHOULDER
BELT ANCHOR)




R11 GRAY




ILLUMINATION

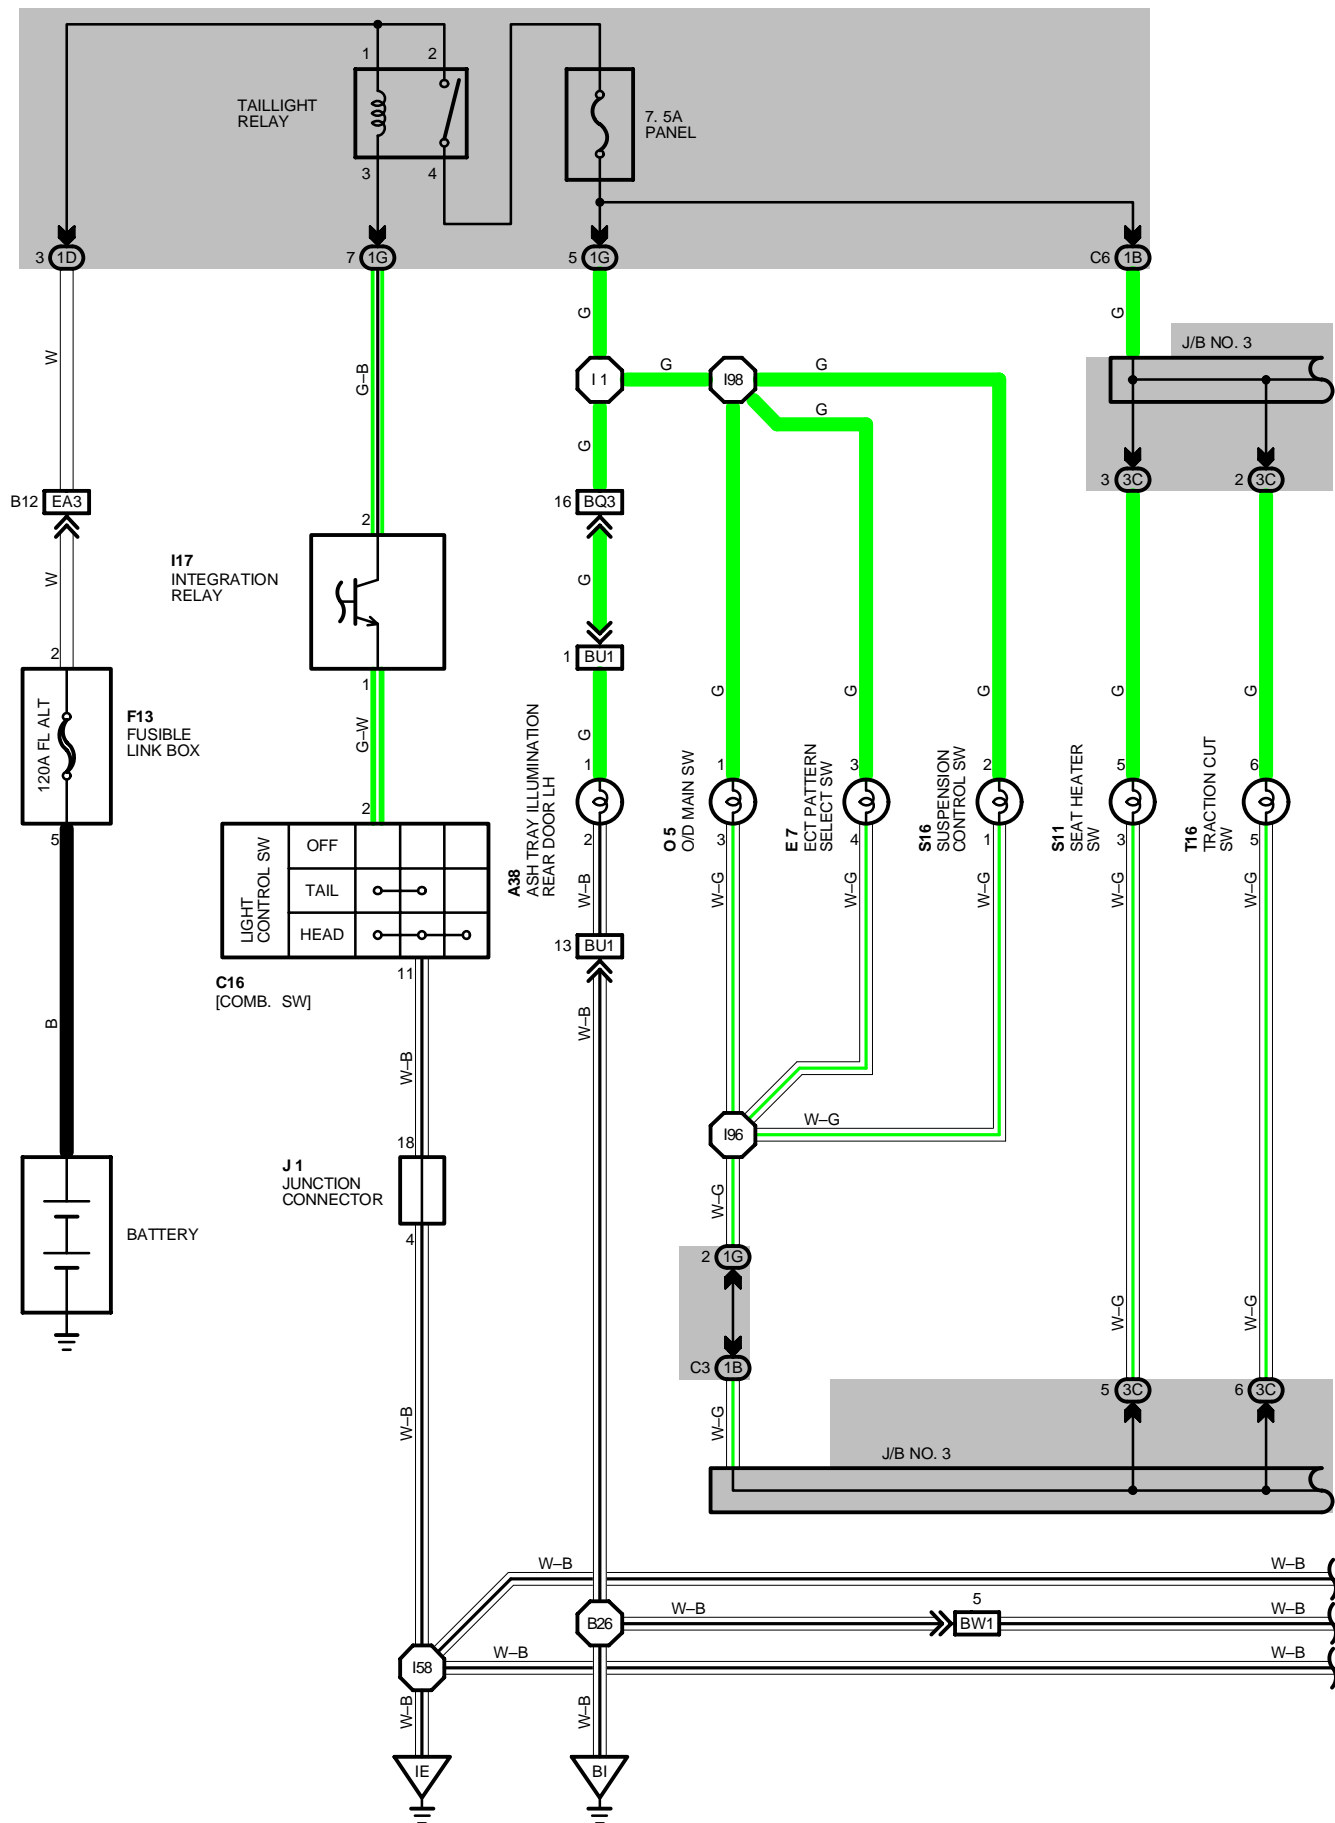

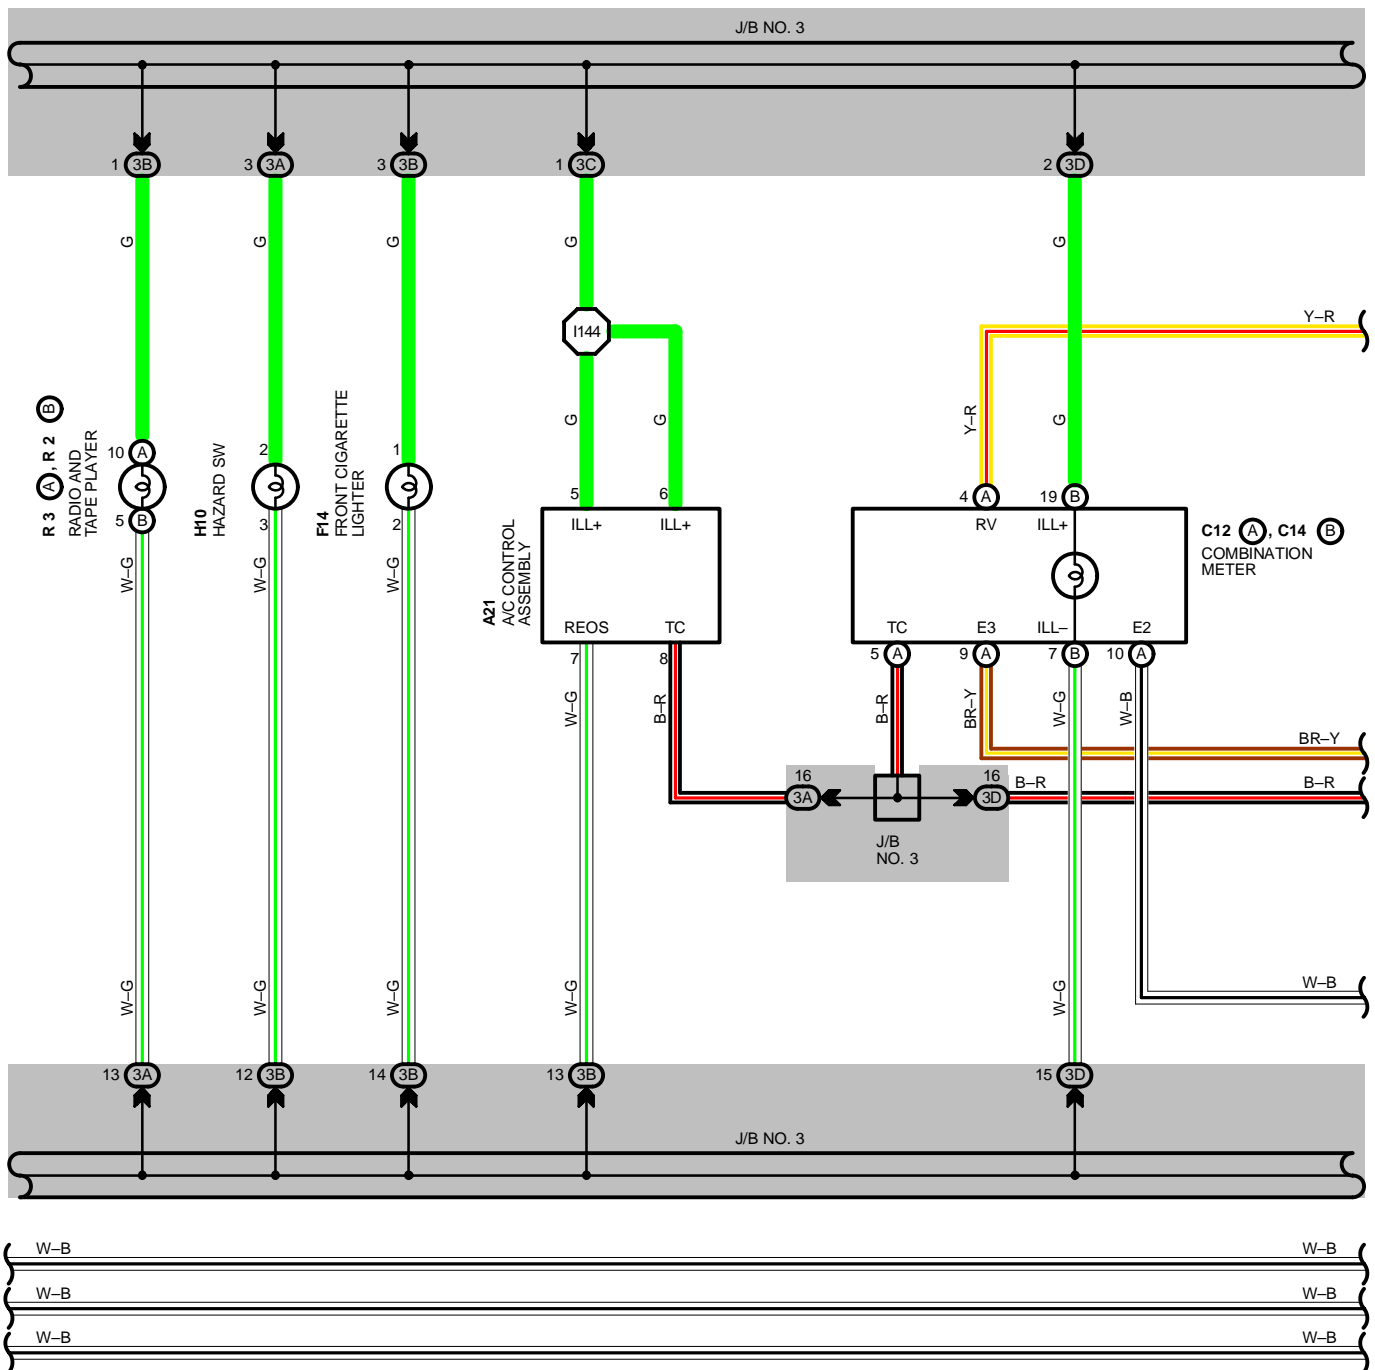

102

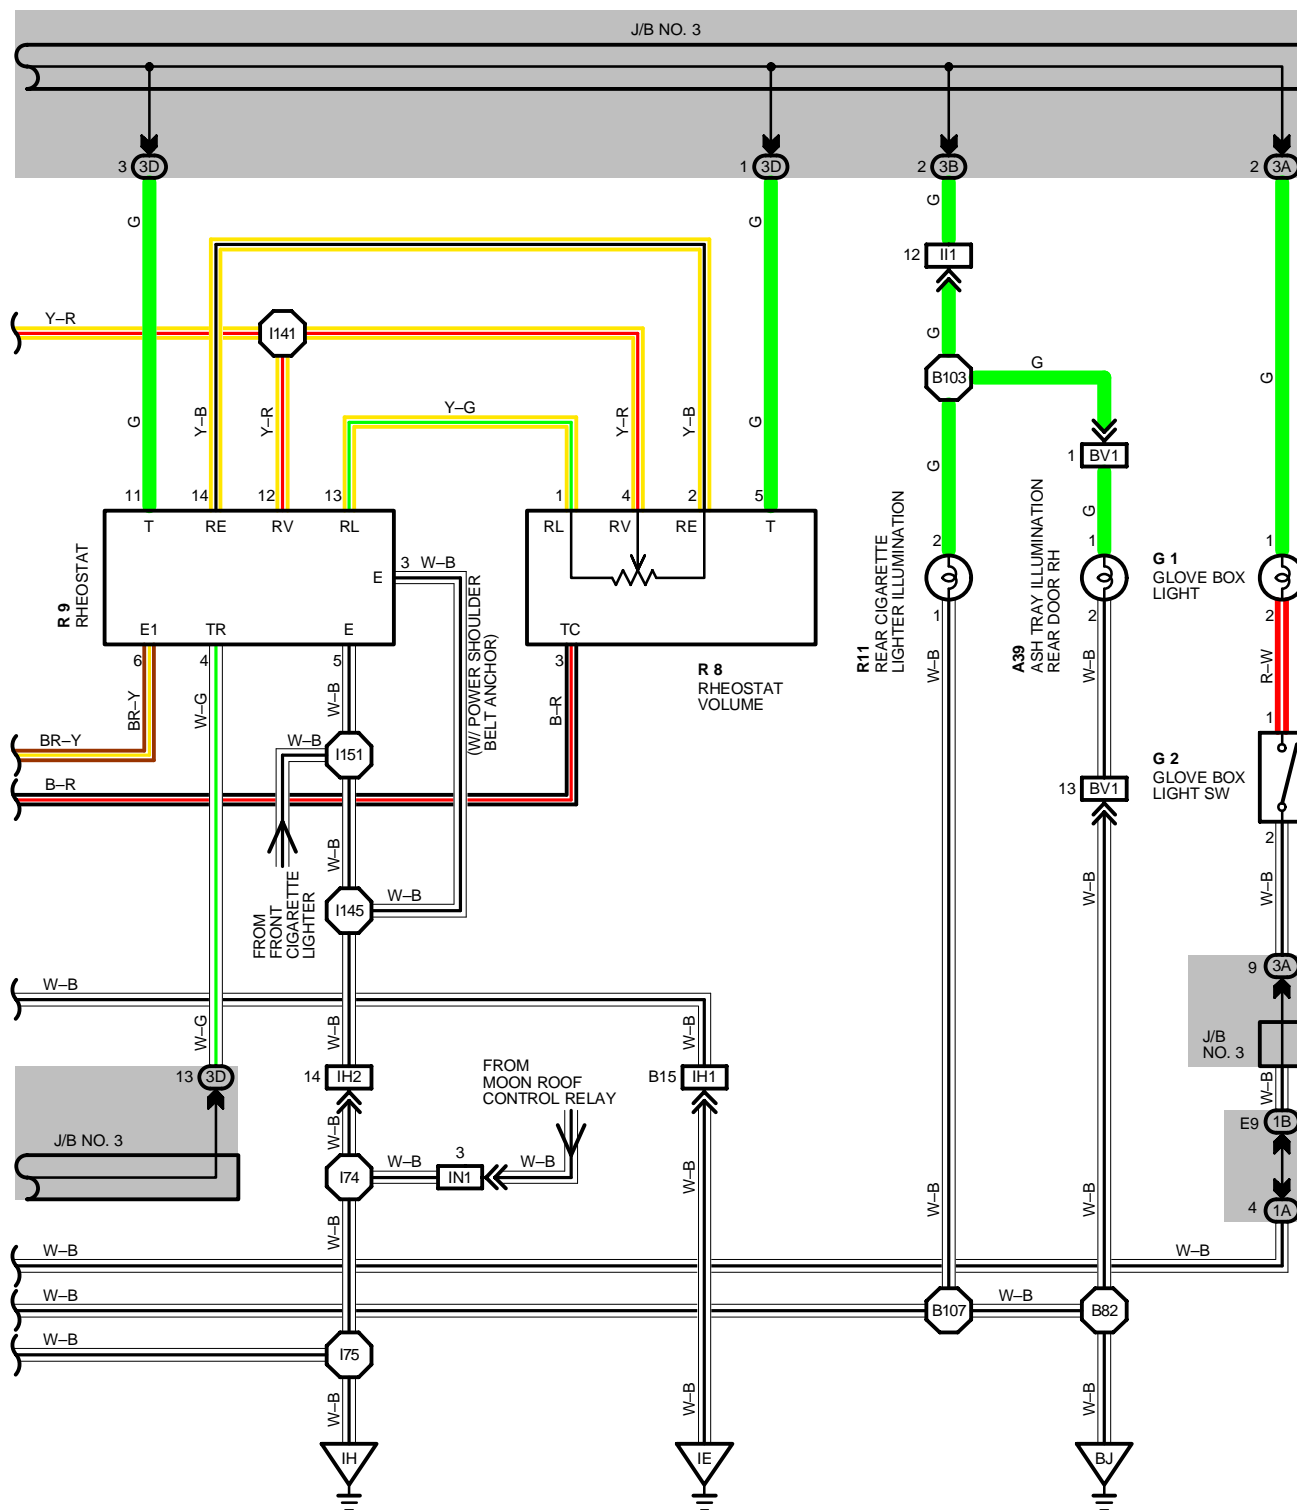

SERVICE HINTS

TAILLIGHT RELAY

2-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

C16 LIGHT CONTROL SW [COMB. SW]

2-11 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A21	26	F14	26	S16	27
A38	28	G 1	26	T16	27
A39	28	G 2	26	R 2	B 27
C12	A 26	H10	26	R 3	A 27
C14	B 26	I17	26	R 8	27
C16	26	J 1	27	R 9	27
E 7	26	O 5	27	R11	29
F13	24	S11	27		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	18	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1D	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1G	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
3A	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3B	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3C	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	32	COWL WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF J/B NO.2)
IH1	34	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO.1)
IH2	34	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
II1	34	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
IN1	36	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)
BQ3	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BU1	38	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
BV1	38	REAR DOOR RH WIRE AND FLOOR NO.1 WIRE (RIGHT CENTER PILLAR)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IH	34	RIGHT KICK PANEL
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1	36	COWL WIRE	I144	36	INSTRUMENT PANEL WIRE
I 58	36	COWL WIRE	I145	36	INSTRUMENT PANEL WIRE
I 74	36	COWL WIRE	I151	36	INSTRUMENT PANEL WIRE
I 75	36	COWL WIRE	B 26	38	FLOOR NO.2 WIRE
I 96	36	COWL WIRE	B 82	38	FLOOR NO.1 WIRE
I 98	36	COWL WIRE	B103	38	FLOOR NO.2 WIRE
I141	36	INSTRUMENT PANEL WIRE	B107	38	FLOOR NO.2 WIRE