



# INTERIOR LIGHTS

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

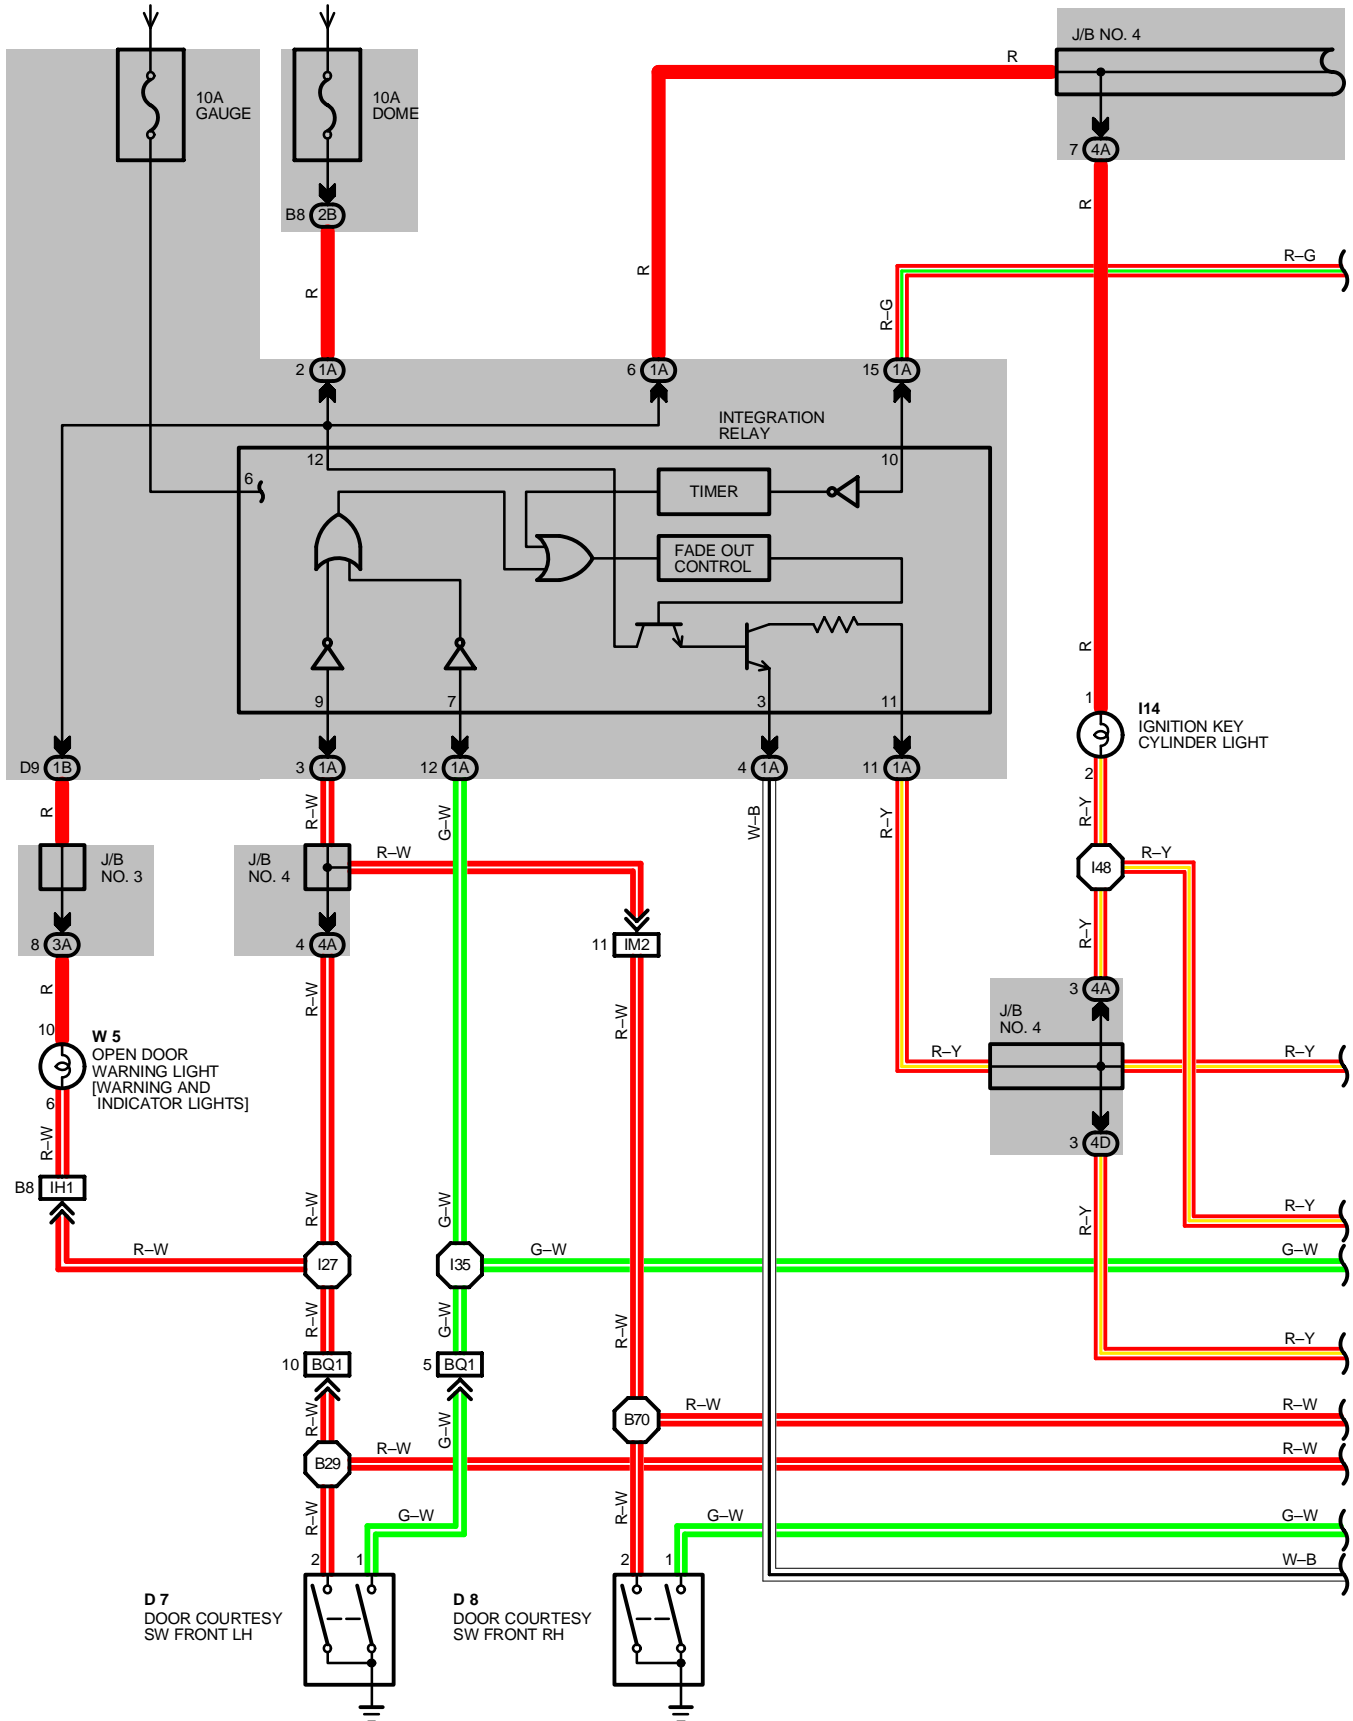



# INTERIOR LIGHTS

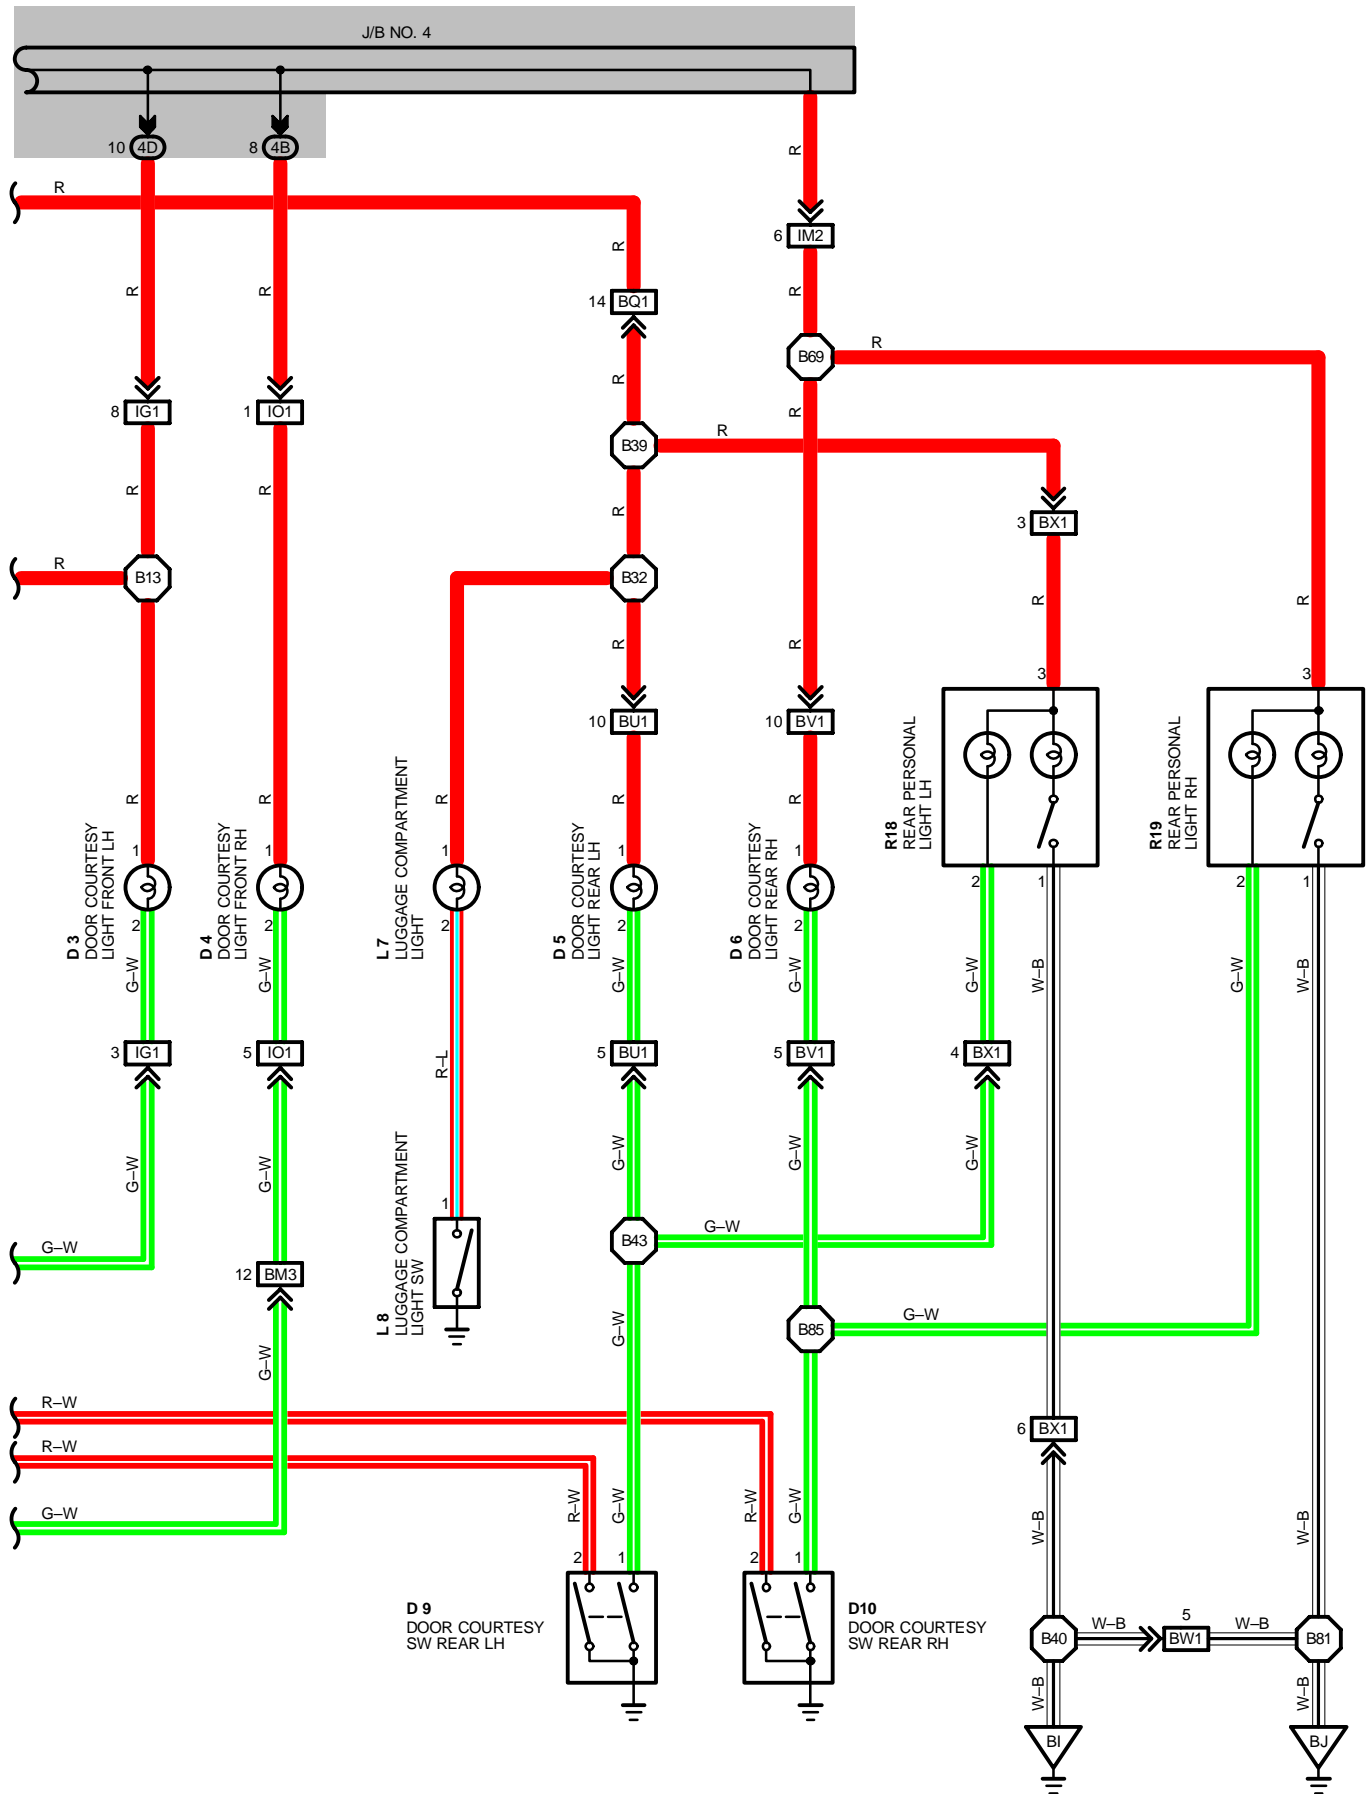

## SERVICE HINTS

### INTEGRATION RELAY

12-GROUND : ALWAYS APPROX. 12 VOLTS

9-GROUND : CONTINUITY WITH EACH DOOR (FRONT LH AND RH, REAR LH AND RH) OPEN

7-GROUND : CONTINUITY WITH FRONT LH DOOR OPEN

**D 7, D 8, D 9, D10 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH**

1, 2-GROUND : CLOSED WITH DOOR OPEN

**L 8 LUGGAGE COMPARTMENT LIGHT SW**

1-GROUND : CLOSED WITH LUGGAGE COMPARTMENT DOOR OPEN

### : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>D 3</b>	<a href="#">28</a>	<b>D10</b>	<a href="#">28</a>	<b>R19</b>	<a href="#">29</a>
<b>D 4</b>	<a href="#">28</a>	<b>D11</b>	<a href="#">28</a>	<b>S13</b>	<a href="#">27</a>
<b>D 5</b>	<a href="#">28</a>	<b>F18</b>	<a href="#">28</a>	<b>S14</b>	<a href="#">27</a>
<b>D 6</b>	<a href="#">28</a>	<b>I14</b>	<a href="#">26</a>	<b>V 3</b>	<a href="#">29</a>
<b>D 7</b>	<a href="#">28</a>	<b>L 7</b>	<a href="#">28</a>	<b>V 4</b>	<a href="#">29</a>
<b>D 8</b>	<a href="#">28</a>	<b>L 8</b>	<a href="#">28</a>	<b>W 4</b>	<a href="#">27</a>
<b>D 9</b>	<a href="#">28</a>	<b>R18</b>	<a href="#">29</a>		

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>1A</b>	<a href="#">18</a>	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
<b>1B</b>	<a href="#">18</a>	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
<b>2B</b>	<a href="#">20</a>	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
<b>3A</b>	<a href="#">22</a>	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
<b>4A</b>		
<b>4B</b>	<a href="#">23</a>	COWL WIRE AND J/B NO.4 (BEHIND THE COMBINATION METER)
<b>4D</b>		

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IG1</b>	<a href="#">34</a>	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
<b>IH1</b>	<a href="#">34</a>	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO.1)
<b>IM2</b>	<a href="#">36</a>	FLOOR NO.1 WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
<b>IN1</b>	<a href="#">36</a>	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)
<b>IO1</b>	<a href="#">36</a>	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
<b>BM3</b>	<a href="#">38</a>	COWL WIRE AND FLOOR NO.1 WIRE (RIGHT KICK PANEL)
<b>BQ1</b>	<a href="#">38</a>	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
<b>BU1</b>	<a href="#">38</a>	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
<b>BV1</b>	<a href="#">38</a>	REAR DOOR RH WIRE AND FLOOR NO.1 WIRE (RIGHT CENTER PILLAR)
<b>BW1</b>	<a href="#">38</a>	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
<b>BX1</b>	<a href="#">38</a>	FLOOR NO.3 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT REAR PILLAR)

### : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>IE</b>	<a href="#">34</a>	LEFT KICK PANEL
<b>IH</b>	<a href="#">34</a>	RIGHT KICK PANEL
<b>BI</b>	<a href="#">38</a>	UNDER THE LEFT REAR PILLAR
<b>BJ</b>	<a href="#">38</a>	UNDER THE RIGHT REAR PILLAR

### : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>I 21</b>			<b>B 9</b>	<a href="#">38</a>	ROOF WIRE
<b>I 27</b>			<b>B 12</b>	<a href="#">38</a>	FRONT DOOR LH WIRE
<b>I 35</b>			<b>B 13</b>		
<b>I 48</b>			<b>B 29</b>		
<b>I 58</b>	<a href="#">36</a>	COWL WIRE	<b>B 32</b>		
<b>I 60</b>			<b>B 39</b>	<a href="#">38</a>	FLOOR NO.2 WIRE
<b>I 61</b>			<b>B 40</b>		
<b>I 69</b>			<b>B 43</b>		
<b>I 75</b>			<b>B 69</b>		
<b>B 1</b>			<b>B 70</b>	<a href="#">38</a>	FLOOR NO.1 WIRE
<b>B 3</b>	<a href="#">38</a>	ROOF WIRE	<b>B 81</b>		
<b>B 5</b>			<b>B 85</b>		

# INTERIOR LIGHTS

