


FOG LIGHTS

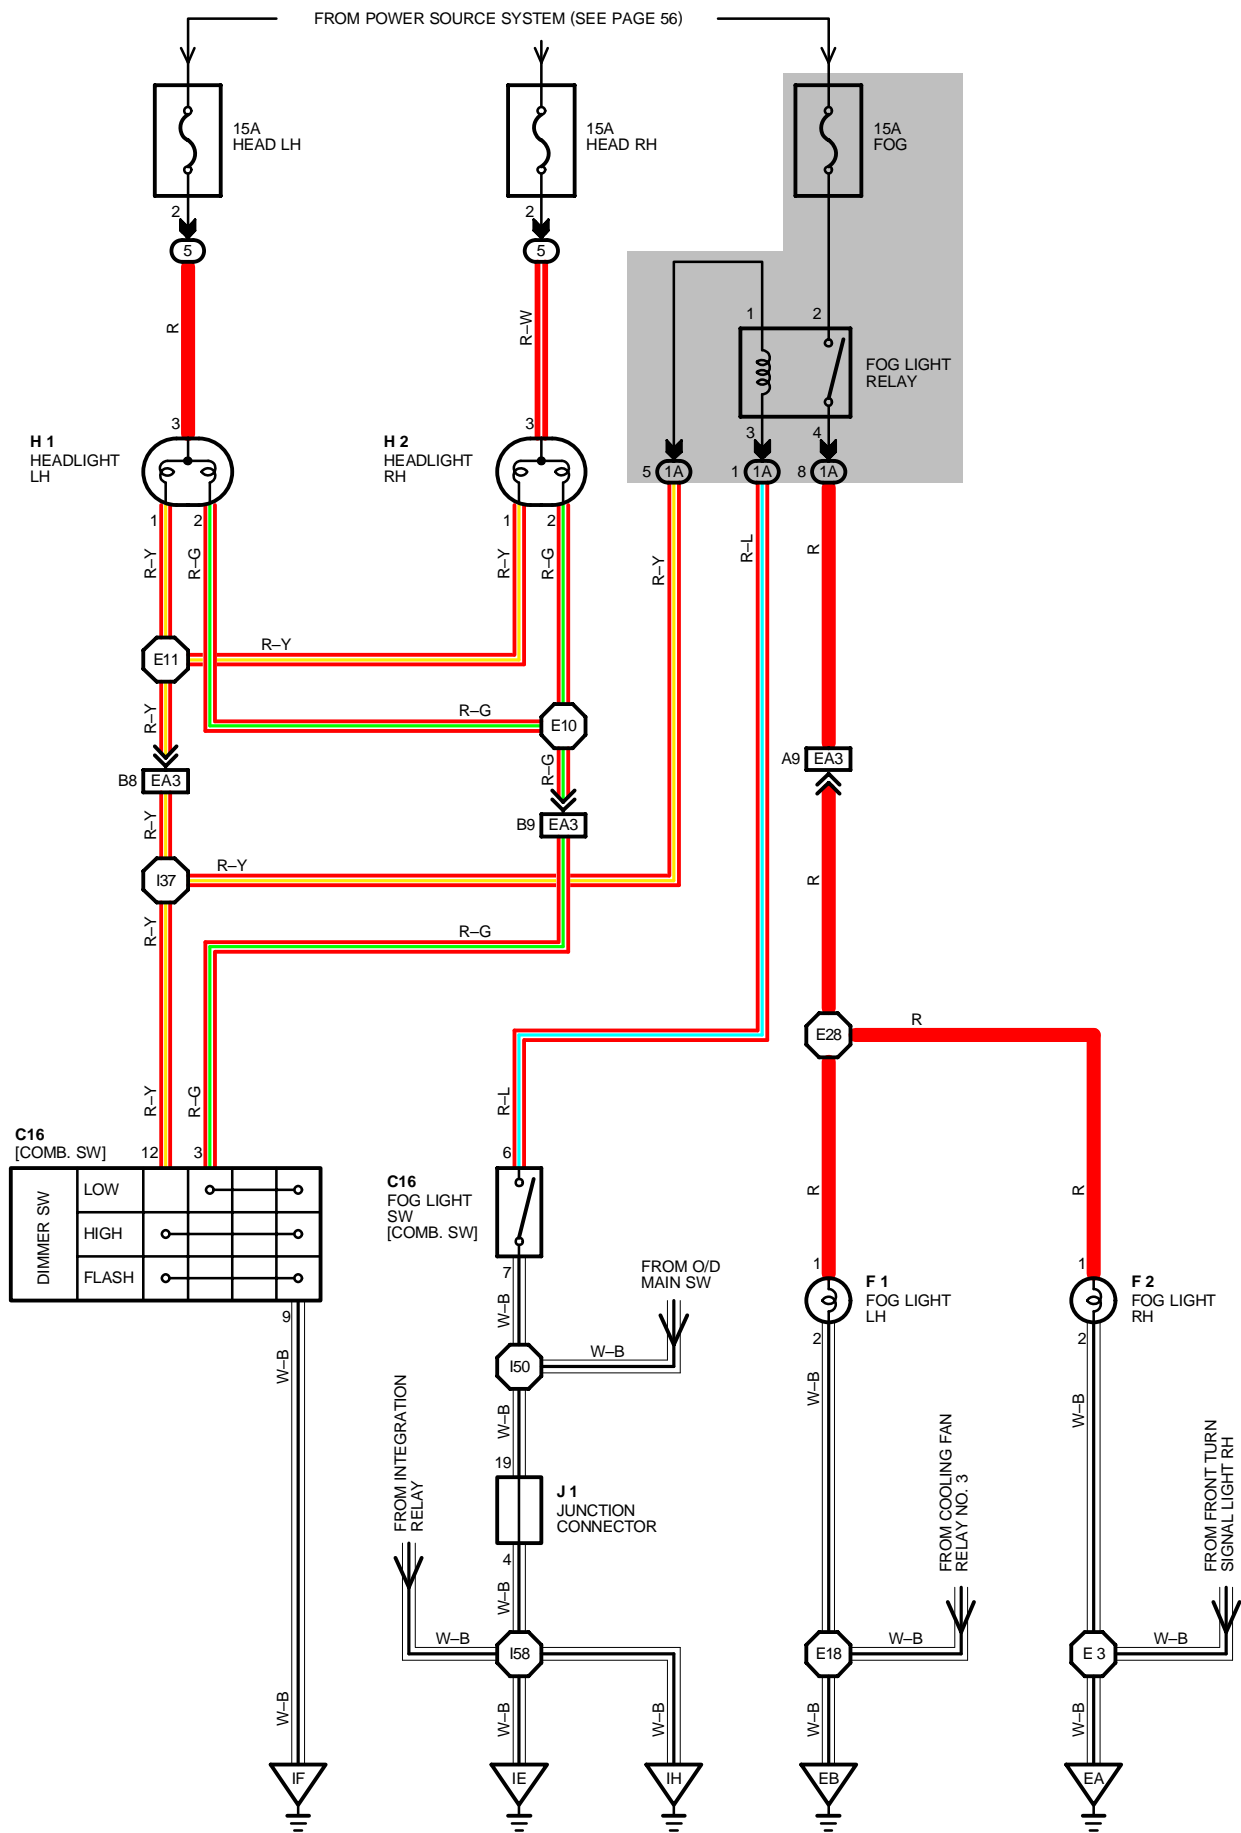

SERVICE HINTS

FOG LIGHT RELAY

2-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW ON

C16 DIMMER SW (COMB. SW)

12-9 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

3-9 : CLOSED WITH DIMMER SW AT **LOW** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	26	F 2	24	H 2	24
F 1	24	H 1	24	J 1	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
5	20	R/B NO.5 (NEAR THE J/B NO.2)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	32	COWL WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF J/B NO.2)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32	FRONT SIDE OF RIGHT FENDER
EB	32	FRONT SIDE OF LEFT FENDER
IE	34	LEFT KICK PANEL
IF	34	INSTRUMENT PANEL BRACE LH
IH	34	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	32	ENGINE ROOM MAIN WIRE	E 28	32	ENGINE ROOM MAIN WIRE
E 10			I 37	36	COWL WIRE
E 11			I 50		
E 18			I 58		

C16 BLACK

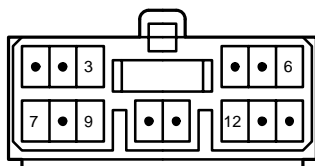

F 1 GRAY



F 2 GRAY



H 1 GRAY



H 2 GRAY



J 1

