


REAR WINDOW DEFOGGER AND MIRROR HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

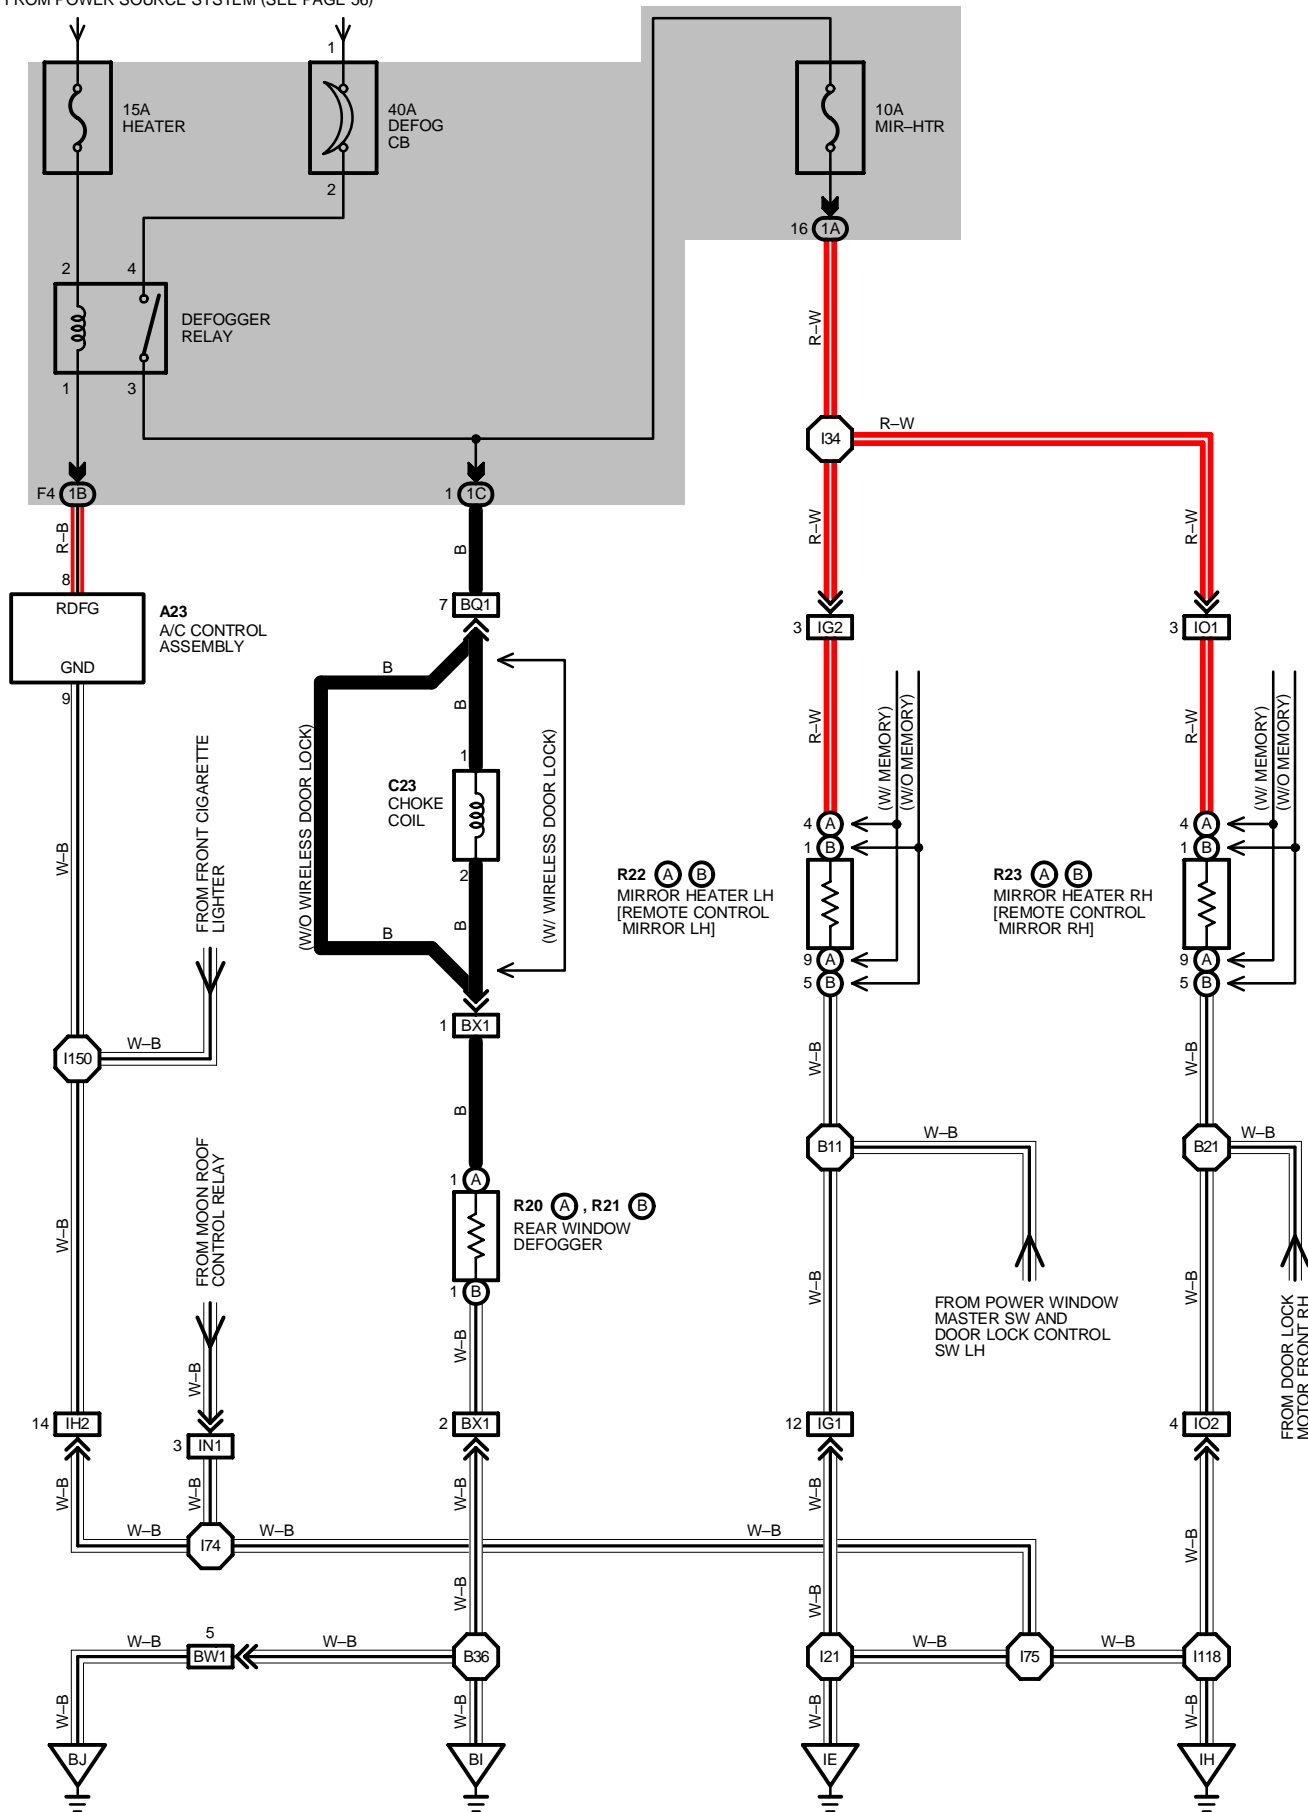

SERVICE HINTS

DEFOGGER RELAY

4-3 : CLOSED WITH IGNITION SW AT **ON** POSITION AND DEFOGGER SW (A/C CONTROL ASSEMBLY) ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A23	26	R21	B 29	R23	A 29
C23	28	R22	A 29		B 29
R20	A 29		B 29		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	18	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1C	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2		
IH2	34	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IN1	36	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)
IO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IO2		
BQ1	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
BX1	38	FLOOR NO.3 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT REAR PILLAR)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IH	34	RIGHT KICK PANEL
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 21	36	COWL WIRE	I150	36	INSTRUMENT PANEL WIRE
I 34			B 11	38	FRONT DOOR LH WIRE
I 74			B 21	38	FRONT DOOR RH WIRE
I 75			B 36	38	FLOOR NO.2 WIRE
I118					

