



POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

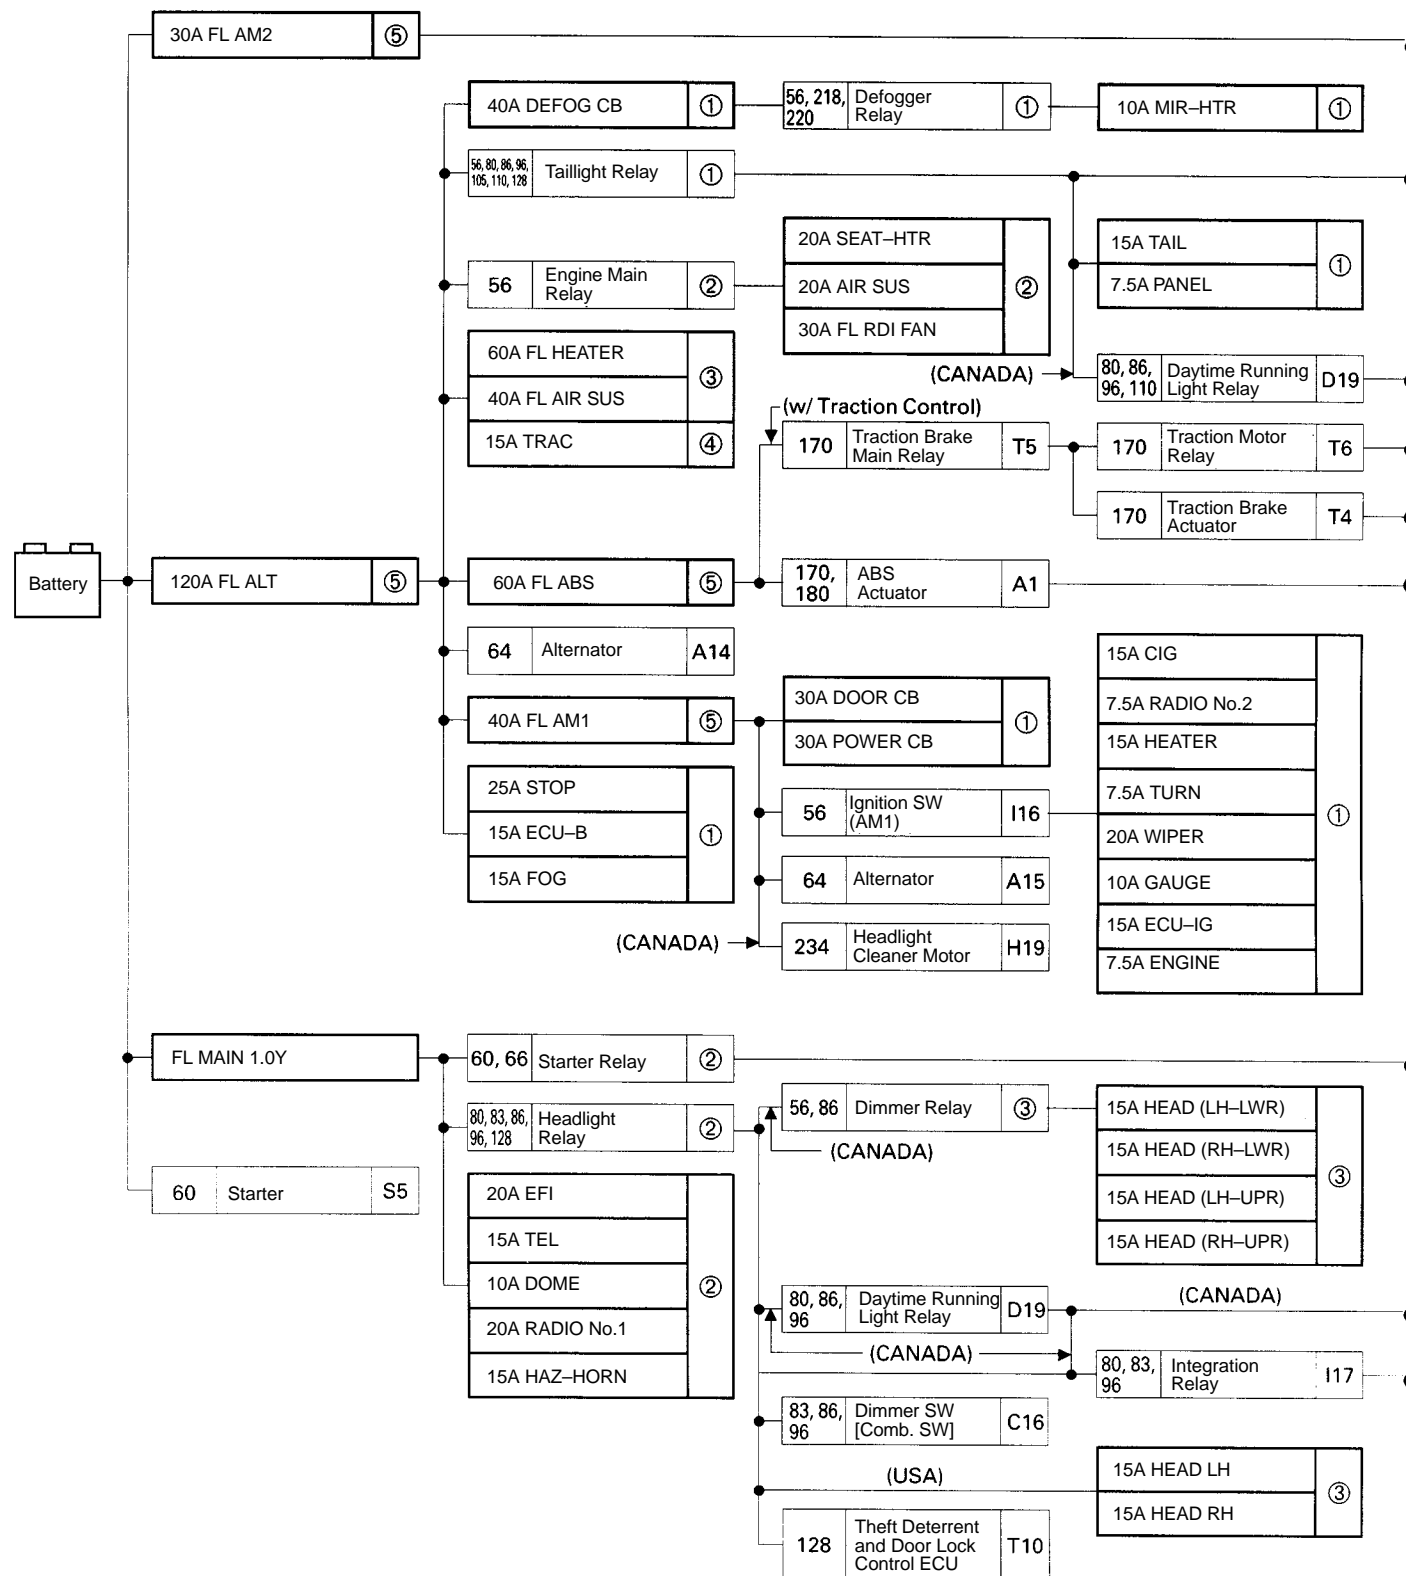

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

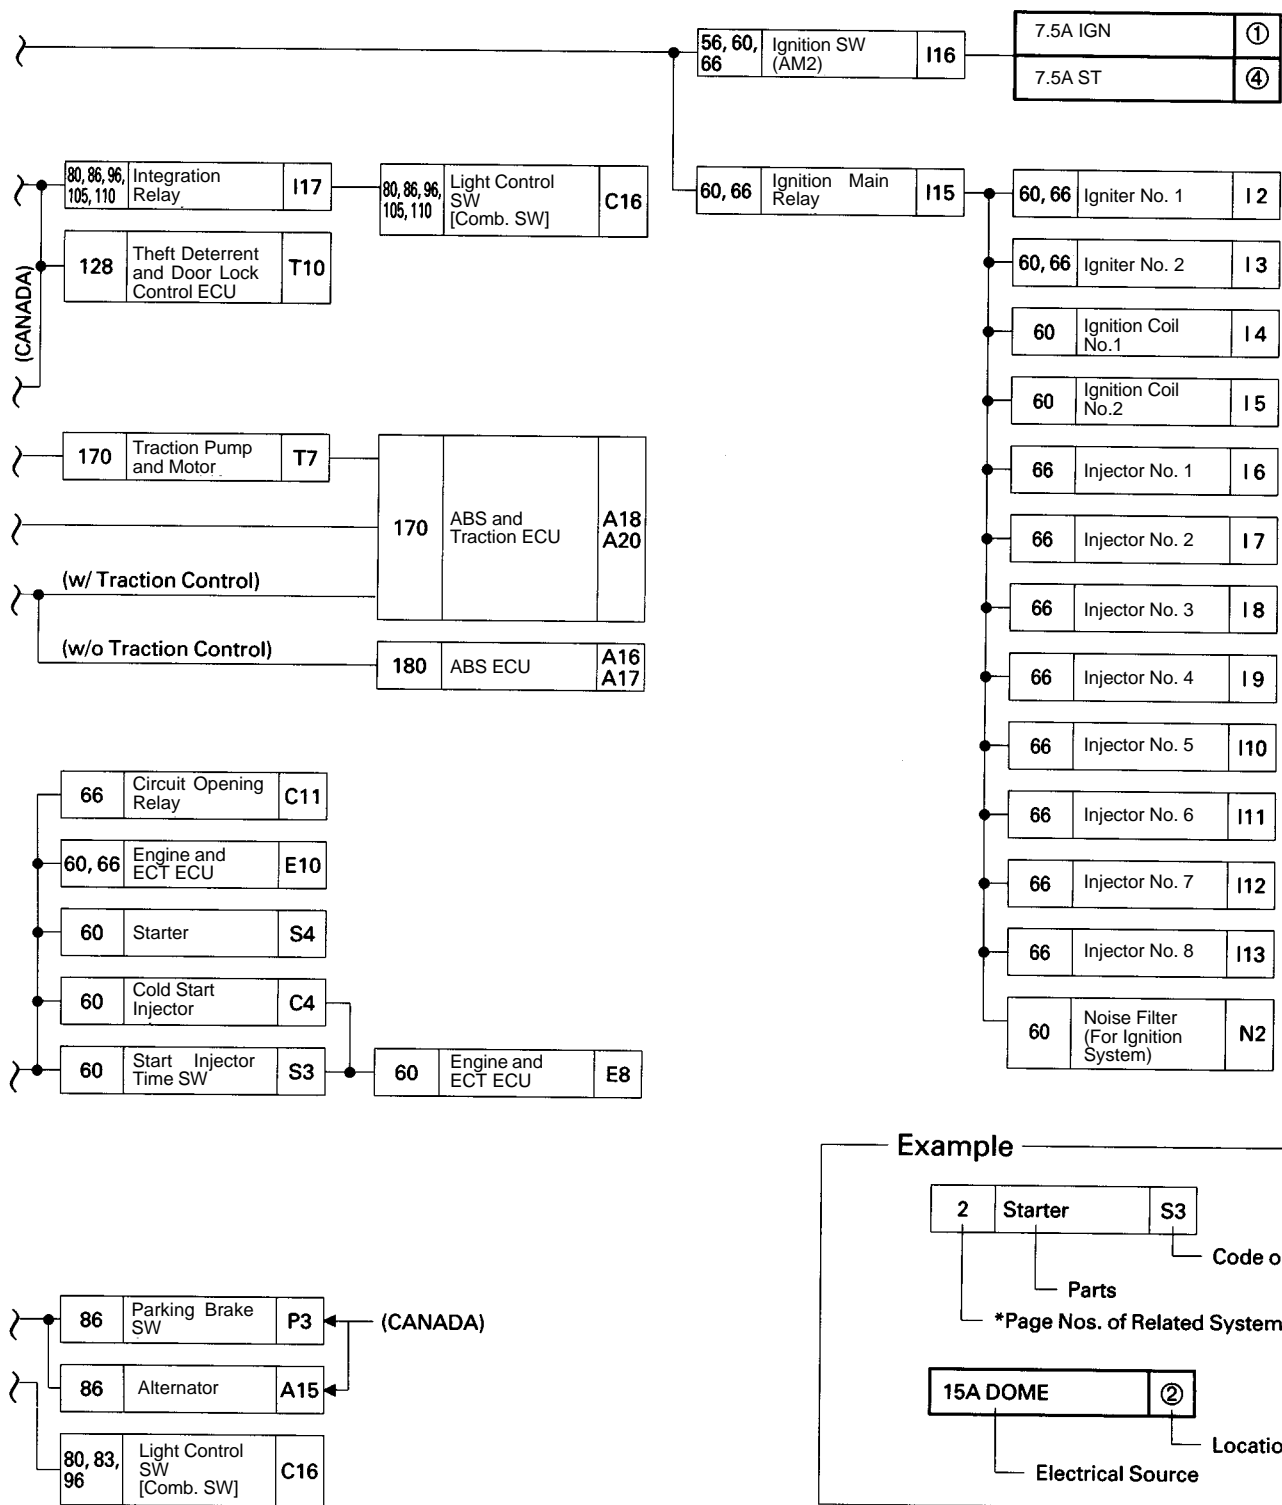

* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

(4) : R/B No. 7 (See page 18) (5) : Fusible Link Box (F13 See page 24)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts																			Code or Location																		
					CB or Fuse																																					
			170 180		252				64 246		180		170			105 110 252		252	218 252		252		194			105 110		240	246													
ABS Check Connector		A/C Magnet Clutch		A/C Magnet Clutch Relay			A/C Pressure SW (High Pressure)		Alternator	ABS ECU		ABS and Traction ECU			A/C Control Assembly			A/C Power Transistor		Air Vent Mode Control Servo Motor		Air Suspension ECU			Ashtray Illumination Rear Door LH		Ashtray Illumination Rear Door RH	Auto Antenna Motor and Relay	Brake Fluid Level SW													
A5		A10		A11	A12	A15	A16	A17	A18	A19	A20	A21	A22	A23	A25	A31	A34	A35	A36	A38	A39	A40	B1																			
①	40A	DEFOG CB																																								
	30A	DOOR CB																																								
	30A	POWER CB																																								
	25A	STOP								•			•					•																								
	15A	ECU-B							•			•								•																						
	15A	FOG																																								
	10A	MIR-HTR																																								
	15A	HEATER				•	•							•	•	•		•																								
	7.5A	TURN																																								
	20A	WIPER																																								
	10A	GAUGE		•				•	•	•	•	•	•													•																
	15A	ECU-IG						•				•								•				•																		
	7.5A	ENGINE						•																																		
	7.5A	IGN					•	•																																		
	15A	CIG																																								
	7.5A	RADIO No.2														•									•																	
	15A	TAIL																																								
	7.5A	PANEL											•									•	•																			
②	15A	TEL																																								
	10A	DOME													•																											
	20A	RADIO No.1																						•																		
	15A	HAZ-HORN																																								
	20A	EFI																																								
	20A	SEAT-HTR																																								
	20A	AIR SUS																		•																						
	30A	FL RDI FAN																																								
③	15A	HEAD LH (USA)																																								
	15A	HEAD RH (USA)																																								
	15A	HEAD LH-LWR (Canada)																																								
	15A	HEAD RH-LWR (Canada)																																								
	15A	HEAD LH-UPR (Canada)																																								
	15A	HEAD RH-UPR (Canada)																																								
	40A	FL AIR SUS																	•																							
60A	FL HEATER															•																										
④	7.5A	ST																																								
	15A	TRAC								•																																

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		100																		128	124 128				86 110 234 246	184	246	105 110 184
					Cruise Control ECU	Choke Coil	Diode	Day/Night Shift SW	Door Courtesy Light Front LH	Door Courtesy Light Front RH	Door Courtesy Light Rear LH	Door Courtesy Light Rear RH	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	Door Key Cylinder Light and Outside Handle SW	Door Lock Control SW RH	Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW Front LH	Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW Front RH	Door Lock Motor Rear LH	Door Lock Motor Rear RH	Daytime Running Light Relay (CANADA)	ECT Solenoid	Engine Oil Level Warning SW	ECT Pattern Select SW					
CB or Fuse			C20	C23	D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D13	D14	D15	D16	D17	D19	E1	E5	E7							
①	40A	DEFOG CB		●																											
	30A	DOOR CB															●	●	●	●											
	30A	POWER CB																													
	25A	STOP																													
	15A	ECU-B																			●										
	15A	FOG																													
	10A	MIR-HTR																													
	15A	HEATER																													
	7.5A	TURN																													
	20A	WIPER																													
	10A	GAUGE	●		●												●				●	●	●								
	15A	ECU-IG																													
	7.5A	ENGINE																													
	7.5A	IGN																													
	15A	CIG																													
	7.5A	RADIO No.2																													
	15A	TAIL																													
	7.5A	PANEL																			●			●							
②	15A	TEL																													
	10A	DOME				●	●	●	●	●	●	●	●	●	●																
	20A	RADIO No.1																													
	15A	HAZ-HORN																													
	20A	EFI																			●										
	20A	SEAT-HTR																													
	20A	AIR SUS																													
	30A	FL RDI FAN																													
③	15A	HEAD LH (USA)																													
	15A	HEAD RH (USA)																													
	15A	HEAD LH-LWR (Canada)																													
	15A	HEAD RH-LWR (Canada)																													
	15A	HEAD LH-UPR (Canada)																													
	15A	HEAD RH-UPR (Canada)																													
	40A	FL AIR SUS																													
④	60A	FL HEATER																													
	7.5A	ST																													

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]

(4) : R/B No. 7 (See page 18)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		94 105 110		194		116		234		234		66		100		60 66		192		147 214 220		86		92 110 147 214		141		96		96 116		100		252				
			Hazard SW	Height Control Connector	Height Control Relay No.2	Height Control Sensor Rear LH	Height Control Sensor Rear RH	High Mount Stop Light	Headlight Cleaner Relay	Headlight Cleaner SW	ISC Valve	Ignition Key Cylinder Light	Ignition Main Relay	Key Inter Lock Solenoid	Unlock Warning SW [Ignition SW]	Integration Relay	Junction Connector	Junction Connector (for Airbag)	Licence Plate Light LH	Licence Plate Light RH	Light Failure Sensor	Luggage Compartment Light	Luggage Compartment Light SW	Max Cool Servo Motor																							
			H10	H11	H12	H13	H14	H16	H18	H20	I1	I14	I15	I16	I17	J1	J2	L2	L3	L4	L7	L8	M1																								
①	40A	DEFOG CB																																													
	30A	DOOR CB																																													
	30A	POWER CB																																													
	25A	STOP						●																																							
	15A	ECU-B			●	●	●												●																												
	15A	FOG																																													
	10A	MIR-HTR																																													
	15A	HEATER																																													
	7.5A	TURN	●															●																													
	20A	WIPER								●	●																																				
	10A	GAUGE																																													
	15A	ECU-IG																●																													
	7.5A	ENGINE																																													
	7.5A	IGN													●																																
	15A	CIG														●																															
	7.5A	RADIO No.2																																													
	15A	TAIL																		●	●	●																									
	7.5A	PANEL	●																																												
②	15A	TEL																																													
	10A	DOME											●			●		●																													
	20A	RADIO No.1																																													
	15A	HAZ-HORN	●															●																													
	20A	EFI										●																																			
	20A	SEAT-HTR																																													
	20A	AIR SUS		●																																											
	30A	FL RDI FAN																																													
③	15A	HEAD LH (USA)																●																													
	15A	HEAD RH (USA)																●																													
	15A	HEAD LH-LWR (Canada)																																													
	15A	HEAD RH-LWR (Canada)																																													
	15A	HEAD LH-UPR (Canada)																																													
	15A	HEAD RH-UPR (Canada)																																													
	40A	FL AIR SUS																																													
60A	FL HEATER																																														
④	7.5A	ST									●																																				
	15A	TRAC																																													

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat		Power Shoulder Belt Anchor Relay		Rear Cigarette Lighter		Rear Cigarette Lighter Illumination		Back-Up Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Rear Turn Signal Light LH [Rear Comb. Light LH]		Stop Light LH [Rear Comb. Light LH]		Tailight LH [Rear Comb. Light LH]		Back-Up Light RH [Rear Comb. Light RH]	
Location			*Page Nos. of Related Systems		227		220		220 227		110 242		105 110 240 242		208 212		105 110		150		232		105 110		119		116		96		94		116		96		119		Parts		Code or Location		CB or Fuse		Power Seat Motor (for Driver's Rear Vertical Control)		Power Seat Motor (for Driver's Reclining Control)		Power Seat Motor (for Driver's Slide Control)		Power Seat Motor (for Passenger's Head Rest Control)		Power Seat Motor (for Passenger's Reclining Control)		Power Seat Motor (for Passenger's Slide Control)		Radio and Tape Player		Remote Control Mirror ECU		Remote Control Mirror SW		Rheostat Volume		Rheostat																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		66 141 164 170 184																				128		116 120 124 128 136 154 184 246		161		150 156 220		170		105 110		237		154		66		100		215		252		246		215		141		64																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
											TDCI		Theft Deterrent and Door Lock Control ECU		Tilt ECU		Tilt and Power Telescopic ECU		Traction Throttle Relay		Traction Cut SW		Telephone Transceiver and Speaker Relay		Tension Reducer Solenoid LH		Tension Reducer Solenoid RH		VSV (for Fuel Pressure up)		VSV (for EGR)		Vanity Light LH		Vanity Light RH		Washer Motor		Water Temp. SW (for Cooling Fan)		Water Temp. Sender		Wiper Motor		Airbag Warning Light [Warning and Indicator Lights]		Charge Warning Light [Warning and Indicator Lights]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
											T8		T10		T11		T12		T13		T14		T15		T16		T17		T19		T20		V1		V2		V3		V4		W1		W2		W3		W4		W5																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
①	40A	DEFOG CB																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														</

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 5 (See page 20)

[illegible]