


# SEAT HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

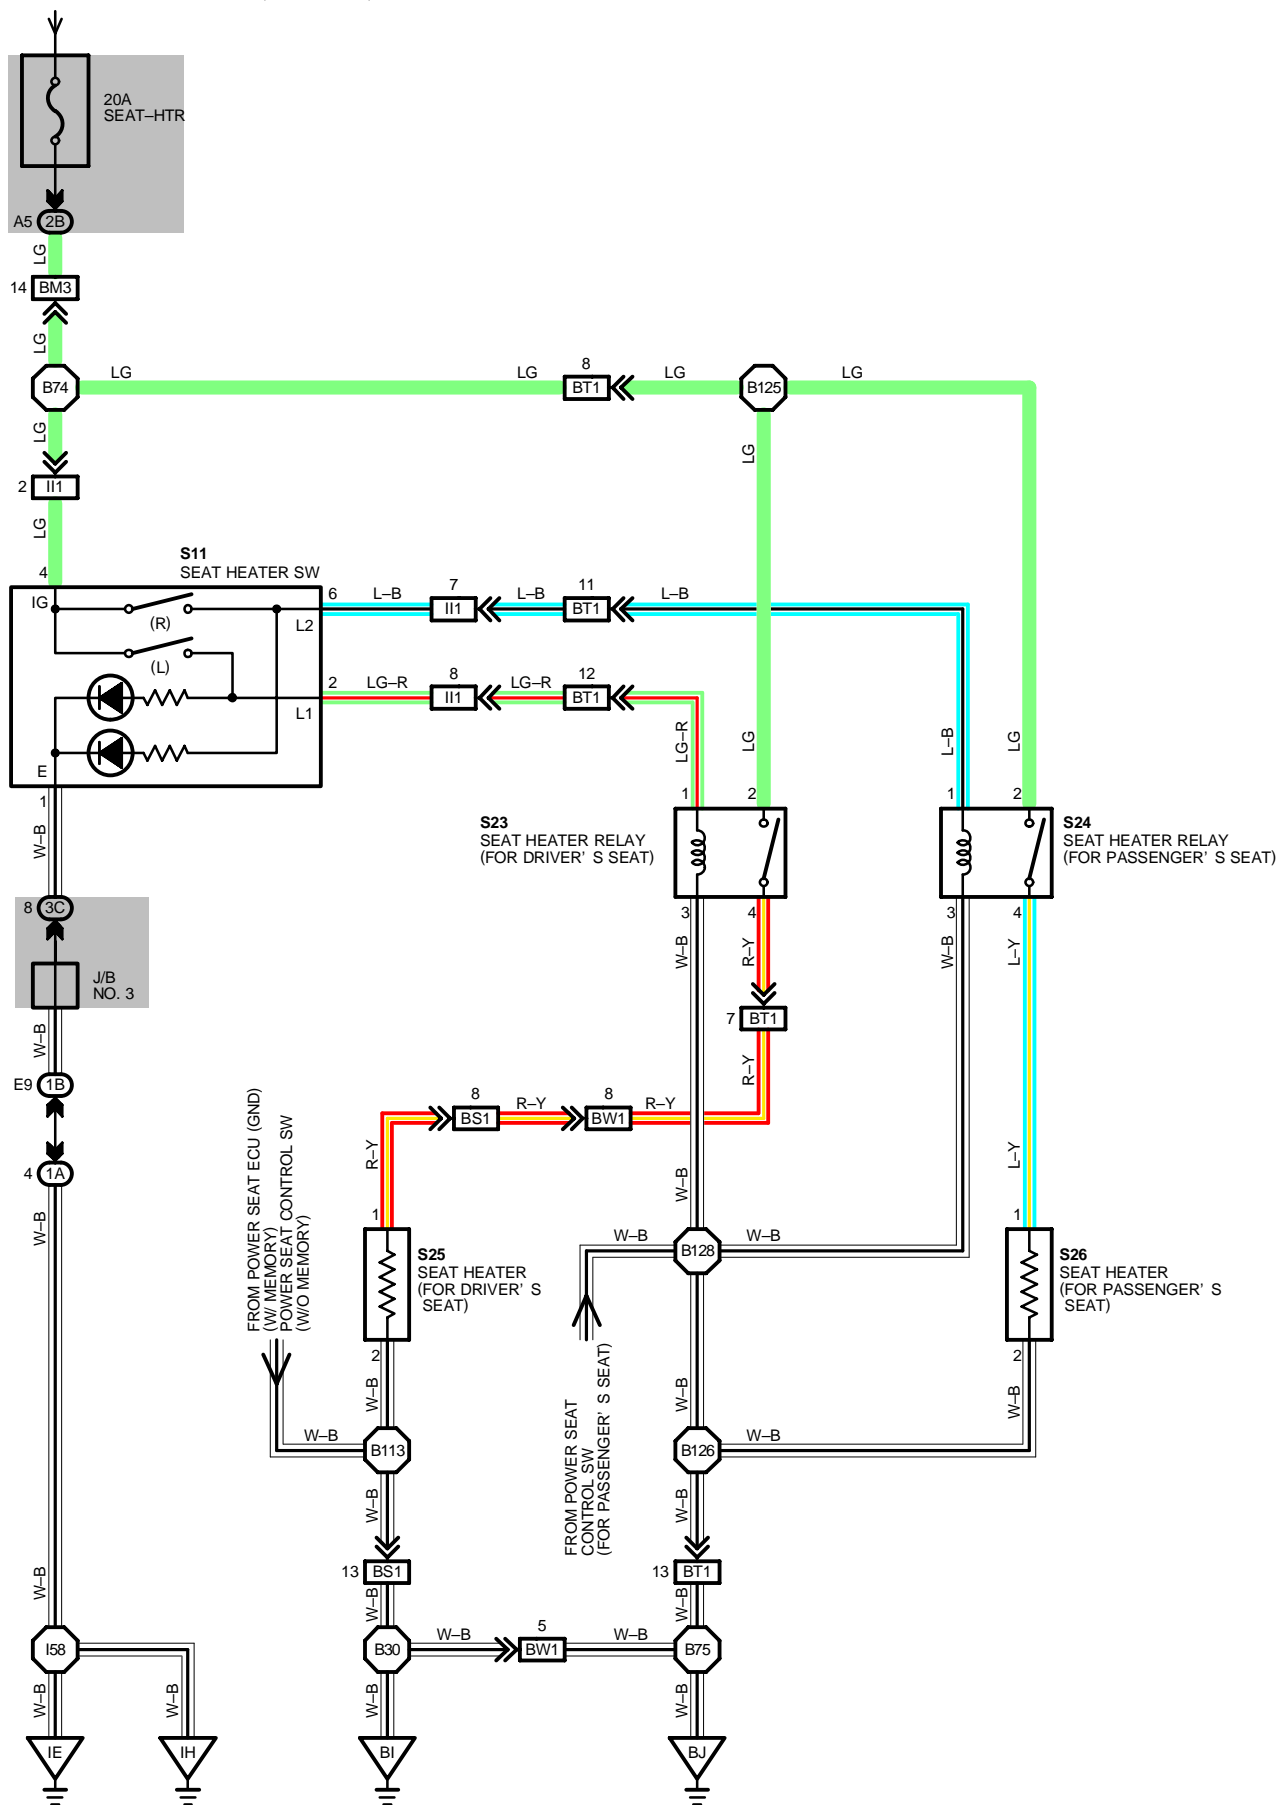

## SERVICE HINTS

### S11 SEAT HEATER SW

4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

1-GROUND : ALWAYS CONTINUITY

### S23 SEAT HEATER RELAY (FOR DRIVER'S SEAT)

2-4 : CLOSED WITH SEAT HEATER SW (L) ON

### S24 SEAT HEATER RELAY (FOR PASSENGER'S SEAT)

2-4 : CLOSED WITH SEAT HEATER SW (R) ON

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
S11	27	S24	30	S26	30
S23	30	S25	30		

## □ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	18	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
2B	20	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
3C	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	34	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
BM3	38	COWL WIRE AND FLOOR NO.1 WIRE (RIGHT KICK PANEL)
BS1	40	FLOOR NO.2 WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
BT1	40	FLOOR NO.1 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)


## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IH	34	RIGHT KICK PANEL
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 58	36	COWL WIRE	B113	40	FRONT SEAT LH WIRE
B 30	38	FLOOR NO.2 WIRE	B125	40	FRONT SEAT RH WIRE
B 74	38	FLOOR NO.1 WIRE	B126		
B 75					

S11




S23



S24



S25



S26

