



ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

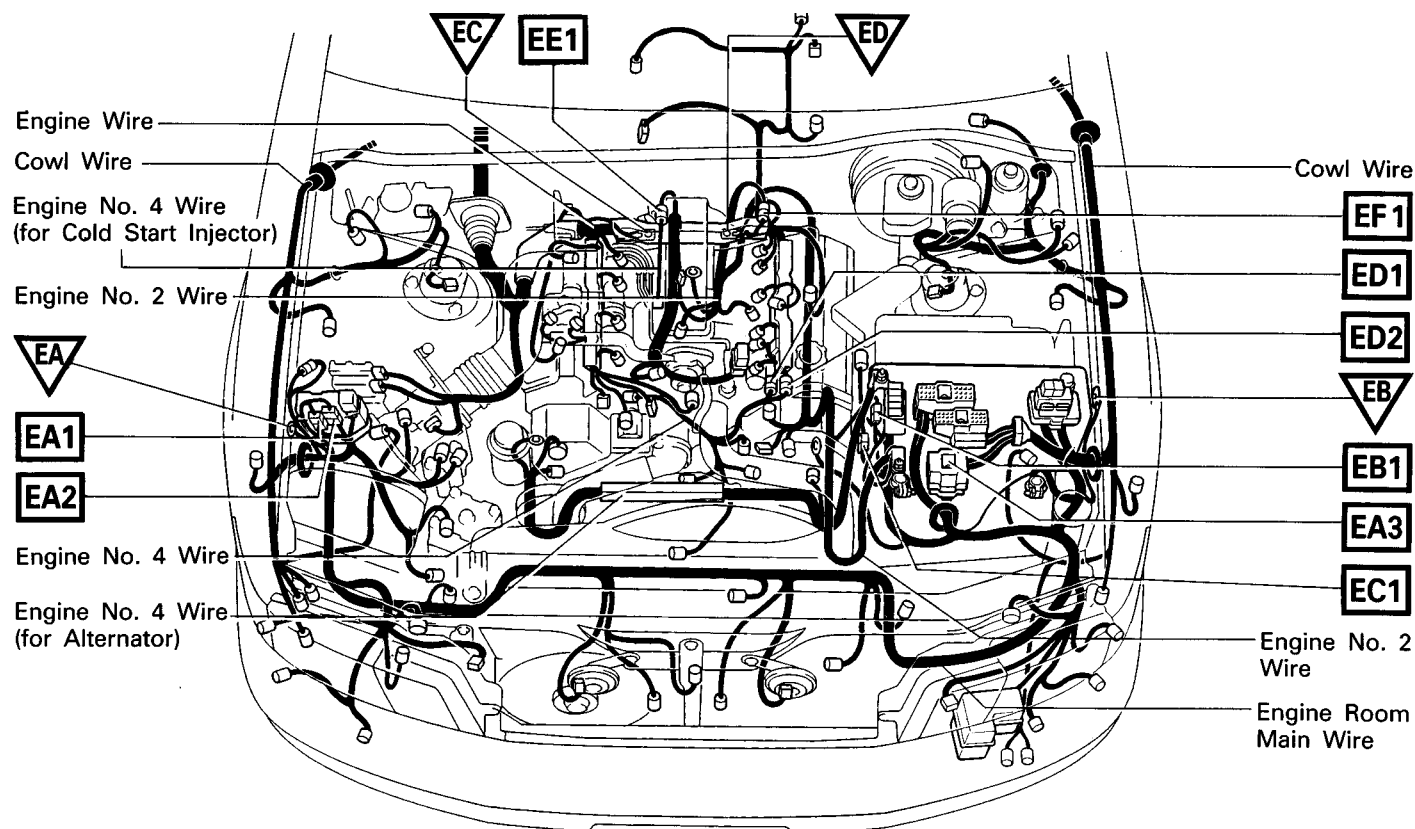

○ : Location of Splice Points

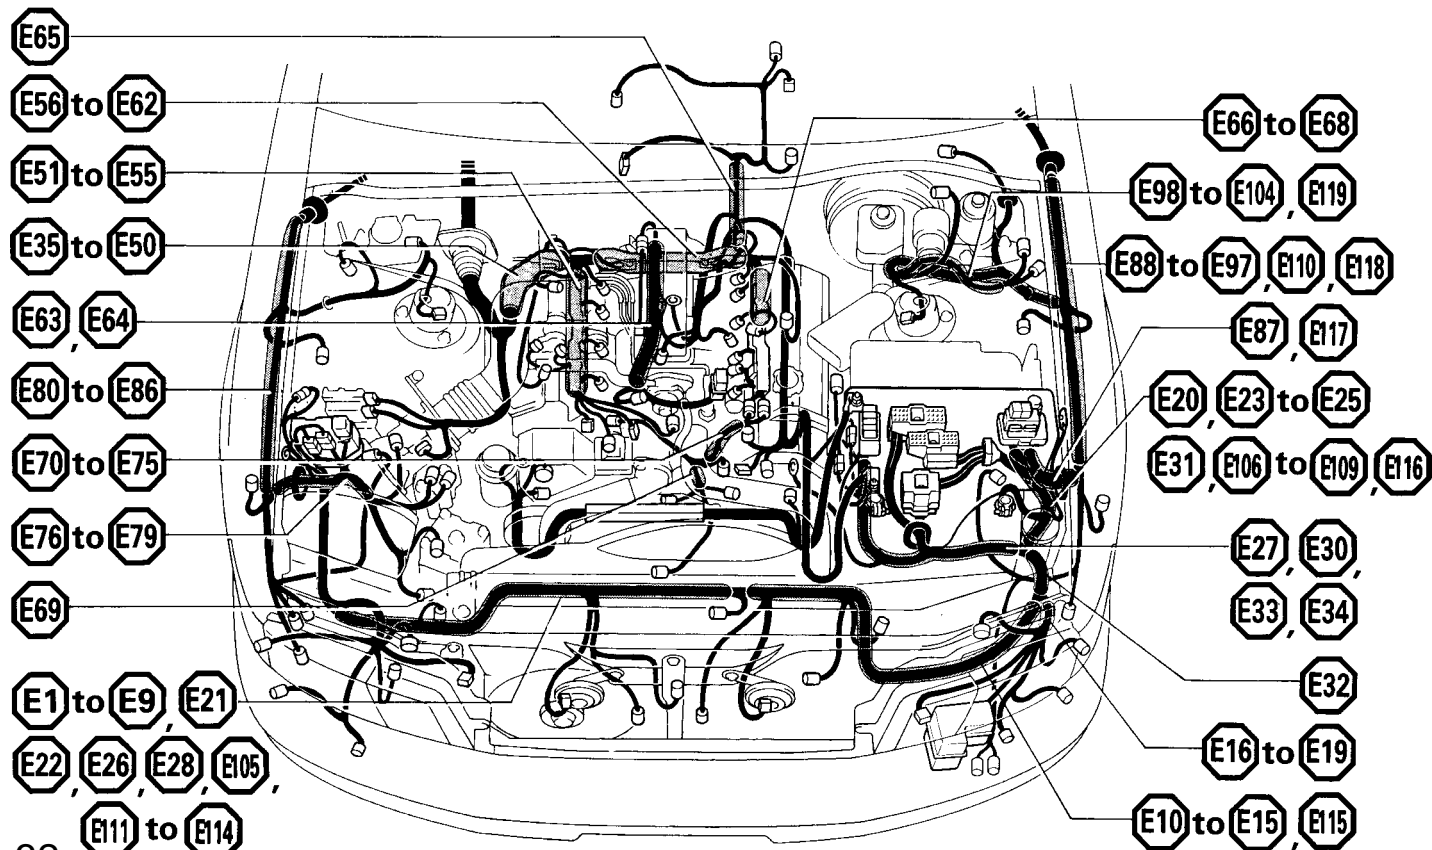


Connector Joining Wire Harness and Wire Harness

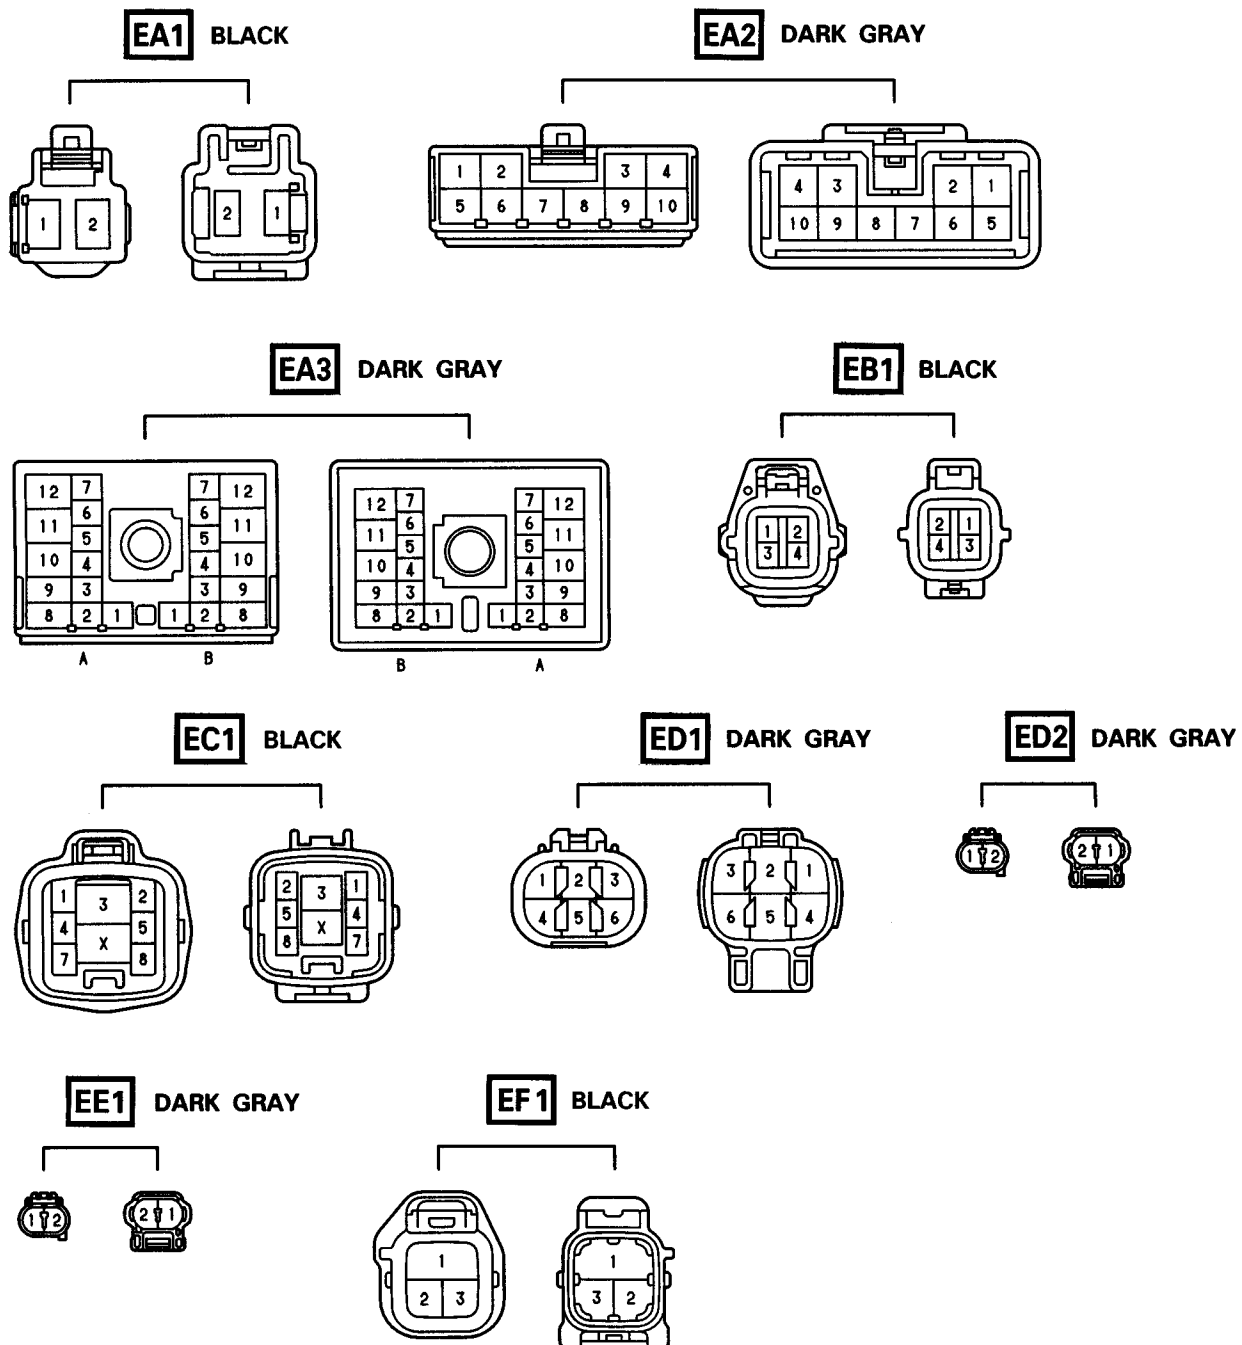


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FENDER)
EA2	
EA3	COWL WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF J/B NO.2)
EB1	ENGINE NO.2 WIRE AND ENGINE ROOM MAIN WIRE (RIGHT SIDE OF J/B NO.2)
EC1	ENGINE NO.4 WIRE, FOR ALTERNATOR AND ENGINE ROOM MAIN WIRE (RIGHT SIDE OF J/B NO.2)
ED1	ENGINE WIRE AND ENGINE NO.4 WIRE (FRONT SIDE OF CYLINDER HEAD COVER LH)
ED2	
EE1	ENGINE WIRE AND ENGINE NO.4 WIRE, FOR COLD START INJECTOR (REAR SIDE OF AIR INTAKE CHAMBER)
EF1	ENGINE NO.2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

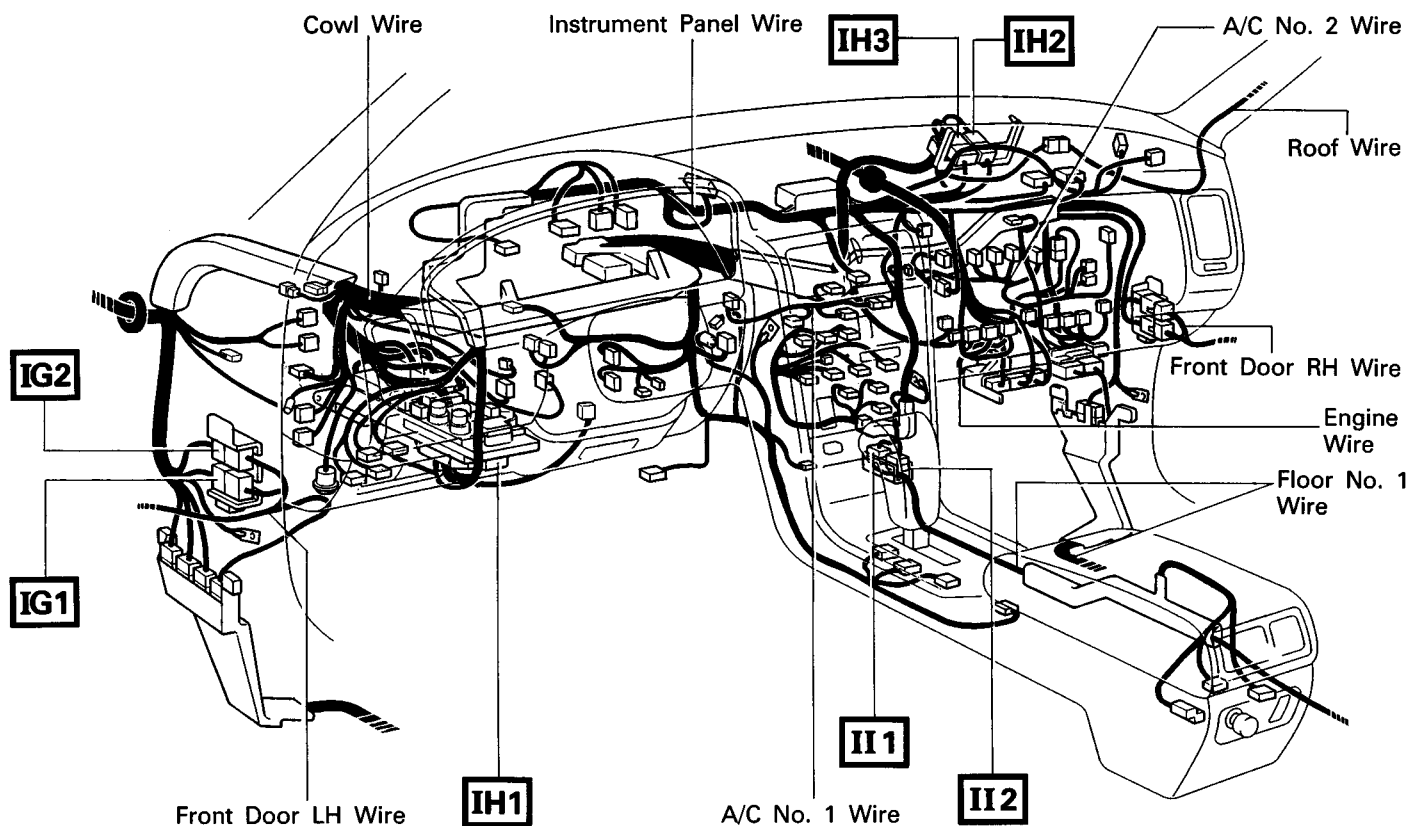

▽ : Location of Ground Points

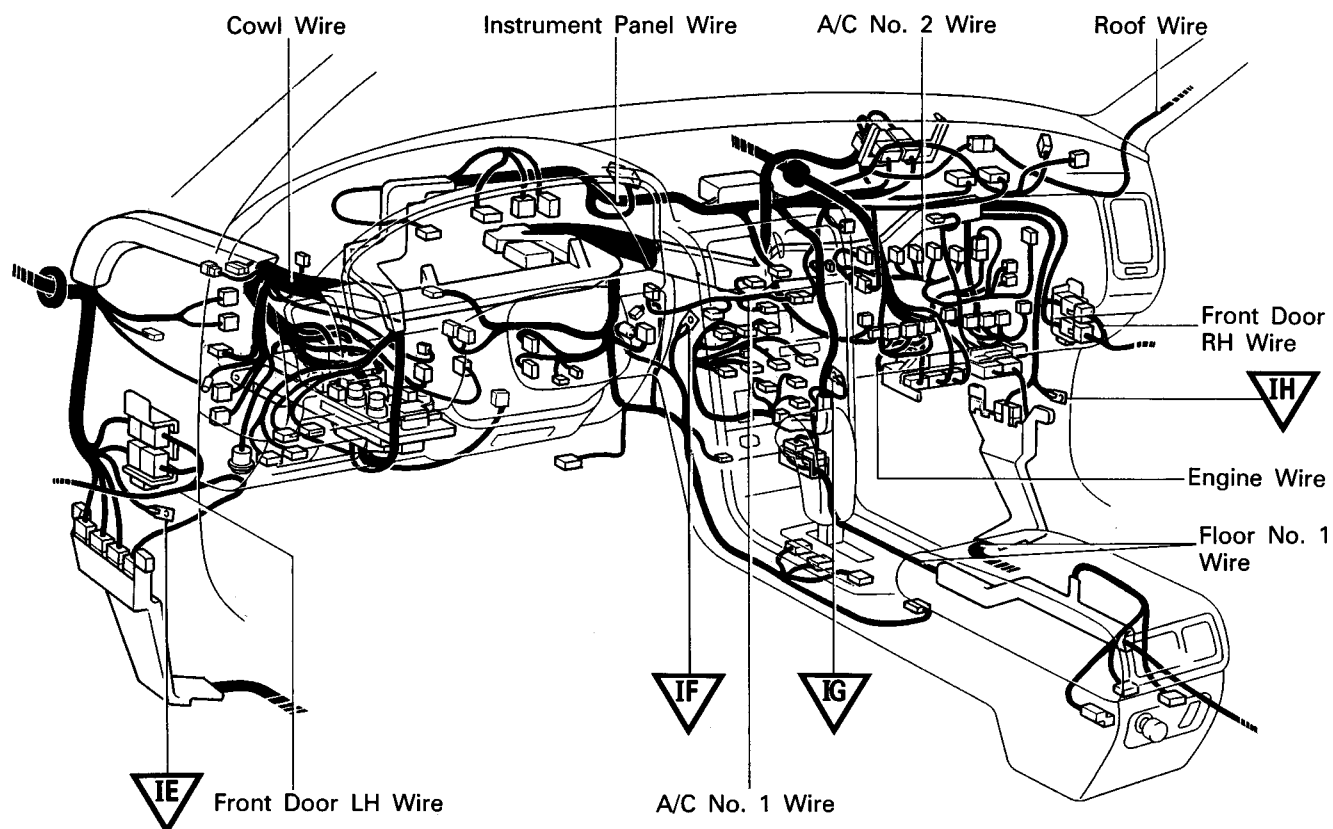


Connector Joining Wire Harness and Wire Harness

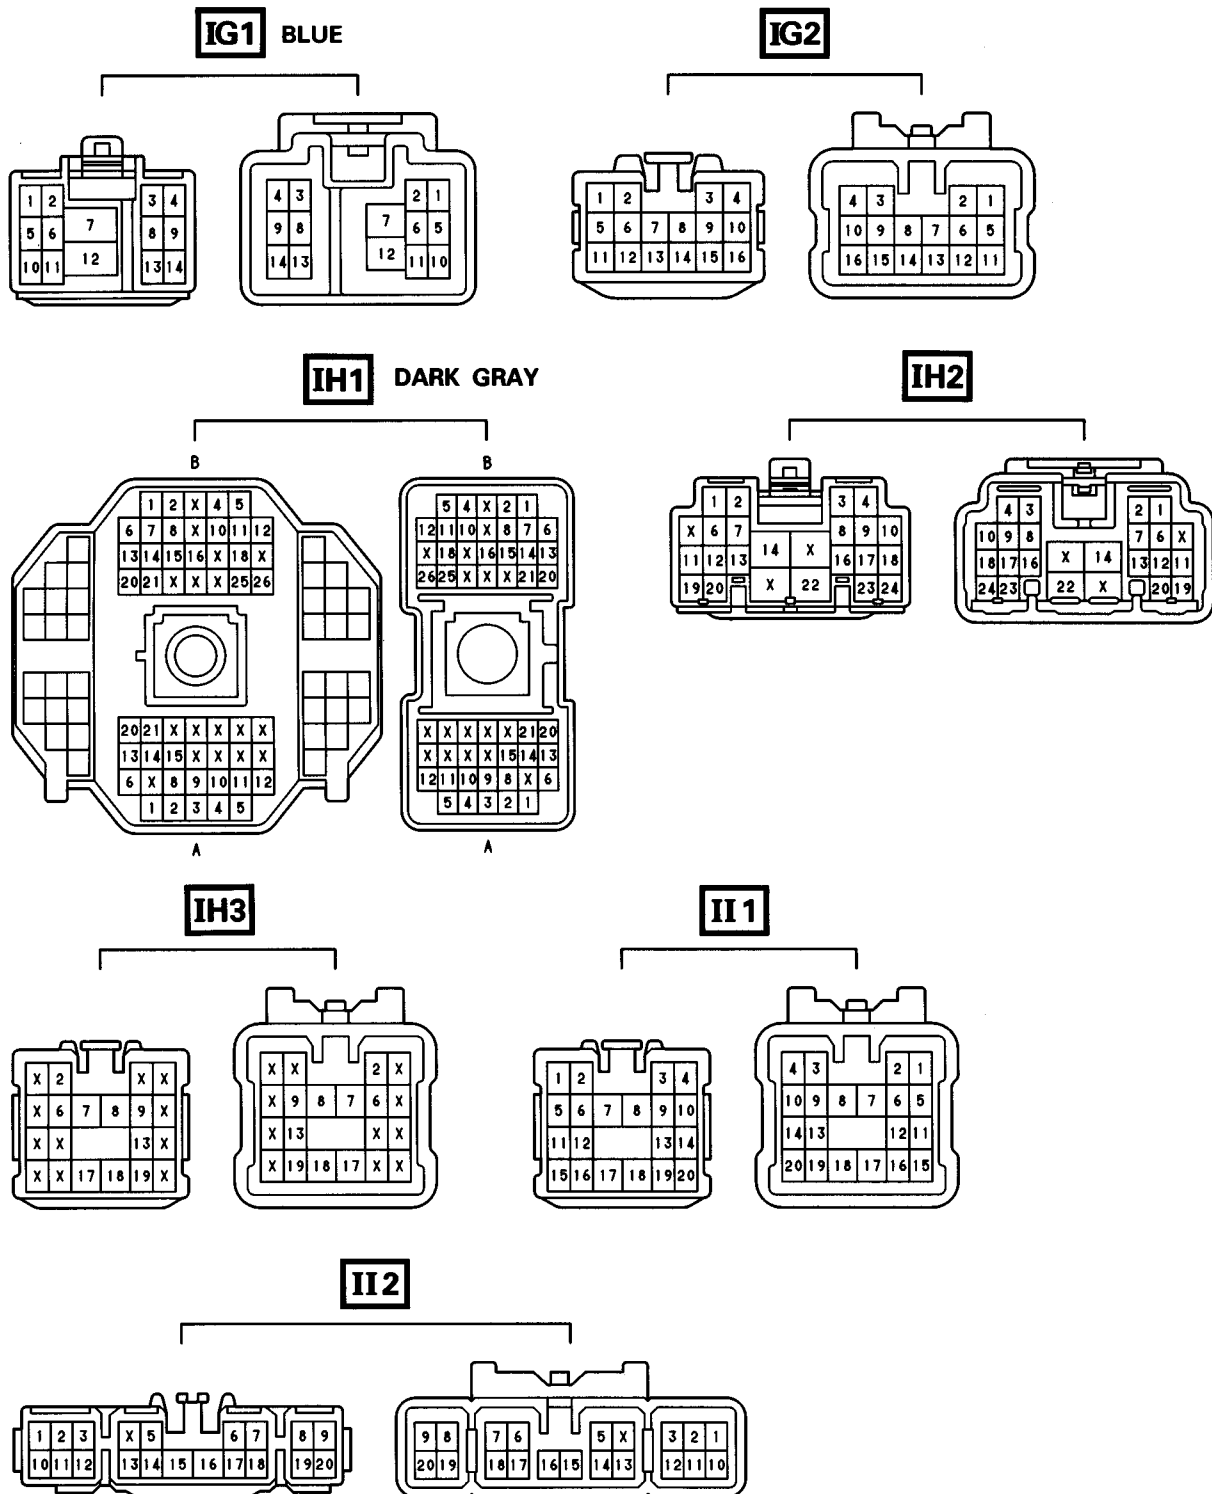


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	
IH1	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO.1)
IH2	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH3	
II1	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
II2	

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

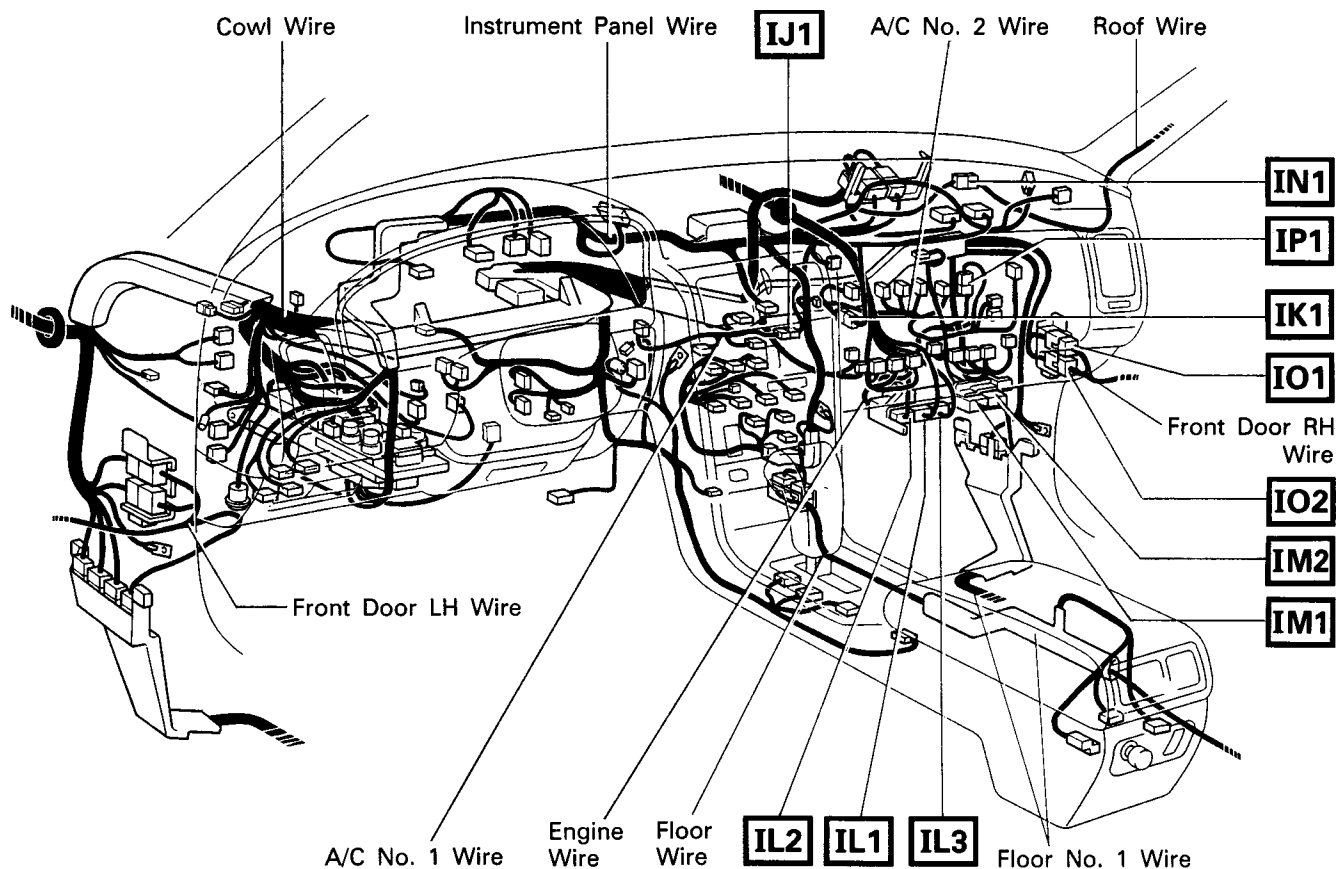

○ : Location of Splice Points

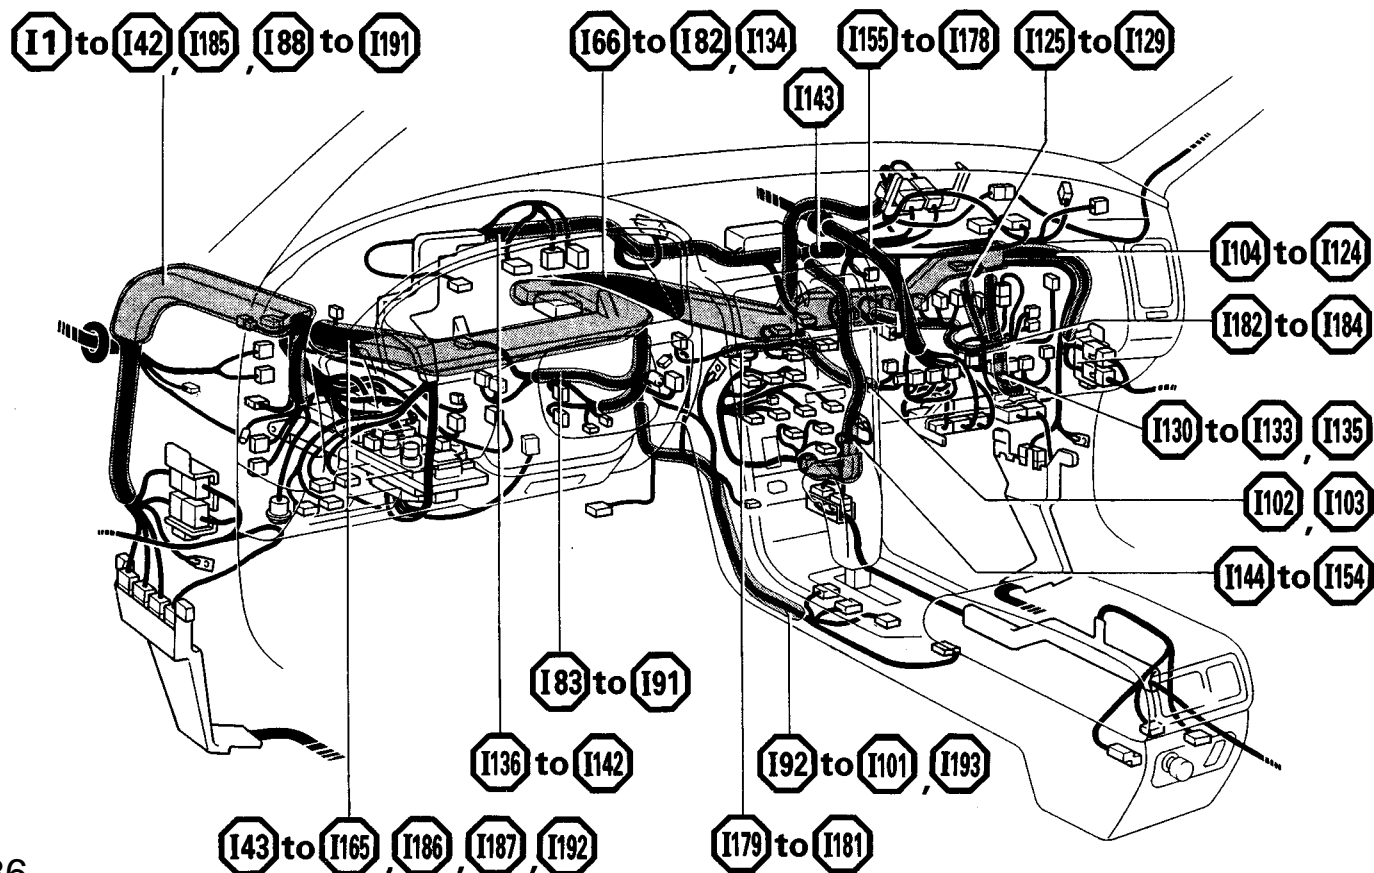

Connector Joining Wire Harness and Wire Harness

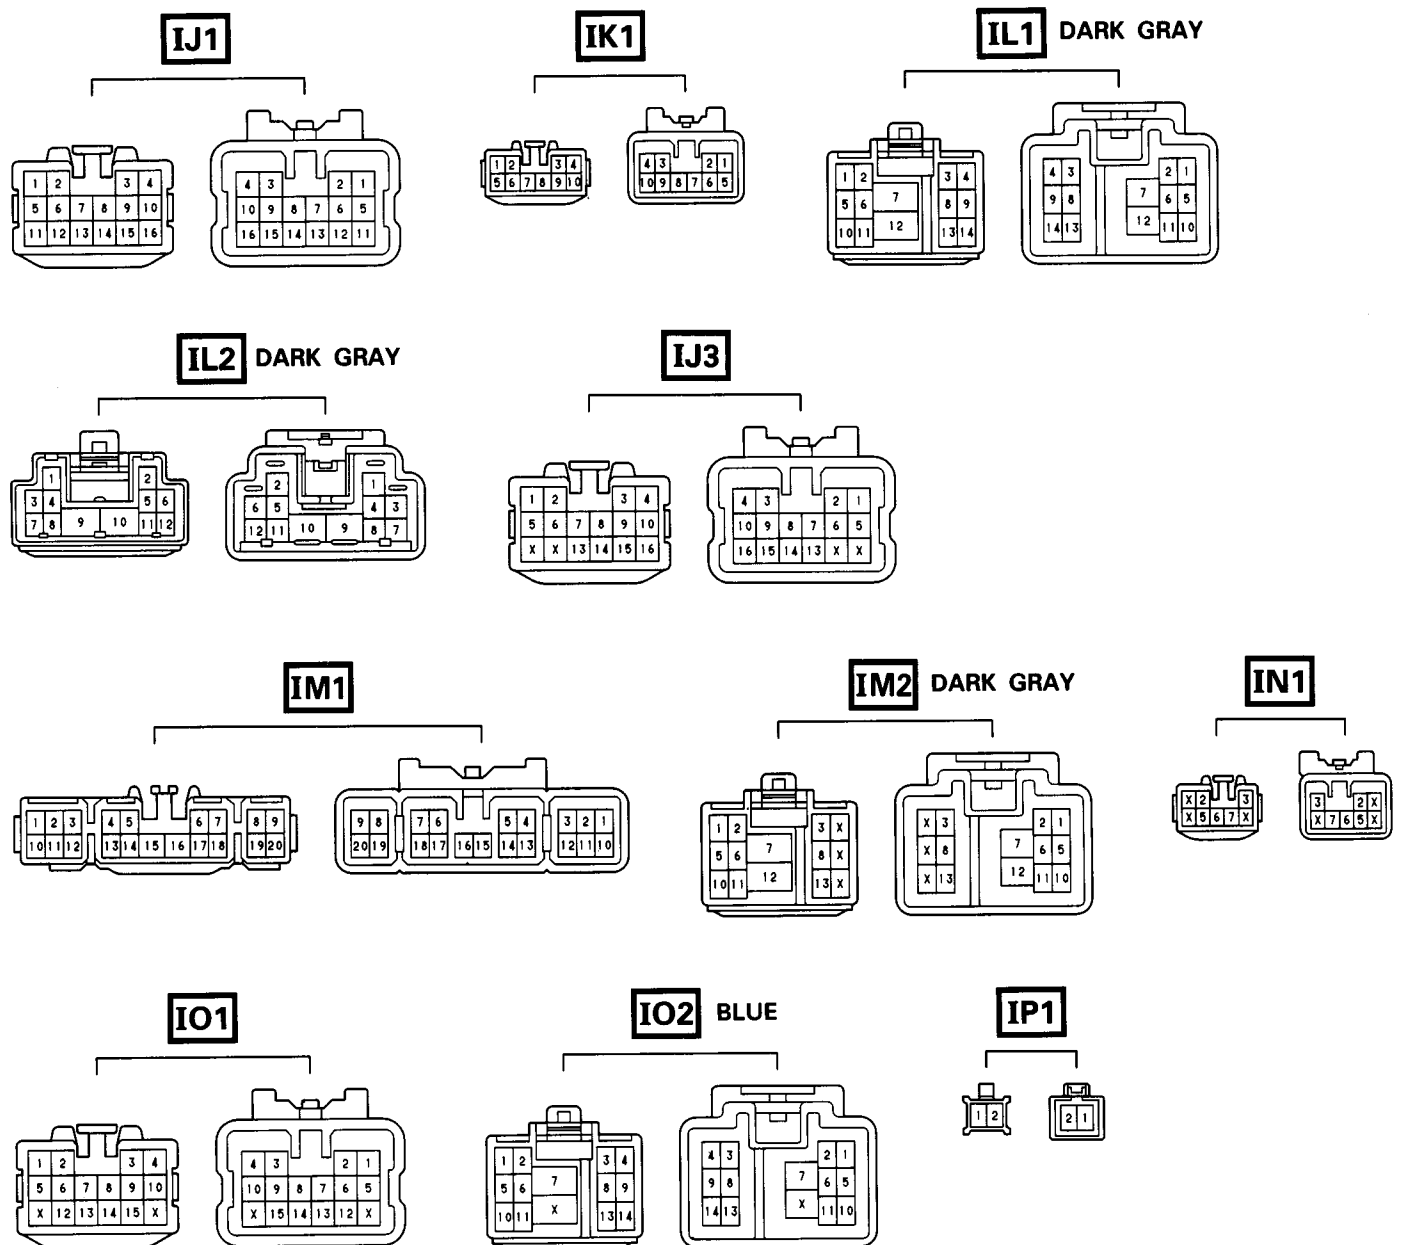


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IJ1	INSTRUMENT PANEL WIRE AND A/C NO.1 WIRE (BEHIND GLOVE BOX)
IK1	INSTRUMENT PANEL WIRE AND A/C NO.2 WIRE (BEHIND GLOVE BOX)
IL1	ENGINE WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
IL2	
IJ3	
IM1	FLOOR NO.1 WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
IM2	
IN1	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)
IO1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IO2	
IP1	COWL WIRE AND A/C NO.2 WIRE (BEHIND GLOVE BOX)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

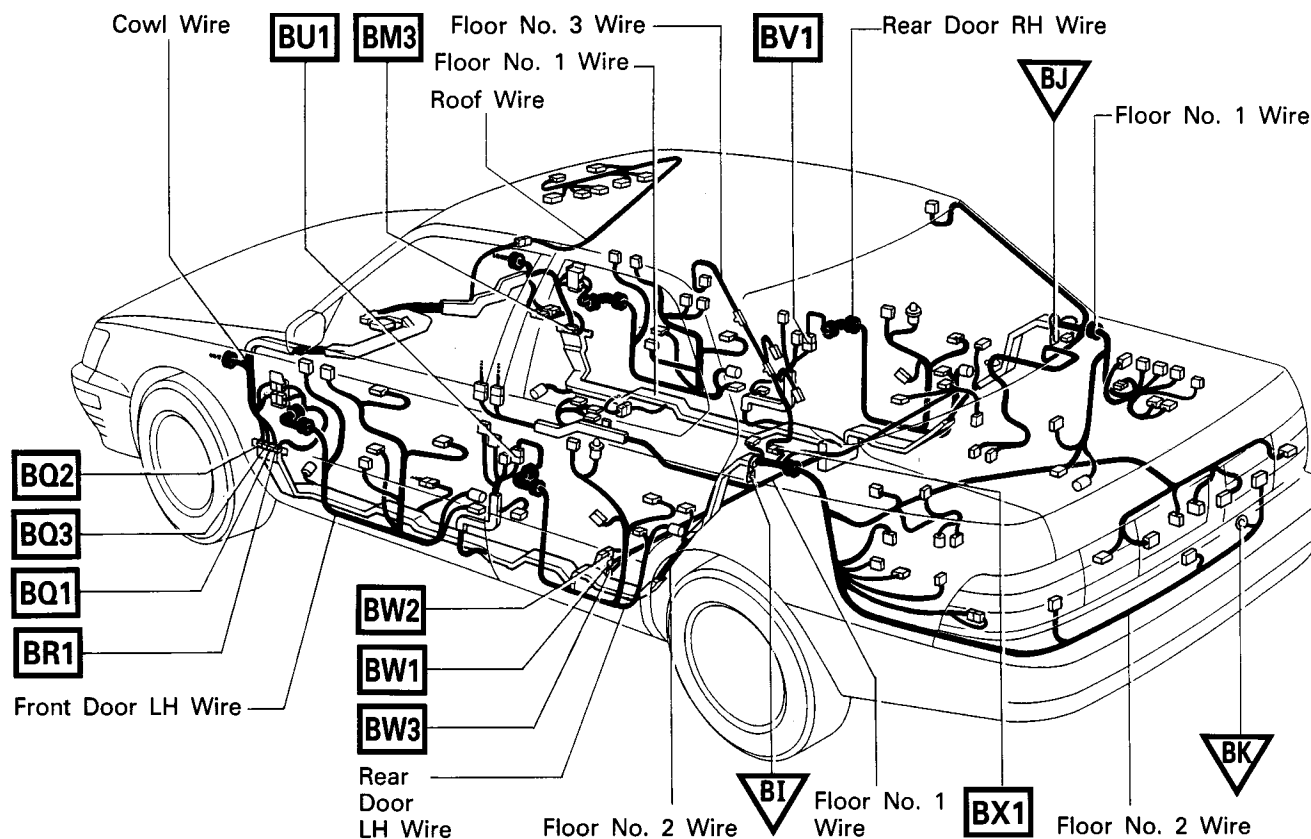

○ : Location of Splice Points

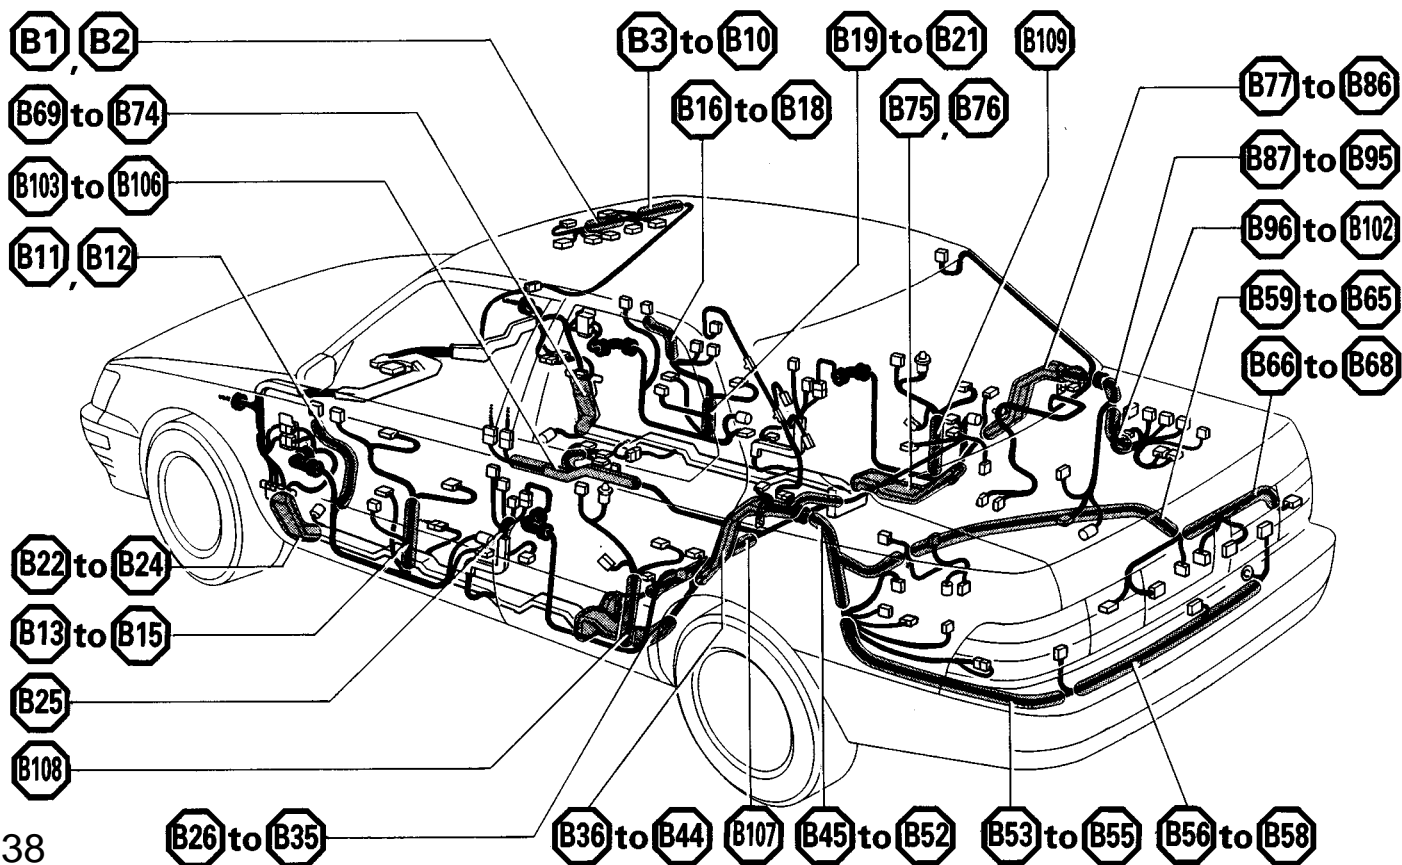


Connector Joining Wire Harness and Wire Harness

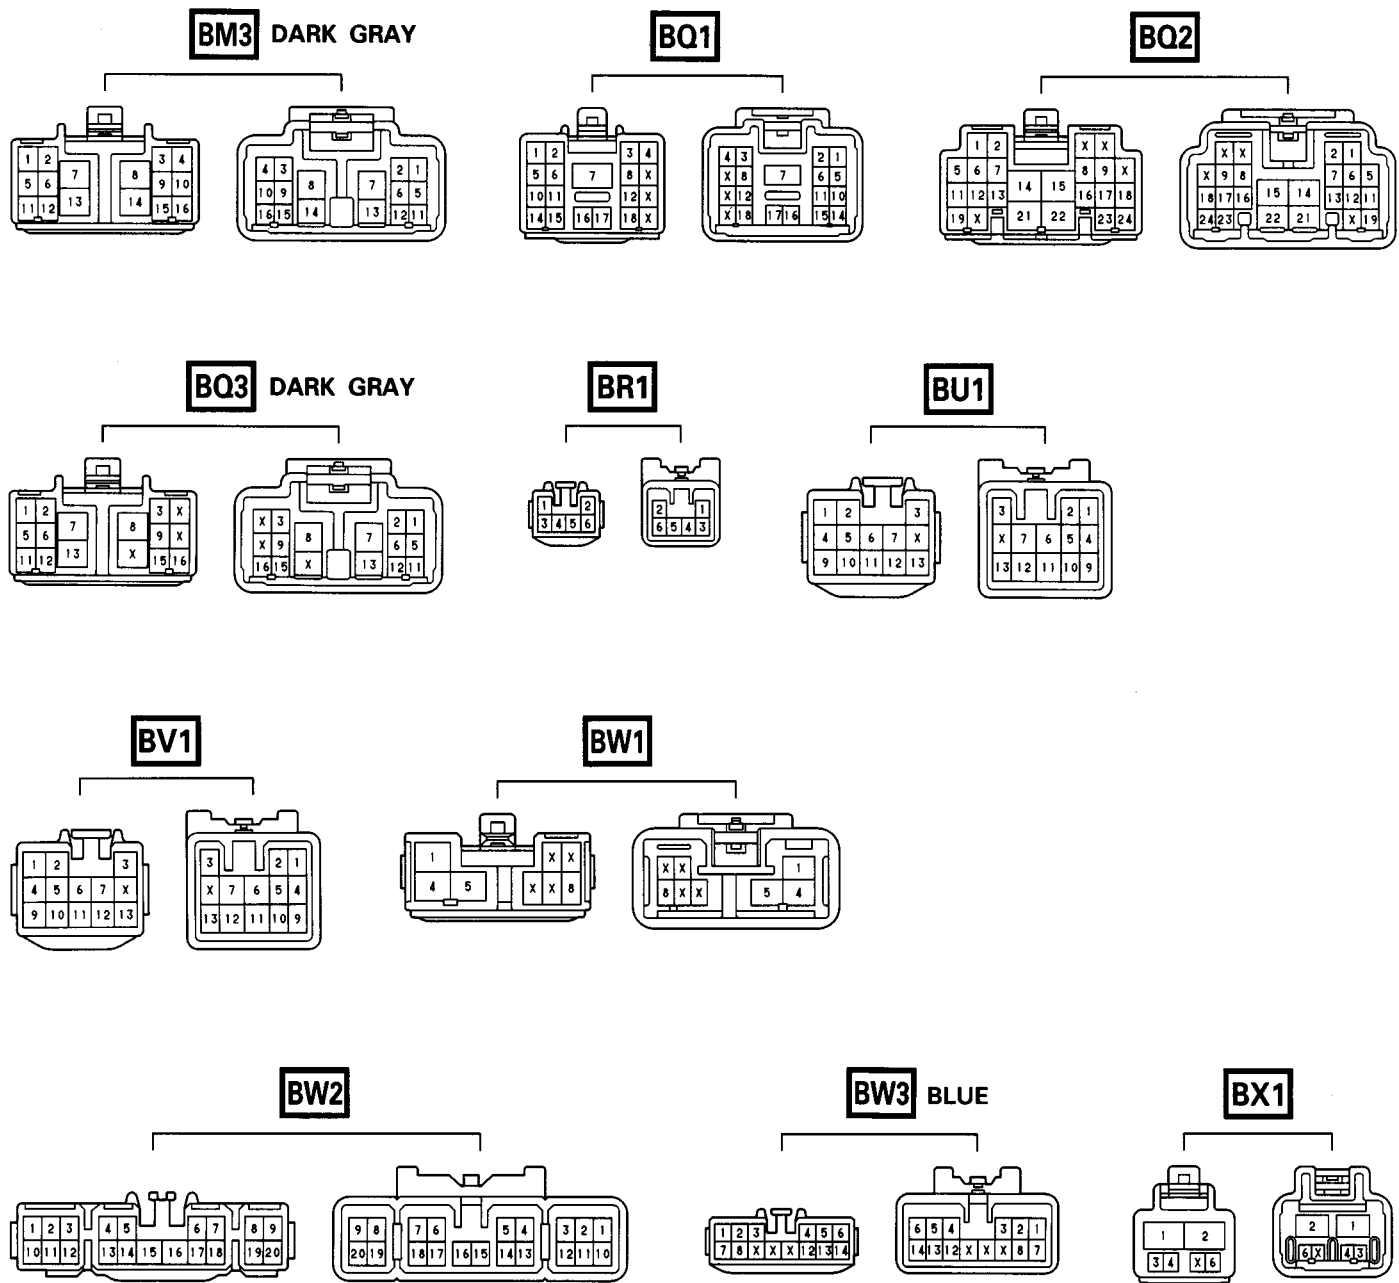


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BM3	COWL WIRE AND FLOOR NO.1 WIRE (RIGHT KICK PANEL)
BQ1	
BQ2	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BQ3	
BR1	FRONT DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BU1	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
BV1	REAR DOOR RH WIRE AND FLOOR NO.1 WIRE (RIGHT CENTER PILLAR)
BW1	
BW2	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
BW3	
BX1	FLOOR NO.3 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT REAR PILLAR)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

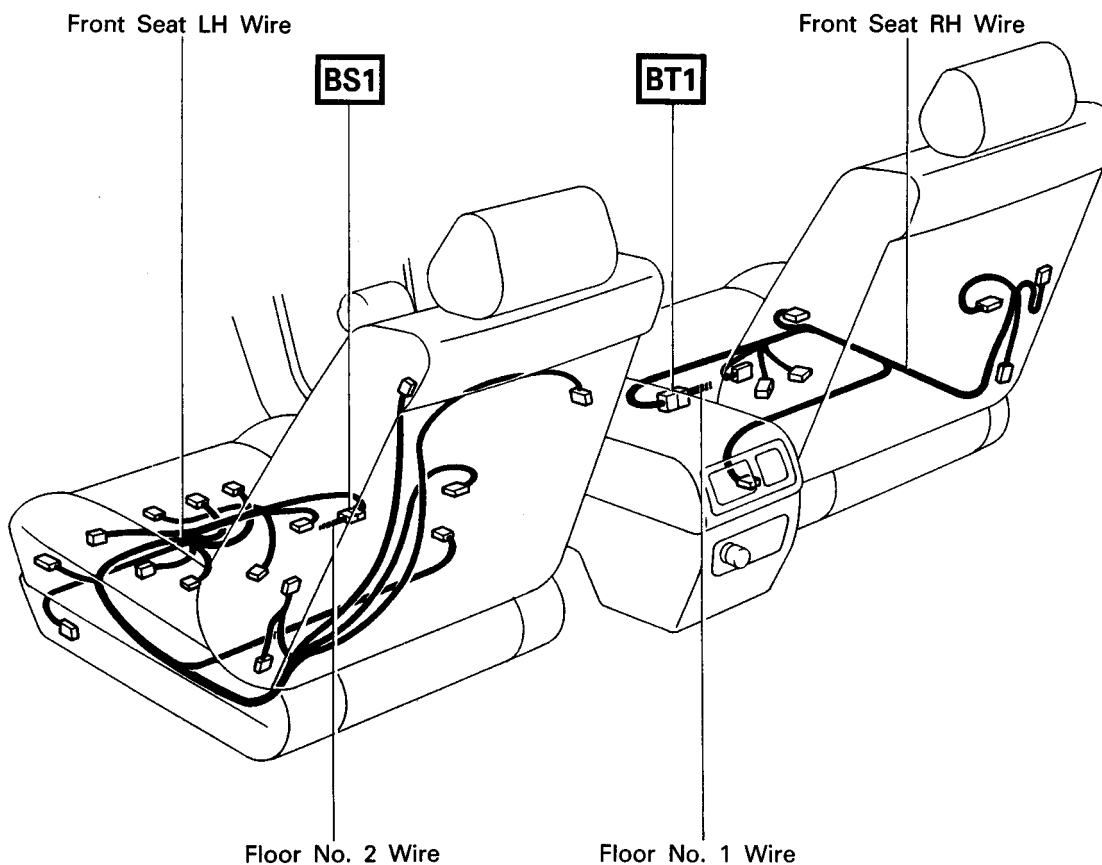

○ : Location of Splice Points

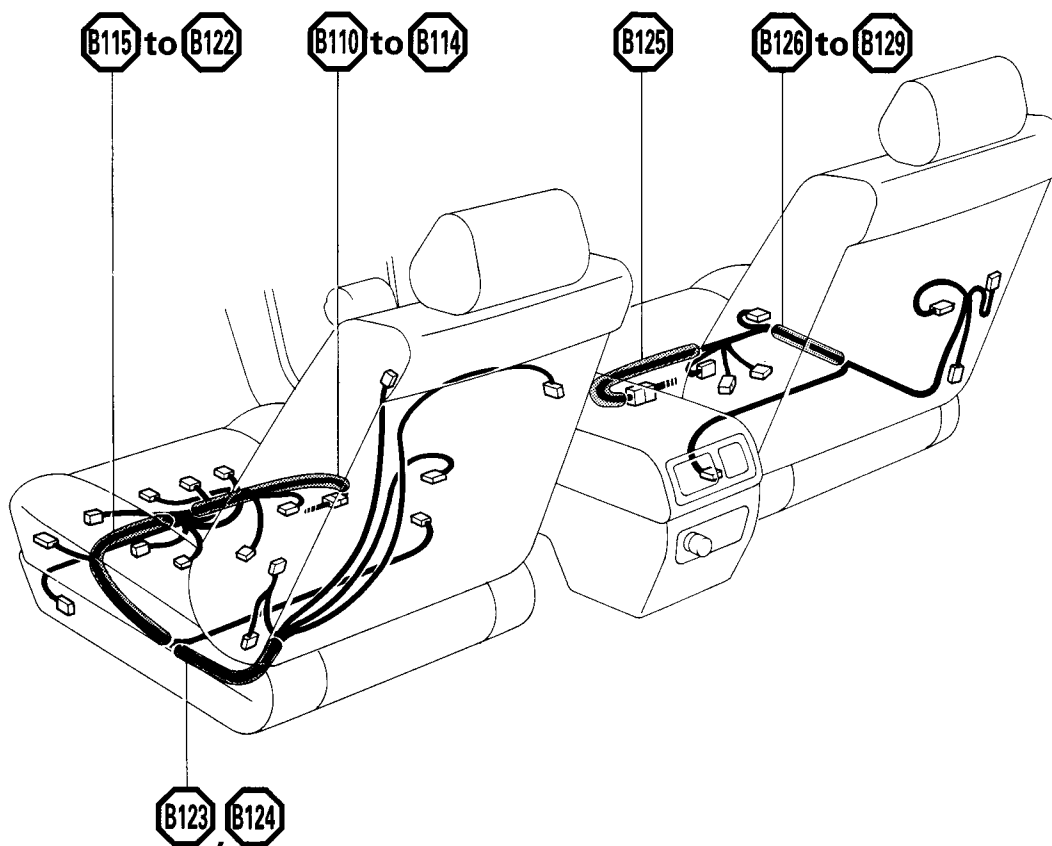

Connector Joining Wire Harness and Wire Harness

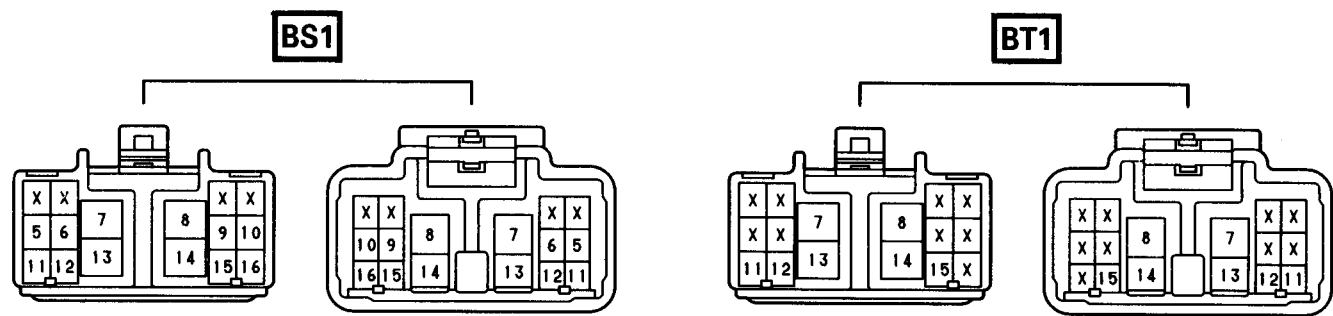

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BS1	FLOOR NO.2 WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
BT1	FLOOR NO.1 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)