

SERVICE HINTS

P15 POWER SEAT CONTROL SW (FOR DRIVER'S SEAT)

8, 14-GROUND : ALWAYS APPROX. 12 VOLTS

7, 13-GROUND : ALWAYS CONTINUITY

P16 POWER SEAT CONTROL SW (FOR PASSENGER'S SEAT)

14-GROUND : ALWAYS APPROX. 12 VOLTS

13-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
P15	30	P19	30	P23	30
P16	30	P20	30	P24	30
P17	30	P21	30	P25	30

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS



CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IM2	36	FLOOR NO.1 WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
BQ3	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BS1	40	FLOOR NO.2 WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
BT1	40	FLOOR NO.1 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 29	36	COWL WIRE	B111	40	FRONT SEAT LH WIRE
B 30	38	FLOOR NO.2 WIRE	B120		
B 75	38	FLOOR NO.1 WIRE			

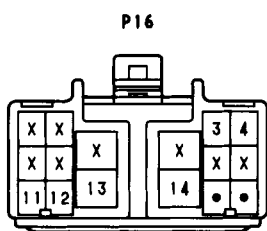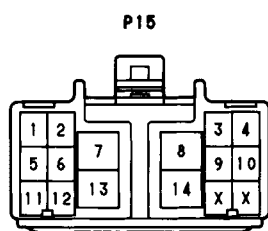

POWER SEAT (w/o MEMORY)

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

