

234



SERVICE HINTS

H 18 HEADLIGHT CLEANER RELAY

- 5-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION AND HEADLIGHT CLEANER SW ON
 : CLOSED WITH DIMMER SW AT **FLASH** POSITION AND HEADLIGHT CLEANER SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	26	H18	24	I17	26
D19	26	H19	24	J 1	27
F13	24	H20	26		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT SIDE OF STEERING COLUMN TUBE)
1G		
4D	23	COWL WIRE AND J/B NO. 4 (BEHIND THE COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	32	COWL WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF J/B NO. 2)
IH1	34	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO. 1)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IF	34	INSTRUMENT PANEL BRACE LH
IH	34	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E110	32	COWL WIRE	I190	36	COWL WIRE
I 58	36		I191		


C16 BLACK

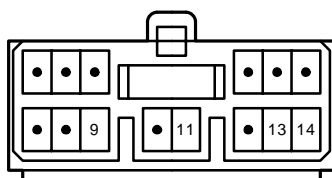


D19 GRAY

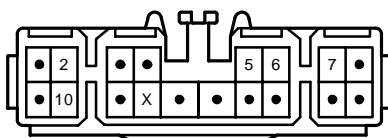

F13

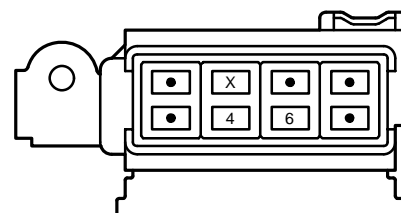


H18 BLACK

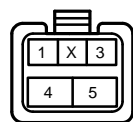


H19



H20 BLUE

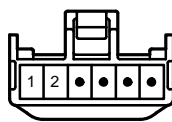

I17



J 1

