


CIGARETTE LIGHTER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

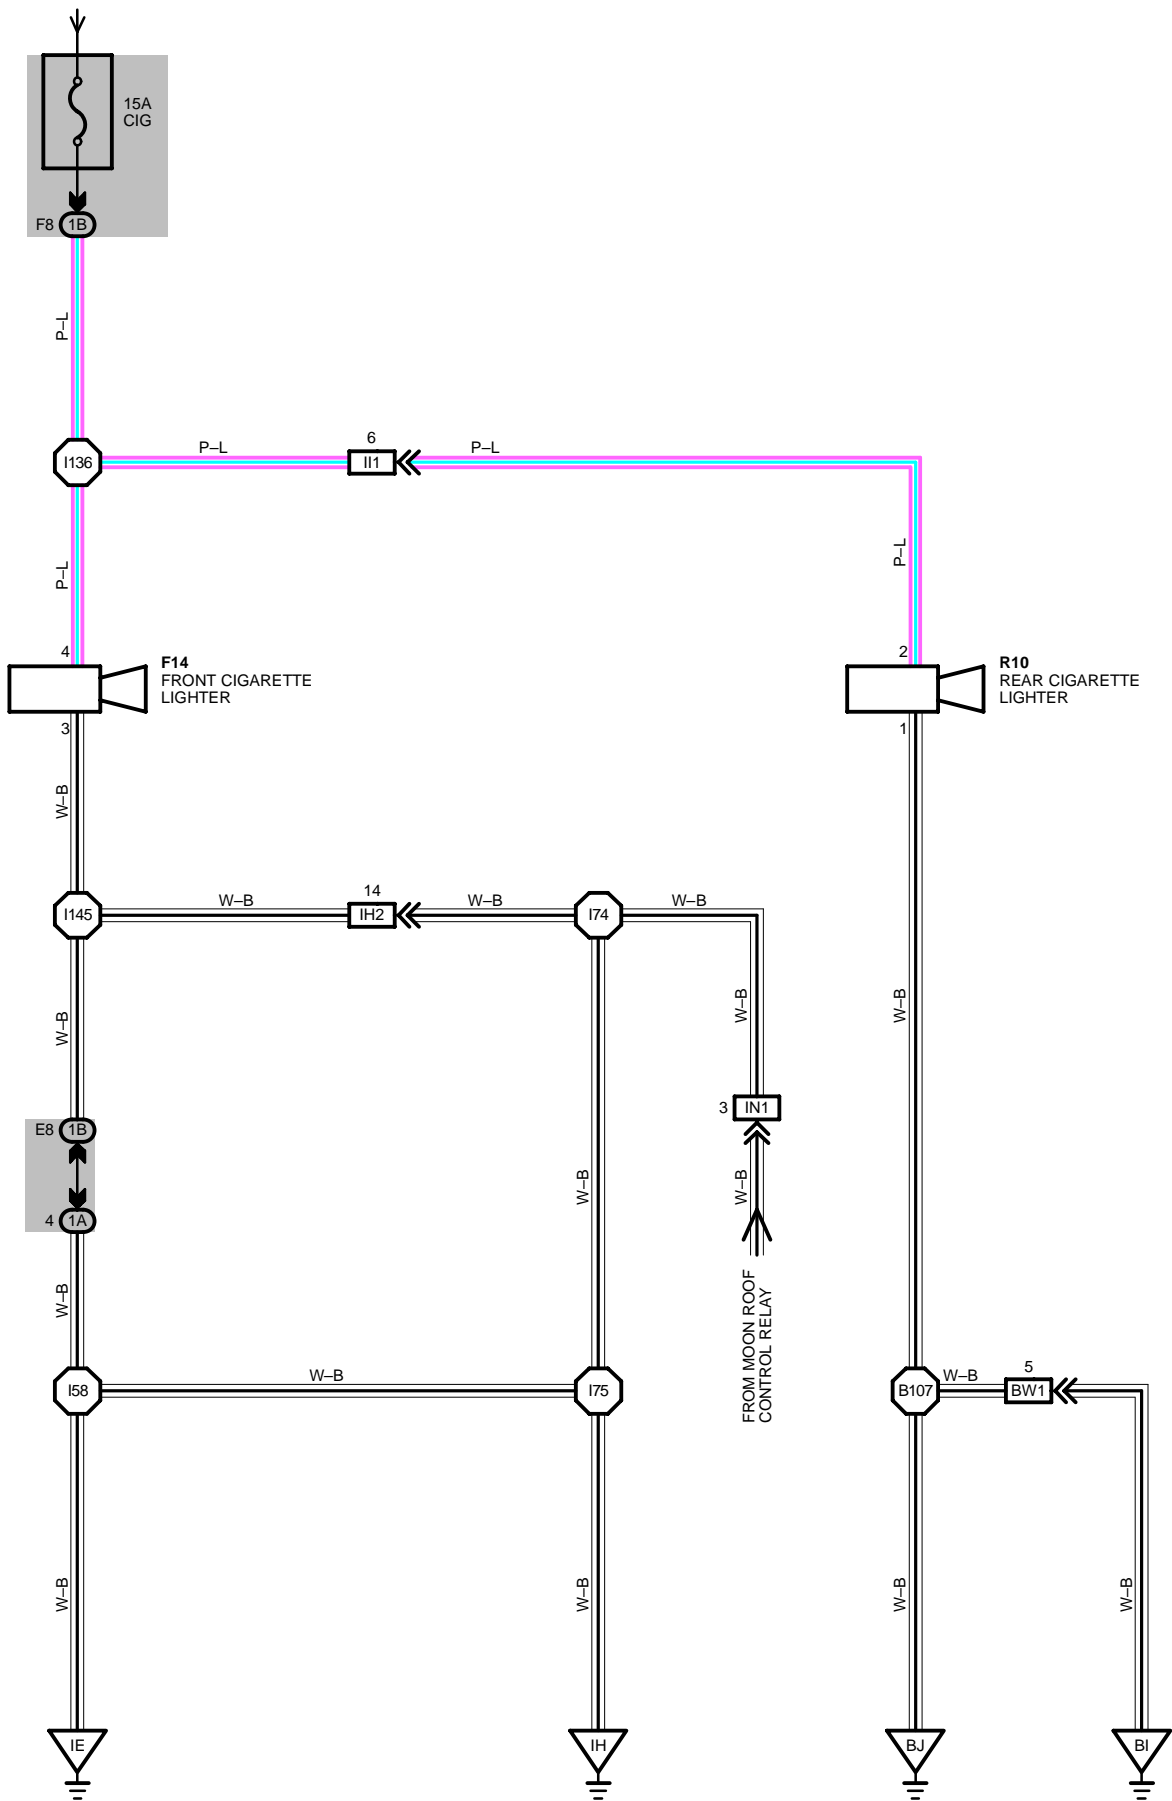

SERVICE HINTS

F14 FRONT CIGARETTE LIGHTER

- 1-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ACC ON ON POSITION
- 3-GROUND : ALWAYS CONTINUITY

R10 REAR CIGARETTE LIGHTER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ACC ON ON POSITION
- 1-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F14	26	R10	29		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	18	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IH2	34	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
II1	34	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
IN1	36	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)
BW1	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IH	34	RIGHT KICK PANEL
BI	38	UNDER THE LEFT REAR PILLAR
BJ	38	UNDER THE RIGHT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 58	36	COWL WIRE	I136	34	INSTRUMENT PANEL WIRE
I 74			I145		
I 75			B107	38	FLOOR NO.2 WIRE

F14



R10

